


XK CONNECTOR QUICK REFERENCE GUIDE

Document Objective: To provide basic connector location information only, including in-lines and grounds. For detailed connector information refer to the Electrical Reference Library (ERL).

All paper copies are uncontrolled.

Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads. Based on convertible, some coupe differences identified.

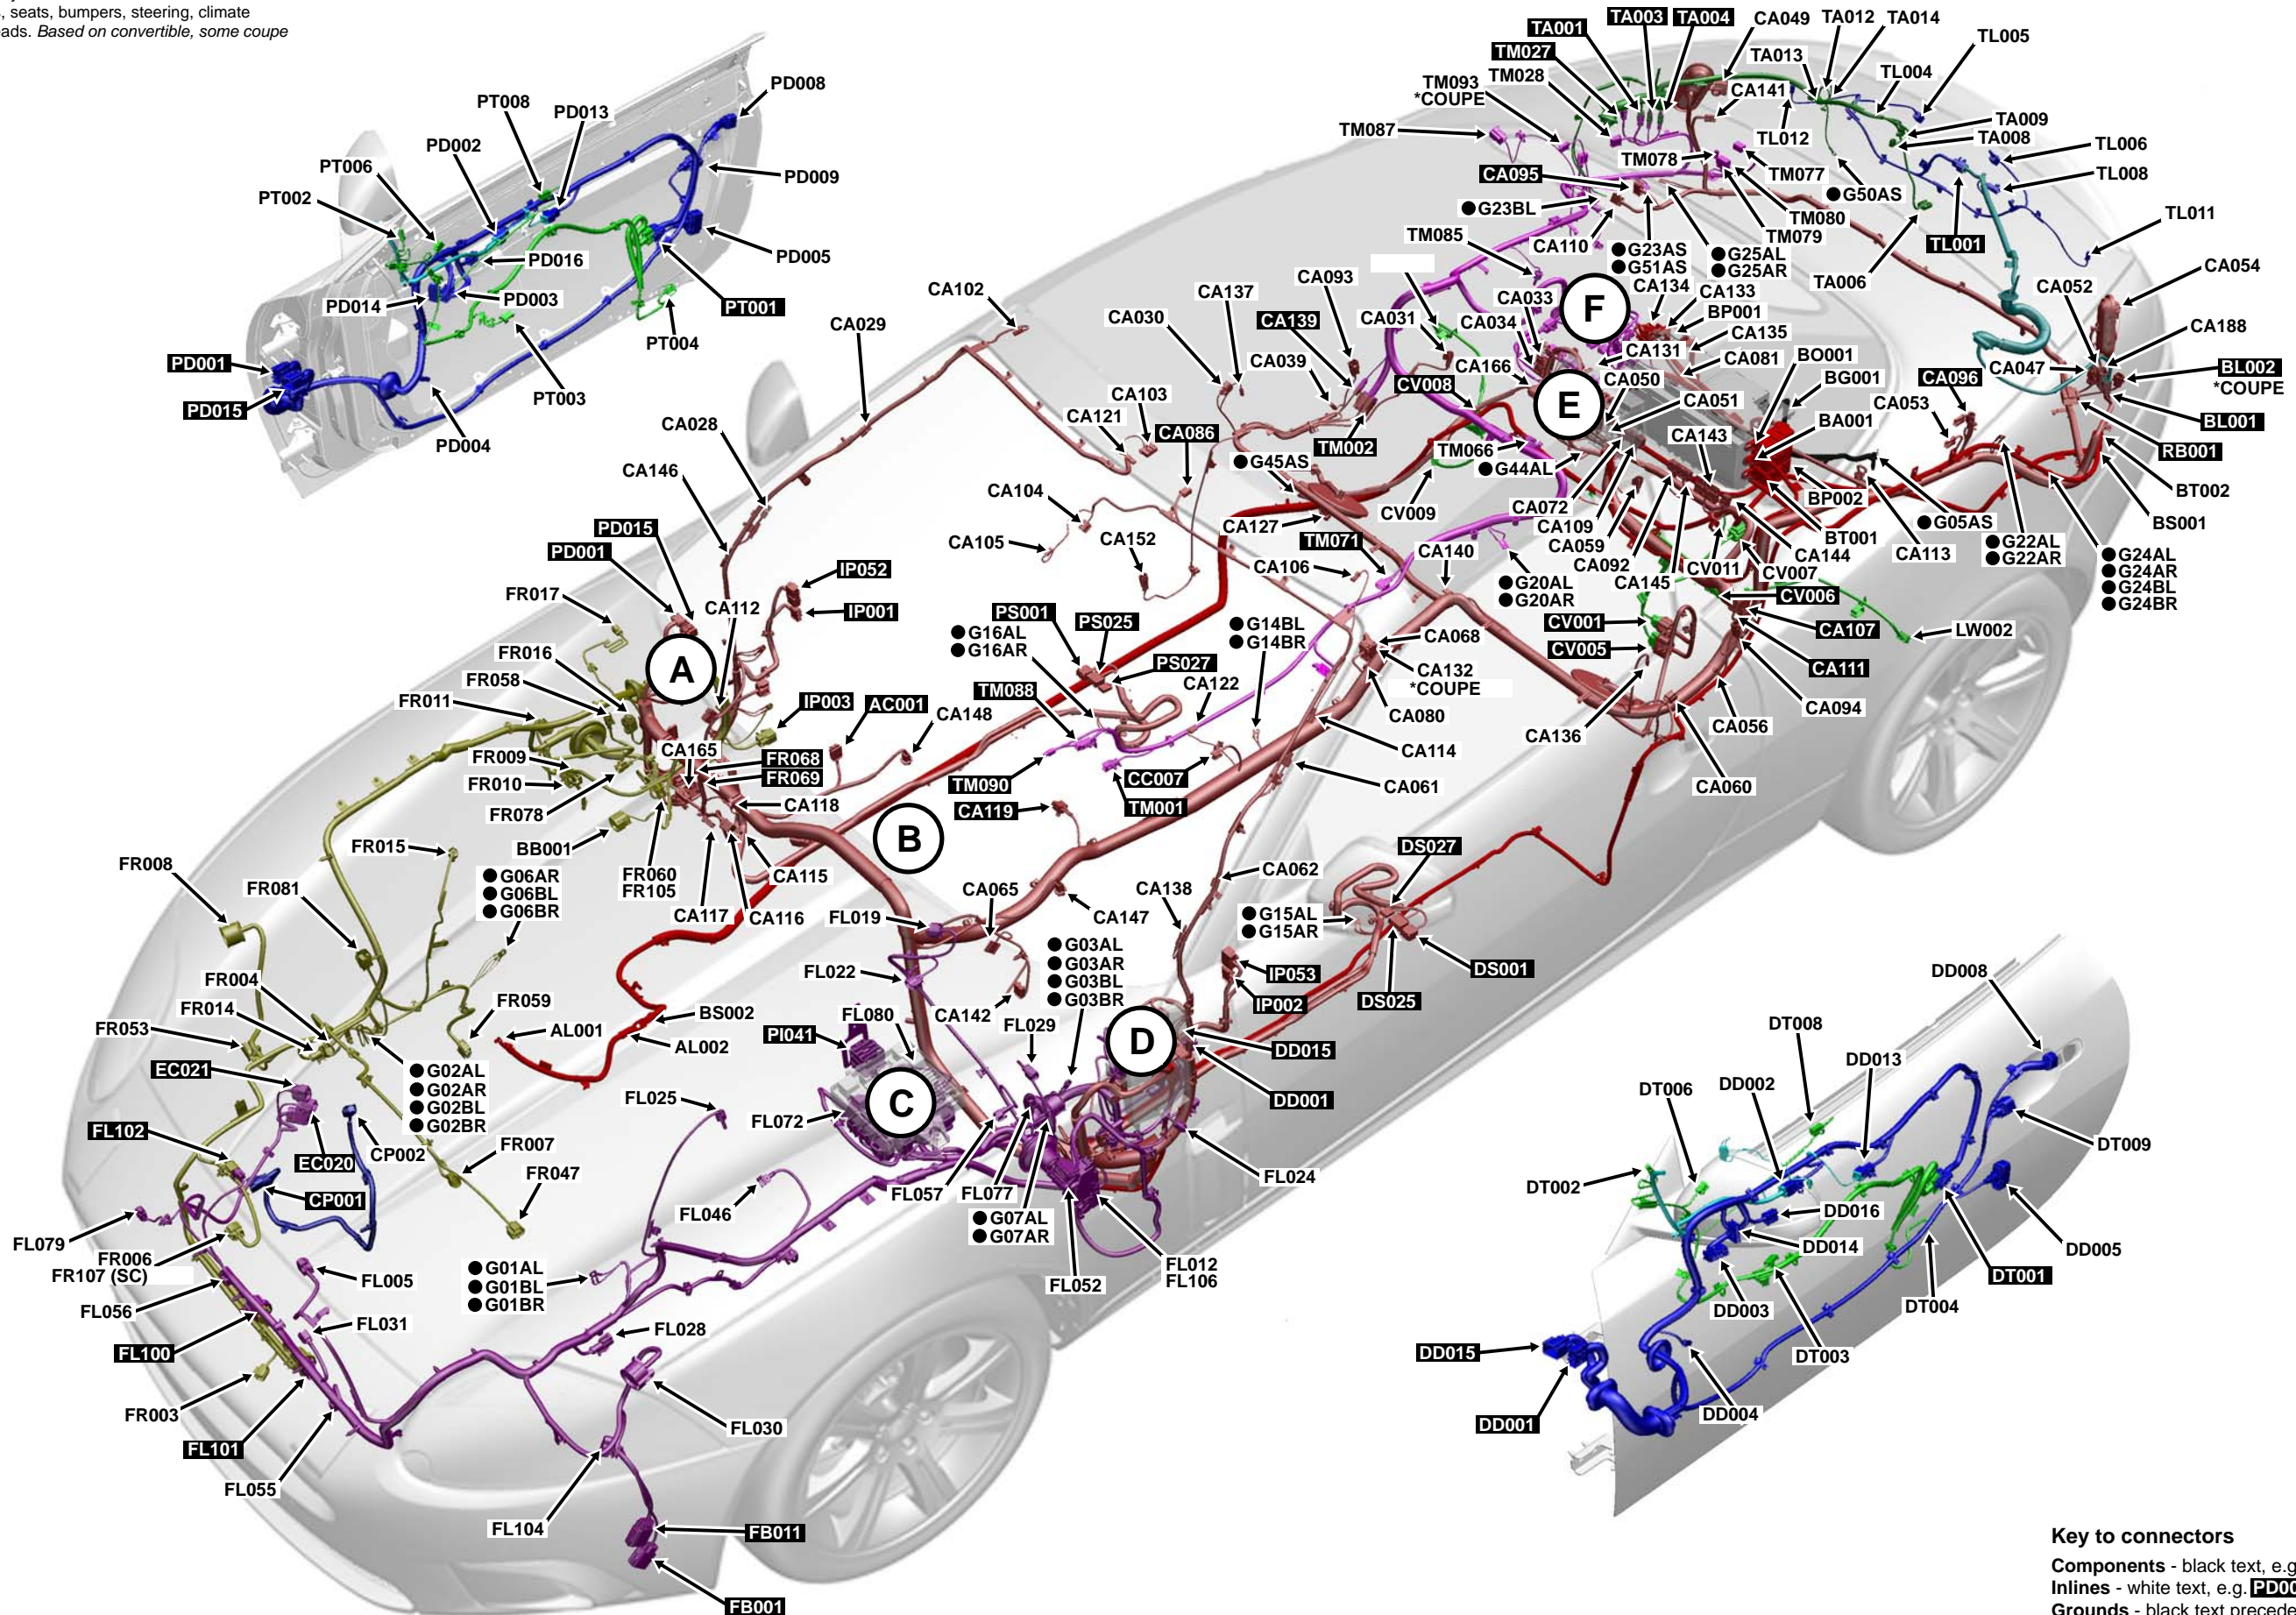



Key to connectors
 Components - black text, e.g. CA1010
 Inlines - white text, e.g. PD001
 Grounds - black text preceded by a dot, e.g. ●G02AL

XK CONNECTOR QUICK REFERENCE GUIDE

VIN: B20075 >


All paper copies are uncontrolled.

DETAIL B IP AND CENTRE CONSOLE

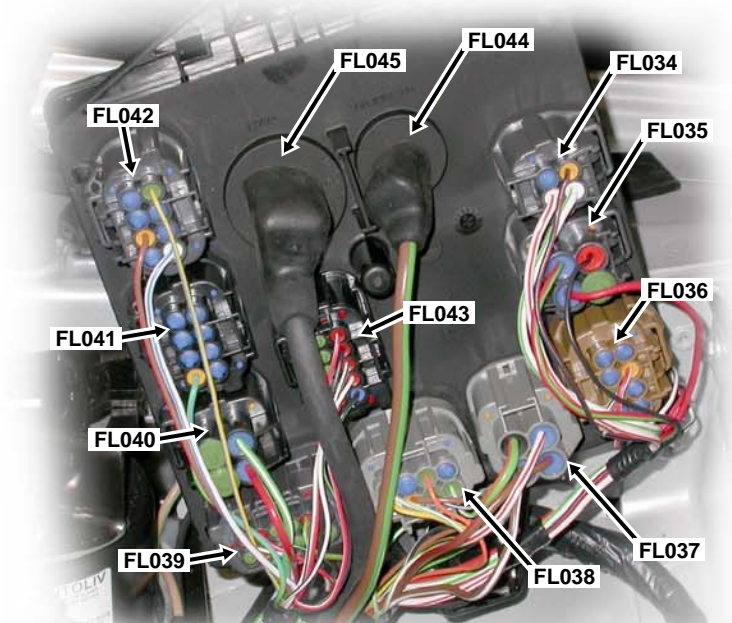
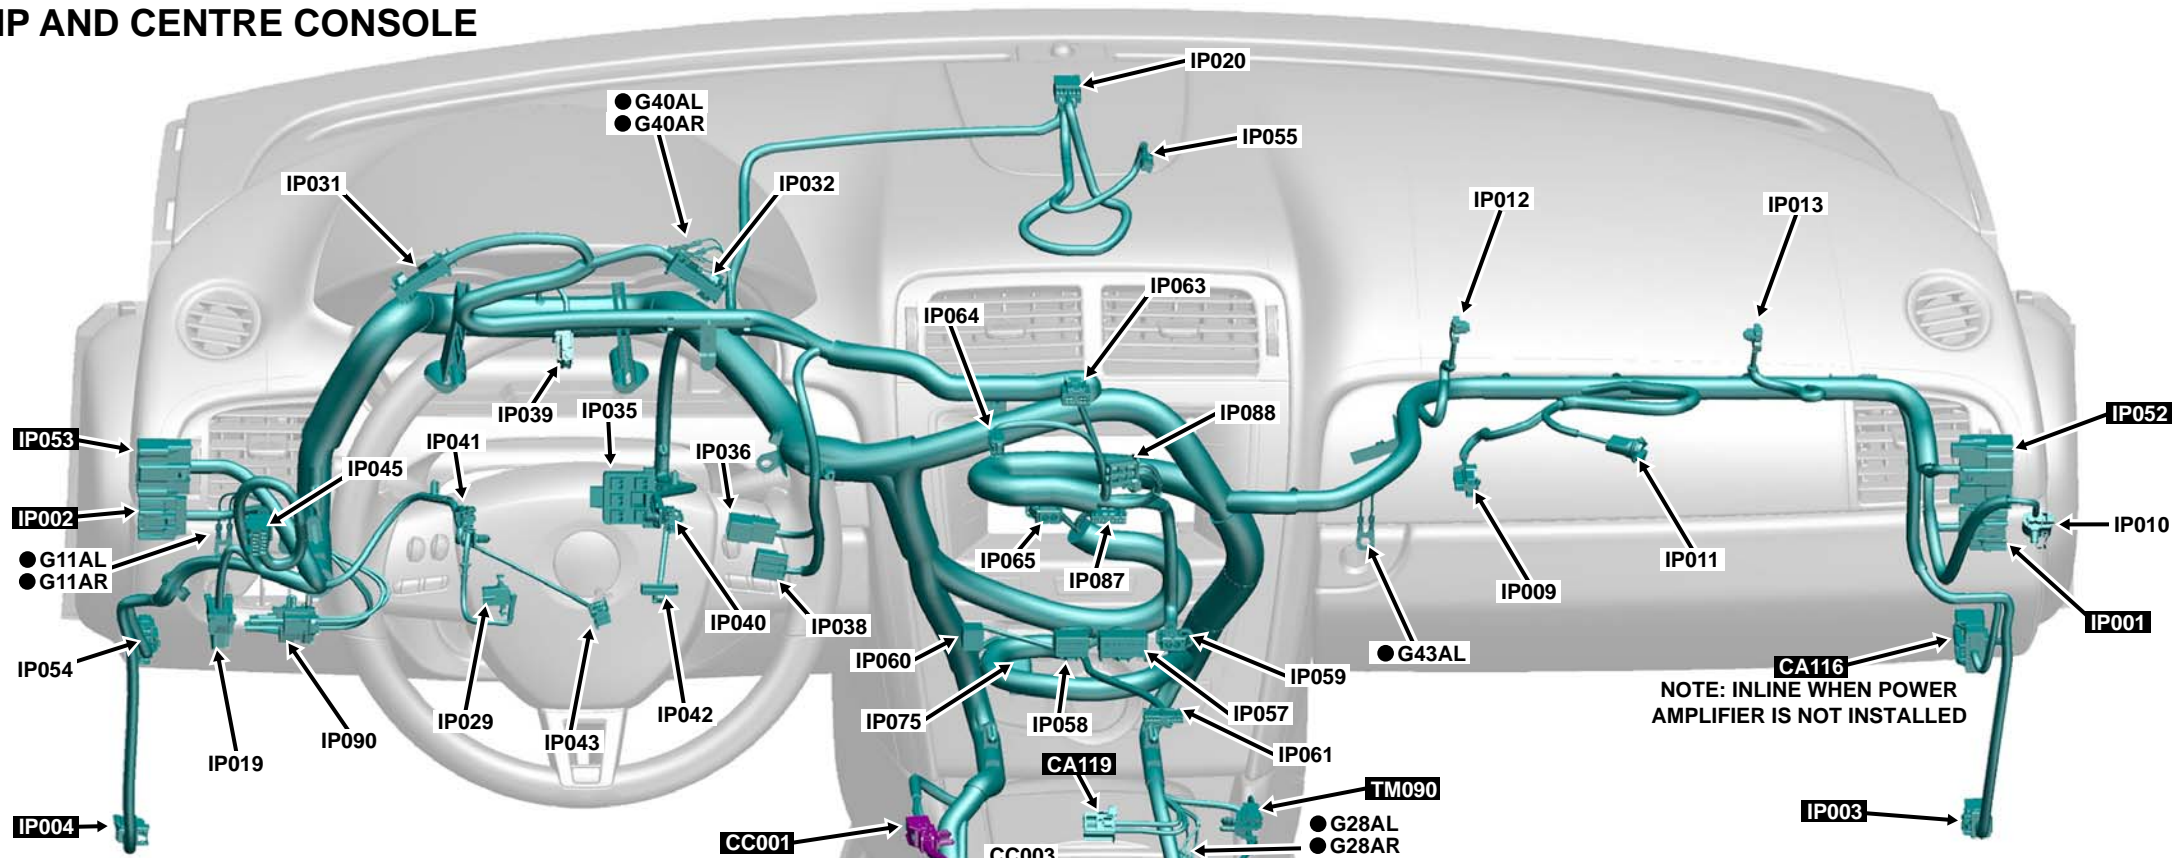


DETAIL C POWER DISTRIBUTION BOX


DETAIL D CENTRAL JUNCTION BOX

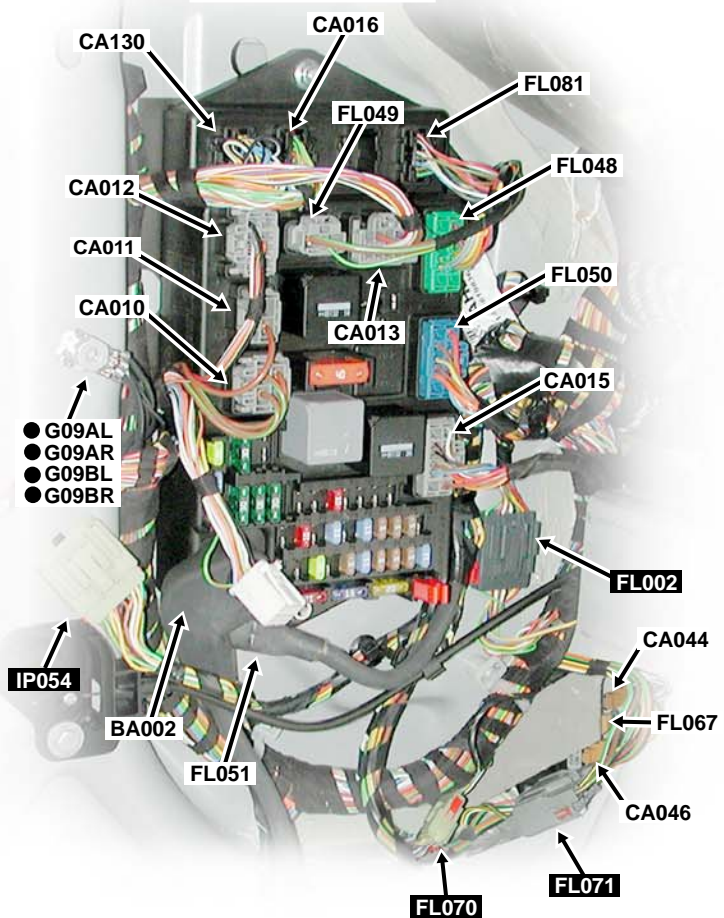

DETAIL A RH 'A' POST

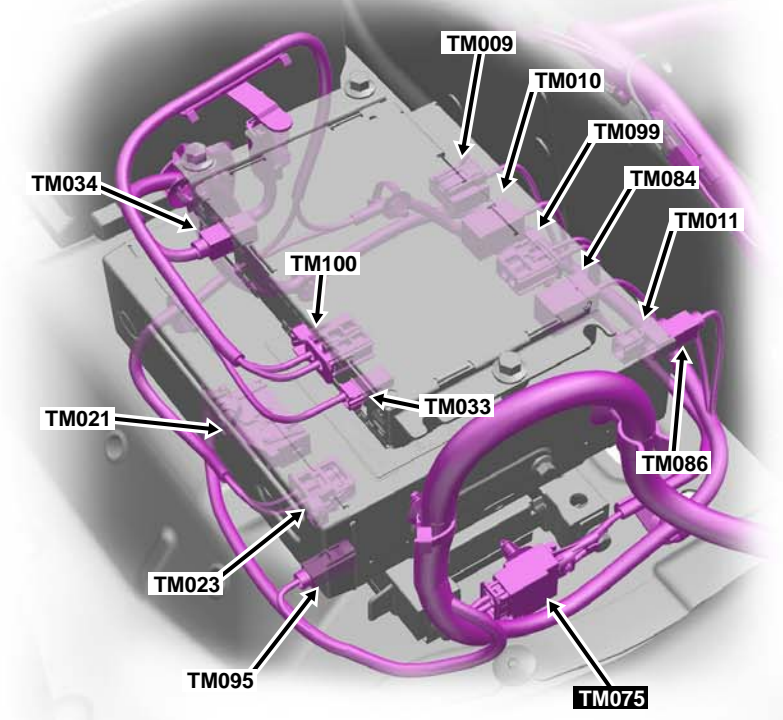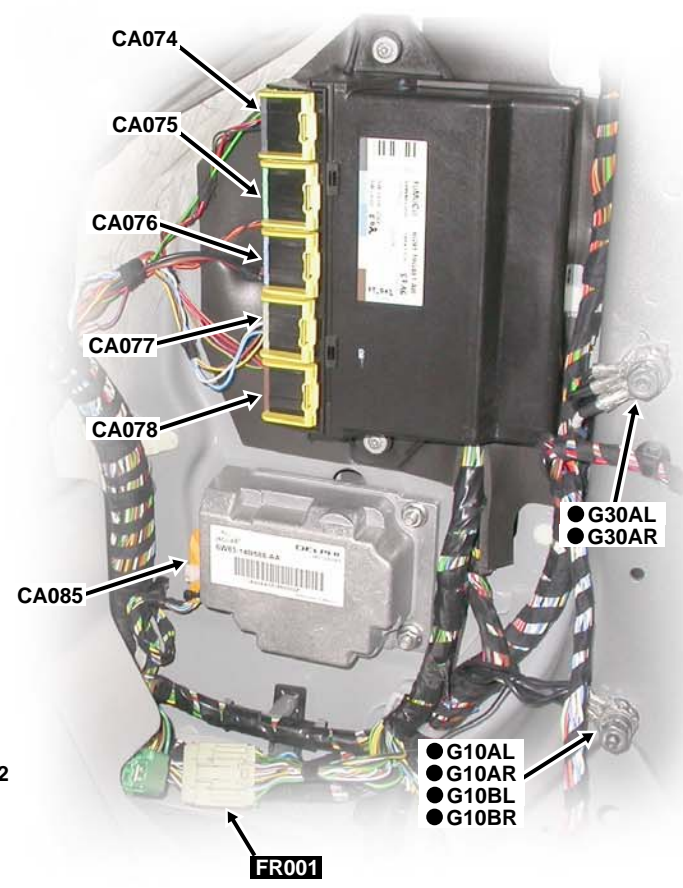

DETAIL F BEHIND REAR SEAT

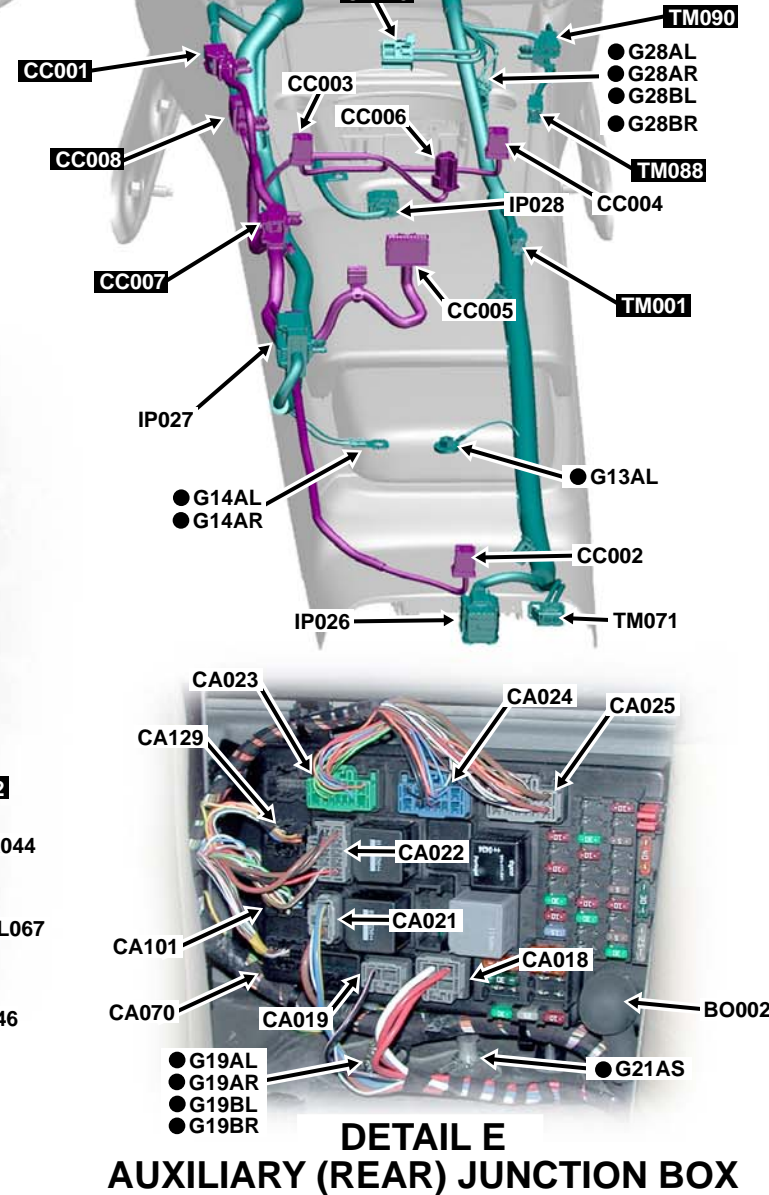

DETAIL E AUXILIARY (REAR) JUNCTION BOX