


# CONNECTOR QUICK REFERENCE GUIDE

**Document Objective:** To provide basic connector location information only, including in-lines and grounds.


For detailed connector information refer to the Electrical Reference Library (ERL).

**Note:** For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads.


All paper copies are uncontrolled.

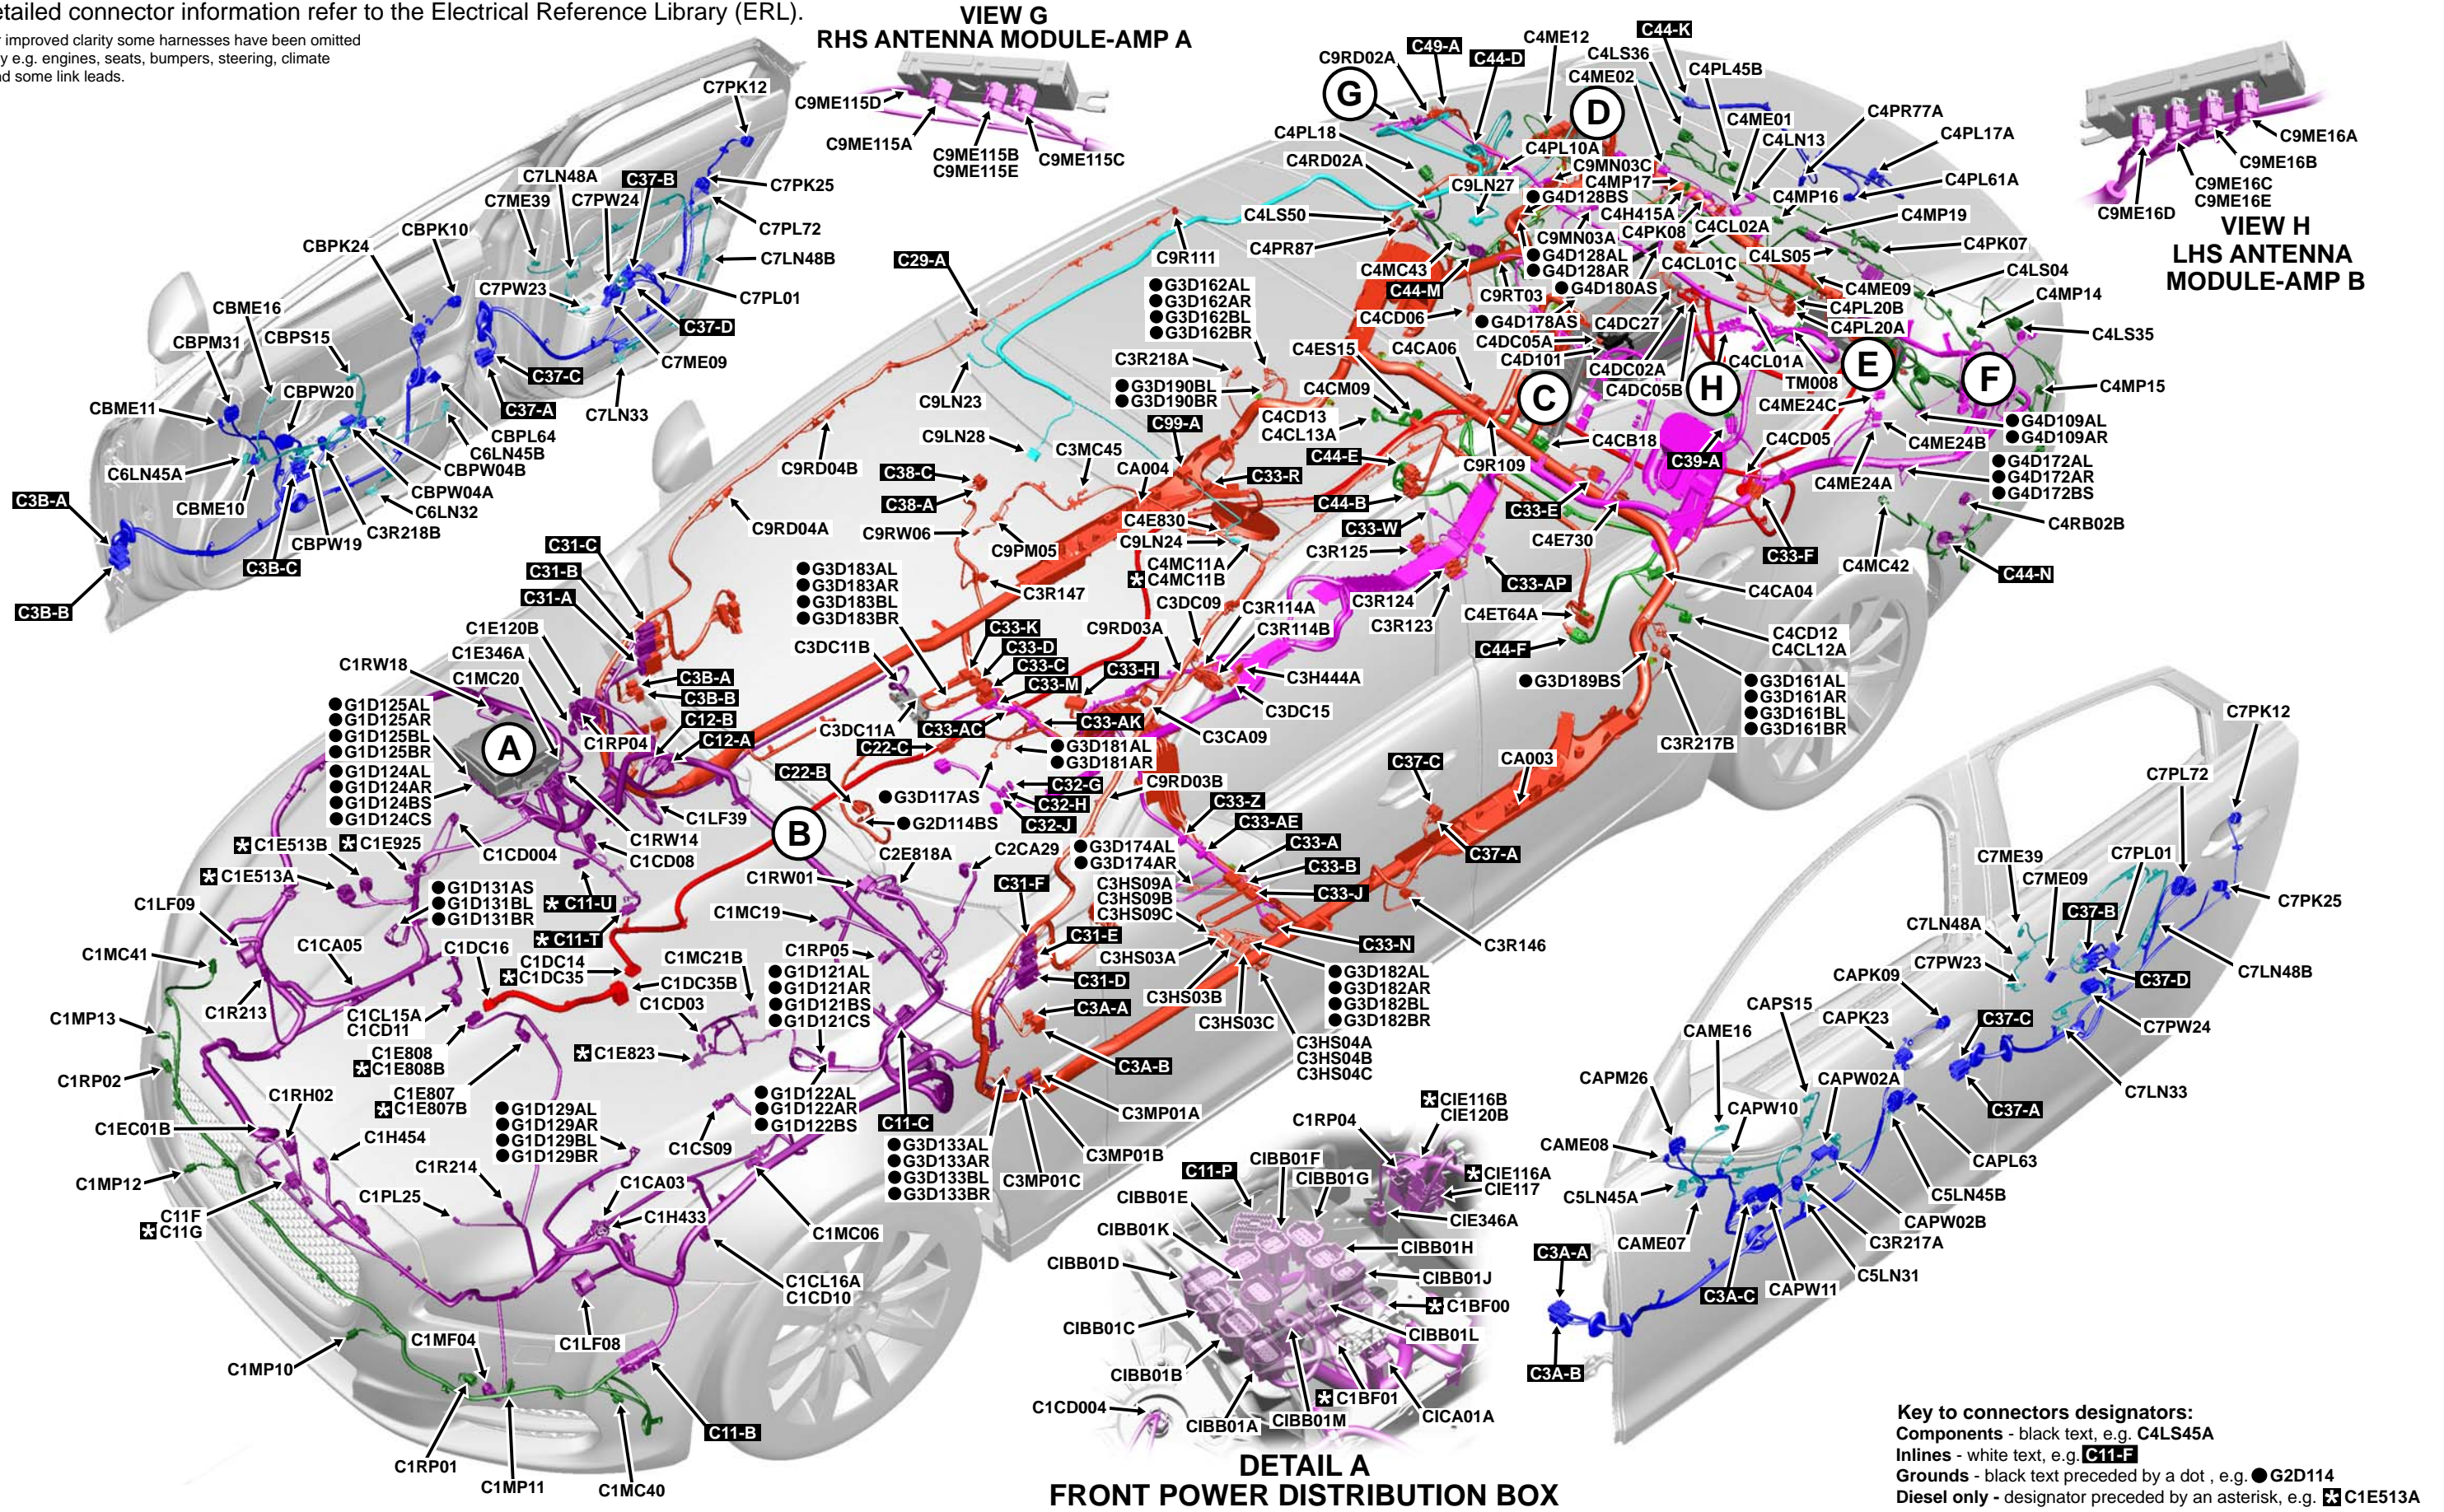


### DETAIL B IP AND CENTRE CONSOLE

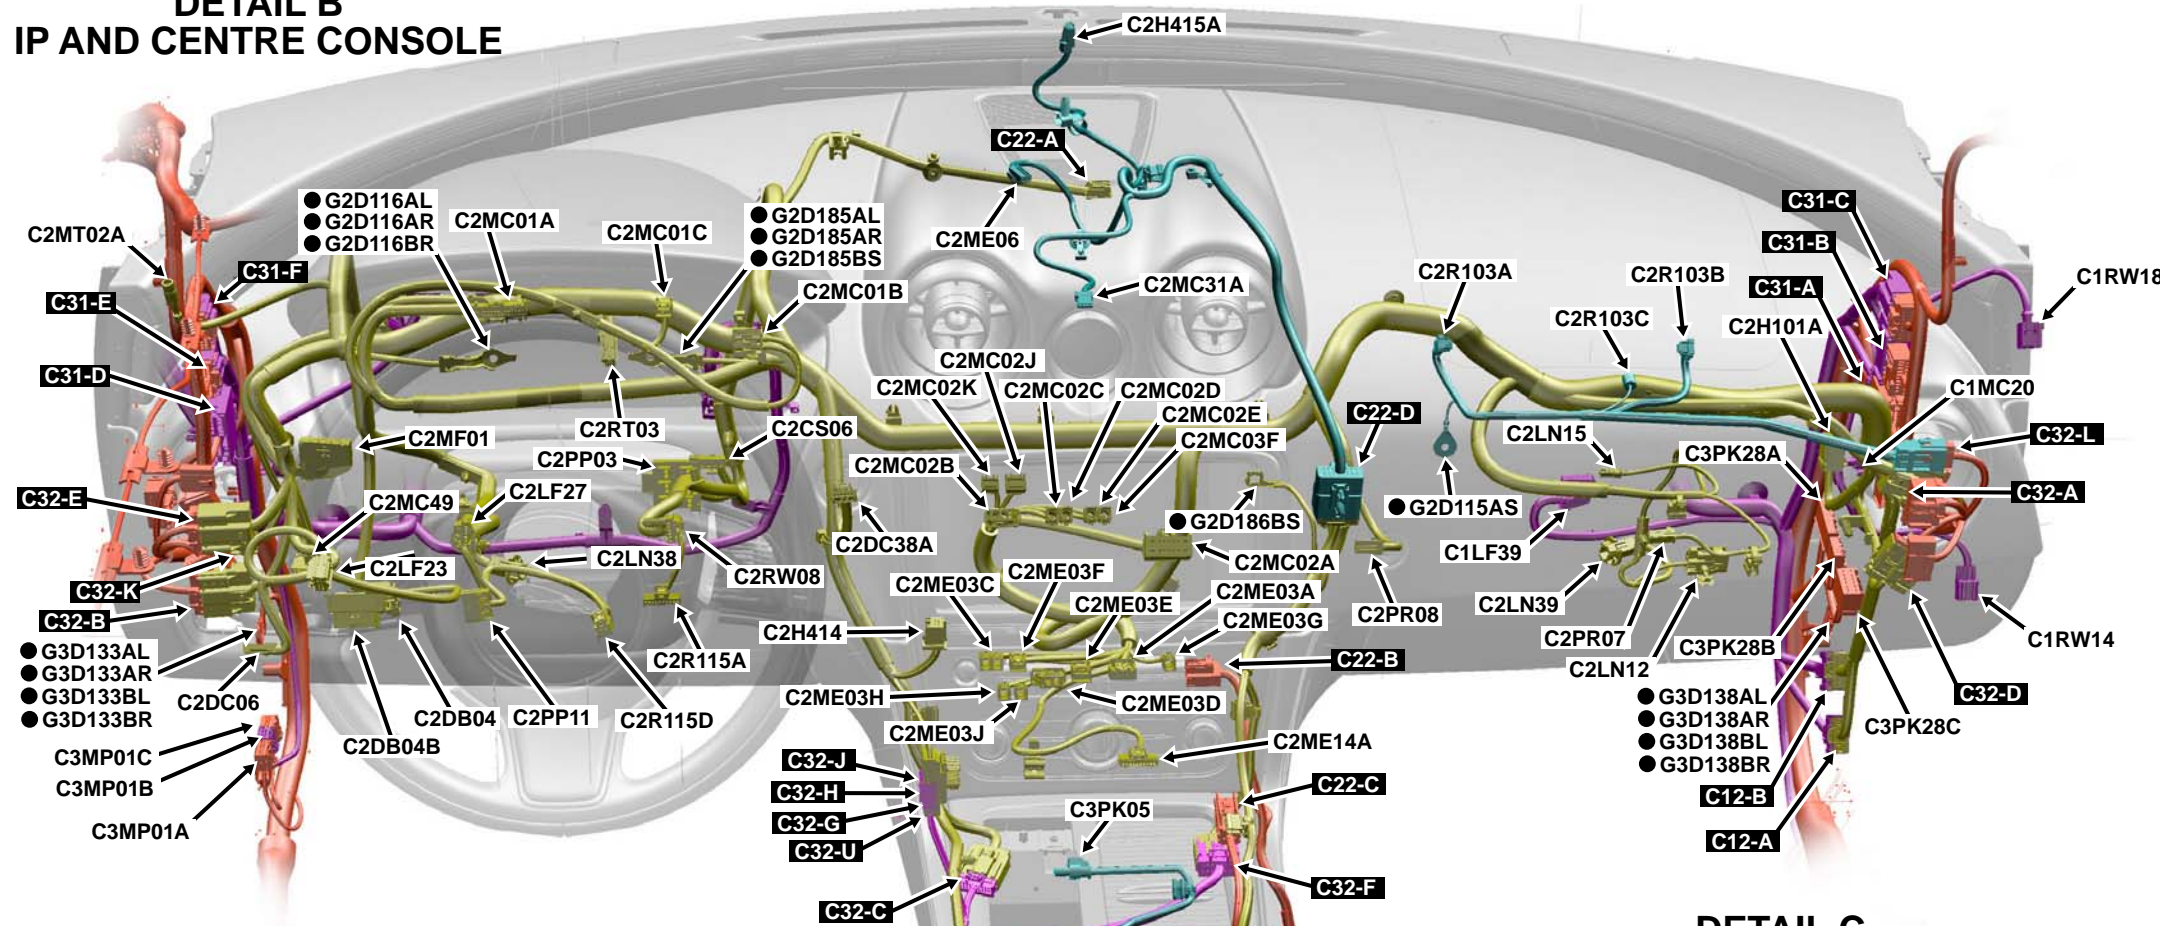


### DETAIL D REAR RH QUARTER

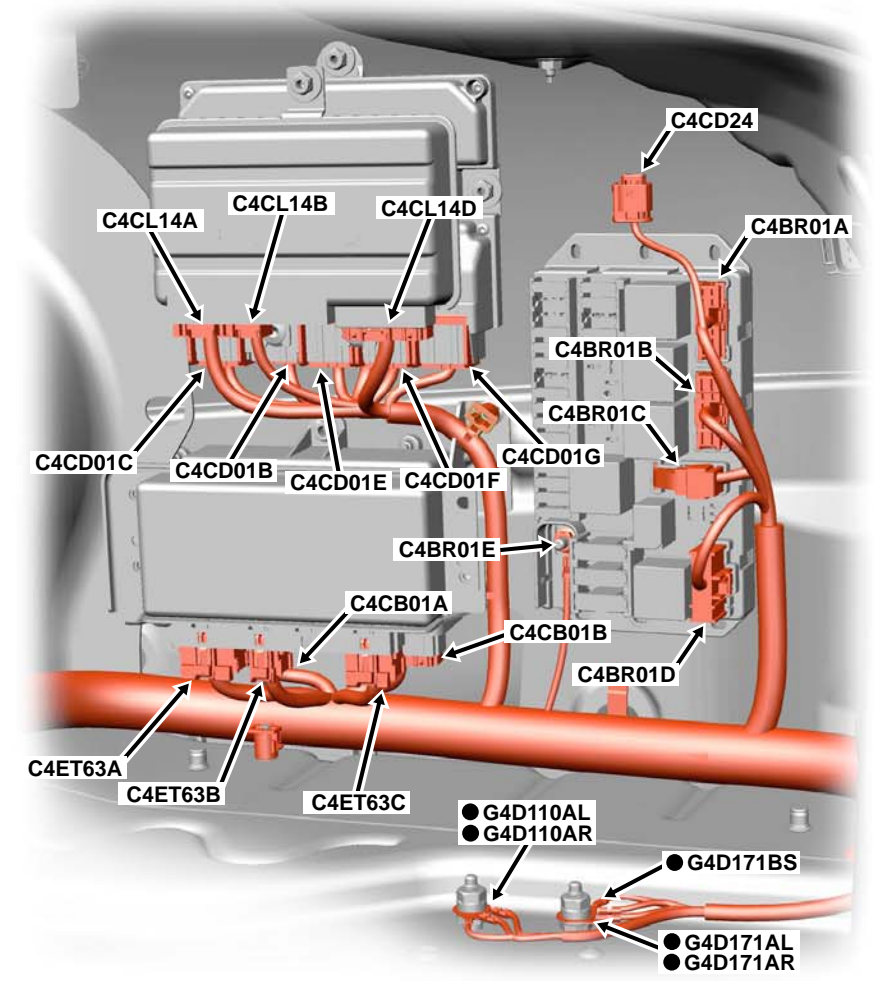

### DETAIL F REAR LH QUARTER

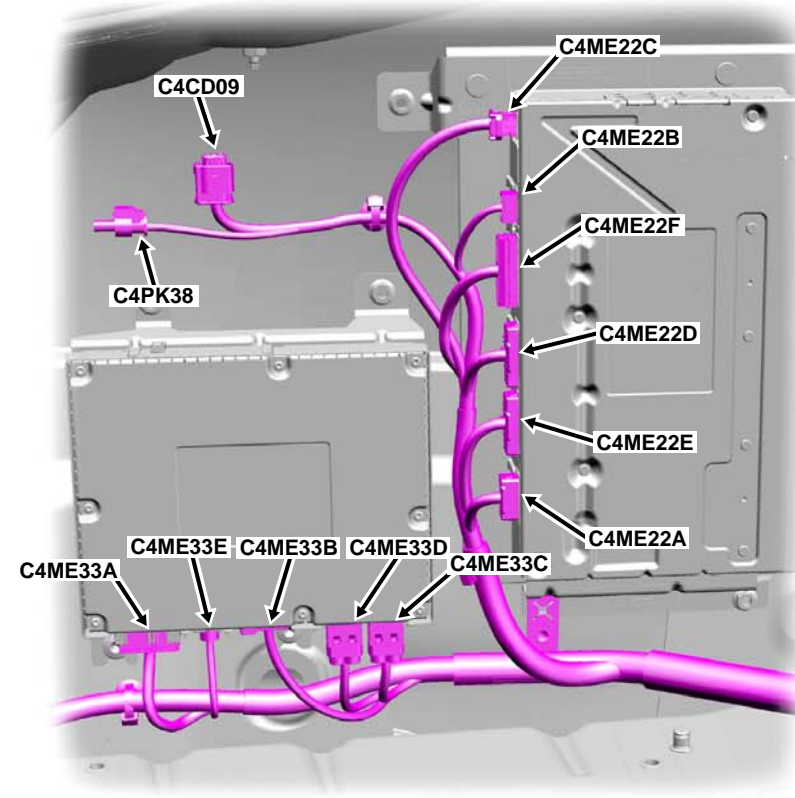

### DETAIL C BEHIND REAR SEATS AREA

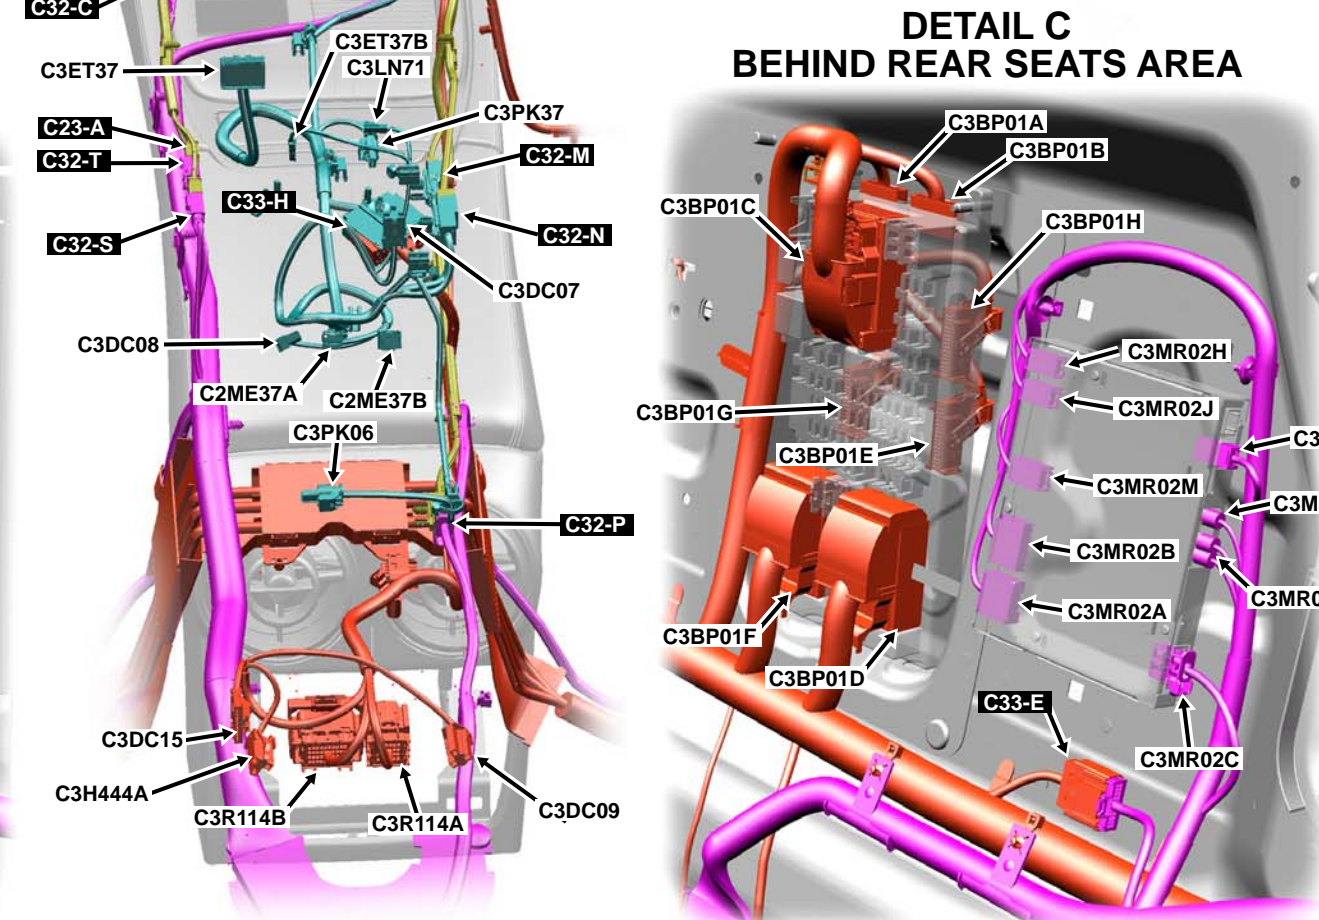

### DETAIL E REAR OF LUGGAGE COMPARTMENT

