



S-TYPE	Date 03/2000	S204-04
TECHNICAL BULLETIN		

Subject FRONT WHEEL BEARING REPLACEMENT PRECAUTIONS DURING INSTALLATION	Model S-TYPE Year 1999.25 MY ON VIN L00600 ON
---	---

ISSUE: S204-04 FRONT WHEEL BEARING REPLACEMENT PRECAUTIONS DURING INSTALLATION.

Replacement front wheel bearings are supplied complete with a new wheel speed sensor already fitted and sealed into the bearing housing. Do NOT separate the wheel sensor from the assembly when installing; the sealing is important in preventing water ingress which may lead to premature failure of the bearing.

ACTION:

When installing a wheel bearing/wheel speed sensor assembly, take great care that the sealed joint of the wheel speed sensor to the bearing housing is not disturbed during installation of the bearing. Should any doubt arise as to the integrity of the sealing, or should the sensor be displaced accidentally during bearing installation, follow the revised sealing procedure detailed in Technical Bulletin S206-02.

WARRANTY INFORMATION:

This Technical Bulletin is issued for information only.