

**SERVICE**

**TECHNICAL BULLETIN**

Transit Relay Removal –  
Change In Procedure

MODEL 2006 MY-ON  
XJ range  
VIN H02015-ON

**Issue:**

This bulletin is for information only, to inform dealers of a change in the procedure for removing the transit relay. If the two halves of the black electrical connectors are not connected following the removal of the transit relay, the air suspension module will have no power, and will not communicate or operate the air suspension.

**Action:**

For the new transit relay removal process change, follow the Service Instruction outlined below.

SERVICE INSTRUCTION

1. Ensure the ignition is switched 'OFF'.
2. Open the luggage compartment.
3. Remove the spare wheel cover (Illustration 1).

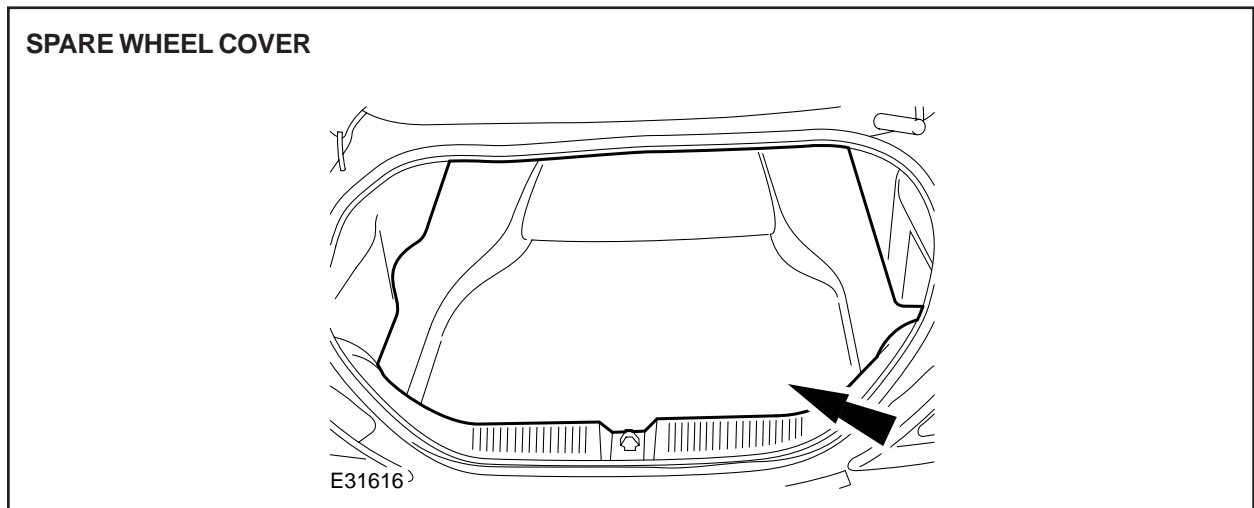


ILLUSTRATION 1

**NOTE: THE INFORMATION IN TECHNICAL BULLETINS IS INTENDED FOR USE BY TRAINED, PROFESSIONAL TECHNICIANS WITH THE KNOWLEDGE, TOOLS, AND EQUIPMENT TO DO THE JOB PROPERLY AND SAFELY. IT INFORMS THESE TECHNICIANS OF CONDITIONS THAT MAY OCCUR ON SOME VEHICLES, OR PROVIDES INFORMATION THAT COULD ASSIST IN PROPER VEHICLE SERVICE. THE PROCEDURES SHOULD NOT BE PERFORMED BY "DO-IT-YOURSELFERS." DO NOT ASSUME THAT A CONDITION DESCRIBED AFFECTS YOUR CAR. CONTACT A JAGUAR DEALER TO DETERMINE WHETHER THE BULLETIN APPLIES TO YOUR VEHICLE.**

4. Disconnect white electrical connector (CR095) from the transit relay (Illustration 2).

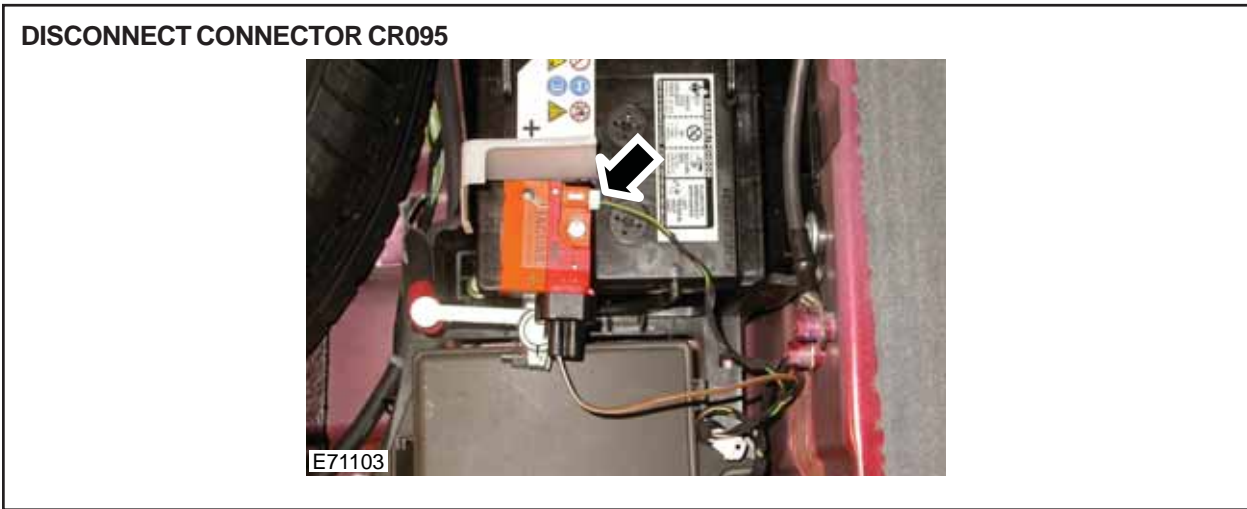


ILLUSTRATION 2

5. Locate the white electrical connector (CR095) into the battery tray (Illustration 3).

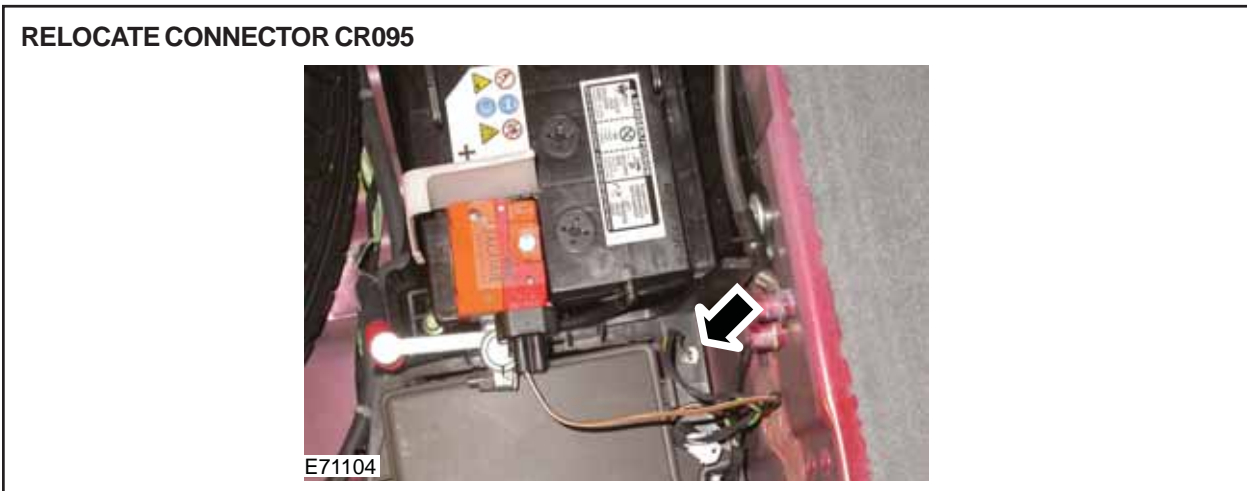


ILLUSTRATION 3

6. Disconnect black electrical connector (CR118) from the transit relay (Illustration 4).



ILLUSTRATION 4

7. Connect the black electrical connector (CR118) into the black mating half on the wiring harness. This supplies power to the air suspension module following transit relay removal (Illustration 5).

**RECONNECT CONNECTOR CR118 FOR AIR SUSPENSION CONTROL MODULE**



ILLUSTRATION 5

8. Loosen the two transit relay securing bolts, and remove the transit relay (Illustration 6).

**RECONNECT CONNECTOR CR118 FOR AIR SUSPENSION CONTROL MODULE**



ILLUSTRATION 6

9. Install the battery positive cable to the battery, and tighten to 4 Nm (Illustration 7).

**RECONNECT BATTERY POSITIVE CABLE**



ILLUSTRATION 7

10. Install the spare wheel cover.
11. Close the luggage compartment.