



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH II
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH
THE QUEEN MOTHER
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY




BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE PRINCE OF WALES
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY

JAGUAR

XK8

2001 Model Year XK8 Range Electrical Guide

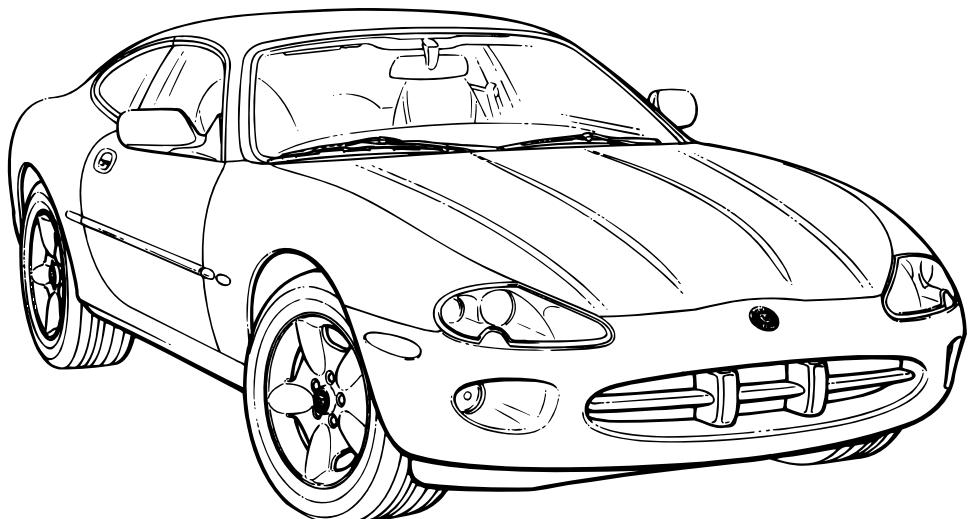

Published by Parts and Service Communications
Jaguar Cars Limited

Publication Part Number – JJM 10 38 14/10





Electrical Guide Format

This Electrical Guide is made up of two major sections. The first section, at the front of the book, provides general information for and about the use of the book, and information and illustrations to aid in the understanding of the XK8 electrical / electronic systems, as well as the location and identification of components.

The second section includes the Figures, which are the basis of the book. Each Figure is identified by a Figure Number (i.e. Fig. 01.1) and Title, and is accompanied by a page of data containing information specific to that Figure.

It is recommended that the user read through the front section of the book to develop a familiarity with the layout of the book and with the system of symbols and abbreviations used. The Table of Contents on the following pages should help to guide the user.

Standard Abbreviations

The following abbreviations are used throughout this Electrical Guide:

ACP	Audio Control Protocol Network
B+	Battery Voltage
CAN	Controller Area Network
COUPE	Coupe Vehicles
CONV.	Convertible Vehicles
DI	Direction Indicator
LH	Left-Hand
LHD	Left-Hand Drive
N/A	Normally Aspirated
NAS	North American Specification
RH	Right-Hand
RHD	Right-Hand Drive
ROW	Rest of World
SC	Supercharged
SCP	Standard Corporate Protocol Network
VIN	Vehicle Identification Number

Vehicle Identification Numbers (VIN)

VIN ranges are presented throughout the book in the following manner:

→ VIN 123456 indicates "up to VIN 123456"; VIN 123456 → indicates "from VIN 123456 on".

XK8 Electrical System

The vehicle electrical system is a ground side switched system. The ignition switch switches ground circuits on / off to complete system circuits and apply power. Circuits that require ignition switch position control are supplied with "ignition switched grounds". Both power grounds (high current consumers) and logic grounds (electronic switching circuits) are used throughout the system.

Three data networks are employed in the vehicle: a high speed Controller Area Network (CAN) for the engine, drive train and related systems, a Standard Corporate Protocol network (SCP) for the body systems, and an Audio Control Protocol network (ACP) for certain In-Car Entertainment and Telephone functions. Any vehicle subsystem depicted on the figures with the CAN or SCP included uses data derived from the network, or transmits data via the network to achieve control. Messages for both networks are catalogued in the Appendix of this book. In addition to the two networks, the vehicle uses a serial data bus (ISO) for diagnostics, security sounder operation and for the programming of certain control modules.



Table of Contents: Figures	3 – 4
Component Index	5 – 9
User Instructions	10 – 11
Symbols and Codes	12 – 15
Connectors	16
Main Power Distribution	17
Harness Layout	18 – 19
Ground Point Location	20
Relay and Fuse Box Location	21
Control Module Location	22 – 23
Control Module Pin Identification	24 – 31
Electrical Guide Figures and Data	follows after page 31 (pages are numbered by Figure number)
Appendix (CAN and SCP messages)	follows Figures and Data

**FIGURES**

Fig.	Description	Variant
01 Power Distribution		
01.1	Main Power Distribution	All Vehicles
01.2	Battery Power Distribution: Driver and Passenger Fuse Boxes	All Vehicles
01.3	Battery Power Distribution: Trunk, Engine Compartment, EMS Fuse Boxes	All Vehicles
01.4	Ignition Switched Power Distribution	All Vehicles
01.5	Engine Management Switched Power Distribution	All Vehicles
02 Ground Distribution		
02.1	Ignition Switched Ground Distribution	All Vehicles
03 Battery; Starter; Generator		
03.1	Battery; Starter; Generator	AJ27 N/A Vehicles
03.2	Battery; Starter; Generator	AJ27 SC Vehicles
04 Engine Management		
04.1	AJ27 N/A Engine Management: Part 1	AJ27 N/A Vehicles
04.2	AJ27 N/A Engine Management: Part 2	AJ27 N/A Vehicles
04.3	AJ27 SC Engine Management: Part 1	AJ27 SC Vehicles
04.4	AJ27 SC Engine Management: Part 2	AJ27 SC Vehicles
05 Transmission		
05.1	AJ27 N/A Automatic Transmission	AJ27 N/A Vehicles
05.2	AJ27 SC Automatic Transmission	AJ27 SC Vehicles
05.3	Gear Shift Interlock	All Vehicles
06 Chassis		
06.1	Anti-Lock Braking; Traction Control	All Vehicles
06.2	Power Assisted Steering	All Vehicles
06.3	Suspension Adaptive Damping	Adaptive Damping Vehicles
06.4	Adaptive Speed Control	Adaptive Speed Control Vehicles
07 Climate Control		
07.1	Climate Control: Part 1	All Vehicles
07.2	Climate Control: Part 2	All Vehicles
08 Instrumentation; Audible Warnings		
08.1	Instrument Packs	All Vehicles
08.2	Audible Warnings	All Vehicles
09 Exterior Lighting		
09.1	Exterior Lighting: Front	All Vehicles
09.2	Exterior Lighting: Rear	All Vehicles
09.3	Headlamp Leveling	Headlamp Leveling Vehicles
10 Interior Lighting		
10.1	Interior Lighting	All Vehicles
10.2	Dimmer-Controlled Lighting	All Vehicles

**FIGURES**

Fig.	Description	Variant
11	Steering Column; Mirrors	
11.1	Steering Column Movement	All Vehicles
11.2	Mirror Movement and Tint	All Vehicles
11.3	Interior and Exterior Mirrors; Fold Back Mirrors	All Vehicles
12	Seat Systems	
12.1	Driver Seat: Memory	Memory Seat Vehicles
12.2	Driver Seat: Non Memory	Non Memory Seat Vehicles
12.3	Passenger Seat: 5-Way Movement	5-Way Movement Vehicles
12.4	Passenger Seat: 3-Way Movement	3-Way Movement Vehicles
13	Door Locking	
13.1	Central Door Locking	All Vehicles
14	Wash / Wipe System	
14.1	Wash / Wipe System	All Vehicles
15	Window Lifts; Convertible Top	
15.1	Window Lifts	All Vehicles
15.2	Convertible Top	Convertible Vehicles
16	In-Car Entertainment	
16.1	Standard In-Car Entertainment	Standard ICE Vehicles
16.2	Premium In-Car Entertainment	Premium ICE Vehicles
17	Communications; Navigation	
17.1	Cellular Telephone: Portable	NAS Vehicles
17.2	Cellular Telephone: Fixed	ROW Vehicles
17.3	Navigation System	Navigation Only Vehicles
17.4	Navigation System with TV and VICS	TV and VICS Vehicles
18	Occupant Safety	
18.1	Advanced Restraint System	All Vehicles
19	Driver Assist	
19.1	Reverse Parking Aid	Reverse Parking Aid Vehicles
20	Ancillaries	
20.1	Ancillaries: Horns; Cigar Lighters;	All Vehicles
	Accessory Connectors; Garage Door Opener	
21	Vehicle Multiplex Systems	
21.1	CAN (Network); SCP Network; Serial Data Link	All Vehicles



ABS / Traction Control Control Module	Fig. 06.1
	Fig. 21.1
Accelerometers	Fig. 06.3
Active Security Sounder	Fig. 13.2
	Fig. 21.1
Adaptive Damping Control Module	Fig. 06.3
	Fig. 21.1
Adaptive Speed Control Booster Control Module	Fig. 06.4
	Fig. 21.1
Adaptive Speed Control Brake Booster	Fig. 06.4
Adaptive Speed Control Control Module	Fig. 06.4
	Fig. 21.1
Adaptive Speed Control Master Switch	Fig. 06.4
Air Assist Close Valve	Fig. 04.1
Air Conditioning Compressor Clutch	Fig. 04.2
	Fig. 04.4
	Fig. 07.2
Air Conditioning Control Module	Fig. 04.2
	Fig. 04.4
	Fig. 07.1
	Fig. 07.2
	Fig. 21.1
Air Conditioning Control Panel	Fig. 07.1
	Fig. 10.2
Air Intake – LH & RH Blower	Fig. 07.1
Airbags	Fig. 18.1
Ambient Temperature Sensor	Fig. 07.1
Antenna Motor	Fig. 16.1
	Fig. 16.2
Aspirator Assembly	Fig. 07.1
Audible Warning Speaker (Column Switchgear)	Fig. 08.2
Auto Tilt Switch (Column Switchgear)	Fig. 11.1
Battery	Fig. 03.1
	Fig. 03.2
Blower Motors	Fig. 07.2
Body Processor Module	Fig. 03.1
	Fig. 03.2
	Fig. 05.3
	Fig. 08.2
	Fig. 09.1
	Fig. 09.2
	Fig. 10.1
	Fig. 11.1
	Fig. 11.2
	Fig. 11.3
	Fig. 12.1
	Fig. 12.2
	Fig. 12.3
	Fig. 12.4
	Fig. 13.1
	Fig. 13.2
	Fig. 13.3
	Fig. 14.1
	Fig. 15.1
	Fig. 15.2
	Fig. 20.1
	Fig. 21.1
Brake Booster Pressure Sensors	Fig. 06.4
Brake Cancel Switch	Fig. 04.2
	Fig. 04.4
	Fig. 06.4
Brake Fluid Reservoir	Fig. 06.1
Brake Switch	Fig. 04.1
	Fig. 04.3
	Fig. 05.3
	Fig. 06.1
	Fig. 06.3
	Fig. 09.2
Canister Close Valve (CCV)	Fig. 04.1
	Fig. 04.3
CD Auto-Changer	Fig. 16.1
	Fig. 16.2
	Fig. 17.3
Cellular Phone Control Module	Fig. 17.1
	Fig. 17.2
Center Console Switch Pack	Fig. 09.1
	Fig. 09.2
	Fig. 10.2
Cigar Lighter	Fig. 10.2
	Fig. 20.1
Crankshaft Position Sensor (CKPS)	Fig. 04.1
	Fig. 04.3
Camshaft Position Sensors (CMPS)	Fig. 04.1
	Fig. 04.3
Column Joy Stick (Column Switchgear)	Fig. 11.1
Convertible Top Closed Switch	Fig. 15.2
Convertible Top Down Switch	Fig. 15.2
Convertible Top Latch Closed Switch	Fig. 15.2
Convertible Top Pump	Fig. 15.2
Convertible Top Raised Switch	Fig. 15.2
Convertible Top Ready-To-Latch Switch	Fig. 15.2
Convertible Top Switch	Fig. 10.2
	Fig. 15.2
Coolant Level Switch	Fig. 08.1
Crash Sensors	Fig. 18.1
D – 4 Switch	Fig. 05.1
Damper Solenoids	Fig. 06.3
Data Link Connector	Fig. 21.1
Dimmer Control (Column Switchgear)	Fig. 10.2
Dimmer Module	Fig. 10.2
Diode (BT29) – Trunk Switch	Fig. 10.1
Door Control Module – Driver	Fig. 10.1
	Fig. 11.1
	Fig. 11.2
	Fig. 11.3
	Fig. 12.1
	Fig. 13.1
	Fig. 13.2
	Fig. 13.3
	Fig. 14.1
	Fig. 15.1
	Fig. 15.2
	Fig. 20.1
	Fig. 21.1



Door Control Module – Passenger	Fig. 10.1	Footwell Lamps	Fig. 10.1
.....	Fig. 11.2	Front Fog Lamps	Fig. 09.1
.....	Fig. 13.1	Front Lamp Units	Fig. 09.1
.....	Fig. 13.2	Front Side Markers (NAS only)	Fig. 09.1
.....	Fig. 13.3	Fuel Tank Pressure Sensor (FTPS)	Fig. 04.1
.....	Fig. 15.1	Fig. 04.3
.....	Fig. 15.2	Fuel Fill Flap Solenoid	Fig. 13.1
.....	Fig. 21.1	Fuel Injectors	Fig. 04.2
Door Lock Actuator – Driver	Fig. 13.1	Fig. 04.4
Door Lock Actuator – Passenger	Fig. 13.1	Fuel Level Sensor	Fig. 08.1
Door Lock Switch – Passenger	Fig. 13.1	Fuel Pump	Fig. 04.2
Door Lock Switches – Driver	Fig. 10.1	Fuel Pumps	Fig. 04.4
.....	Fig. 13.1	Fuse Box – Driver Side	Fig. 01.2
.....	Fig. 13.2	Fig. 01.4
.....	Fig. 13.3	Fuse Box – Engine Compartment	Fig. 01.3
.....	Fig. 15.1	Fig. 01.4
Door Mirror Motors – Driver	Fig. 11.2	Fig. 07.2
Door Mirror Motors – Passenger	Fig. 11.2	Fig. 09.1
Door Mirror – Driver	Fig. 11.3	Fig. 13.2
Door Mirror – Passenger	Fig. 11.3	Fig. 13.3
Door Switch – Driver	Fig. 10.1	Fig. 14.1
.....	Fig. 11.1	Fig. 20.1
.....	Fig. 11.2	Fuse Box – Engine Management	Fig. 01.3
.....	Fig. 13.1	Fig. 01.5
.....	Fig. 13.2	Fuse Box – Passenger Side	Fig. 01.2
.....	Fig. 13.3	Fig. 01.4
Driver Seat Track Switch	Fig. 18.1	Fuse Box – Trunk	Fig. 01.3
Dual Linear Switch	Fig. 03.2	Fig. 01.4
.....	Fig. 05.2	Fig. 04.2
ECM and TCM Cooling Fan	Fig. 04.1	Fig. 04.4
.....	Fig. 04.3	Fig. 07.2
Engine Coolant Temperature Sensor (ECTS)	Fig. 04.1	Fig. 09.2
.....	Fig. 04.3	Fig. 20.1
EGR Valve	Fig. 04.3	Garage Door Opener (Roof Console)	Fig. 20.1
Engine Compartment Security Switch	Fig. 13.2	Gear Selector Illumination Module	Fig. 05.1
.....	Fig. 13.3	Fig. 05.2
Engine Control Module	Fig. 03.1	Fig. 05.3
.....	Fig. 03.2	Fig. 10.2
.....	Fig. 04.1	Fig. 21.1
.....	Fig. 04.2	Gearshift Interlock Solenoid	Fig. 05.3
.....	Fig. 04.3	Generator	Fig. 03.1
.....	Fig. 04.4	Glass Breakage Sensor (Roof Console)	Fig. 13.2
.....	Fig. 05.3	Glove Box Lamp	Fig. 10.1
.....	Fig. 06.4	Head Restraint Control Module – Driver	Fig. 12.1
.....	Fig. 07.2	Fig. 12.2
.....	Fig. 13.2	Fig. 21.1
.....	Fig. 13.3	Head Restraint Control Module – Passenger	Fig. 12.3
.....	Fig. 21.1	Fig. 12.4
Engine Oil Temperature Sensor (EOTS)	Fig. 04.1	Fig. 21.1
.....	Fig. 04.3	Head Restraint Motor – Driver	Fig. 12.1
Evaporator / Heater Matrix Assembly	Fig. 07.1	Fig. 12.2
Evaporative Emission Control Valve (EVAPP)	Fig. 04.1	Head Restraint Motor – Passenger	Fig. 12.3
.....	Fig. 04.3	Fig. 12.4
External Trunk Release Switch	Fig. 13.1	Headlamp Leveling Actuators	Fig. 09.3
Fascia Accessory Connector	Fig. 20.1	Heated Backlight	Fig. 07.2



Heater Pump	Fig. 07.2	Major Instrument Pack	Fig. 05.3
Heater Valve	Fig. 07.2	Fig. 08.1
High Mount Stop Lamp	Fig. 09.2	Fig. 09.1
High Power Protection Module	Fig. 03.1	Fig. 09.2
.....	Fig. 03.2	Fig. 10.2
Heated Oxygen Sensors (HO2S)	Fig. 04.1	Fig. 11.2
.....	Fig. 04.3	Fig. 11.3
Horn Switches (Steering Wheel)	Fig. 20.1	Fig. 13.2
Horns	Fig. 13.2	Fig. 13.3
.....	Fig. 13.3	Fig. 15.1
.....	Fig. 20.1	Fig. 15.2
Intake Air Temperature Sensor 2 (IATS 2)	Fig. 04.3	Fig. 16.1
Ignition Coils	Fig. 04.2	Fig. 16.2
.....	Fig. 04.4	Fig. 17.3
Ignition Switch (Key-In Switch)	Fig. 02.1	Fig. 17.4
.....	Fig. 03.1	Fig. 21.1
.....	Fig. 03.2	Fig. 21.1
.....	Fig. 10.1	Fig. 21.1
.....	Fig. 11.1	Fig. 21.1
.....	Fig. 13.1	Fig. 21.1
Ignitors (Airbag)	Fig. 18.1	Manifold Absolute Pressure Sensor (MAPS)	Fig. 04.3
Inclination Sensor	Fig. 13.2	Minor Instrument Pack	Fig. 08.1
Inertia Switch	Fig. 02.1	Fig. 10.2
Intercooler Pump	Fig. 04.4	Mirror Joy Stick (Driver Door Switch Pack)	Fig. 11.3
Interior Rear View Mirror	Fig. 11.3	Fig. 11.2
.....	Fig. 14.1	Mirrors	Fig. 07.2
Key Fob Antenna	Fig. 13.1	Mode Switch (Transmission)	Fig. 05.1
.....	Fig. 13.2	Fig. 05.2
.....	Fig. 13.3	Fig. 10.2
Key Transponder Module	Fig. 03.1	Navigation Control Module	Fig. 10.2
.....	Fig. 03.2	Fig. 17.3
.....	Fig. 13.2	Fig. 17.4
.....	Fig. 13.3	Navigation Display	Fig. 10.2
.....	Fig. 21.1	Fig. 17.3
Keylock Solenoid (Column Switchgear)	Fig. 05.3	Fig. 17.4
Kickdown Switch	Fig. 05.2	Navigation GPS Antenna	Fig. 17.3
Knock Sensors (KS)	Fig. 04.1	Fig. 17.4
.....	Fig. 04.3	Neutral Switch	Fig. 03.1
Latch Control Valve	Fig. 15.2	Not-In-Park Microswitch	Fig. 05.3
Leveling Switch (Center Console Switch Pack)	Fig. 09.3	Fig. 11.1
Lighting Stalk (Column Switchgear)	Fig. 09.1	Fig. 11.2
.....	Fig. 09.2	Fig. 13.1
.....	Fig. 10.2	Number Plate Lamps	Fig. 09.2
.....	Fig. 11.3	Occupancy Sensors	Fig. 18.1
.....	Fig. 14.1	Occupancy Sensing Module	Fig. 18.1
Mass Air Flow Sensor (MAFS)	Fig. 04.1	Oil Pressure Switch	Fig. 08.1
.....	Fig. 04.3	Oxygen Sensors (O2S)	Fig. 04.1
Main Control Valve	Fig. 15.2	Parking Aid Sensors	Fig. 19.1
.....	Fig. 15.2	Parking Aid Sounder	Fig. 19.1
.....	Fig. 15.2	Parking Brake Switch	Fig. 04.1
.....	Fig. 15.2	Fig. 17.4
Passenger Airbag Deactivated Indicator Lamp	Fig. 18.1	Passenger Seat Weight Pressure Sensor	Fig. 18.1
Passenger Seat Weight Sensing Module	Fig. 18.1	Passenger Seat Weight Sensing Module	Fig. 18.1
Passive Security Sounder	Fig. 13.2	Power Amplifier	Fig. 16.2
.....	Fig. 13.3	Fig. 17.3
.....	Fig. 17.4	Fig. 17.4
Power Assisted Steering Control Module	Fig. 06.2	Powerwash Pump	Fig. 14.1



Pedal Position Sensors (PPS)	Fig. 04.1 Fig. 04.3	Seat Control Module – Driver	Fig. 11.3 Fig. 12.1 Fig. 12.2 Fig. 21.1
Puddle Lamps	Fig. 10.1	Seat Control Module – Passenger	Fig. 11.3 Fig. 12.3 Fig. 12.4 Fig. 21.1
Quarter Light Lifts	Fig. 15.2	Seat Cushion (Heater) – Driver	Fig. 12.1 Fig. 12.2
Radiator Fan Control Relay Module	Fig. 04.2 Fig. 04.4 Fig. 07.2	Seat Cushion (Heater) – Passenger	Fig. 12.3 Fig. 12.4
Radiator Fans	Fig. 04.2 Fig. 04.4 Fig. 07.2	Seat Heater Switch (Center Console Switch Pack)	Fig. 12.1 Fig. 12.2 Fig. 12.3 Fig. 12.4
Radio / Cassette Head Unit	Fig. 10.2 Fig. 16.1 Fig. 16.2 Fig. 17.3 Fig. 17.4	Seat Lumbar Pump – Driver	Fig. 12.1 Fig. 12.2
Radio Antenna	Fig. 16.1 Fig. 16.2	Seat Lumbar Pump – Passenger	Fig. 12.3 Fig. 12.4
Radio Control Switches (Steering Wheel)	Fig. 16.1 Fig. 16.2	Seat Motors – Driver	Fig. 12.1 Fig. 12.2
Rain Sensing Module	Fig. 14.1	Seat Motors – Passenger	Fig. 12.3 Fig. 12.4
Rain Sensor	Fig. 14.1	Security Active Indicator	Fig. 13.2 Fig. 13.3
Reader / Exciter Coil (Column Switchgear)	Fig. 13.2 Fig. 13.3	Security and Locking Control Module	Fig. 09.2 Fig. 11.3 Fig. 13.1 Fig. 13.2 Fig. 13.3 Fig. 15.1 Fig. 15.2 Fig. 21.1
Rear Interior Lamp (Coupe Only)	Fig. 10.1	Side DI Repeaters (ROW)	Fig. 09.1
Rear Side Markers (NAS Only)	Fig. 09.2	Solar Sensor	Fig. 07.1
Refrigerant 4-Way Pressure Switch	Fig. 04.2 Fig. 04.4 Fig. 07.2	Speakers – Mid-Bass	Fig. 16.1 Fig. 16.2
Regulator (Generator)	Fig. 03.1 Fig. 03.2	Speakers – Tweeter	Fig. 16.2
Restraints Control Module	Fig. 18.1 Fig. 21.1	Speakers – Fascia	Fig. 16.1 Fig. 16.2
Reverse Parking Aid Control Module	Fig. 19.1	Speakers – Rear (Convertible)	Fig. 16.1 Fig. 16.2
Roof Console	Fig. 10.1 Fig. 10.2 Fig. 13.3	Speakers – Rear Quarter	Fig. 16.1 Fig. 16.2
Seat Back Latch Switch – Driver	Fig. 12.1 Fig. 12.2	Speaker – Rear (Coupe)	Fig. 16.2
Seat Back Latch Switch – Passenger	Fig. 12.3 Fig. 12.4	Speed Control On / Off Switch	Fig. 04.2 Fig. 04.4 Fig. 10.2
Seat Back Tilt Switch – Driver	Fig. 12.1 Fig. 12.2	Speed Control Switches (Steering Wheel)	Fig. 04.2 Fig. 04.4 Fig. 06.4
Seat Back Tilt Switch – Passenger	Fig. 12.3 Fig. 12.4	Squab (Heater) – Driver	Fig. 12.1 Fig. 12.2
Seat Belt Comfort Solenoid – Driver	Fig. 12.1 Fig. 12.2	Squab (Heater) – Passenger	Fig. 12.3 Fig. 12.4
Seat Belt Comfort Solenoid – Passenger	Fig. 12.3 Fig. 12.4	Stability / Traction Control Switch	Fig. 06.1
Seat Belt Switch – Driver	Fig. 12.1 Fig. 12.2 Fig. 18.1		
Seat Belt Switch – Passenger	Fig. 12.3 Fig. 12.4 Fig. 18.1		



Starter Motor	Fig. 03.1	Vehicle Information Control Beacon Module	Fig. 17.4
.....	Fig. 03.2	Vehicle Information Control Infrared Sensor	Fig. 17.4
Steering Column Motors	Fig. 11.1	Vehicle Information Control Module	Fig. 17.4
Suppression Module	Fig. 03.1	Vent Assembly	Fig. 07.1
.....	Fig. 03.2	Variable Valve Timing Solenoid Valves (VVT Solenoid Valves) ..	Fig. 04.1
Switch Pack – Driver Door	Fig. 10.2	Wash / Wipe Stalk (Column Switchgear)	Fig. 14.1
Switch Pack – Driver Door Memory	Fig. 10.2	Wheel Speed Sensors	Fig. 06.1
.....	Fig. 11.1	Window Lift Switches – Driver Door	Fig. 15.1
.....	Fig. 11.2	Window Lift Switches – Passenger Door	Fig. 15.1
.....	Fig. 12.1	Window Lift – Driver	Fig. 15.1
Switch Pack – Driver Seat	Fig. 12.1	Window Lift – Passenger	Fig. 15.1
.....	Fig. 12.2	Windshield Heaters	Fig. 07.2
Switch Pack – Passenger Door	Fig. 10.2	Windshield Wash Pump and Fluid Level Sensor	Fig. 14.1
Switch Pack – Passenger Seat	Fig. 12.3	Wiper Motor	Fig. 14.1
.....	Fig. 12.4		
Tail Lamp Units	Fig. 09.2		
Telephone Antenna	Fig. 17.1		
.....	Fig. 17.2		
Telephone Handset	Fig. 17.1		
.....	Fig. 17.2		
Telephone Microphone	Fig. 17.1		
.....	Fig. 17.2		
Television Antenna Amplifier	Fig. 17.4		
Television Antennas	Fig. 17.4		
Television Module	Fig. 17.4		
Throttle Motor	Fig. 04.1		
.....	Fig. 04.3		
Throttle Position Sensors (TPS)	Fig. 04.1		
.....	Fig. 04.3		
Transmission Control Module: AJ27 N/A	Fig. 05.1		
.....	Fig. 06.4		
.....	Fig. 21.1		
Transmission Control Module: AJ27 SC	Fig. 05.2		
.....	Fig. 21.1		
Transmission Rotary Switch	Fig. 05.1		
Trip Computer Switch Pack	Fig. 08.1		
.....	Fig. 10.2		
Trip Cycle Switch (Column Switchgear)	Fig. 08.1		
Trunk Accessory Connector	Fig. 20.1		
Trunk and Fuel Fill Release Switch	Fig. 10.2		
.....	Fig. 13.1		
Trunk Lamps	Fig. 10.1		
Trunk Release Solenoid	Fig. 13.1		
Trunk Switch	Fig. 10.1		
.....	Fig. 13.1		
.....	Fig. 13.2		
.....	Fig. 13.3		
Valet Switch	Fig. 10.2		
.....	Fig. 13.1		
.....	Fig. 13.2		
.....	Fig. 13.3		
Vanity Lamps	Fig. 10.1		
Variable Steering Converter	Fig. 06.2		



Figure and Data Page Layout

Figure Pages

Each Figure represents a specific electrical system of the vehicle. The Figures are arranged numerically by system (**01 – Power Distribution**, **02 – Ground Distribution**, etc.) with variations in the system identified by a numeral following a decimal point (**01.1**, **01.2**, etc.). Refer to the Table of Contents for a complete list of the Figures.

The Figures **01 – Power Distribution** detail the distribution of power to each of the systems. Numbered reference symbols refer the user *to* a specific Figure and *from* a specific Figure back to the Power Distribution Figures. This method eliminates the need to include detailed Power Distribution information on each of the Figures. Similarly, the Figure **02 – Ground Distribution** details the ignition switched ground distribution. The reference symbols are defined on page 12.

Each Figure appears on a right-hand page with a corresponding Data page to the left. The Figure and Data pages are folding pages. The user must fold out both pages in order to access all the information provided.

Data Pages

The Data page includes information to assist the user in identifying and locating components, connectors and grounds. This information is supplemented by the illustrations in this front section of the book.

When network data is required for the understanding of a particular circuit, the user is directed to the Appendix.

Where circuits include a Control Module, Pin Out information is provided with values for "active" and "inactive" states. The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "inactive" means a load is not applied or a switch is OFF. This information is provided to assist the user in understanding circuit operation and should be used FOR REFERENCE ONLY.



CONTROL MODULE PIN OUT INFORMATION		FIGURE NUMBER	COMPONENT, RELAY, CONNECTOR AND GROUND INFORMATION																																																												
Fig. 03.1 <table border="1"> <caption>CONTROL MODULE PIN OUT INFORMATION</caption> <tbody> <tr> <td colspan="2">BODY PROCESSOR MODULE</td> </tr> <tr> <td>Pin Description</td> <td>Active</td> <td>Inactive</td> </tr> <tr> <td>1. BFM-1 2. BFM-2 3. BFM-3 4. BFM-4 5. BFM-5 6. BFM-6 7. BFM-7 8. BFM-8</td> <td>SERIALIZED DECODED COMMUNICATIONS GROUND (DRAWING) GROUND (DRAWING)</td> <td>B- P 5-6-1-2 B- B- B-</td> </tr> <tr> <td colspan="2">ENGINE CONTROL MODULE</td> </tr> <tr> <td>Pin Description</td> <td>Active</td> <td>Inactive</td> </tr> <tr> <td>1. BFM-9 2. BFM-10 3. BFM-11 4. BFM-12</td> <td>GROUND (DRAWING) DECODED COMMUNICATIONS DECODED COMMUNICATIONS</td> <td>GROUND (DRAWING) DECODED COMMUNICATIONS</td> </tr> <tr> <td colspan="2">KEY TRANSPONDER MODULE</td> </tr> <tr> <td>Pin Description</td> <td>Active</td> <td>Inactive</td> </tr> <tr> <td>1. BFM-13 2. BFM-14 3. BFM-15 4. BFM-16</td> <td>GO TO START ENCODED COMMUNICATION GO TO START ENCODED COMMUNICATION SECURITY ACKNOWLEDGE SECURITY ACKNOWLEDGE</td> <td>GO TO START ENCODED COMMUNICATION GO TO START ENCODED COMMUNICATION</td> </tr> </tbody> </table>		BODY PROCESSOR MODULE		Pin Description	Active	Inactive	1. BFM-1 2. BFM-2 3. BFM-3 4. BFM-4 5. BFM-5 6. BFM-6 7. BFM-7 8. BFM-8	SERIALIZED DECODED COMMUNICATIONS GROUND (DRAWING) GROUND (DRAWING)	B- P 5-6-1-2 B- B- B-	ENGINE CONTROL MODULE		Pin Description	Active	Inactive	1. BFM-9 2. BFM-10 3. BFM-11 4. BFM-12	GROUND (DRAWING) DECODED COMMUNICATIONS DECODED COMMUNICATIONS	GROUND (DRAWING) DECODED COMMUNICATIONS	KEY TRANSPONDER MODULE		Pin Description	Active	Inactive	1. BFM-13 2. BFM-14 3. BFM-15 4. BFM-16	GO TO START ENCODED COMMUNICATION GO TO START ENCODED COMMUNICATION SECURITY ACKNOWLEDGE SECURITY ACKNOWLEDGE	GO TO START ENCODED COMMUNICATION GO TO START ENCODED COMMUNICATION	Components <table border="1"> <tbody> <tr> <td>Component</td> <td>Connector / Type / Color</td> <td>Location / Access</td> </tr> <tr> <td>BATTERY</td> <td>B16-EVLET</td> <td>TRUNK, RIGHT HAND SIDE</td> </tr> <tr> <td>BODY PROCESSOR MODULE</td> <td>FC1-10W WH AMP 6221 / GRAY</td> <td>PASSenger SIDE FACION / ARMED BRACKET</td> </tr> <tr> <td>ENGINE CONTROL MODULE</td> <td>EM1-2W WH AMP 6211 NATURAL</td> <td>ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE</td> </tr> <tr> <td>GENERATOR</td> <td>EM1-2W WH AMP 6211 NATURAL</td> <td>ENGINE COMPARTMENT / FIGHT FRONT</td> </tr> <tr> <td>HIGH POWER PROTECTION MODULE</td> <td>EM1-12 WH MULTIFLICK 612 / WHITE</td> <td>TRUNK / ADJACENT TO BATTERY</td> </tr> <tr> <td>IGNITION SWITCH/KEY IN SWITCH</td> <td>B16-EVLET</td> <td>STEERING COLUMN</td> </tr> <tr> <td>KEY TRANSPONDER MODULE</td> <td>F22-2W WH MULTIFLICK 611 / GREEN</td> <td>ADJACENT TO DRIVERS SIDE FUSE BOX</td> </tr> <tr> <td>RELAY</td> <td>EM1-EVLET</td> <td>SEAT BELT RELAY</td> </tr> <tr> <td>REGULATOR (GENERATOR)</td> <td>PHG-1 2WY SUMITOMO 0921 / BLACK</td> <td>ENGINE COMPARTMENT / GENERATOR</td> </tr> <tr> <td>STARTER MOTOR</td> <td>ST16-EVLET</td> <td>ENGINE BODIES</td> </tr> <tr> <td>SUPPRESSION MODULE</td> <td>PHG-2 2WY ECONODES 0121 062</td> <td>REARWARD OF RIGHT FRONT HEADAMP</td> </tr> </tbody> </table>		Component	Connector / Type / Color	Location / Access	BATTERY	B16-EVLET	TRUNK, RIGHT HAND SIDE	BODY PROCESSOR MODULE	FC1-10W WH AMP 6221 / GRAY	PASSenger SIDE FACION / ARMED BRACKET	ENGINE CONTROL MODULE	EM1-2W WH AMP 6211 NATURAL	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE	GENERATOR	EM1-2W WH AMP 6211 NATURAL	ENGINE COMPARTMENT / FIGHT FRONT	HIGH POWER PROTECTION MODULE	EM1-12 WH MULTIFLICK 612 / WHITE	TRUNK / ADJACENT TO BATTERY	IGNITION SWITCH/KEY IN SWITCH	B16-EVLET	STEERING COLUMN	KEY TRANSPONDER MODULE	F22-2W WH MULTIFLICK 611 / GREEN	ADJACENT TO DRIVERS SIDE FUSE BOX	RELAY	EM1-EVLET	SEAT BELT RELAY	REGULATOR (GENERATOR)	PHG-1 2WY SUMITOMO 0921 / BLACK	ENGINE COMPARTMENT / GENERATOR	STARTER MOTOR	ST16-EVLET	ENGINE BODIES	SUPPRESSION MODULE	PHG-2 2WY ECONODES 0121 062	REARWARD OF RIGHT FRONT HEADAMP
BODY PROCESSOR MODULE																																																															
Pin Description	Active	Inactive																																																													
1. BFM-1 2. BFM-2 3. BFM-3 4. BFM-4 5. BFM-5 6. BFM-6 7. BFM-7 8. BFM-8	SERIALIZED DECODED COMMUNICATIONS GROUND (DRAWING) GROUND (DRAWING)	B- P 5-6-1-2 B- B- B-																																																													
ENGINE CONTROL MODULE																																																															
Pin Description	Active	Inactive																																																													
1. BFM-9 2. BFM-10 3. BFM-11 4. BFM-12	GROUND (DRAWING) DECODED COMMUNICATIONS DECODED COMMUNICATIONS	GROUND (DRAWING) DECODED COMMUNICATIONS																																																													
KEY TRANSPONDER MODULE																																																															
Pin Description	Active	Inactive																																																													
1. BFM-13 2. BFM-14 3. BFM-15 4. BFM-16	GO TO START ENCODED COMMUNICATION GO TO START ENCODED COMMUNICATION SECURITY ACKNOWLEDGE SECURITY ACKNOWLEDGE	GO TO START ENCODED COMMUNICATION GO TO START ENCODED COMMUNICATION																																																													
Component	Connector / Type / Color	Location / Access																																																													
BATTERY	B16-EVLET	TRUNK, RIGHT HAND SIDE																																																													
BODY PROCESSOR MODULE	FC1-10W WH AMP 6221 / GRAY	PASSenger SIDE FACION / ARMED BRACKET																																																													
ENGINE CONTROL MODULE	EM1-2W WH AMP 6211 NATURAL	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE																																																													
GENERATOR	EM1-2W WH AMP 6211 NATURAL	ENGINE COMPARTMENT / FIGHT FRONT																																																													
HIGH POWER PROTECTION MODULE	EM1-12 WH MULTIFLICK 612 / WHITE	TRUNK / ADJACENT TO BATTERY																																																													
IGNITION SWITCH/KEY IN SWITCH	B16-EVLET	STEERING COLUMN																																																													
KEY TRANSPONDER MODULE	F22-2W WH MULTIFLICK 611 / GREEN	ADJACENT TO DRIVERS SIDE FUSE BOX																																																													
RELAY	EM1-EVLET	SEAT BELT RELAY																																																													
REGULATOR (GENERATOR)	PHG-1 2WY SUMITOMO 0921 / BLACK	ENGINE COMPARTMENT / GENERATOR																																																													
STARTER MOTOR	ST16-EVLET	ENGINE BODIES																																																													
SUPPRESSION MODULE	PHG-2 2WY ECONODES 0121 062	REARWARD OF RIGHT FRONT HEADAMP																																																													

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SC Sensor Supply V	C CAN (Network)	B+ Battery Voltage	KHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.


NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

DATE OF ISSUE: September 2000

DATE OF ISSUE

DATA PAGE

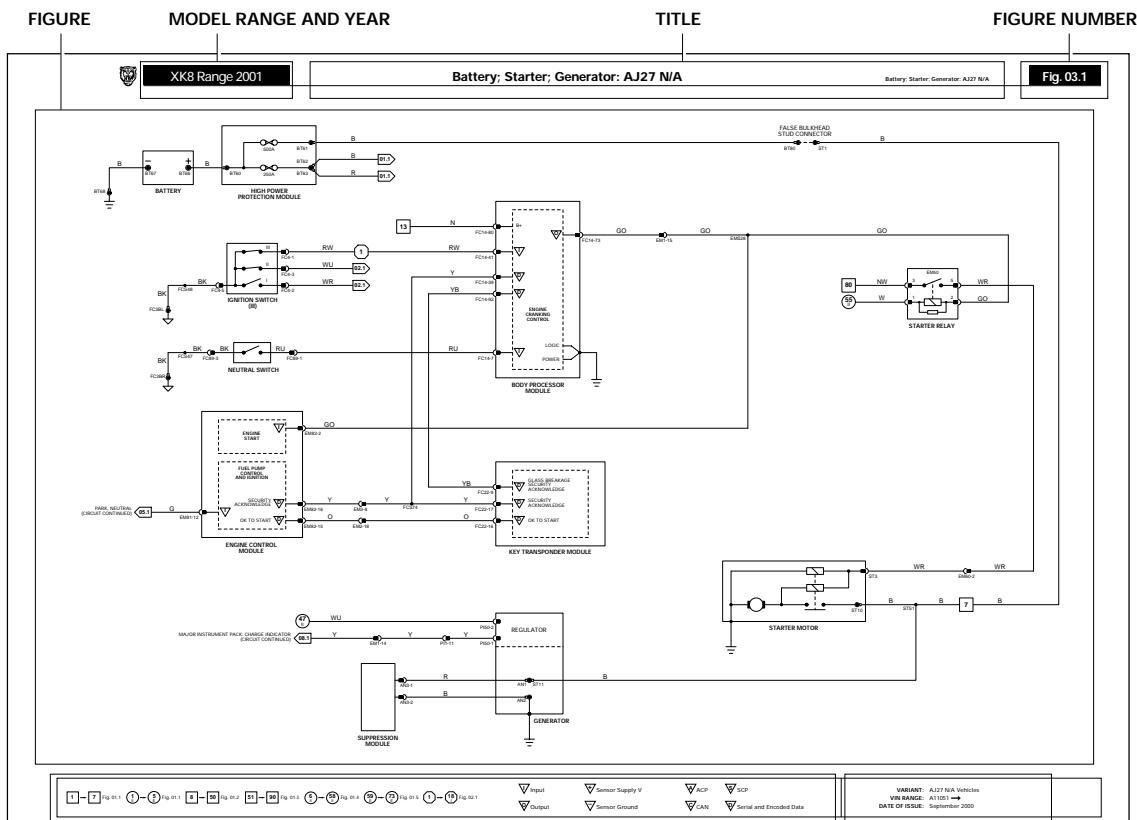



NOTE: In the examples shown on this page, an 'X' is used where a number would appear on an actual Figure.

Reference Symbols

Reference symbols are used for three purposes:

- to allow the user to complete the individual system circuit to power supply or ground
- to refer the user to a related circuit
- to identify control module inputs, outputs and signal grounds

Battery Power Supply

This symbol represents a direct battery power supply and refers the user to Figure 01.1, 01.2 or 01.3.

Ignition Switched Power Supply

This symbol represents ignition switched power supply and refers the user to Figure 01.1, 01.4 or 01.5.

The suffix I indicates auxiliary power. Power is supplied in ignition switch key positions I (AUXILIARY) and II (IGNITION).

The suffix II indicates ignition power. Power is supplied in ignition switch key positions II (IGNITION) and III (ENGINE CRANK).

The suffix E indicates engine management switched power. Power is supplied in ignition switch key positions II (IGNITION) and III (ENGINE CRANK) under ECM control.

Ignition Switched Ground

This symbol represents an ignition switched ground and refers the user to Figure 02.1.

This symbol without a suffix indicates CRANK. Ground is completed in ignition switch key position III (ENGINE CRANK).

The suffix I indicates auxiliary ground. Ground is completed in ignition switch key positions I (AUXILIARY) and II (IGNITION).

The suffix II indicates ignition ground. Ground is completed in ignition switch key positions II (IGNITION) and III (ENGINE CRANK).

Figure Number Reference Flag

This symbol refers the reader to a figure number only. It does not refer to a flag with the same number on a different figure.

As used in Figures 01.1 through 02.1, the reference flag refers the user to a continuation of the circuit. In this instance, the user matches the number to a Power Supply or Ground symbol to trace the circuit.

In most other cases, it is not necessary to refer to another figure for completion of a circuit, as the reference flags are used to indicate parallel circuits and circuits that share components. Most of the circuits where this situation occurs are overlapped to avoid the necessity for cross-referencing to another figure. Exceptions to this rule are instances where signals are transmitted to or received from other system circuits. When circuits are not overlapped, they are noted by (CIRCUIT CONTINUED).

BPM Because the Body Processor Module appears numerous times, the abbreviation BPM is used in the reference flags on Figures 01.2 and 02.1 in order to conserve space.

Control Module Input, Output, Data Link, Signal Ground and Network(s)

Input

Sensor Supply V

ACP

SCP

Output

Sensor Ground


CAN

Serial and Encoded Data

These six symbols are employed to assist the user in visualizing the 'logic' of circuits containing control modules. The symbols identify control module input, output, data link, signal ground and network pins. These symbols are also employed on the corresponding data page.



Wiring Symbols

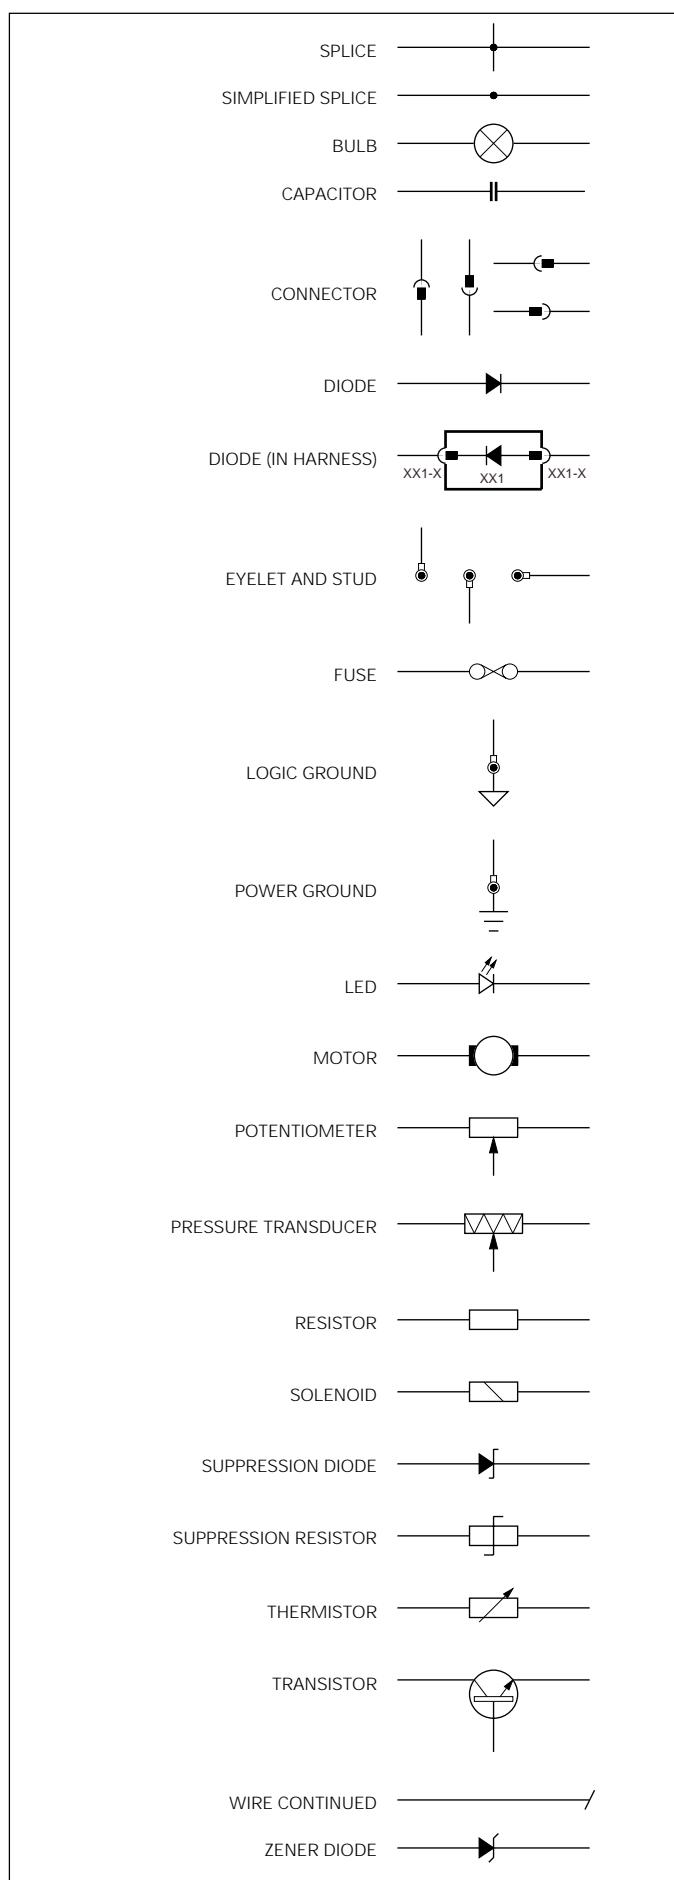

Wiring Color Codes

N	Brown	O	Orange
B	Black	S	Slate
W	White	L	Light
K	Pink	U	Blue
G	Green	P	Purple
R	Red	BRD	Braid
Y	Yellow		

When a wire has two color code letters, the first letter indicates the main color and the subsequent letter indicates the tracer color.

Wiring Harness Codes

Code	Description
AC	Air Conditioning (Climate Control)
AN	Generator Suppression Module
AS	Generator to Starter
BB	Trunk Bridging Link
BC	Main Power Distribution
BL	Trunk Lid
BT	Trunk
DD	Door, Driver
DP	Door, Passenger
EL	Engine Management Speed Control Link
EM	Engine Management
EN	Engine Management Side Marker Link
FC	Fascia
FL	LH Front Wheel
FR	RH Front Wheel
IC	In-Car Entertainment
IS	Inclination Sensor Link
LF	Left Forward
LL	Power Steering Link
PI	Engine
QL	Convertible LH Quarter Light Link
QR	Convertible RH Quarter Light Link
RF	Roof
RH	Rearward
RL	LH Rear Wheel
RR	RH Rear Wheel
RT	Radio Telephone
SA	Starter to Generator Link
SC	Column Switchgear
SD	Seat, Driver
SP	Seat, Passenger
SW	Steering Wheel
TL	Telephone

Code Numbering

When numbering connectors, grounds and splices, Jaguar Engineering uses a three-position format: AC001, AC002, etc. Because space is limited in this Electrical Guide, the codes have been shortened. Thus AC001-001 becomes AC1-1, AC002-001 becomes AC2-1, etc.




Harness Component Numbers

Connectors

HARNESS CODE + CONNECTOR NUMBER + PIN NUMBER

EXAMPLE: FC7-24 (pin number is separated by a dash)

Where the pin number differs from LHD to RHD, the connector number will be further identified by (LHD) or (RHD).

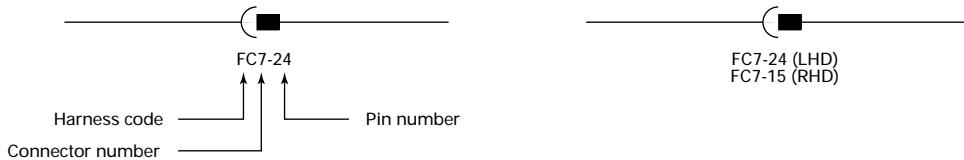


Splices

HARNESS CODE + S (SPLICE) + SPLICE NUMBER

EXAMPLE: RHS3 (no dash is used)

NOTE: In order to avoid unnecessary circuit complication, multiple splices (more than two wires) within components, in wires leading from input components to multiple circuits and in harness 'ground' sides, are simplified so as not to show wires from other circuits.

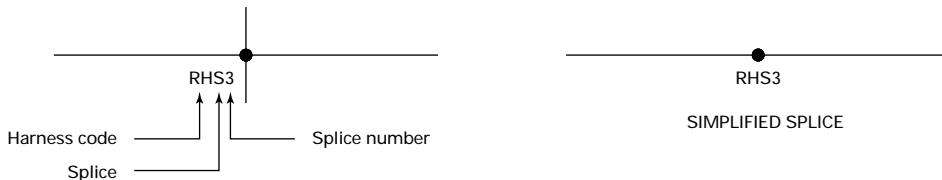

Diodes

Harness diodes occur at connectors and are depicted as components and identified by a connector number.


EXAMPLE:



Relay Connectors

Relay connector numbers are shown within the relay. The connector number is shown in the upper portion of the relay; the pin (terminal) number is shown adjacent to the pin. Certain relays are paired and share a modular connector. In this instance, the connector number remains the same for both relays while the pin numbers of the second relay are identified by numbers 6 – 10.

EXAMPLE:

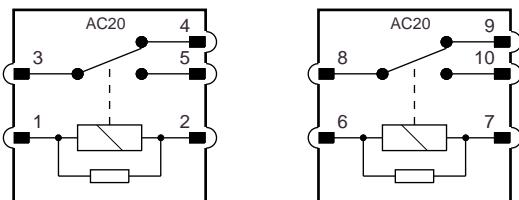



Grounds


HARNESS CODE + GROUND STUD NUMBER + EYELET STUD POSITION (A,B,C) + EYELET DESIGNATION (S,L,R)

Eyelet stud position


There may be up to three eyelets on one stud. A, B and C are used to indicate the position of the eyelet on the stud: A – first (bottom), B – second (middle), C – third (top).

Eyelet designation

Two eyelet variations are used: a single eyelet and an eyelet pair. The single eyelet has a single 'leg', which is identified by an S; the eyelet pair has two 'legs', identified as L (left) or R (right).

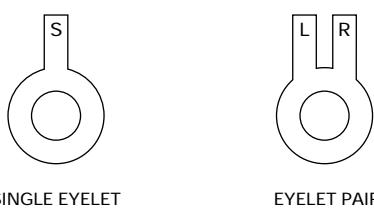

EXAMPLES:

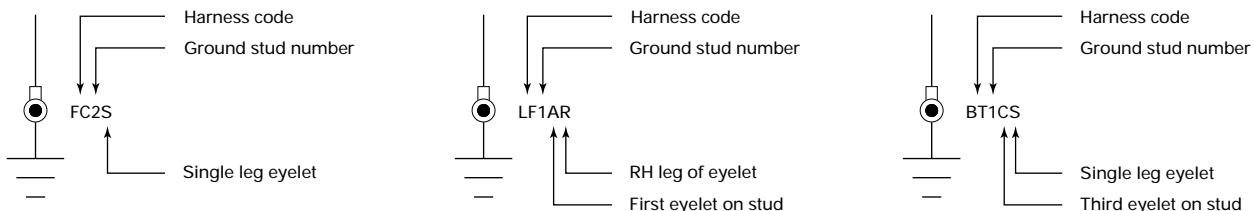

Where the ground designation differs from LHD to RHD, the RHD ground is shown in parentheses. If the ground designation is the same for LHD and RHD, only one ground designation is used.

EXAMPLES:







The following connectors are the common harness-to-harness connectors used throughout the vehicle.

Multilock 040


Low current (used as harness and 'direct' connection connector).

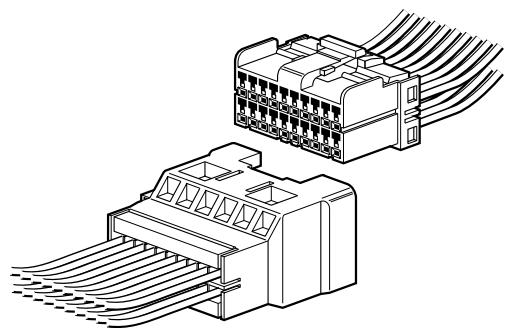**Multilock 070**


High current (used as harness and 'direct' connection connector).

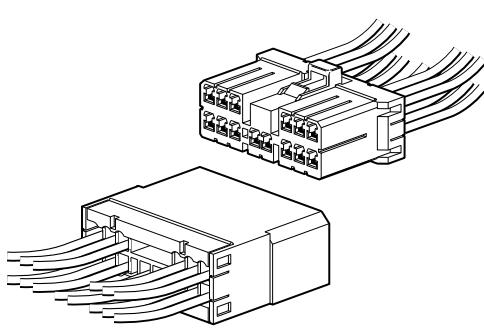**Econoseal III LC**


Low current sealed connector.

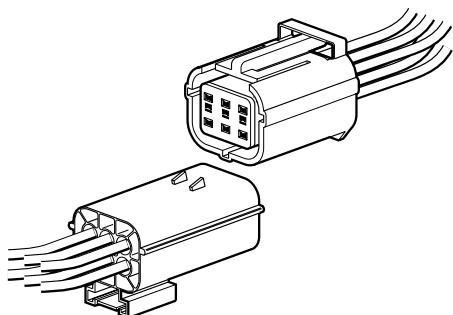
**Econoseal III HC**

High current sealed connector.

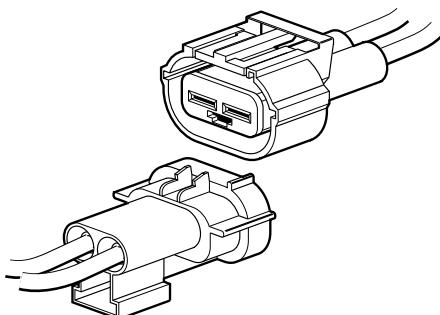**Ford Card**

Used for SRS only.

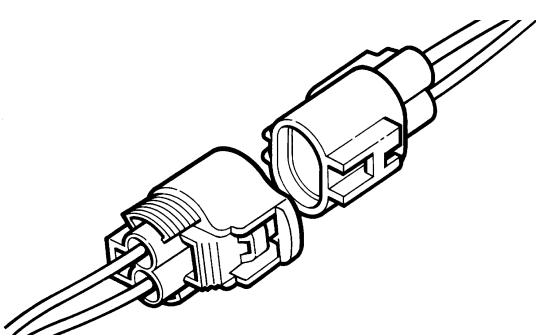


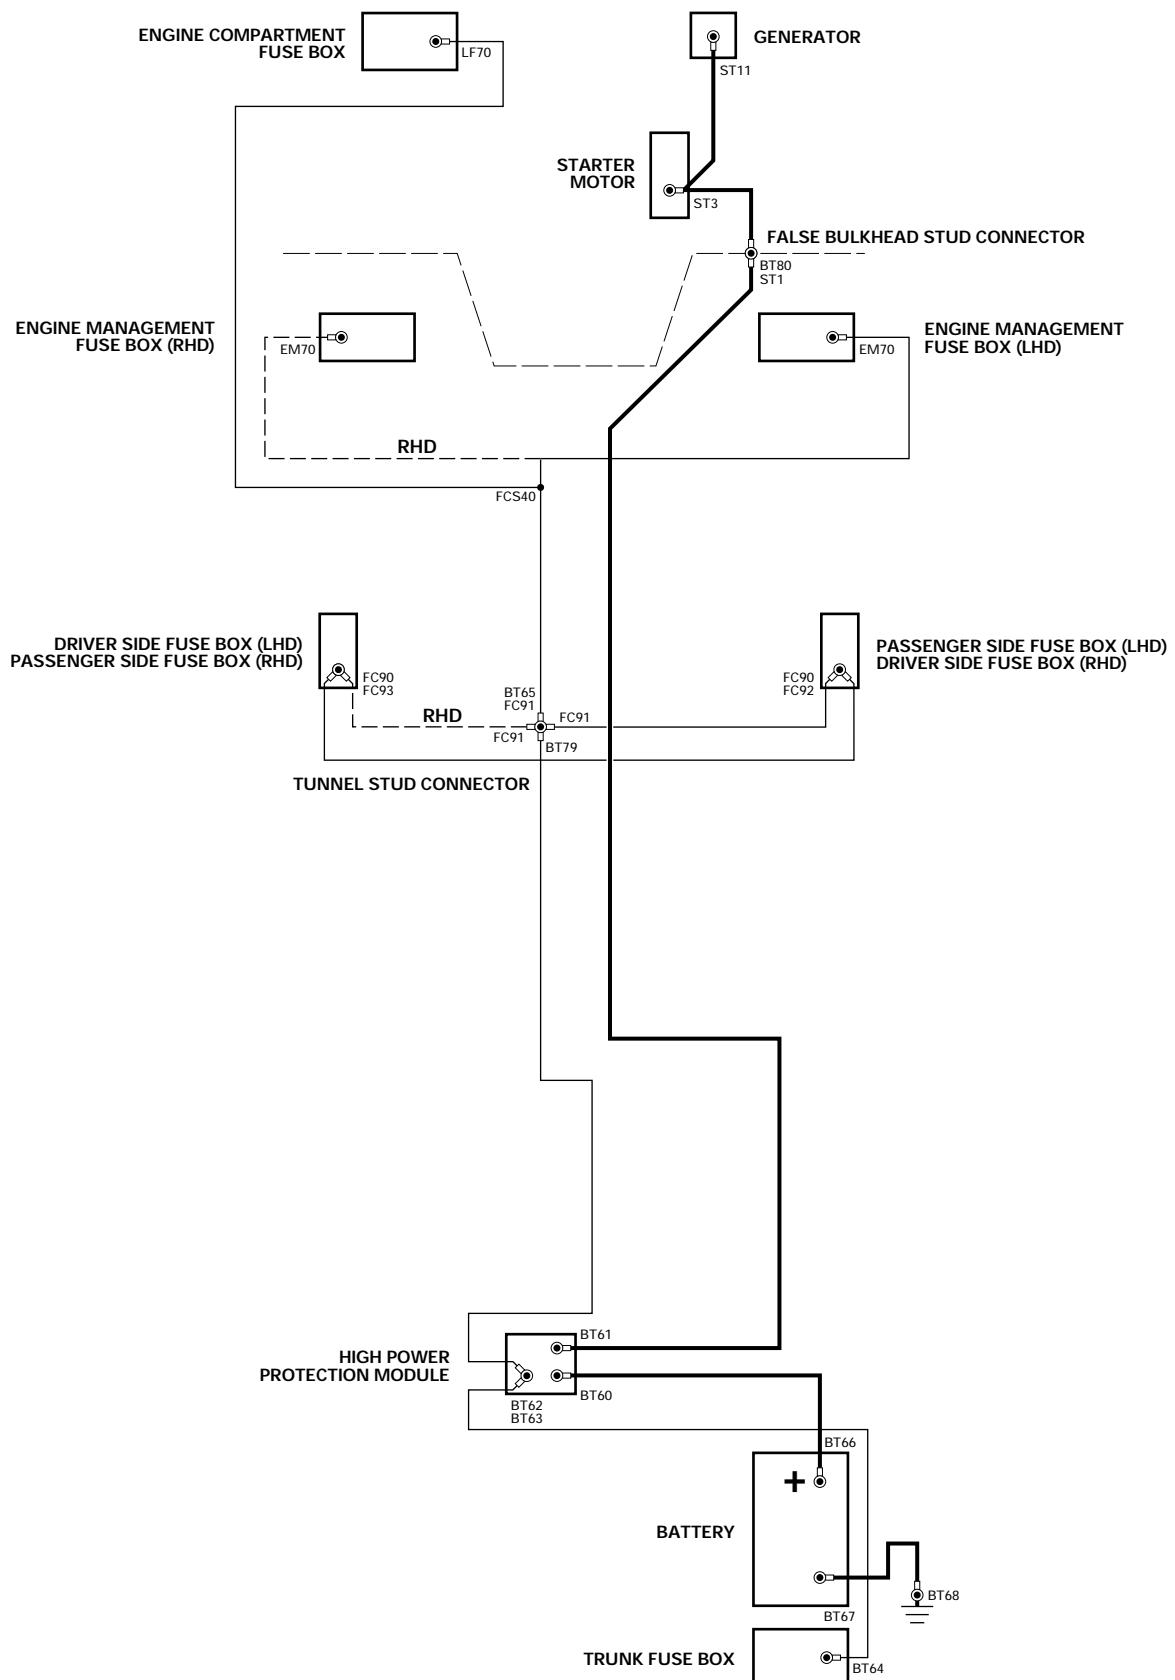



LHD


FRONT OF VEHICLE

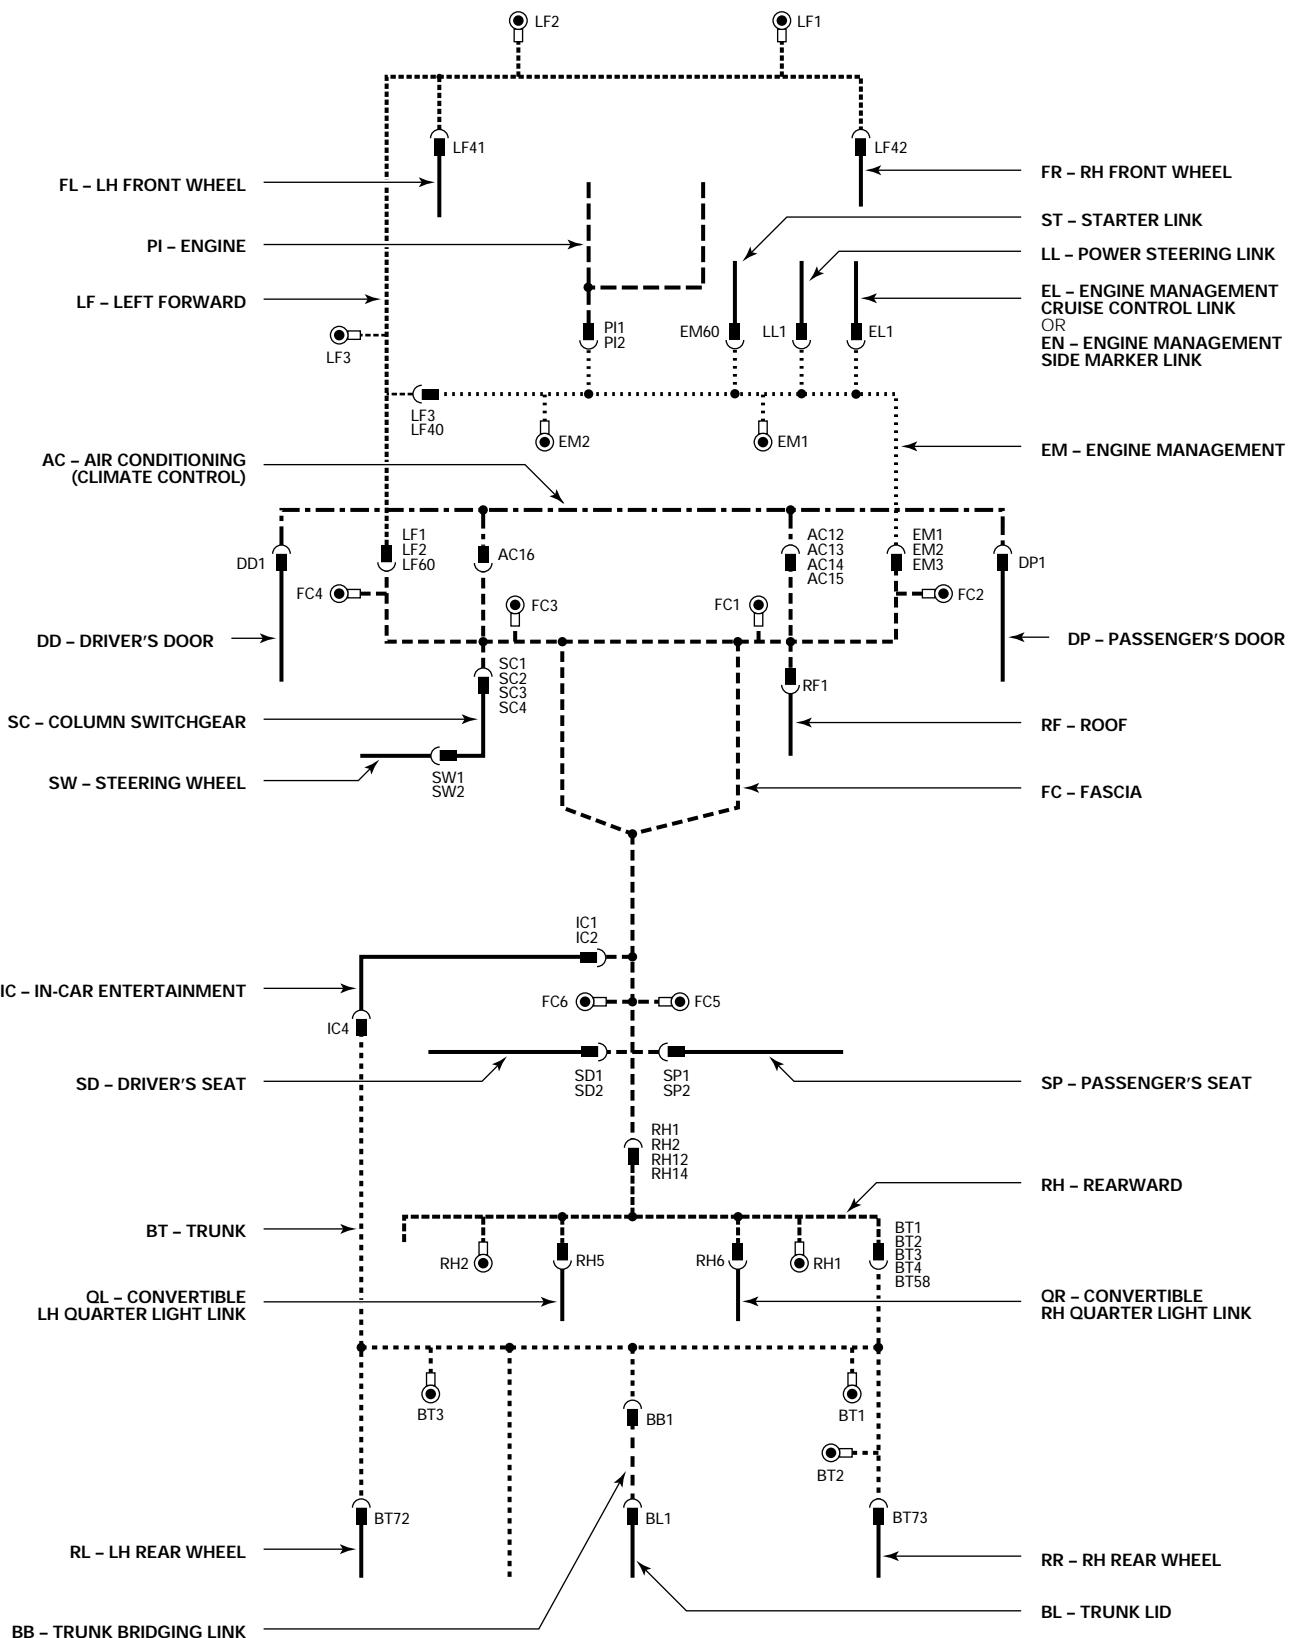




RHD

FRONT OF VEHICLE

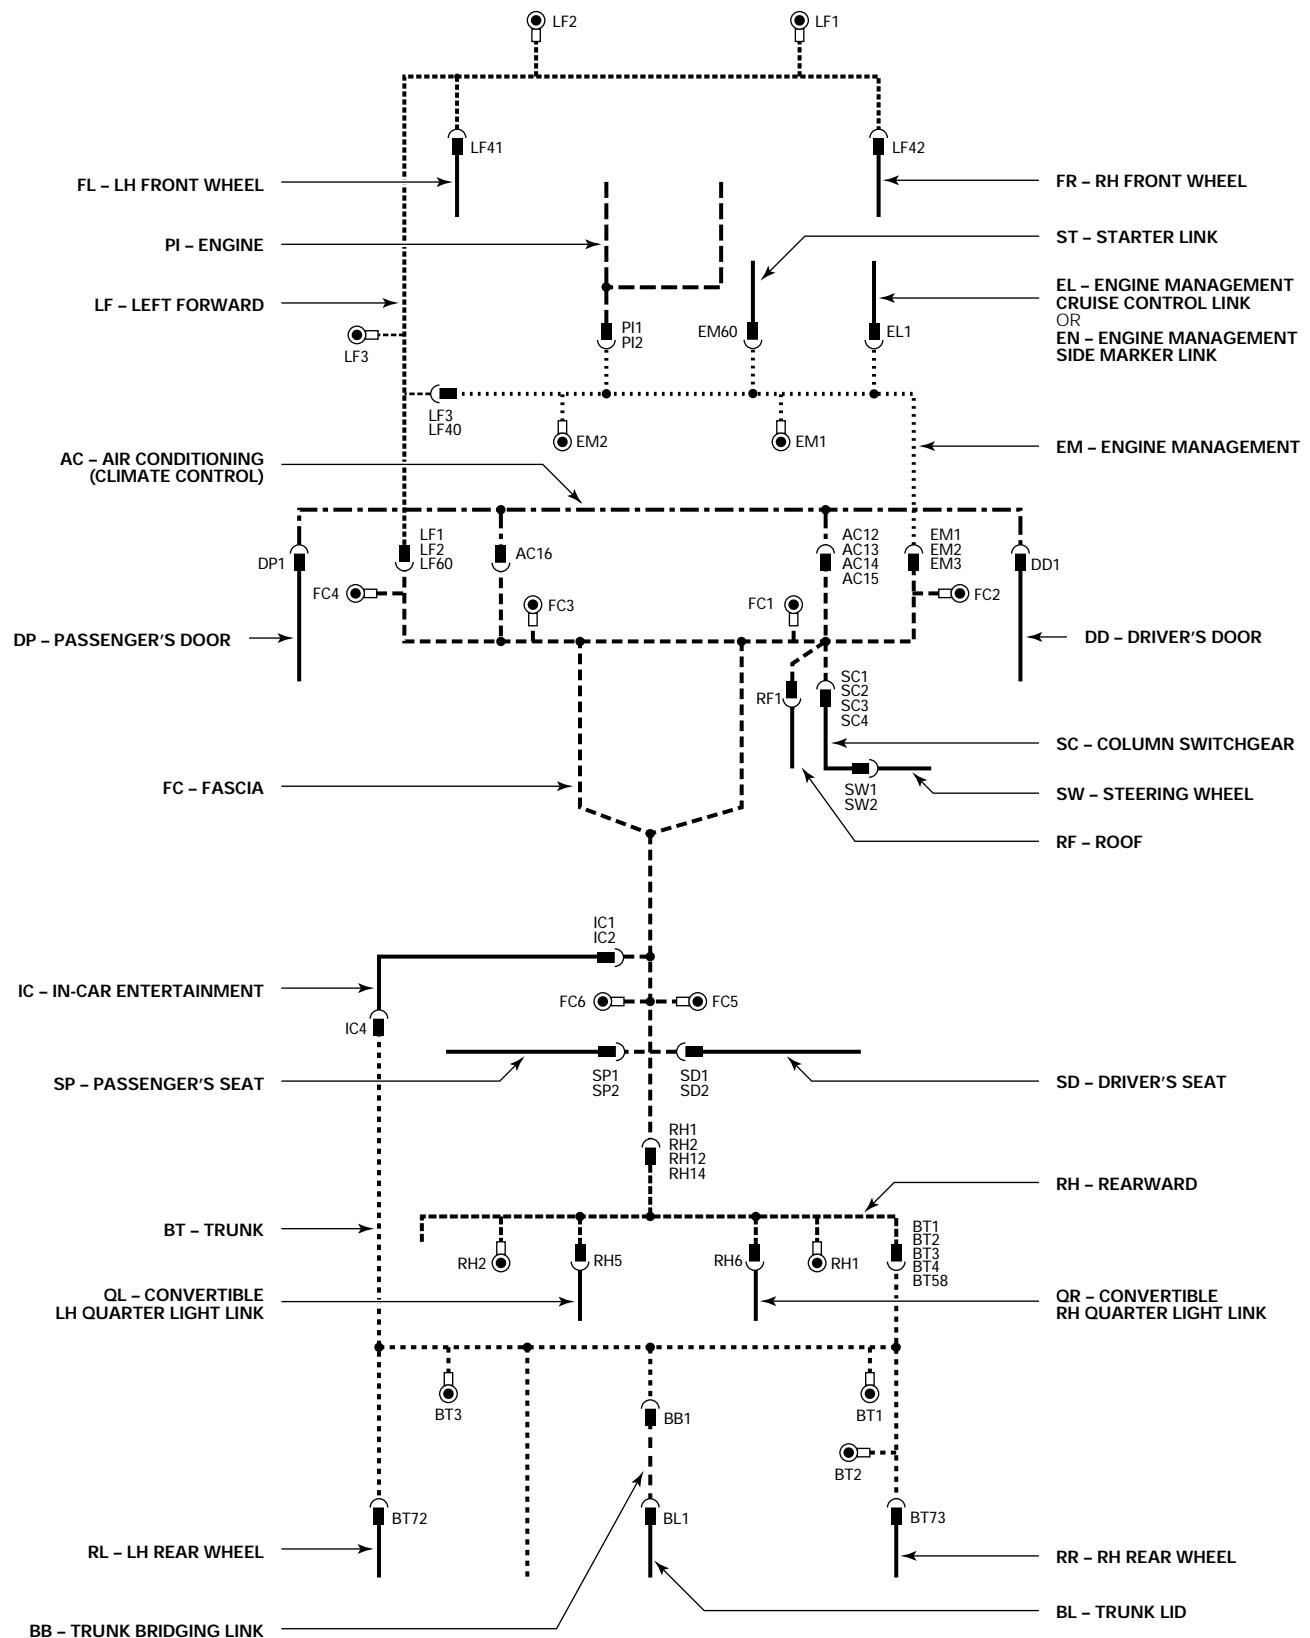

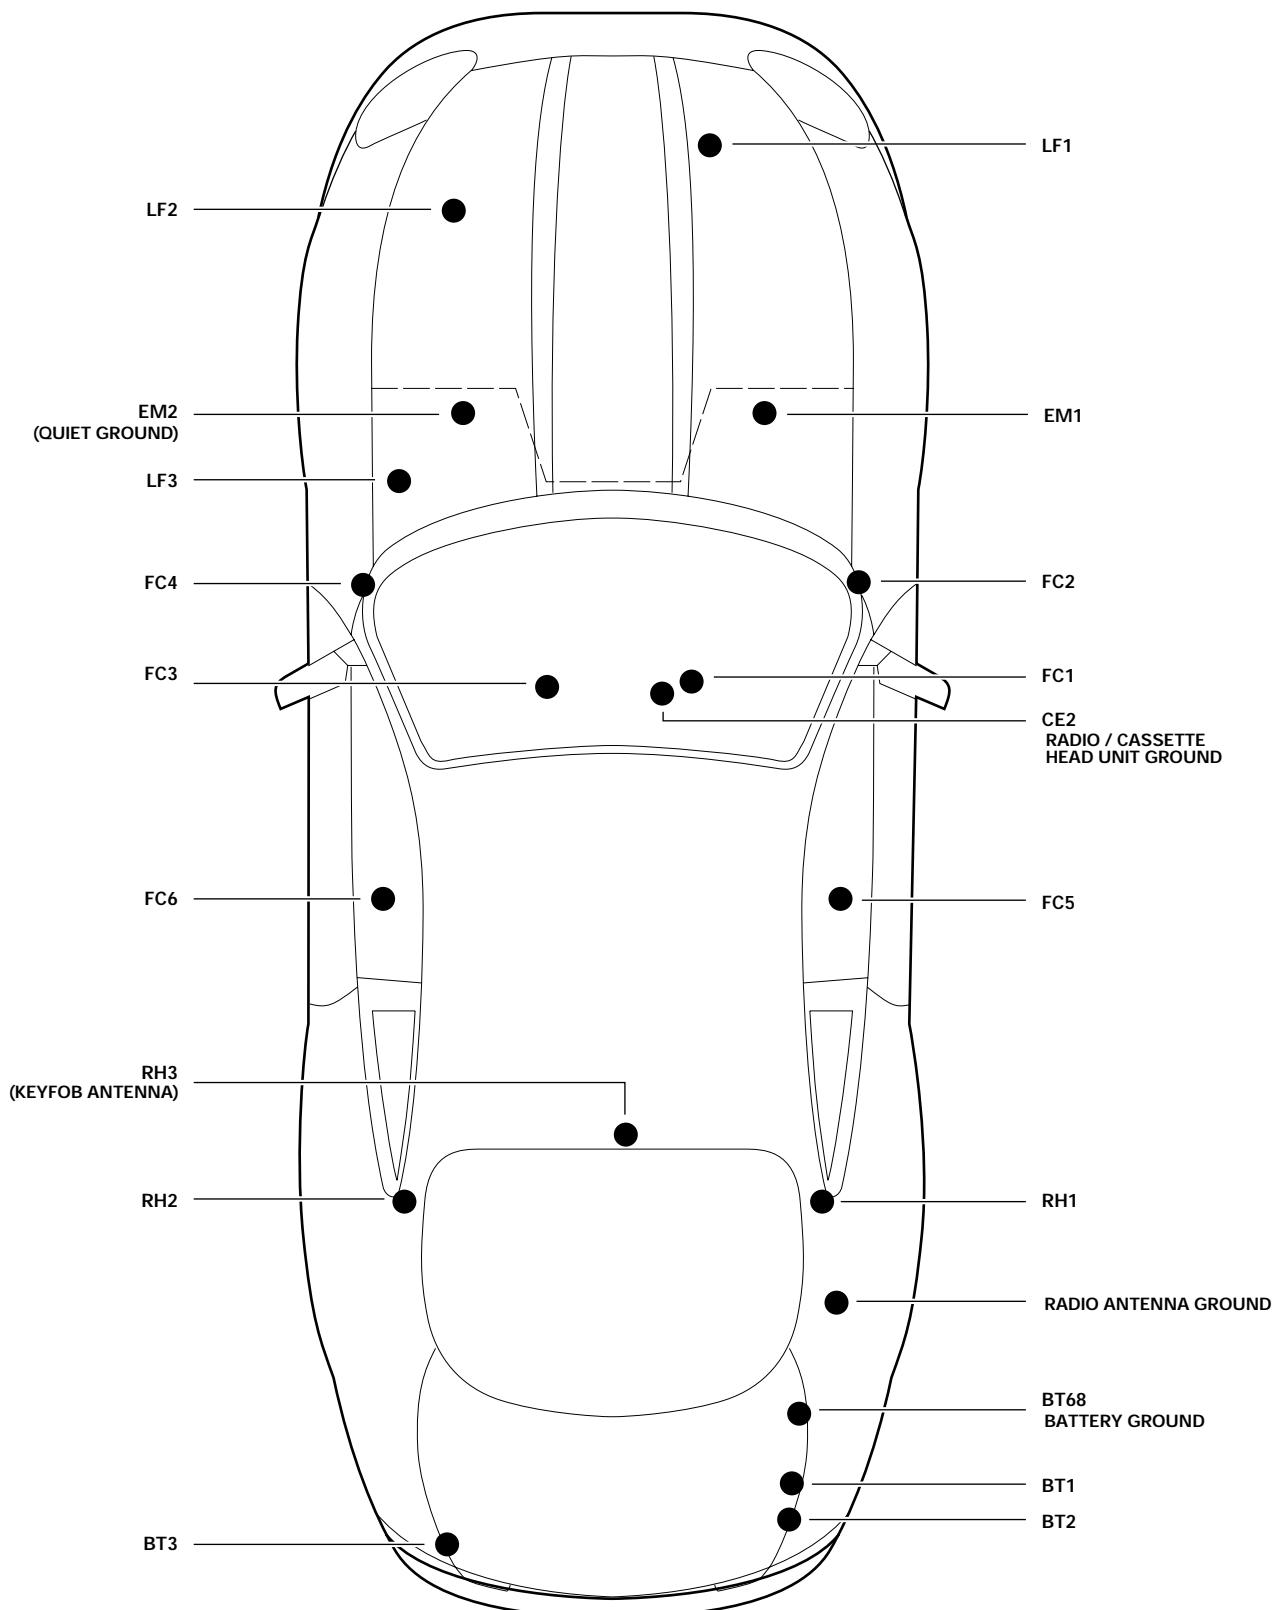

**ENGINE COMPARTMENT
FUSE BOX RELAYS**

Engine compartment fuse box

Ignition positive relay

Horn relay

Dip beam relay

Powerwash relay

Main beam relay

Front fog relay

Heater pump relay

**CONTROL MODULE
ENCLOSURE RELAYS (RHD)**

O2S heaters relay

Engine management fuse box

Ignition coil relay

Throttle motor power relay

Fuel injection relay

EMS control relay

LH ENCLOSURE RELAYS

A/C compressor clutch relay

Wiper RUN/STOP relay

Wiper FAST/SLOW relay

LH FASCIA RELAYS

Ignition positive relay (LHD)

Auxiliary positive relay (RHD)

Door mirror heater relay

Driver side fuse box (LHD)

Passenger side fuse box (RHD)

**DRIVESHAFT TUNNEL
RELAYS**

LH blower motor relay

RH blower motor relay

**CONTROL MODULE
ENCLOSURE RELAYS (LHD)**

O2S heaters relay

Engine management fuse box

Intercooler pump relay (LHD)

Fuel injection relay

Throttle motor power relay

Ignition coil relay

EMS control relay

RH ENCLOSURE RELAYS

Starter relay

LH windshield heater relay

RH windshield heater relay

Intercooler pump relay (RHD)

RH FASCIA RELAYS

Auxiliary positive relay (LHD)

Ignition positive relay (RHD)

Door locking relay

Air conditioning isolate relay

Passenger side fuse box (LHD)

Driver side fuse box (RHD)

TRUNK RELAYS

Heated backlight relay

Tail lamp relay

Top up relay

Top down relay

LH quarter up relay / LH quarter down relay

Fuel pump 2 relay

RH quarter up relay / RH quarter down relay

Trunk fuse box

Ignition positive relay

Accessory connector relay

Stop lamp relay


Fuel pump 1 relay

Rear fog relay

NOTE: All relays are brown, with the exception of the microrelays, which are black.




LHD

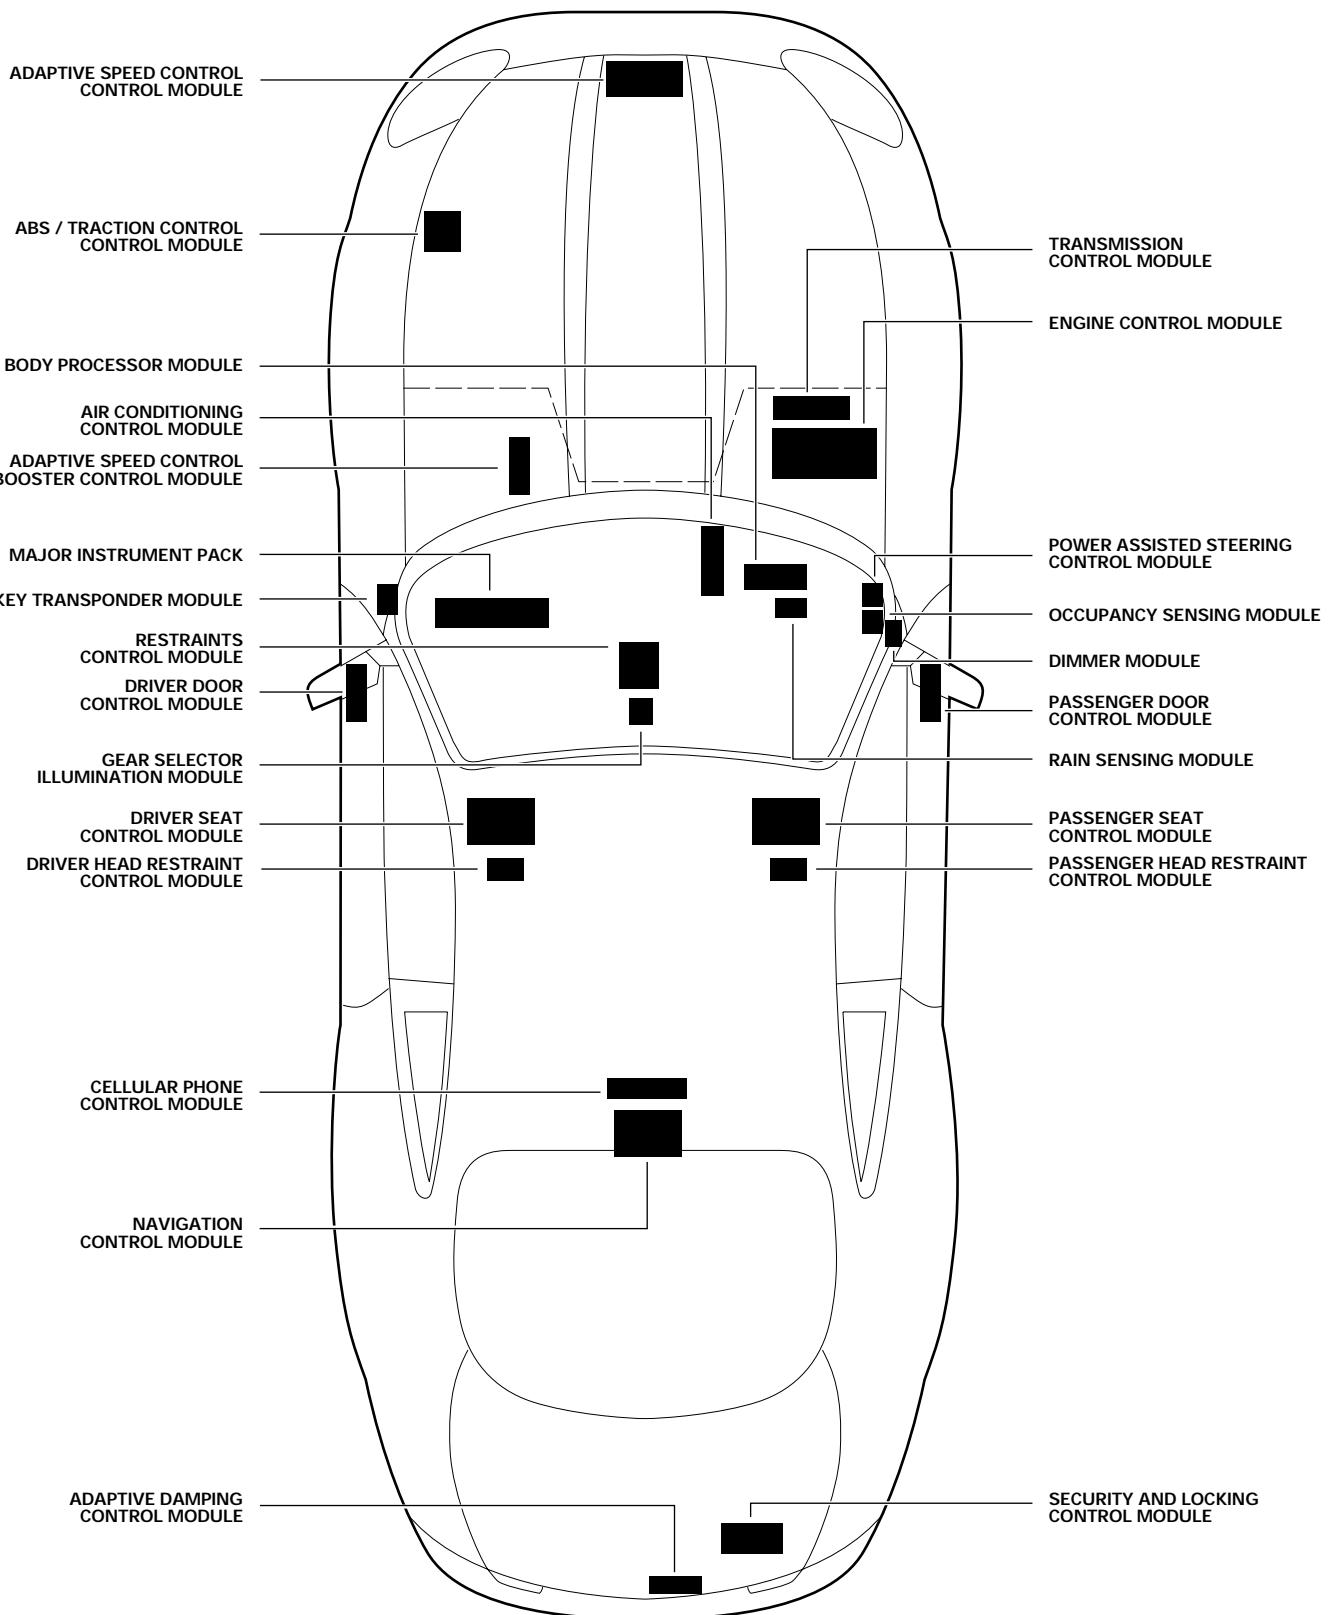




RHD

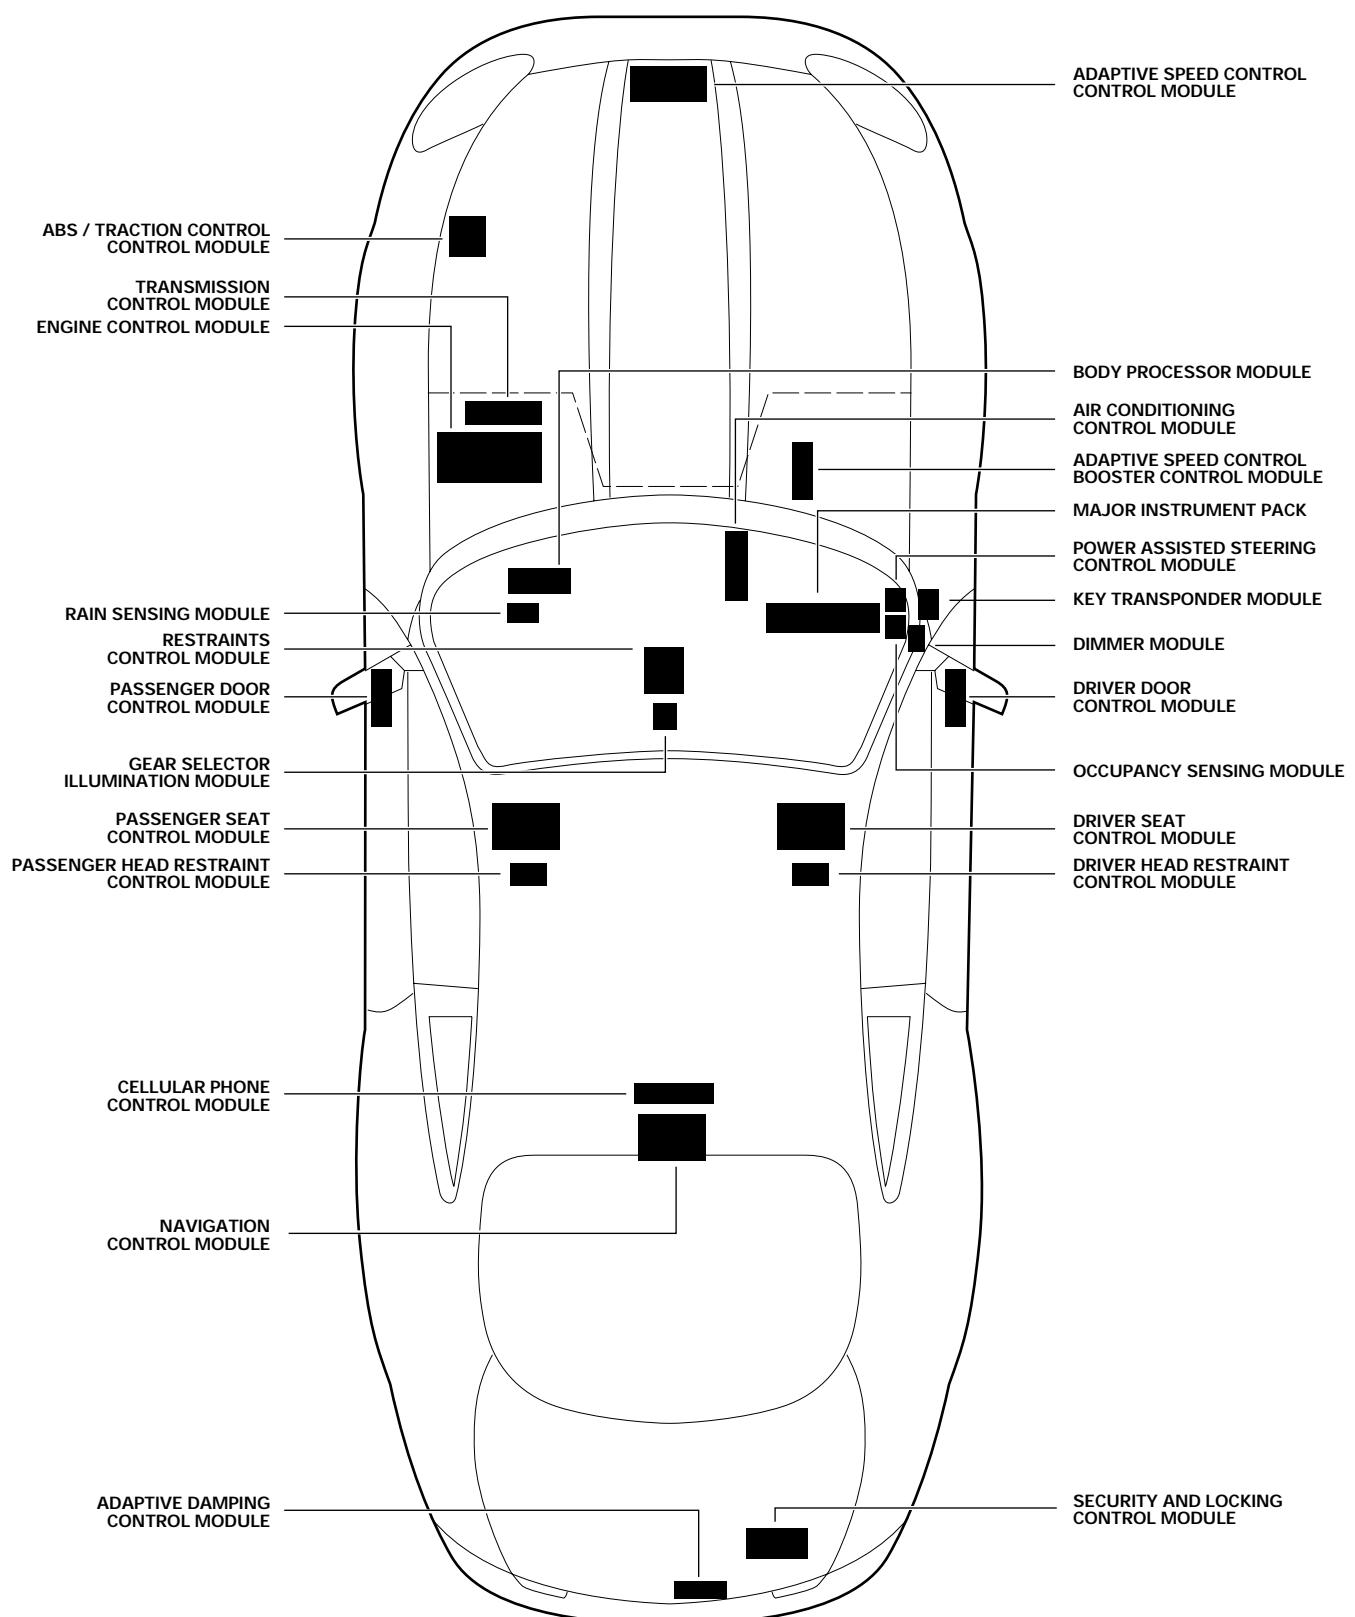



ENGINE CONTROL MODULE: AJ27 N/A

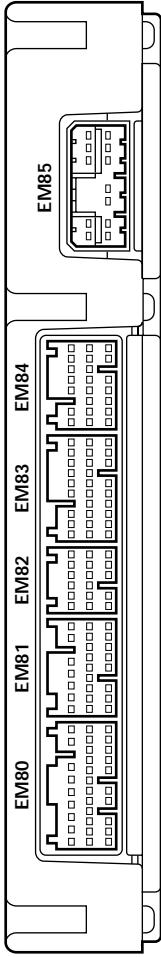

EM80 / 31-WAY / NATURAL					
9	GW	8	R	7	6
GW	GW	7	R	6	G
21	20	19	18	17	16
B	U	W	W	O	YU
31	30	29	—	BK	—
B	—	BK	—	—	—
2	—	—	—	—	—
3	—	—	—	—	—
4	—	—	—	—	—
5	—	—	—	—	—
6	—	—	—	—	—
7	RG	6	OG	5	W
16	15	14	YG	13	YR
RG*	RG*	YG	YR	WU	—
24	23	22	—	BK	—
BG	—	—	—	—	—
28	27	26	25	24	23
U	—	U	Y	Y	Y
29	28	27	26	25	24
BK	—	U	Y	Y	Y
30	31	32	33	34	35
B	B	—	U	Y	Y

EM81 / 24-WAY / NATURAL

EM81 / 24-WAY / NATURAL					
9	GW	8	R	7	6
GW	GW	7	R	6	G
21	20	19	18	17	16
B	U	W	W	O	YU
31	30	29	—	BK	—
B	—	BK	—	—	—
2	—	—	—	—	—
3	—	—	—	—	—
4	—	—	—	—	—
5	—	—	—	—	—
6	—	—	—	—	—
7	RG	6	OG	5	W
16	15	14	YG	13	YR
RG*	RG*	YG	YR	WU	—
24	23	22	—	BK	—
BG	—	—	—	—	—
28	27	26	25	24	23
BW	U	—	Y	Y	Y
29	28	27	26	25	24
BK	—	U	Y	Y	Y
30	31	32	33	34	35
B	B	—	U	Y	Y

* Not used - RCW Vehicles.


EM80 / 31-WAY / NATURAL					
9	GW	8	R	7	6
GW	GW	7	R	6	G
21	20	19	18	17	16
B	U	W	W	O	YU
31	30	29	—	BK	—
B	—	BK	—	—	—
2	—	—	—	—	—
3	—	—	—	—	—
4	—	—	—	—	—
5	—	—	—	—	—
6	—	—	—	—	—
7	RG	6	OG	5	W
16	15	14	YG	13	YR
RG*	RG*	YG	YR	WU	—
24	23	22	—	BK	—
BG	—	—	—	—	—
28	27	26	25	24	23
BW	U	—	Y	Y	Y
29	28	27	26	25	24
BK	—	U	Y	Y	Y
30	31	32	33	34	35
B	B	—	U	Y	Y

EM81 / 24-WAY / NATURAL					
9	GW	8	R	7	6
GW	GW	7	R	6	G
21	20	19	18	17	16
B	U	W	W	O	YU
31	30	29	—	BK	—
B	—	BK	—	—	—
2	—	—	—	—	—
3	—	—	—	—	—
4	—	—	—	—	—
5	—	—	—	—	—
6	—	—	—	—	—
7	RG	6	OG	5	W
16	15	14	YG	13	YR
RG*	RG*	YG	YR	WU	—
24	23	22	—	BK	—
BG	—	—	—	—	—
28	27	26	25	24	23
BW	U	—	Y	Y	Y
29	28	27	26	25	24
BK	—	U	Y	Y	Y
30	31	32	33	34	35
B	B	—	U	Y	Y

EM82 / 17-WAY / NATURAL

EM82 / 17-WAY / NATURAL					
6	GR	5	R	4	3
16	15	14	YG	13	YR
RG*	RG*	YG	YR	WU	—
24	23	22	—	BK	—
BG	—	—	—	—	—
28	27	26	25	24	23
BW	U	—	Y	Y	Y
29	28	27	26	25	24
BK	—	U	Y	Y	Y
30	31	32	33	34	35
B	B	—	U	Y	Y

ENGINE CONTROL MODULE: AJ27 SC

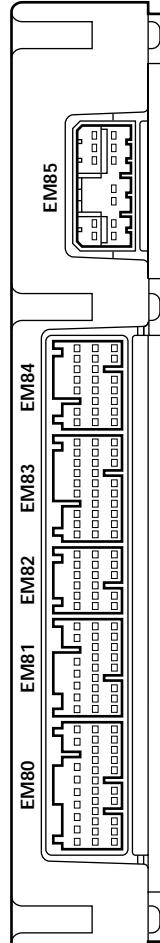


EM81 / 28-WAY / NATURAL					
9	GW	8	R	7	6
GW	GW	7	R	6	G
21	20	19	18	17	16
B	U	W	W	O	YU
31	30	29	—	BK	—
B	—	BK	—	—	—
2	—	—	—	—	—
3	—	—	—	—	—
4	—	—	—	—	—
5	—	—	—	—	—
6	—	—	—	—	—
7	RG	6	OG	5	W
16	15	14	YG	13	YR
RG*	RG*	YG	YR	WU	—
24	23	22	—	BK	—
BG	—	—	—	—	—
28	27	26	25	24	23
BW	U	—	Y	Y	Y
29	28	27	26	25	24
BK	—	U	Y	Y	Y
30	31	32	33	34	35
B	B	—	U	Y	Y

EM84 / 22-WAY / NATURAL					
7	U	6	BW	5	BW
15	14	13	12	11	10
RG	BR	BR	GR	GO	GW
22	21	20	19	18	17
B	BO	GB	GW	GO	B
26	25	24	23	22	21
GW	BW	YW	Y	N	NR
28	27	26	25	24	23
BW	Y	Y	Y	Y	Y
29	28	27	26	25	24
BK	—	—	—	—	—
30	31	32	33	34	35
B	B	—	U	Y	Y

EM85 / 12-WAY / WHITE					
5	U	4	3	2	1
12	11	10	9	8	7
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
12	11	10	9	8	7
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—	—	—	—	—
11	10	9	8	7	6
—	—	—	—	—	—
10	9	8	7	6	5
—	—</				




TRANSMISSION CONTROL MODULE: AJ27 N/A

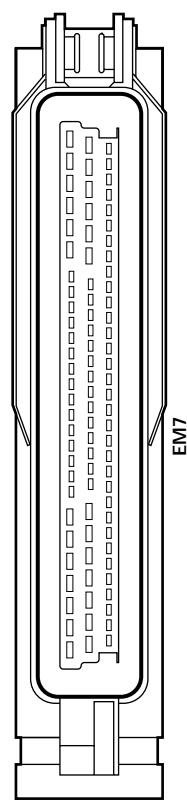

EM7 / 88-WAY / BLACK

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	
OY	RU	—	O	OG	B	—	R	W	—	RU	OG	N	W	B	—	—	—	—	BG	UY	—	W	—	NR	—	BN		
29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	—	
O	YB	—	YB	YU	YU	—	Y	Y	—	—	G	—	—	O	RG	—	—	—	—	—	—	O	RU	RW	WB	WB	—	
56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

TRANSMISSION CONTROL MODULE: AJ27 SC

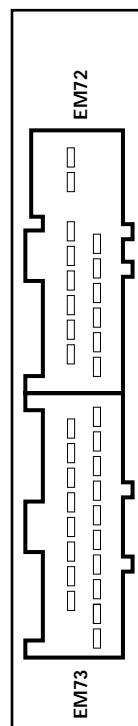

EM73 / 18-WAY / BLACK


23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	
—	—	GB	GU	GR	GR	WB	3	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1	2	3	4	5	6	7	8	9	10	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

EM72 / 14-WAY / BLACK


33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	
BW	UY	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	



ABS / TRACTION CONTROL CONTROL MODULE

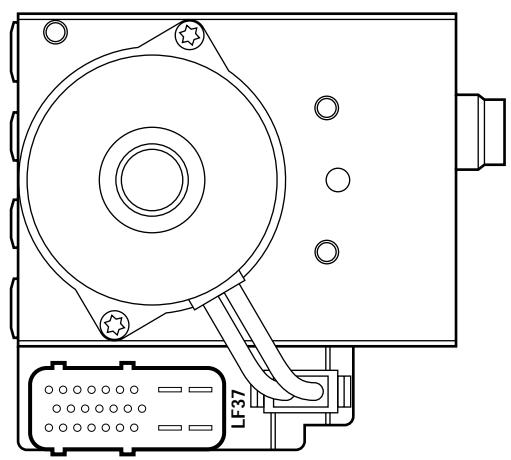

ADAPTIVE DAMPING CONTROL MODULE

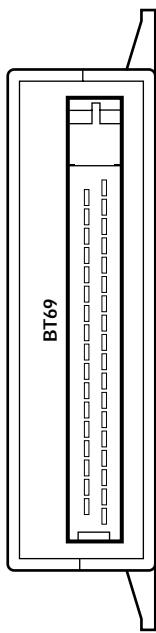

BT69 / 35-WAY / BLACK


19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	—
—	BG	U	R	—	OG	U	OG	NW	W	—	O	OV	O	GU	OV	—	
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
YR	—	OV	—	—	—	—	—	—	WR	—	R	OG	—	—	—	—	B

LF37 / 25-WAY / BLACK

24 B 25 NW



AIR CONDITIONING CONTROL MODULE

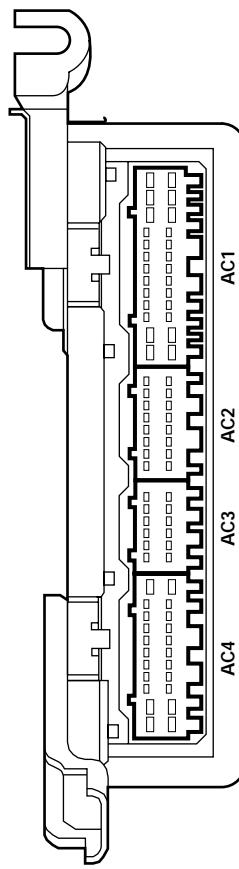

AC4 / 22-WAY / GREY			
12	13	14	15
WR	B	B	GW
3	2	1	QY
WR	WR	GW	YR
1	2	3	4
WR	WR	WU	YG
WU	GW	WU	—


AC3 / 12-WAY / GREY			
7	8	9	10
Y	YR	—	U
1	2	3	4
Y	Y	YG	—
WU	WU	WU	WU
11	10	9	8
—	RG	Y	U

AC2 / 16-WAY / GREY			
9	10	11	12
—	O	YG	U
1	2	3	4
OG	RG	Y	—
1	2	3	4
Y	YG	—	OG
WU	WU	WU	GO

AC1 / 26-WAY / GREY			
14	15	16	17
—	B	QY	U
1	2	3	4
WR	WR	WU	GW
1	2	3	4
WR	WR	WU	GW
WU	GW	WU	—
11	10	9	8
—	RG	Y	U
1	2	3	4
U	UY	UY	UY
RG	RG	RG	RG



MAJOR INSTRUMENT PACK

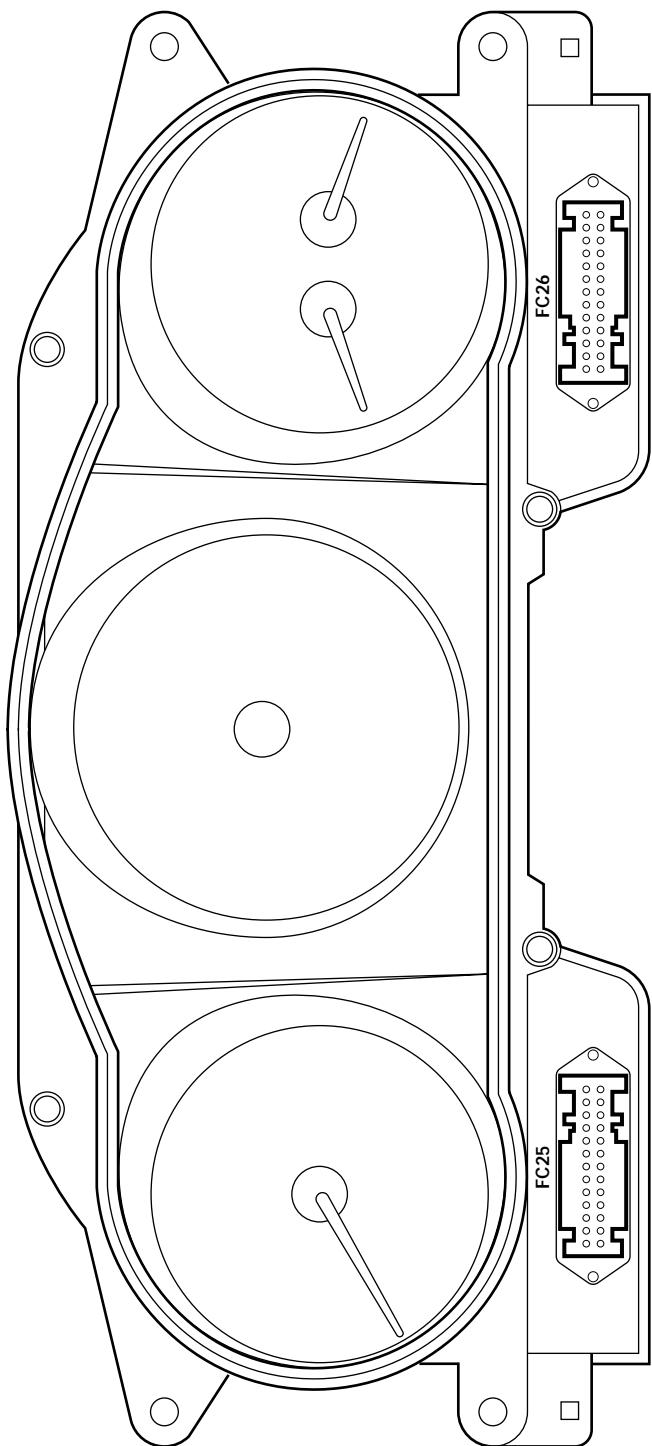

FC25 / 26-WAY / BLACK


1	2	3	4	5	6	7	8	9	10	11	12	13
WG	RG	YR	BK	—	RU	YB	LY	R	Y	—	Y	—
14	15	16	17	18	19	20	21	22	23	24	25	26
U	R	B	RW	Y	O	—	—	—	G	BR	—	—

FC26 / 26-WAY / YELLOW

13	12	11	10	9	8	7	6	5	4	3	2	1
BW	RU	G	0	Y	RG	OG	U	OY	YG	RW	RW	R
26	25	24	23	22	21	20	19	18	17	16	15	14
—	—	OG	Y	RG	OY	G	OY	G	OY	Y	UY	RW




BODY PROCESSOR MODULE

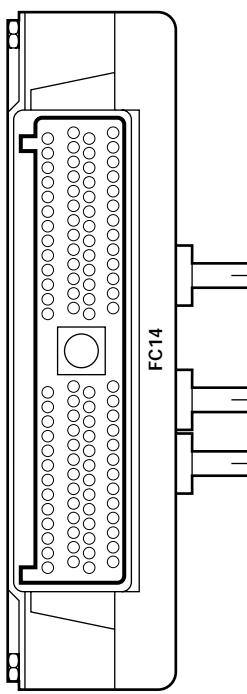

FC14 / 104-WAY / GREY

79	NG	80	GR	81	GR	82	GB	83	GR	84	GB	85	Y	86	OG	87	Y	88	YG	89	GR	90	BG	91	BW
53	R	54	G	55	YU	56	OY	57	Y	58	BG	59	Y	60	GR	61	BW	62	GU	63	Y	64	U	65	—
27	GO	28	RW	29	Y	30	U	31	Y	32	WR	33	RG	34	GO	35	G	36	GR	37	RU	38	Y	39	—
1	BG	2	GW	3	W	4	GU	5	YR	6	RU	7	BW	8	GU	9	YB	10	GR	11	GU	12	YR	13	GO

SECURITY AND LOCKING CONTROL MODULE

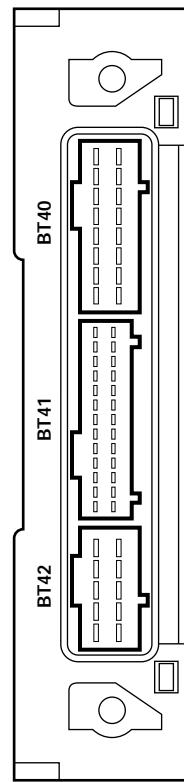


BT42 / 10-WAY / BLACK

5	RW	4	RG	3	U	2	OY	1	Y	8	GR	7	NR	6	YU*	5	Y	4	GR*	3	BG	2	YR	1	—
10	RW	9	RG	8	U	7	OY	6	Y	26	GR	25	NR	24	YU*	23	Y	22	GR*	21	BG	20	YR	19	—

BT41 / 26-WAY / BLACK

13	RW	12	RG	11	U	10	OY	9	Y	8	GR	7	NR	6	YU*	5	Y	4	GR*	3	BG	2	YR	1	—
16	RW	15	RG	14	U	13	OY	12	Y	11	GR	10	NR	9	YU*	8	Y	7	GR*	6	BG	5	YR	4	—

KEY TRANSPONDER MODULE

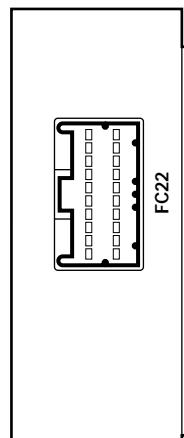


FC22 / 20-WAY / GREEN

10	YB	9	OY	8	GR	7	NR	6	YU*	5	Y	4	GR*	3	BG	2	YR	1	—
20	RW	19	Y	18	O	17	YU	16	GR	15	BG	14	YR	13	YB	12	Y	11	—

* Not used - COUPE Vehicles.



RESTRAINTS CONTROL MODULE

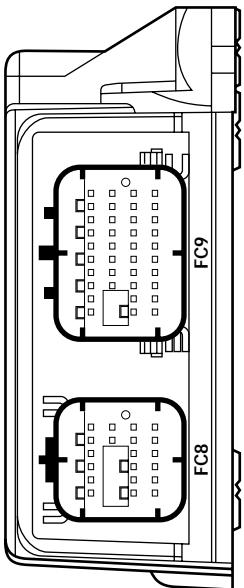


FC8 / 24-WAY / BLACK

(RHD)									
1	2	3	4	5	6	7	8	9	10
WR	RU	RW	NW	NC	—	—	—	—	—
11	12	O	W	—	13	14	15	16	17
13	14	BW	Y	BK	—	—	O	Y	VU
19	20	OG	BW	—	21	22	23	24	25
YB	OG	—	—	—	UY	QY	BW	RU	YU
31	32	2T	2Z	—	33	34	35	36	37
RUW	RUW	RUW	RUW	RUW	RUW	RUW	RUW	RUW	RUW
27	28	WU	GU	U	29	30	WU	GU	G

FC9 / 40-WAY / BLACK


OCCUPANCY SENSING MODE II E

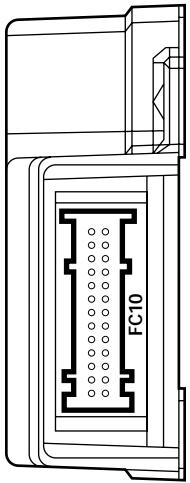

FC10 / 26-WAY / YELLOW


14	15	16	17	18	19	20	21	22	23	24	25	26
—	—	—	W	O	N	Y	W	BK	U	O	—	—
1	2	3	4	5	6	7	8	9	10	11	12	13
W	G	W	Y	W	U	W	U	—	U	—	U	—

DBWEB DOOR CONTROL MODUL

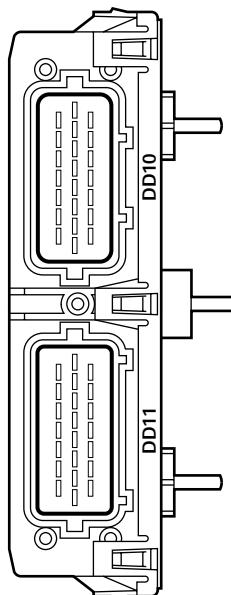

DD11 / 22-WAY / BLACK

DD10 / 22-WAY / BLUE

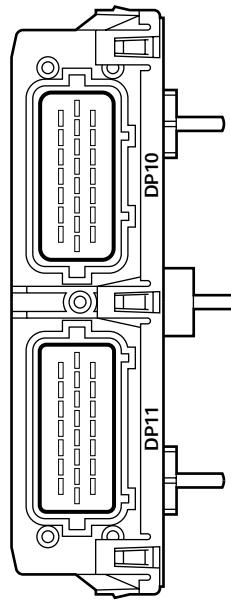


PASSENGER DOOR CONTROL MODE

DP11 / 22-WAY / BLACK

—	7	6	5	4	3	2	1
—	—	GU	—	—	—	—	—
15	14	13	12	11	10	9	8
—	—	—	—	—	—	—	—
22	—	—	20	19	18	17	16

DP10 / 22-WAY / BLUE

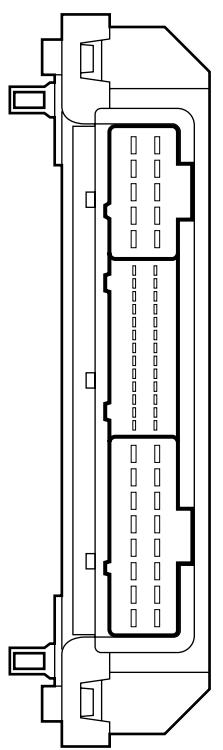DRIVER HEAD RESTRAINT
CONTROL MODULE

SD3 / 16-WAY / BLACK															
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
UY	OY	W	WG	GU	GR	GW	NR	—	WR	YB	—	—	—	—	—
—	2	3	4	5	6	7	8	—	5	6	7	8	9	10	11
GO	BG	O	R	G	GR	WU	WR	—	W	VBS	—	Y	—	WR	W

SD22 / 16-WAY / BLACK															
8	7	6	5	4	3	2	1	B	G	UY	RU	OG	—	N	—
—	16	15	14	13	12	11	10	BN	EG	Y	U	YU	W	WG	NG


DRIVER SEAT CONTROL MODULE

SD3 SD4 SD5

SD4 / 26-WAY / BLACK															
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
UY	OY	W	WG	GU	GR	GW	NR	—	WR	YB	—	—	—	—	—
—	2	3	4	5	6	7	8	—	5	6	7	8	9	10	11
GO	BG	O	R	G	GR	WU	WR	—	W	VBS	—	Y	—	WR	W


SD5 / 10-WAY / BLACK															
6	7	8	9	10	—	—	—	—	—	—	—	—	—	—	—
—	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
EO	B	G	UY	RU	OG	—	NR	—	—	—	—	—	—	—	—

PASSENGER SEAT CONTROL MODULE

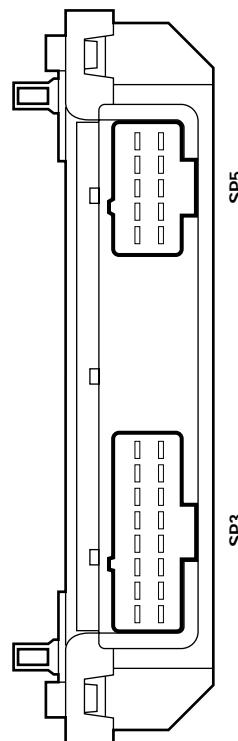

SP3 / 16-WAY / BLACK															
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
UY	OY	W	WG	W	GU	GR	GW	NR	—	WR	YB	—	—	—	—
—	2	3	4	5	6	7	8	—	5	6	7	8	9	10	11
GO	NG	O	R	G	GR	WU	WR	—	W	VBS	—	Y	—	WR	W

SP22 / 16-WAY / BLACK															
8	7	6	5	4	3	2	1	B	G	UY	RU	OG	—	N	—
—	16	15	14	13	12	11	10	BN	EG	Y	U	YU	W	WG	NG

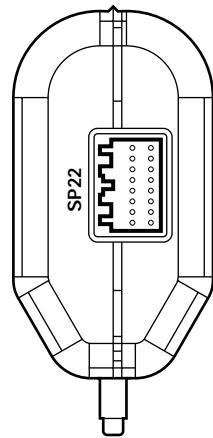

SP22 / 16-WAY / BLACK															
8	7	6	5	4	3	2	1	B	G	UY	RU	OG	—	N	—
—	16	15	14	13	12	11	10	BN	EG	Y	U	YU	W	WG	NG

Fig. 01.1

COMPONENTS

Component	Connector / Type / Color	Location / Access
BATTERY	BT66 / EYELET	TRUNK, RIGHT HAND SIDE
BODY PROCESSOR MODULE	BT67 / EYELET	PASSENGER SIDE FASCIA / AIRBAG BRACKET
FUSE BOX – DRIVER SIDE	FC14 / 104-WAY AMP EEEC / GREY FC5 / 10-WAY U.T.A. FUSEBOX / NATURAL FC6 / 10-WAY U.T.A. FUSEBOX / BLACK FC90 / EYELET FC92 / EYELET FC94 / EYELET	FASCIA / DRIVER SIDE
FUSE BOX – ENGINE COMPARTMENT	LF5 / 10-WAY U.T.A. FUSEBOX / NATURAL LF6 / 10-WAY U.T.A. FUSEBOX / BLACK LF7 / 10-WAY U.T.A. FUSEBOX / GREEN LF8 / 10-WAY U.T.A. FUSEBOX / BLUE LF70 / EYELET	ENGINE COMPARTMENT / LEFT FRONT
FUSE BOX – ENGINE MANAGEMENT	EM19 / 10-WAY U.T.A. FUSEBOX / NATURAL EM20 / 10-WAY U.T.A. FUSEBOX / BLACK EM70 / EYELET	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
FUSE BOX – PASSENGER SIDE	FC20 / 10-WAY U.T.A. FUSEBOX / NATURAL FC21 / 10-WAY U.T.A. FUSEBOX / BLACK FC90 / EYELET FC93 / EYELET	FASCIA / PASSENGER SIDE
FUSE BOX – TRUNK	BT10 / 10-WAY U.T.A. FUSEBOX / NATURAL BT11 / 10-WAY U.T.A. FUSEBOX / BLACK BT12 / 10-WAY U.T.A. FUSEBOX / GREEN BT13 / 10-WAY U.T.A. FUSEBOX / BLUE BT64 / EYELET	TRUNK / ELECTRICAL CARRIER
HIGH POWER PROTECTION MODULE	BT60 / EYELET BT61 / EYELET BT62 / EYELET BT63 / EYELET	TRUNK / ADJACENT TO BATTERY
TRANSIT ISOLATION DEVICE	BT44 / 2-WAY ECONOSEAL III HC / BLACK BT49 / 1-WAY LUCAR BT66 / EYELET	TRUNK / ADJACENT TO BATTERY

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
AUXILIARY POSITIVE RELAY	BROWN	BUS	PASSENGER SIDE FUSE BOX
EMS CONTROL RELAY	BROWN	BUS	ENGINE MANAGEMENT FUSE BOX
IGNITION POSITIVE RELAY	BROWN	BUS	DRIVER SIDE FUSE BOX
IGNITION POSITIVE RELAY	BROWN	BUS	ENGINE COMPARTMENT FUSE BOX
IGNITION POSITIVE RELAY	BROWN	BUS	TRUNK FUSE BOX

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT65	EYELET	TRANSMISSION TUNNEL
BT79	EYELET	TRANSMISSION TUNNEL
BT80	EYELET	ENGINE COMPARTMENT / FALSE BULKHEAD, RIGHT HAND SIDE
FC91	EYELET	TRANSMISSION TUNNEL
RH2	20-WAY MULTILOCK 070 / WHITE	REAR OF CENTER CONSOLE ASSEMBLY
ST1	EYELET	ENGINE COMPARTMENT / FALSE BULKHEAD, RIGHT HAND SIDE

GROUNDS

Ground	Location / Type
BT68	BATTERY GROUND STUD
BT2BR	EYELET (PAIR) – RIGHT HAND LEG / TRUNK, RIGHT REAR
BT2BS	EYELET (SINGLE) / TRUNK, RIGHT REAR

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

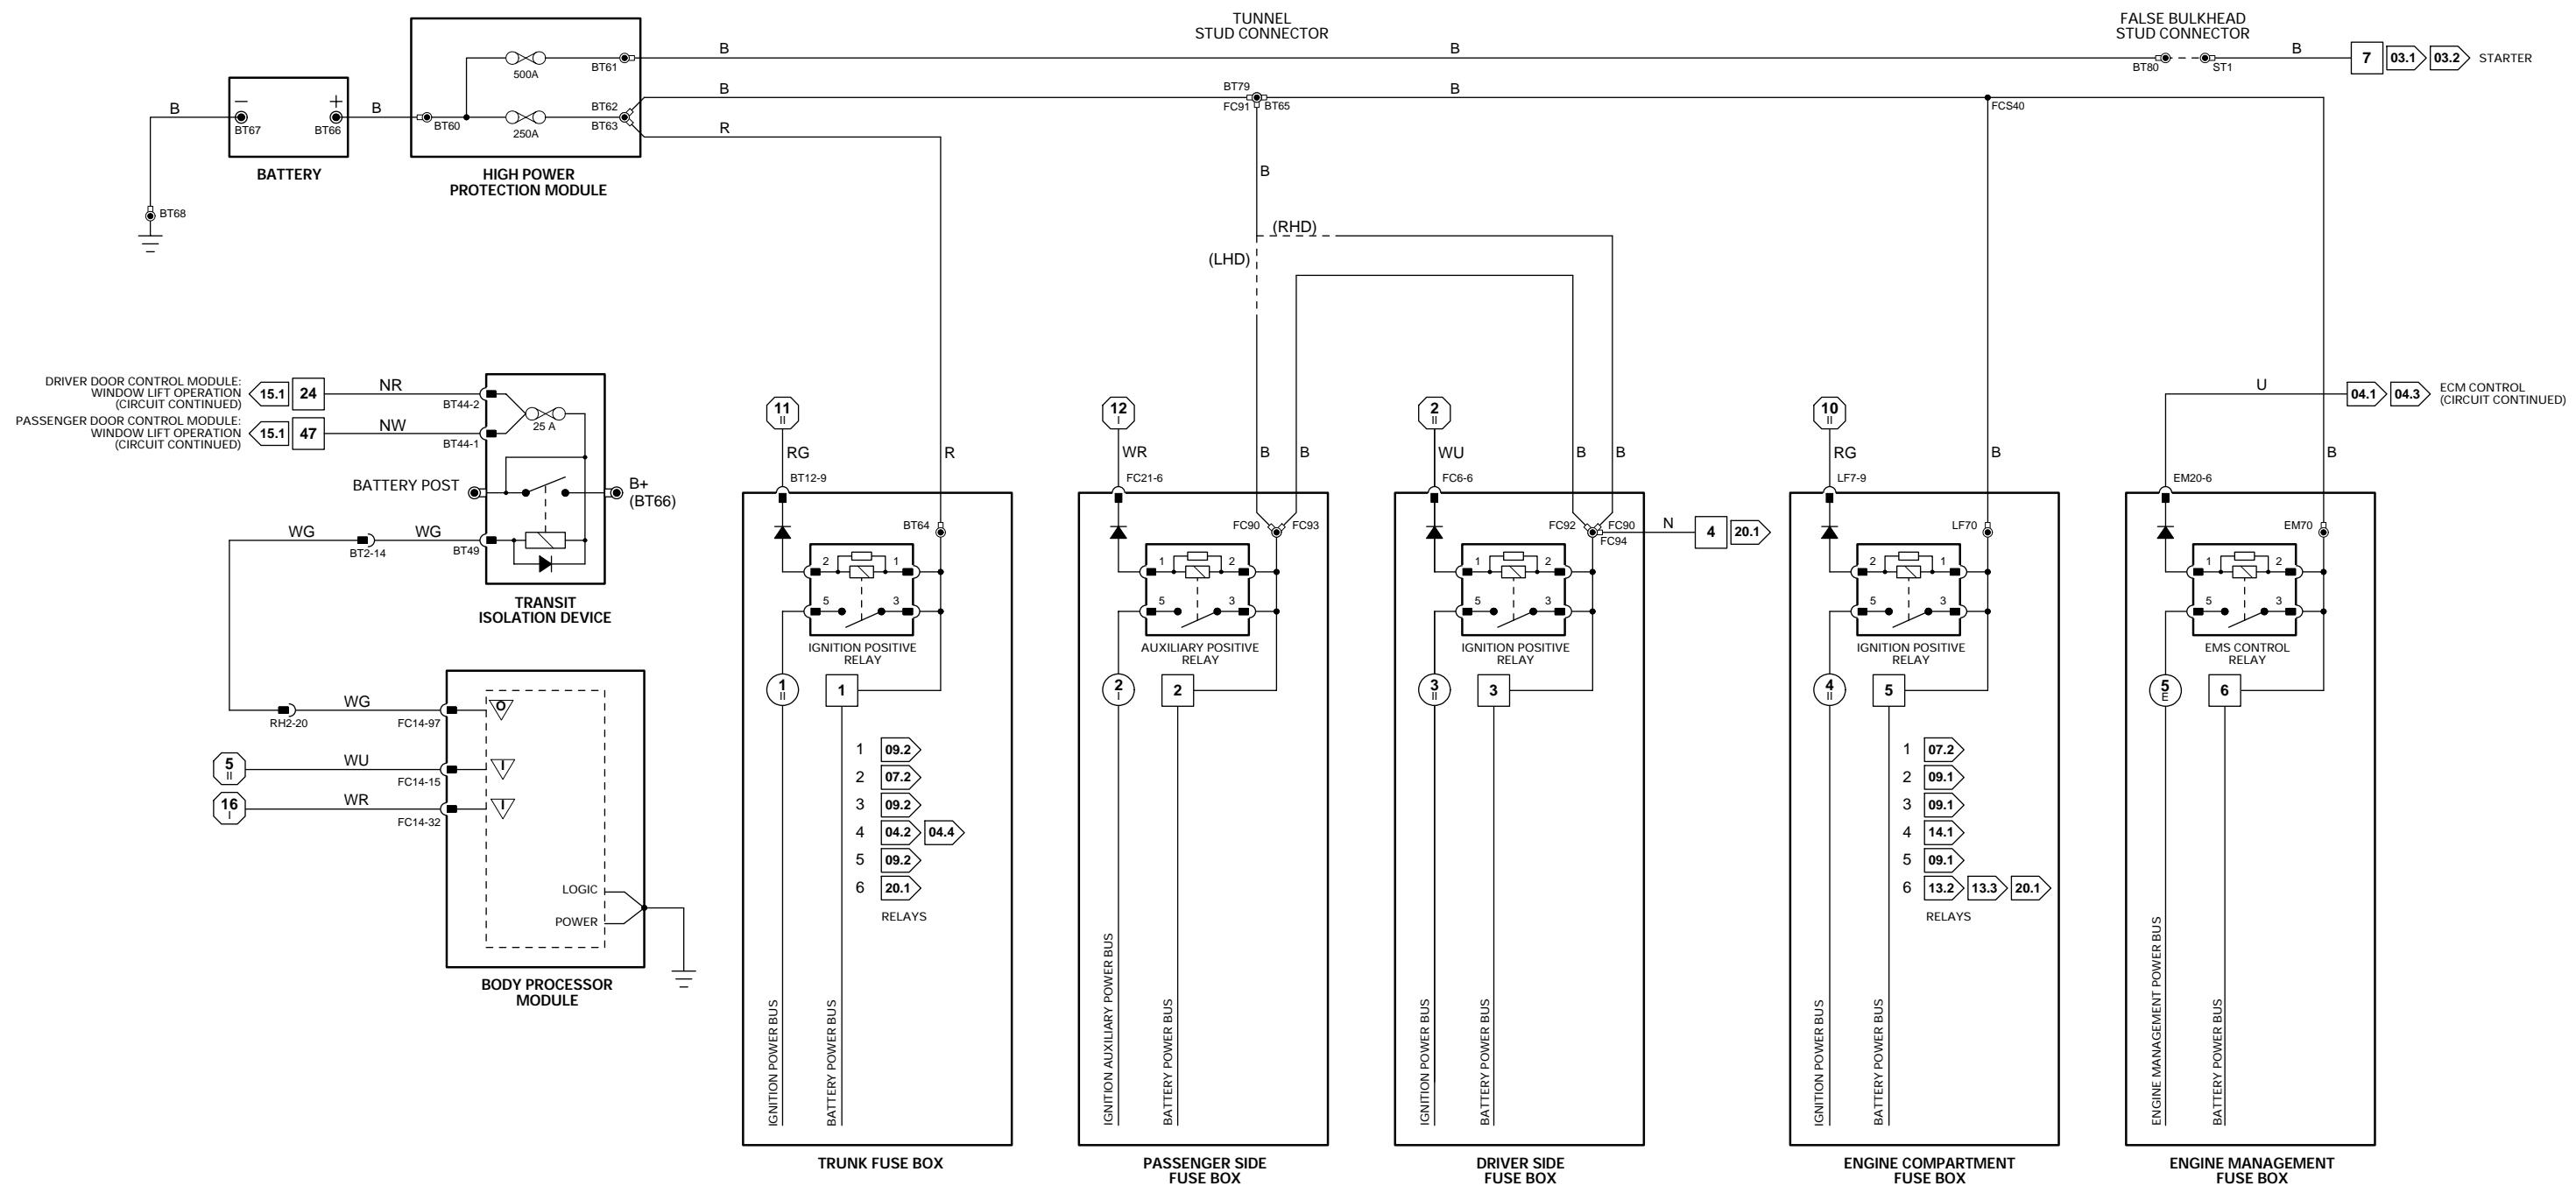


Fig. 01.2

COMPONENTS

Component

FUSE BOX - DRIVER SIDE

Connector / Type / Color

FC5 / 10-WAY U.T.A. FUSEBOX / NATURAL

FC6 / 10-WAY U.T.A. FUSEBOX / BLACK

FC90 / EYELET

FC92 / EYELET

FC94 / EYELET

FUSE BOX - PASSENGER SIDE

FC20 / 10-WAY U.T.A. FUSEBOX / NATURAL

FC21 / 10-WAY U.T.A. FUSEBOX / BLACK

FC90 / EYELET

FC93 / EYELET

Location / Access

FASCIA / DRIVER SIDE

FASCIA / PASSENGER SIDE

HARNESS-TO-HARNESS CONNECTORS

Connector

Type / Color

Location / Access

AC12 20-WAY MULTILOCK 070 / WHITE

AC13 20-WAY MULTILOCK 070 / YELLOW

AC14 14-WAY MULTILOCK 070 / GREY

AC15 20-WAY MULTILOCK 070 / GREY

AC16 6-WAY MULTILOCK 070 / YELLOW

BT2 20-WAY MULTILOCK 070 / WHITE

BT58 4-WAY ECONOSEAL III HC / BLACK

DD1 23-WAY AMP - FORD / BLACK

DP1 23-WAY AMP - FORD / BLACK

IC2 14-WAY MULTILOCK 070 / WHITE

LF1 20-WAY MULTILOCK 070 / GREY

RF1 24-WAY CONNECTOR / BLACK

RH14 2-WAY ECONOSEAL III HC / BLACK

RH2 20-WAY MULTILOCK 070 / WHITE

SD1 14-WAY MULTILOCK 070 / YELLOW

SP1 14-WAY MULTILOCK 070 / YELLOW

FASCIA TOP CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE

LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH

TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH

DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM

PASSENGER SIDE 'A' POST / 'A' POST TRIM

BELOW CENTER CONSOLE GLOVE BOX

LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM



REAR OF CENTER CONSOLE ASSEMBLY

REAR OF CENTER CONSOLE ASSEMBLY

BELOW DRIVER SEAT

BELOW PASSENGER SEAT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

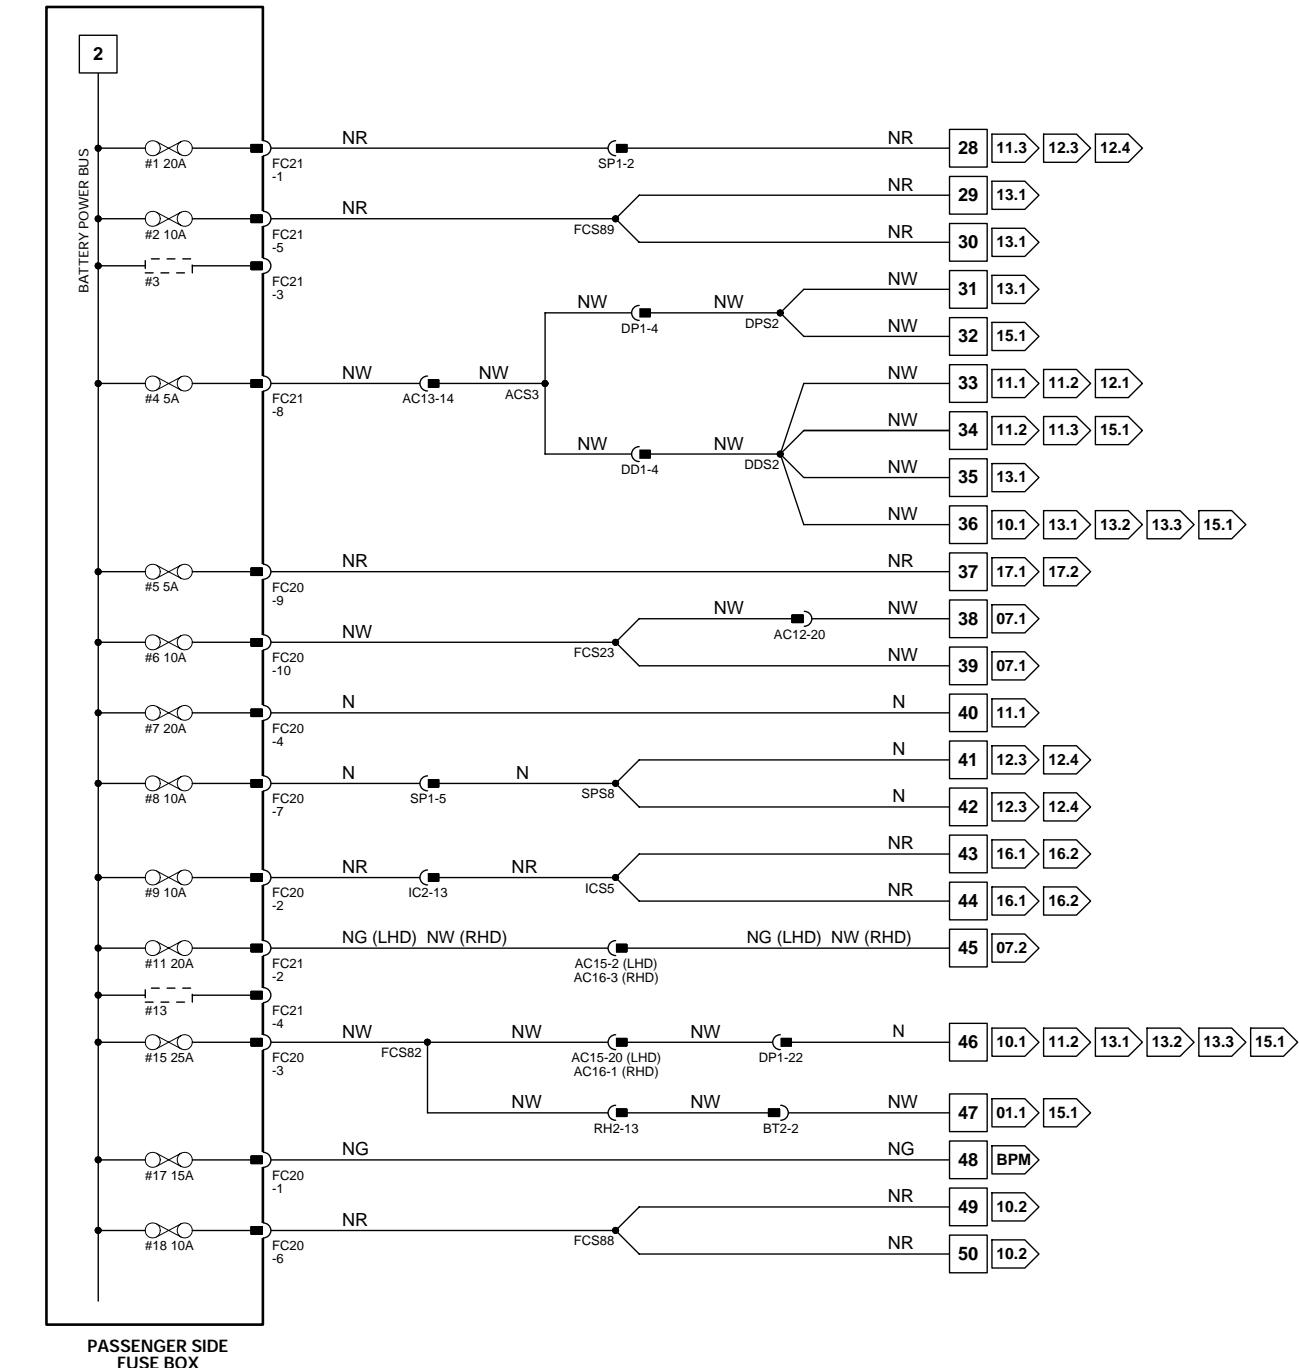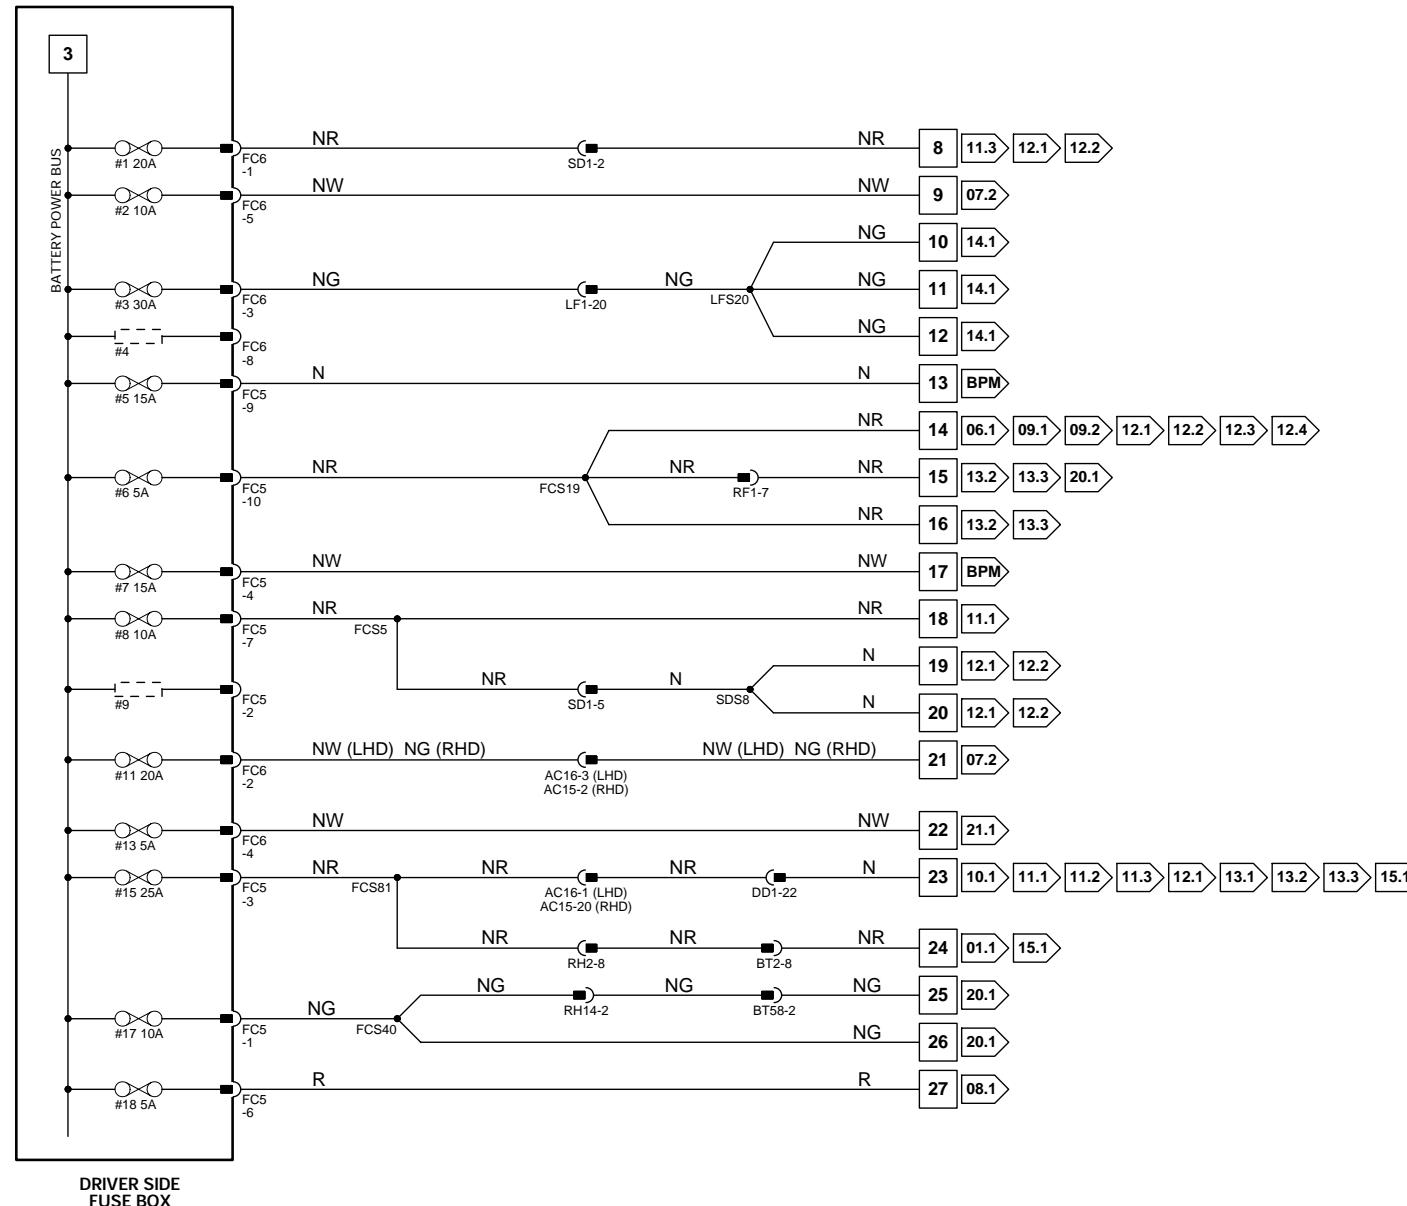

NOTE: Body Processor Module appears in numerous Figures.

Fig. 01.3

COMPONENTS

Component

FUSE BOX - ENGINE COMPARTMENT

Connector / Type / Color

LF5 / 10-WAY U.T.A. FUSEBOX / NATURAL
LF6 / 10-WAY U.T.A. FUSEBOX / BLACK
LF7 / 10-WAY U.T.A. FUSEBOX / GREEN
LF8 / 10-WAY U.T.A. FUSEBOX / BLUE
LF70 / EYELET

Location / Access

ENGINE COMPARTMENT / LEFT FRONT

FUSE BOX - ENGINE MANAGEMENT

EM19 / 10-WAY U.T.A. FUSEBOX / NATURAL
EM20 / 10-WAY U.T.A. FUSEBOX / BLACK
EM70 / EYELET

ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

FUSE BOX - TRUNK

BT10 / 10-WAY U.T.A. FUSEBOX / NATURAL
BT11 / 10-WAY U.T.A. FUSEBOX / BLACK
BT12 / 10-WAY U.T.A. FUSEBOX / GREEN
BT13 / 10-WAY U.T.A. FUSEBOX / BLUE
BT64 / EYELET

TRUNK / ELECTRICAL CARRIER

HARNESS-TO-HARNESS CONNECTORS

Connector

BT1

Type / Color

20-WAY MULTILOCK 070 / WHITE

IC4

4-WAY MULTILOCK 070 / WHITE

RH12

18-WAY MULTILOCK 070 / YELLOW

Location / Access

TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
TRUNK / LEFT OF ANTENNA ASSEMBLY
REAR OF CENTER CONSOLE ASSEMBLY

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

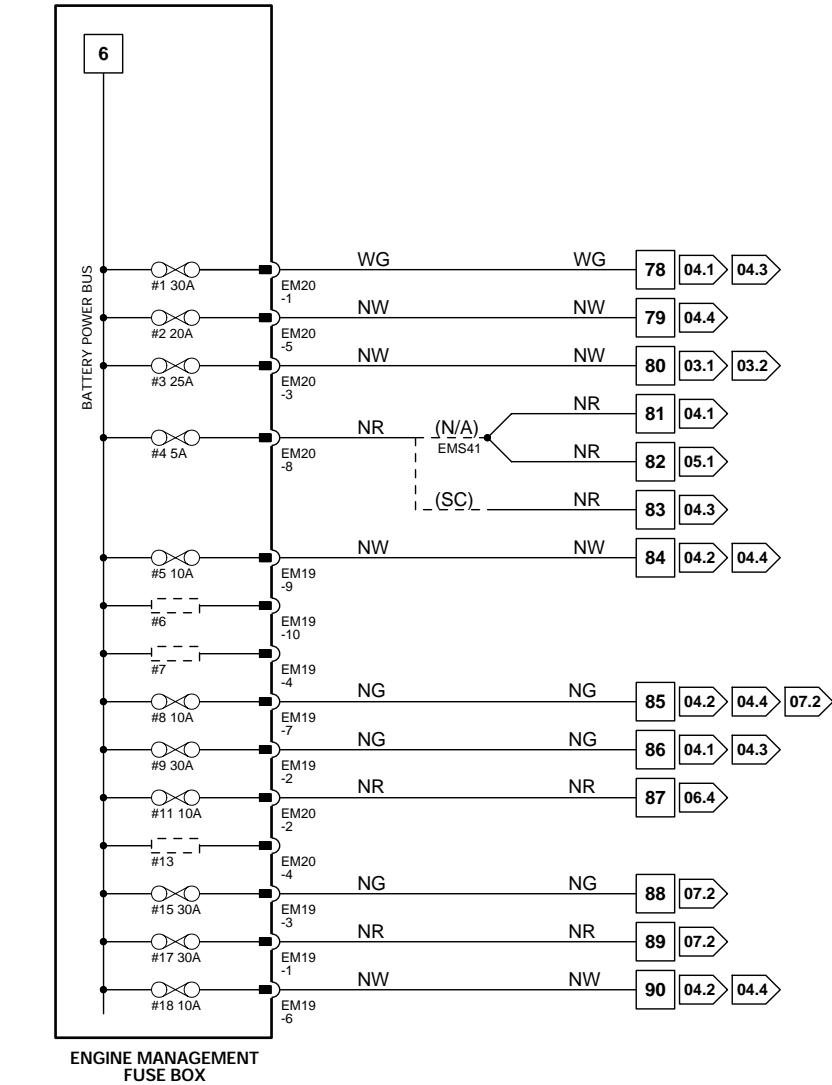
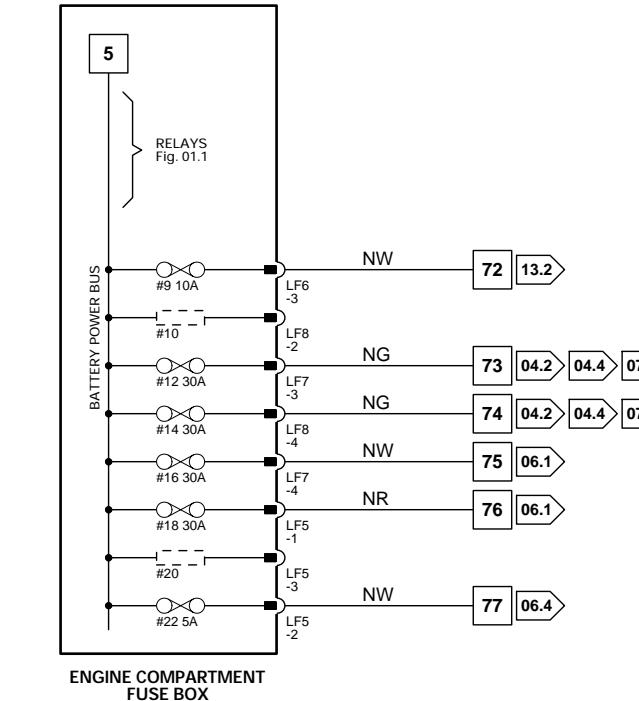
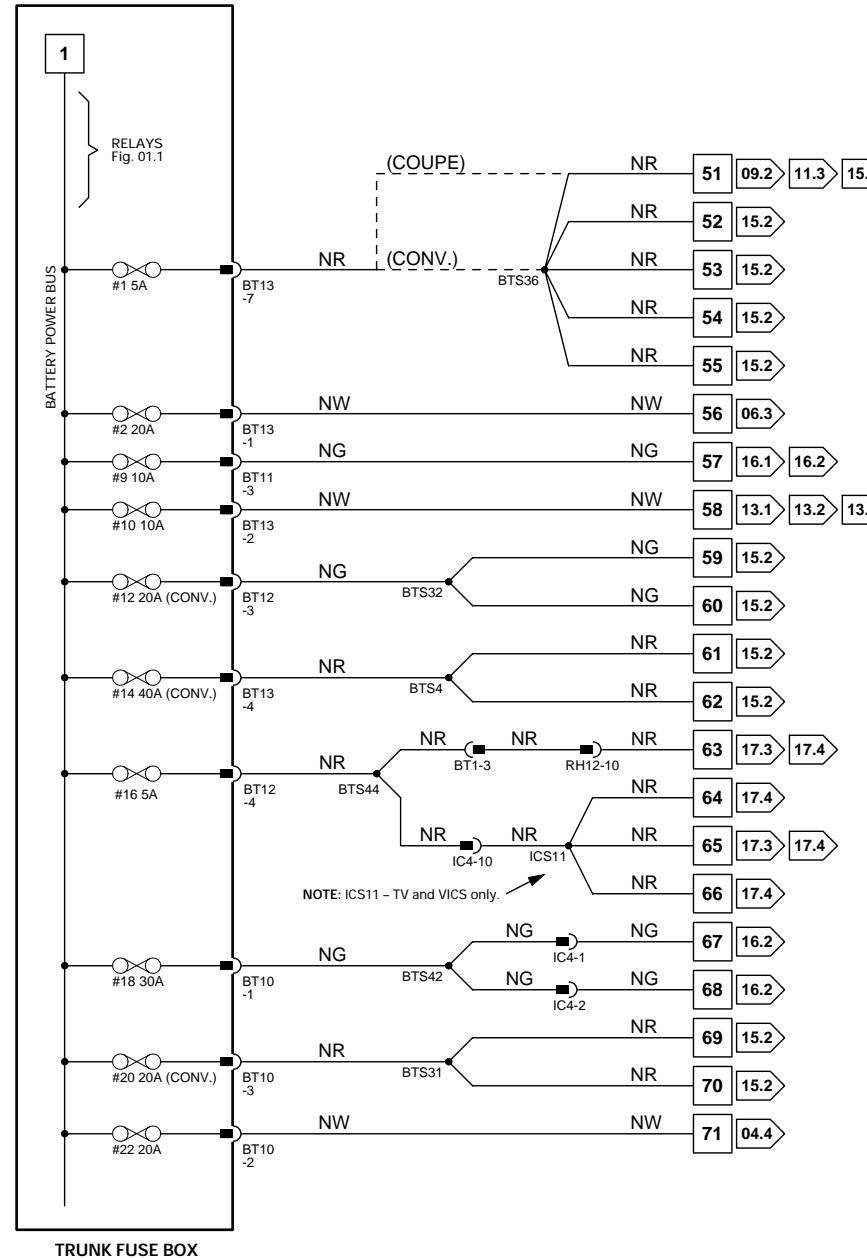


Fig. 01.4

COMPONENTS

Component

FUSE BOX - DRIVER SIDE

Connector / Type / Color

FC5 / 10-WAY U.T.A. FUSEBOX / NATURAL
FC6 / 10-WAY U.T.A. FUSEBOX / BLACK
FC90 / EYELET
FC92 / EYELET
FC94 / EYELET

Location / Access

FASCIA / DRIVER SIDE

FUSE BOX - ENGINE COMPARTMENT

LF5 / 10-WAY U.T.A. FUSEBOX / NATURAL
LF6 / 10-WAY U.T.A. FUSEBOX / BLACK
LF7 / 10-WAY U.T.A. FUSEBOX / GREEN
LF8 / 10-WAY U.T.A. FUSEBOX / BLUE
LF70 / EYELET

ENGINE COMPARTMENT / LEFT FRONT

FUSE BOX - PASSENGER SIDE

FC20 / 10-WAY U.T.A. FUSEBOX / NATURAL
FC21 / 10-WAY U.T.A. FUSEBOX / BLACK
FC90 / EYELET
FC93 / EYELET

FASCIA / PASSENGER SIDE

FUSE BOX - TRUNK

BT10 / 10-WAY U.T.A. FUSEBOX / NATURAL
BT11 / 10-WAY U.T.A. FUSEBOX / BLACK
BT12 / 10-WAY U.T.A. FUSEBOX / GREEN
BT13 / 10-WAY U.T.A. FUSEBOX / BLUE
BT64 / EYELET

TRUNK / ELECTRICAL CARRIER

HARNESS-TO-HARNESS CONNECTORS

Connector

Type / Color

AC15

20-WAY MULTILOCK 070 / GREY

BT1

20-WAY MULTILOCK 070 / WHITE

EM2

18-WAY MULTILOCK 070 / YELLOW

IC2

14-WAY MULTILOCK 070 / WHITE

IC3

14-WAY MULTILOCK 070 / GREY

LF3

13-WAY ECONOSEAL III LC / WHITE

LF40

13-WAY ECONOSEAL III LC / BLACK

LF60

20-WAY MULTILOCK 070 / WHITE

PI2

13-WAY ECONOSEAL III LC / BLACK

RF1

24-WAY CONNECTOR / BLACK

RH2

20-WAY MULTILOCK 070 / WHITE

RH9

20-WAY MULTILOCK 070 / YELLOW

SD1

14-WAY MULTILOCK 070 / YELLOW

SP1

14-WAY MULTILOCK 070 / YELLOW

Location / Access

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE

TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH

ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE

BELLOW CENTER CONSOLE GLOVE BOX

BELOW CENTER CONSOLE GLOVE BOX

LHD: ENGINE COMPARTMENT / ADJACENT TO BRAKE SERVO

RHD: ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

LHD: ENGINE COMPARTMENT / FORWARD OF BRAKE FLUID RESERVOIR

RHD: ENGINE COMPARTMENT / BELOW CONTROL MODULE ENCLOSURE

LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION

RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

REAR OF CENTER CONSOLE ASSEMBLY

BELLOW CENTER CONSOLE

BELLOW DRIVER SEAT

BELLOW PASSENGER SEAT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

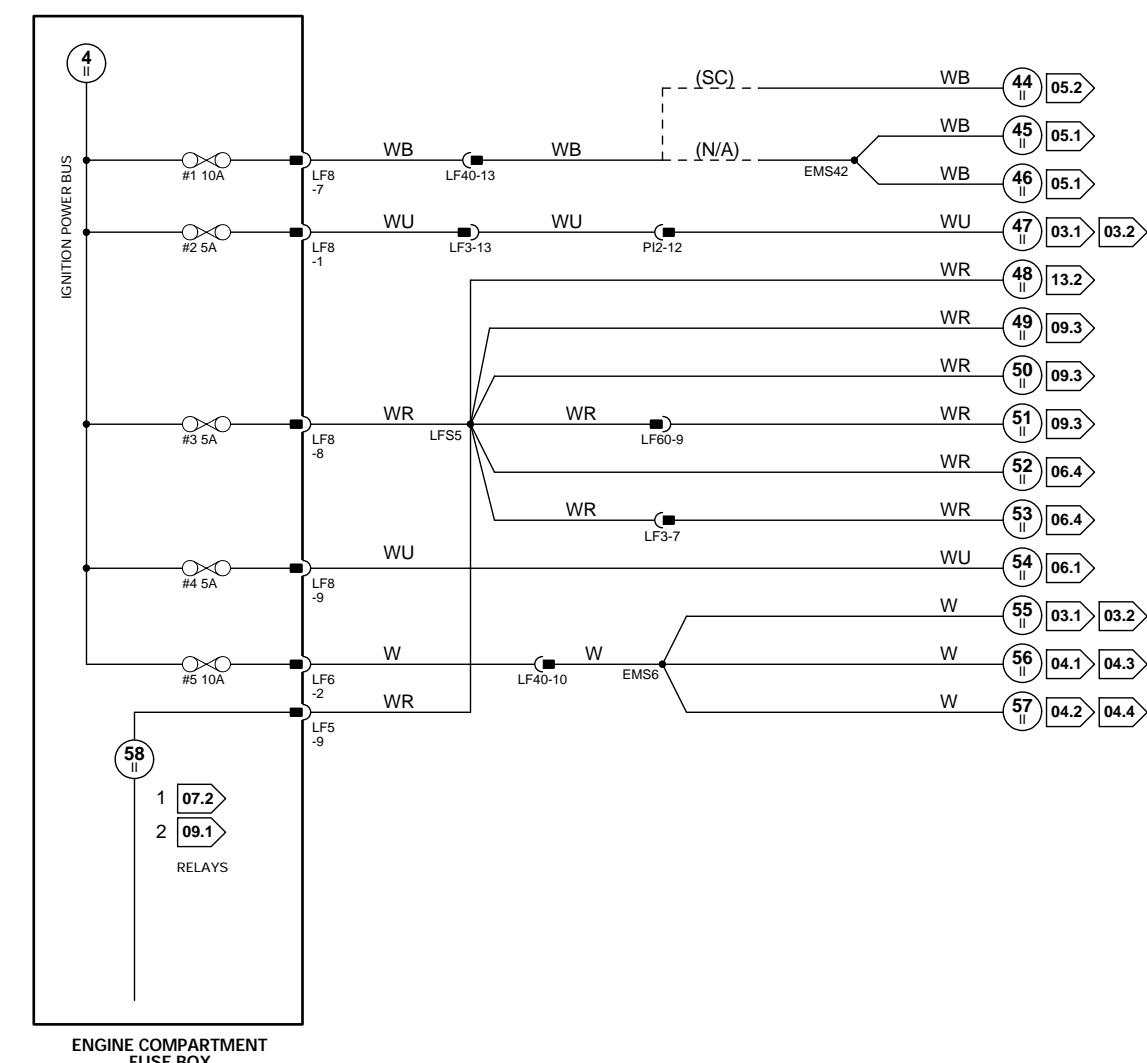
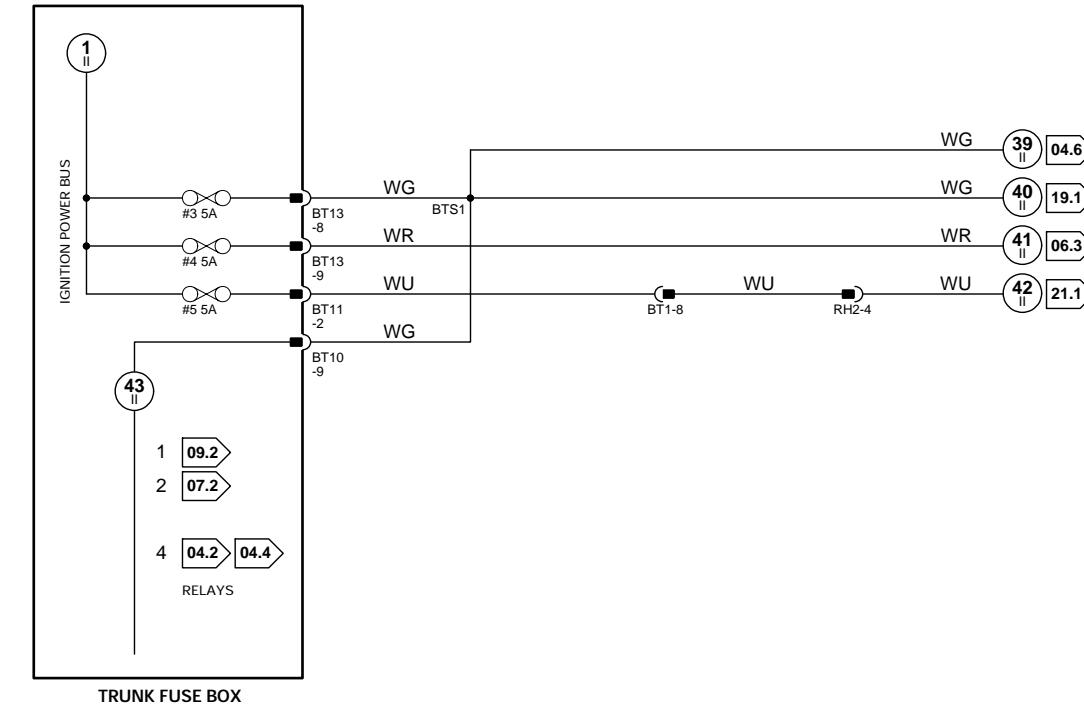
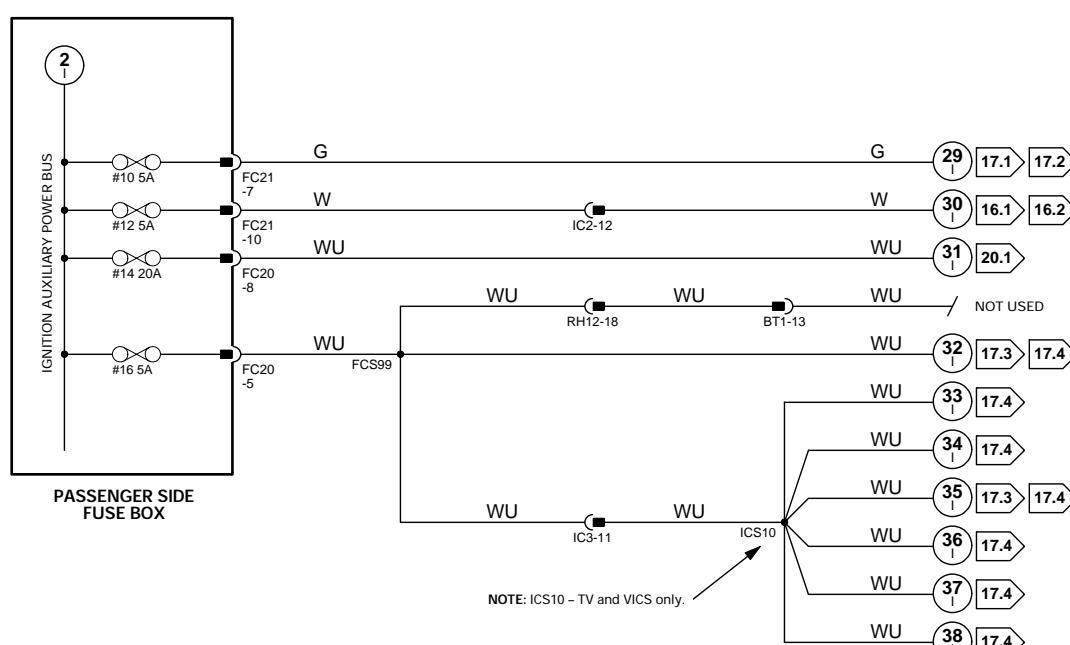
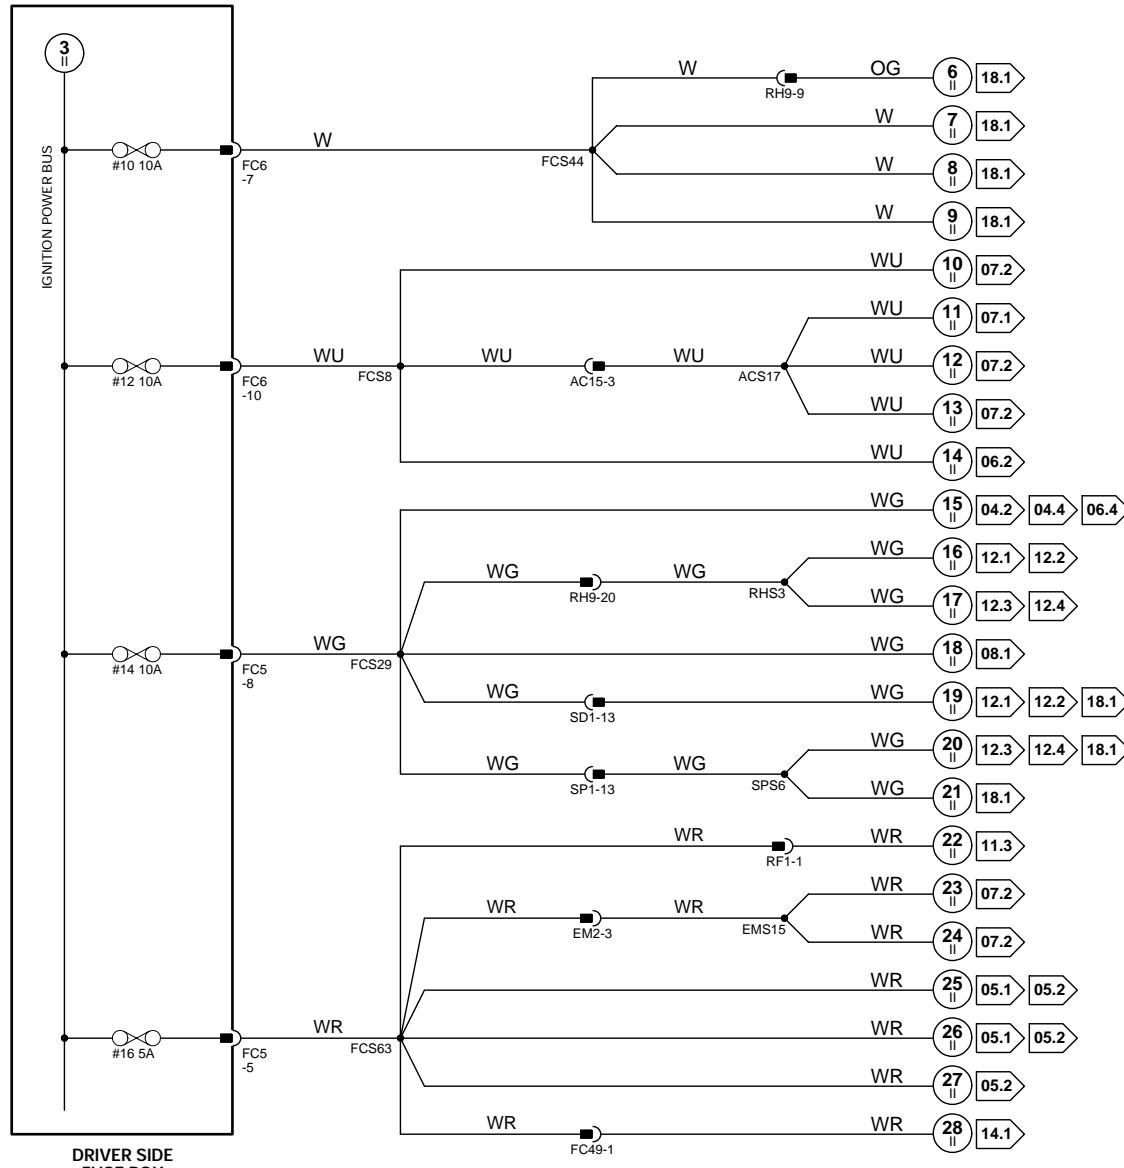


Fig. 01.5

COMPONENTS

Component

FUSE BOX – ENGINE MANAGEMENT

Connector / Type / Color

EM19 / 10-WAY U.T.A. FUSEBOX / NATURAL
EM20 / 10-WAY U.T.A. FUSEBOX / BLACK
EM70 / EYELET

Location / Access

ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

HARNESS-TO-HARNESS CONNECTORS

Connector

Type / Color

Location / Access

BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
EM3	14-WAY MULTILOCK 070 / GREY	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
LF3	13-WAY ECONOSEAL III LC / WHITE	LHD: ENGINE COMPARTMENT / ADJACENT TO BRAKE SERVO
LF40	13-WAY ECONOSEAL III LC / BLACK	RHD: ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
PI1	57-WAY SUMITOMO TS090 / BLACK	LHD: ENGINE COMPARTMENT / FORWARD OF BRAKE FLUID RESERVOIR
RH2	20-WAY MULTILOCK 070 / WHITE	RHD: ENGINE COMPARTMENT / BELOW CONTROL MODULE ENCLOSURE
		ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION
		REAR OF CENTER CONSOLE ASSEMBLY

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

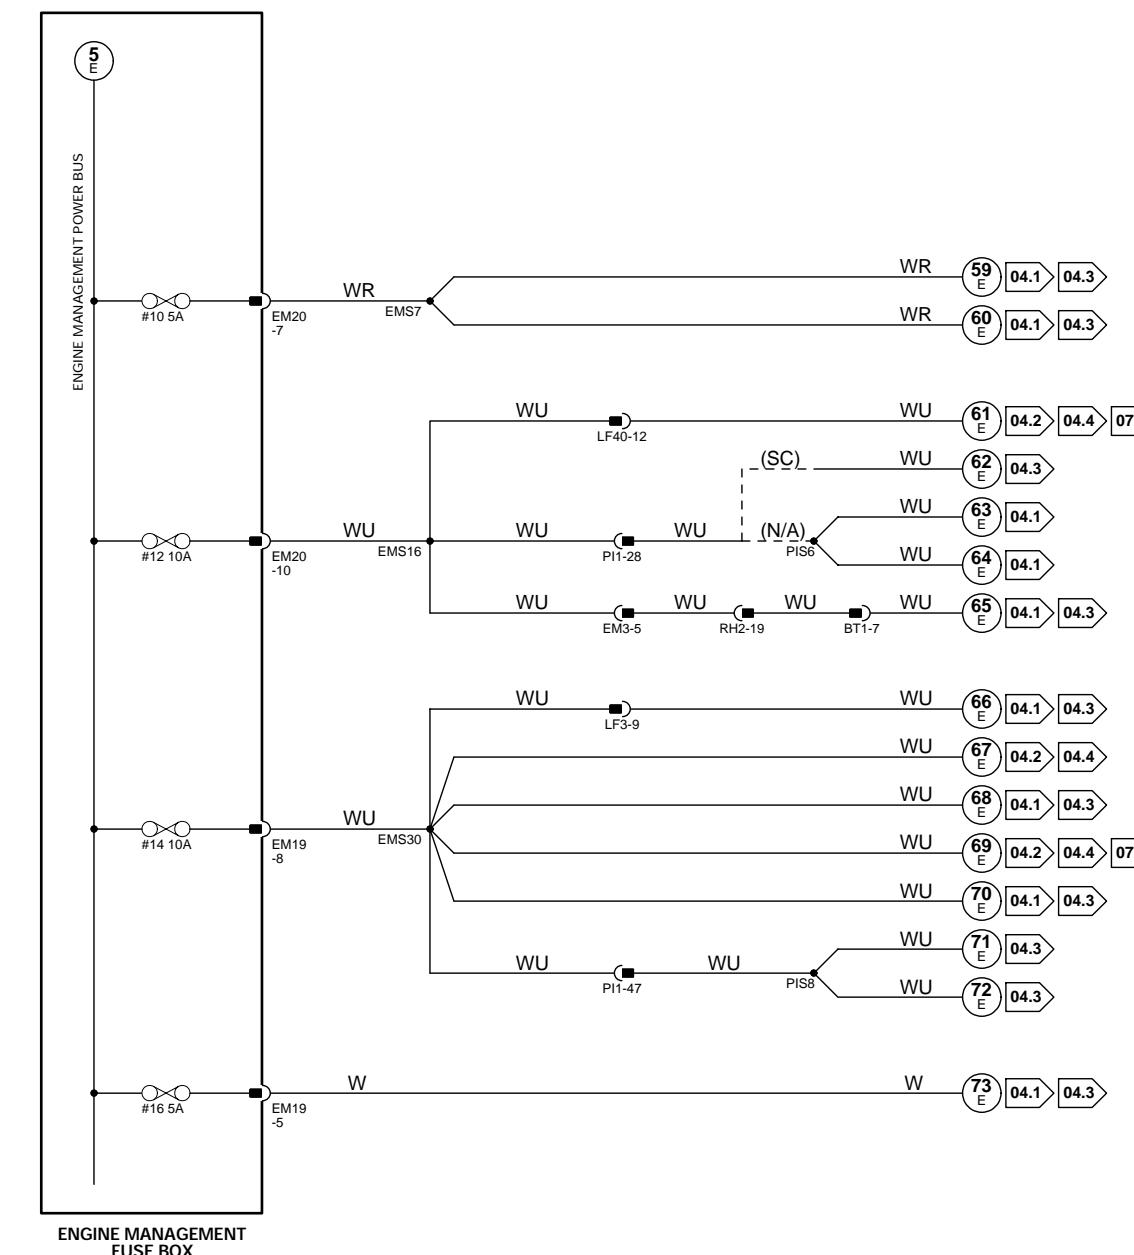


Fig. 02.1

COMPONENTS

Component

IGNITION SWITCH (KEY-IN SWITCH)
INERTIA SWITCH

Connector / Type / Color

FC4 / 8-WAY MULTILOCK 070 / WHITE
FC46 / 3-WAY ECONOSEAL III LC / BLACK

Location / Access

STEERING COLUMN
ADJACENT TO LEFT HAND FASCIA FUSE BOX

HARNESS-TO-HARNESS CONNECTORS

Connector

AC13
BT1
LF60
RH2

Type / Color

20-WAY MULTILOCK 070 / YELLOW
20-WAY MULTILOCK 070 / WHITE
20-WAY MULTILOCK 070 / WHITE
20-WAY MULTILOCK 070 / WHITE

Location / Access

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
REAR OF CENTER CONSOLE ASSEMBLY

GROUNDS



Ground

FC3BL

Location / Type

EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

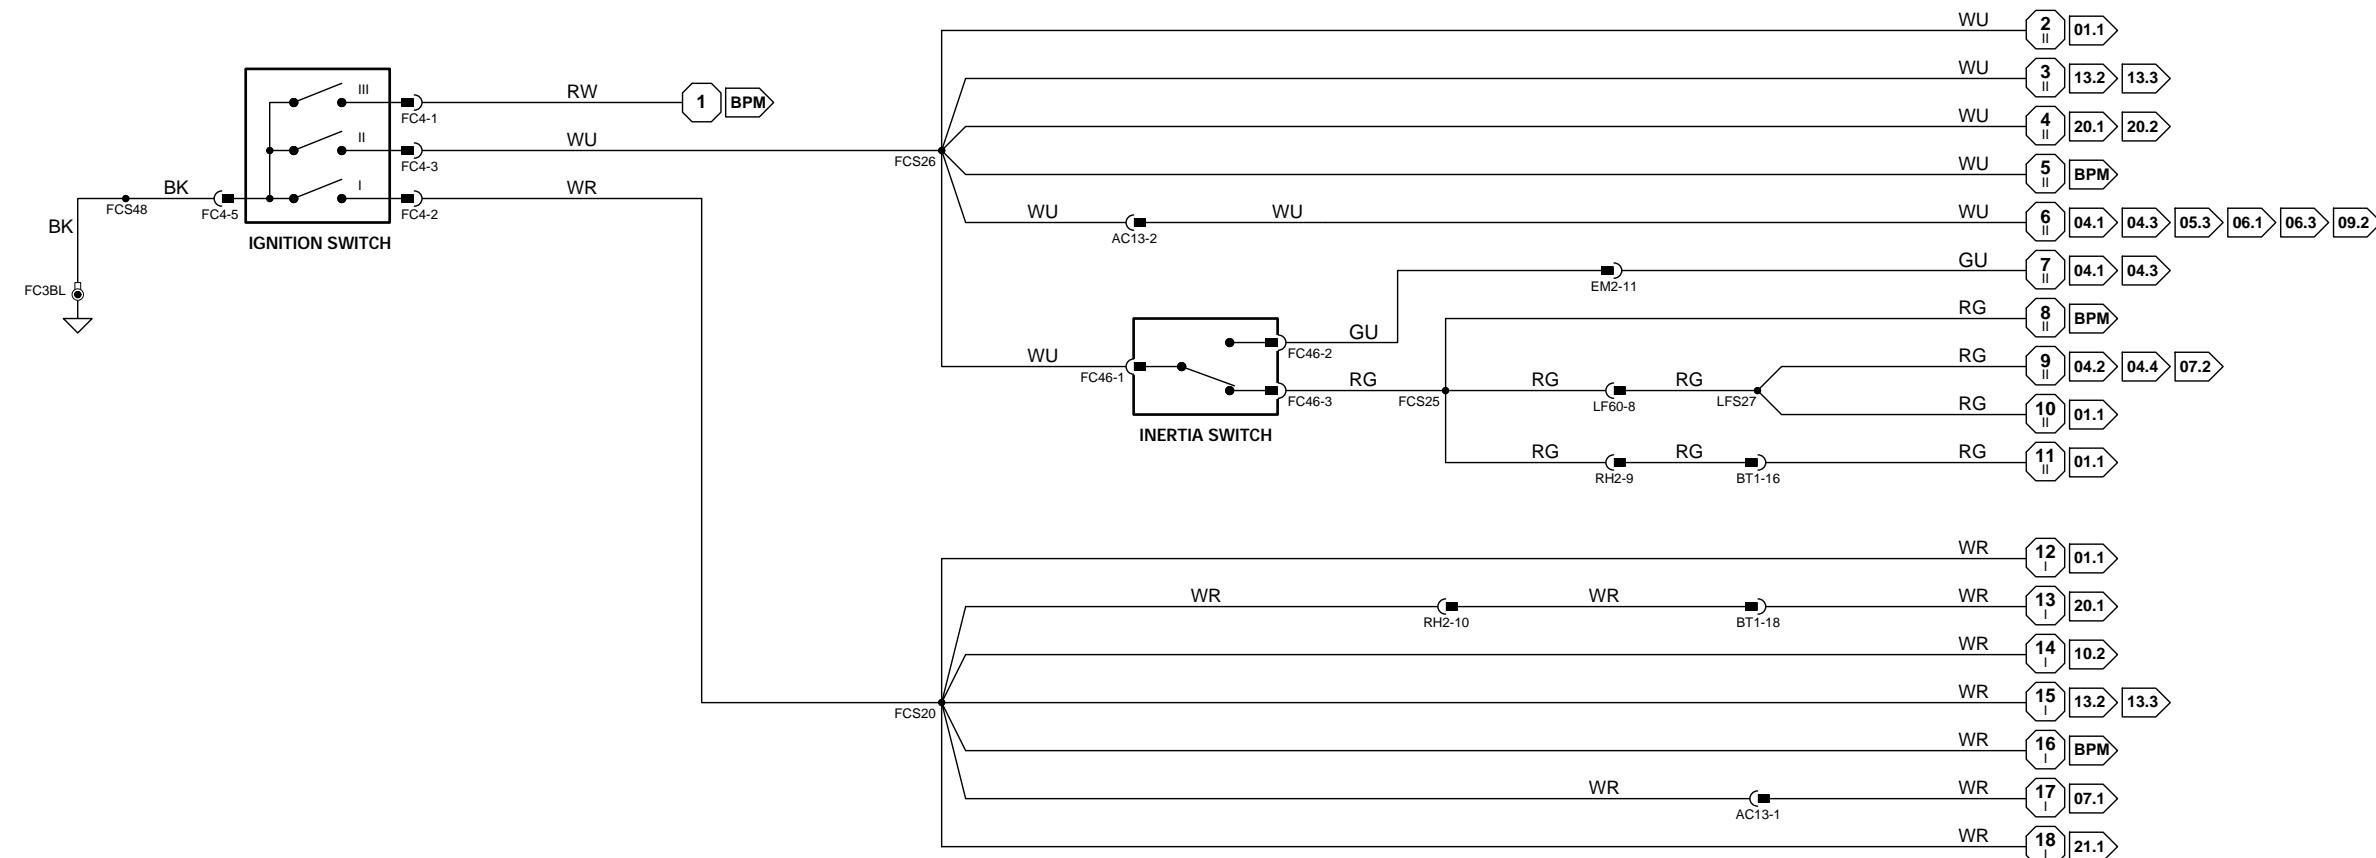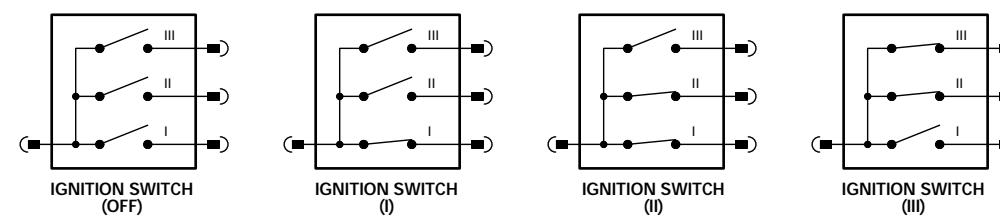

NOTE: Body Processor Module appears in numerous Figures.

Fig. 03.1

BODY PROCESSOR MODULE

Pin	Description
I	FC14-7 NEUTRAL SWITCH STATUS
D	FC14-39 SECURITY ACKNOWLEDGE
I	FC14-41 STARTER ENGAGE REQUEST
O	FC14-73 STARTER RELAY ACTIVATE
I	FC14-80 BATTERY SUPPLY VOLTAGE
D	FC14-92 ENCODED COMMUNICATIONS

ENGINE CONTROL MODULE

Pin	Description
I	EM81-12 PARK / NEUTRAL CONFIRMATION
I	EM82-2 ENGINE CRANK
D	EM82-15 OK TO START
D	EM82-16 SECURITY ACKNOWLEDGE

KEY TRANSPONDER MODULE

Pin	Description
D	FC22-9 GLASS BREAKAGE / OK TO START (ENCODED COMMUNICATION)
D	FC22-16 OK TO START (ENCODED COMMUNICATION)
D	FC22-17 SECURITY ACKNOWLEDGE (ENCODED COMMUNICATION)

Active	Inactive
GROUND (N) ENCODED COMMUNICATIONS	B+ (P, R, D, 4, 3, 2)
GROUND (CRANKING) ENCODED COMMUNICATIONS	B+
GROUND (CRANKING) ENCODED COMMUNICATIONS	B+

Active	Inactive
B+ (P, N) GROUND (CRANKING)	GROUND (R,D,4,3,2)
ENCODED COMMUNICATIONS	
ENCODED COMMUNICATIONS	

Active	Inactive
	IGNITION SWITCH (KEY-IN SWITCH) KEY TRANSPONDER MODULE NEUTRAL SWITCH REGULATOR (GENERATOR) STARTER MOTOR
	SUPPRESSION MODULE

COMPONENTS

Component	Connector / Type / Color	Location / Access
BATTERY	BT66 / EYELET BT67 / EYELET	TRUNK, RIGHT HAND SIDE
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
ENGINE CONTROL MODULE	EM80 / 31-WAY AMP 403 / NATURAL EM81 / 24-WAY AMP 403 / NATURAL EM82 / 17-WAY AMP 403 / NATURAL EM83 / 28-WAY AMP 403 / NATURAL EM84 / 22-WAY AMP 403 / NATURAL EM85 / 12-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
GENERATOR	AN1 / EYELET AN2 / EYELET ST11 / EYELET	ENGINE COMPARTMENT / RIGHT FRONT
HIGH POWER PROTECTION MODULE	BT60 / EYELET BT61 / EYELET BT62 / EYELET BT63 / EYELET	TRUNK / ADJACENT TO BATTERY
IGNITION SWITCH (KEY-IN SWITCH) KEY TRANSPONDER MODULE NEUTRAL SWITCH REGULATOR (GENERATOR) STARTER MOTOR	FC4 / 8-WAY MULTILOCK 070 / WHITE FC22 / 20-WAY MULTILOCK 040 / GREEN FC89 / 3-WAY MULTILOCK 070 / GREY PI50 / 3-WAY SUMITOMO 0902 / BLACK ST3 / EYELET ST10 / EYELET AN3 / 2-WAY ECONOSEAL III LC / RED	STEERING COLUMN ADJACENT TO DRIVER SIDE FUSE BOX GEAR SELECTOR ASSEMBLY ENGINE COMPARTMENT / GENERATOR ENGINE BLOCK REARWARD OF RIGHT FRONT HEADLAMP

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
STARTER RELAY	BROWN	EM50 / BROWN	RH ENCLOSURE RELAYS

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
BT80	EYELET	ENGINE COMPARTMENT / FALSE BULKHEAD, RIGHT HAND SIDE
EM1	20-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM2	18-WAY MULTILOCK 070 / YELLOW	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM3	14-WAY MULTILOCK 070 / GREY	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM60	2-WAY ECONOSEAL III HC / BLACK	ENGINE COMPARTMENT / BEHIND LEFT INNER FENDER HEAT SHIELD
PI1	57-WAY SUMITOMO TS090 / BLACK	ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION
ST1	EYELET	ENGINE COMPARTMENT / FALSE BULKHEAD, RIGHT HAND SIDE

GROUNDS

Ground	Location / Type
BT68	BATTERY GROUND STUD
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

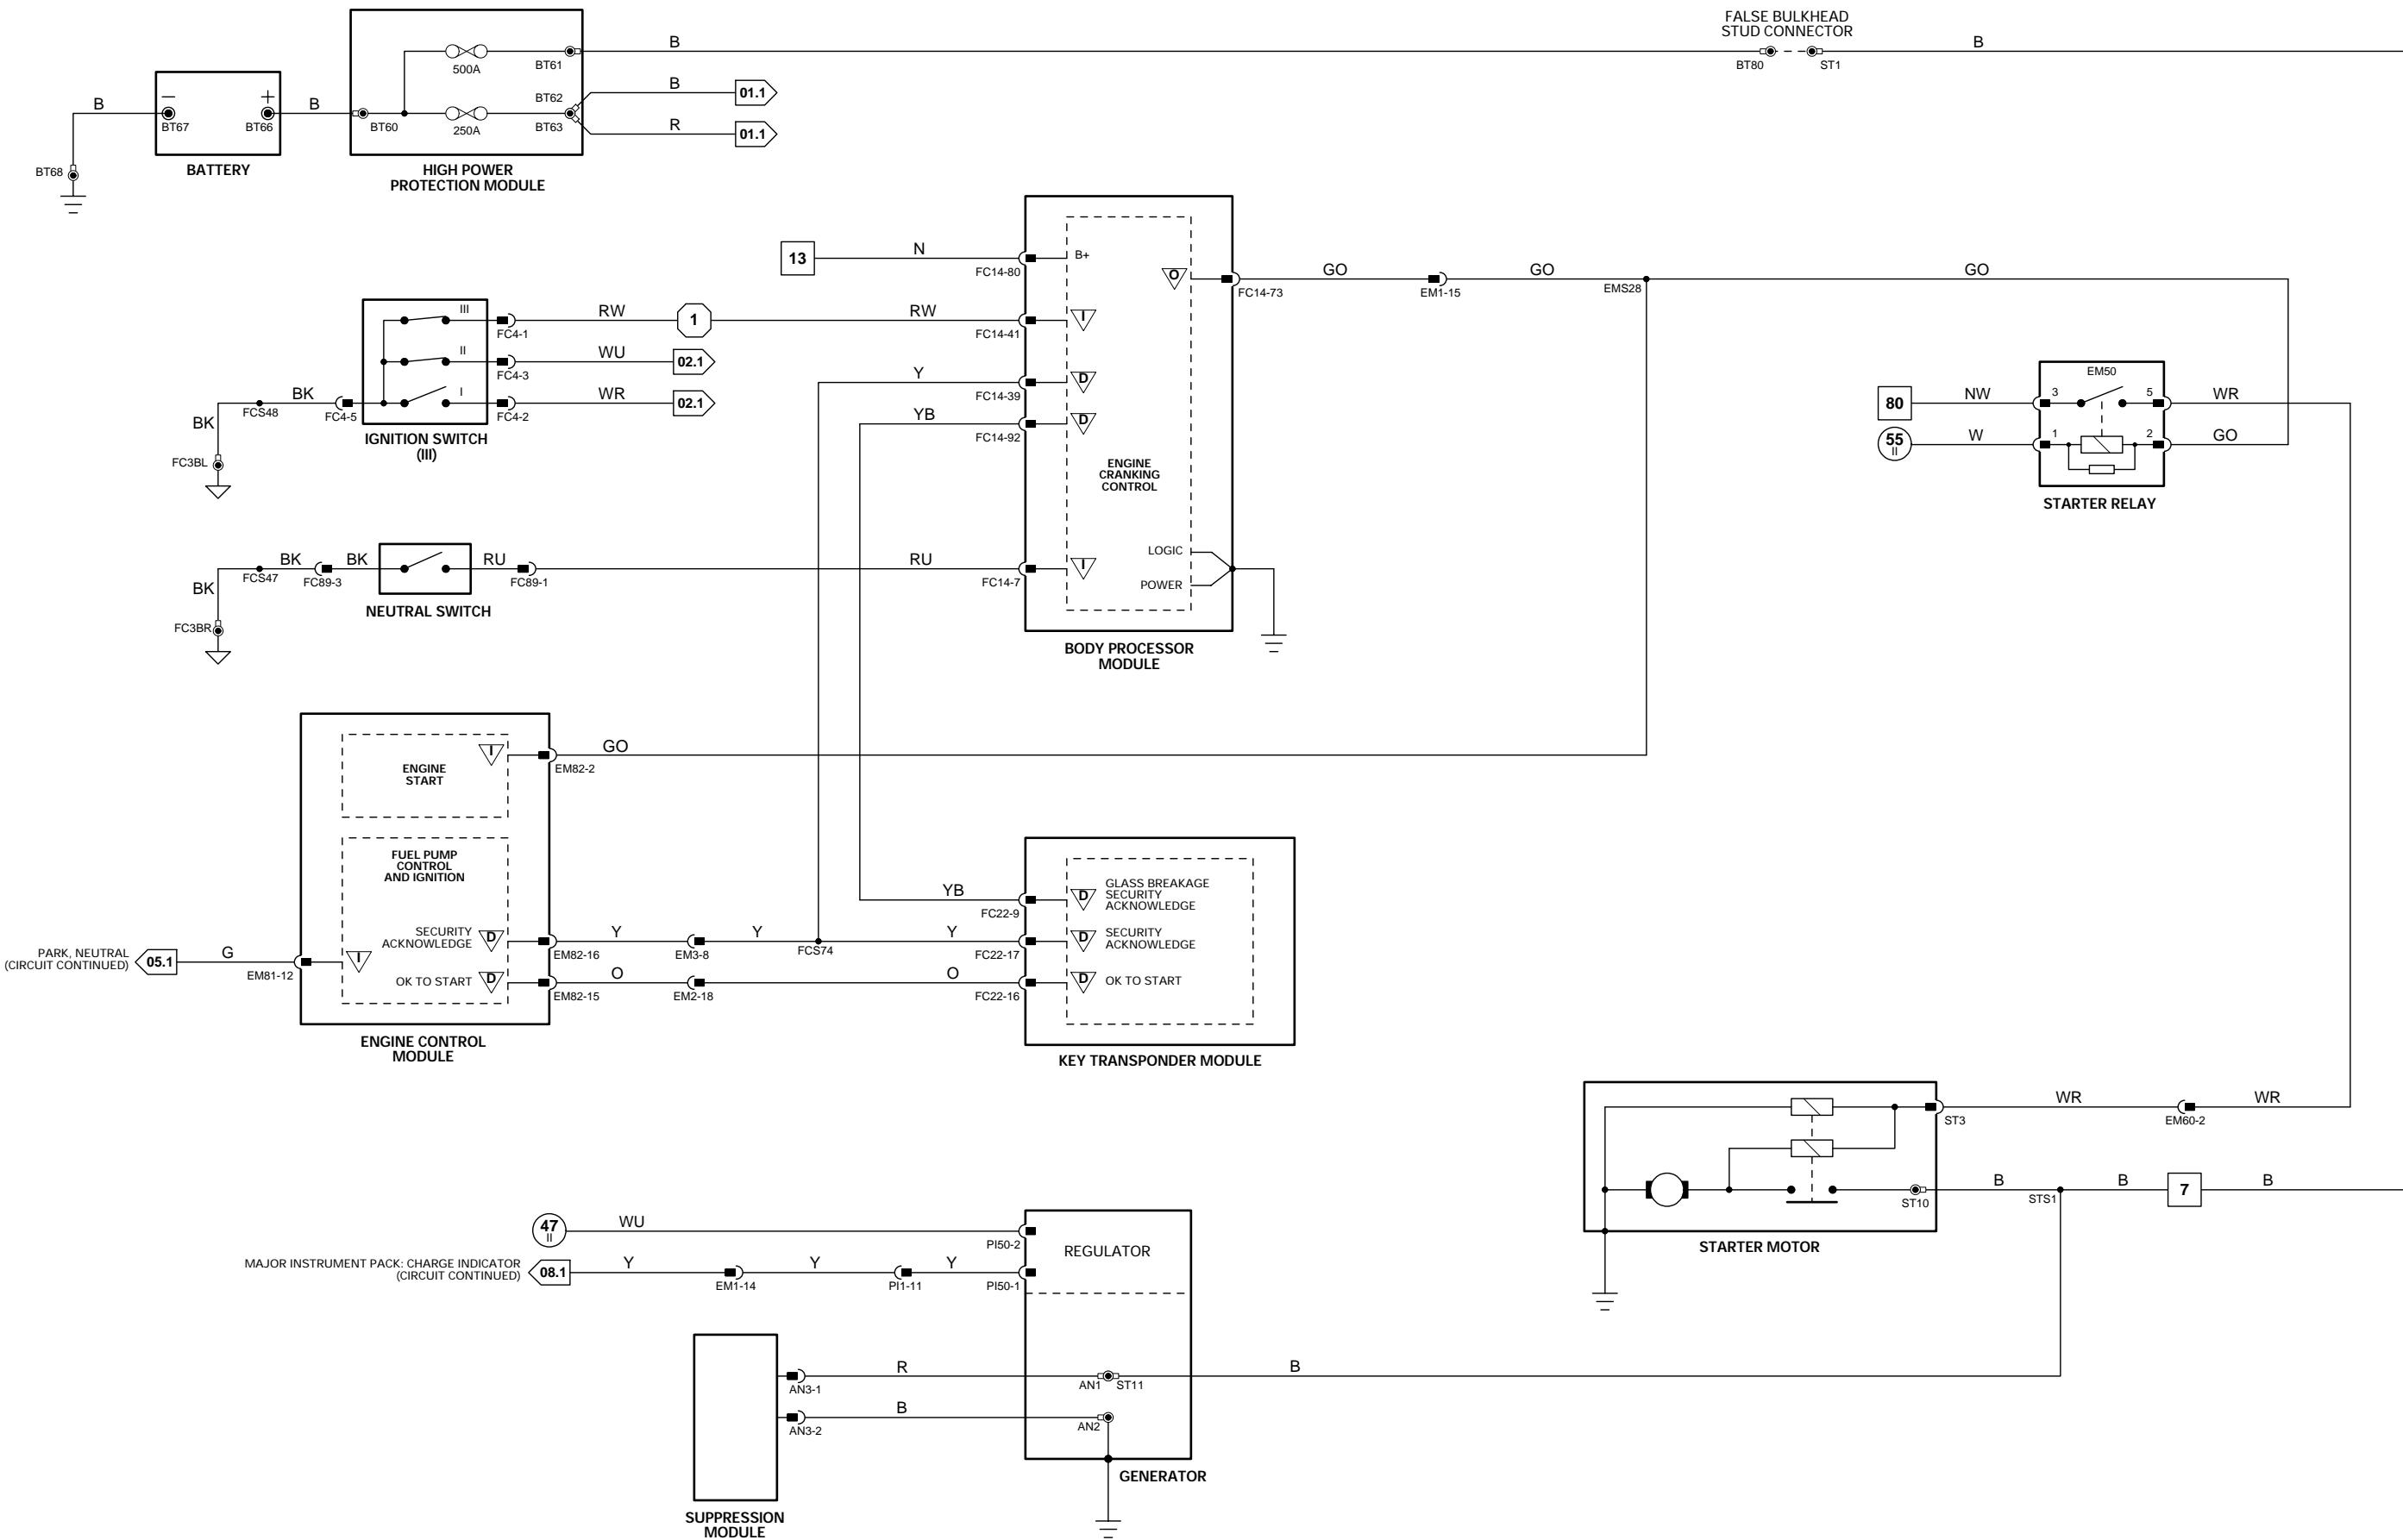


Fig. 03.2

BODY PROCESSOR MODULE

Pin	Description
I	FC14-7 NEUTRAL SWITCH STATUS
D	FC14-39 SECURITY ACKNOWLEDGE
I	FC14-41 STARTER ENGAGE REQUEST
O	FC14-73 STARTER RELAY ACTIVATE
I	FC14-80 BATTERY SUPPLY VOLTAGE
D	FC14-92 ENCODED COMMUNICATIONS

ENGINE CONTROL MODULE

Pin	Description
I	EM81-12 PARK / NEUTRAL CONFIRMATION
I	EM82-2 ENGINE CRANK
D	EM82-15 OK TO START
D	EM82-16 SECURITY ACKNOWLEDGE

KEY TRANSPONDER MODULE

Pin	Description
D	FC22-9 GLASS BREAKAGE / OK TO START (ENCODED COMMUNICATION)
D	FC22-16 OK TO START (ENCODED COMMUNICATION)
D	FC22-17 SECURITY ACKNOWLEDGE (ENCODED COMMUNICATION)

Active	Inactive
GROUND (N) ENCODED COMMUNICATIONS	B+ (P, R, D, 4, 3, 2)
GROUND (CRANKING) GROUND (CRANKING)	B+
B+	B+

Active	Inactive
B+ (P, N) GROUND (CRANKING)	GROUND (R,D,4,3,2)
ENCODED COMMUNICATIONS	
ENCODED COMMUNICATIONS	

Active	Inactive

COMPONENTS	Connector / Type / Color	Location / Access
BATTERY	BT66 / EYELET BT67 / EYELET	TRUNK, RIGHT HAND SIDE
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
DUAL LINEAR SWITCH	FC100 / 12-WAY / MULTILOCK 070 / GREY	LEFT HAND SIDE OF GEAR SELECTOR / CENTER CONSOLE
ENGINE CONTROL MODULE	EM80 / 31-WAY AMP 403 / NATURAL EM81 / 24-WAY AMP 403 / NATURAL EM82 / 17-WAY AMP 403 / NATURAL EM83 / 28-WAY AMP 403 / NATURAL EM84 / 22-WAY AMP 403 / NATURAL EM85 / 12-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

GENERATOR	AN1 / EYELET AN2 / EYELET	ENGINE COMPARTMENT / RIGHT FRONT
HIGH POWER PROTECTION MODULE	ST11 / EYELET BT60 / EYELET BT61 / EYELET BT62 / EYELET BT63 / EYELET	TRUNK / ADJACENT TO BATTERY
IGNITION SWITCH (KEY-IN SWITCH)	FC4 / 8-WAY MULTILOCK 070 / WHITE	STEERING COLUMN
KEY TRANSPONDER MODULE	FC22 / 20-WAY MULTILOCK 040 / GREEN	ADJACENT TO DRIVER SIDE FUSE BOX
REGULATOR (GENERATOR)	PI50 / 3-WAY SUMITOMO 0902 / BLACK	ENGINE COMPARTMENT / GENERATOR
STARTER MOTOR	ST3 / EYELET ST10 / EYELET	ENGINE BLOCK
SUPPRESSION MODULE	AN3 / 2-WAY ECONOSEAL III LC / RED	REARWARD OF RIGHT FRONT HEADLAMP

RELAYS	Color / Stripe	Connector / Color	Location / Access
STARTER RELAY	BROWN	EM50 / BROWN	RH ENCLOSURE RELAYS
HARNESS-TO-HARNESS CONNECTORS			
Connector Type / Color Location / Access			
BT80 EYELET ENGINE COMPARTMENT / FALSE BULKHEAD, RIGHT HAND SIDE			
EM1 20-WAY MULTILOCK 070 / WHITE ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE			
EM2 18-WAY MULTILOCK 070 / YELLOW ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE			
EM3 14-WAY MULTILOCK 070 / GREY ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE			
EM60 2-WAY ECONOSEAL III HC / BLACK ENGINE COMPARTMENT / BEHIND LEFT INNER FENDER HEAT SHIELD			
PI1 57-WAY SUMITOMO TS090 / BLACK ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION			
ST1 EYELET ENGINE COMPARTMENT / FALSE BULKHEAD, RIGHT HAND SIDE			

GROUNDS	Ground	Location / Type
BT68	BATTERY GROUND STUD	
EM1AR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE	
EM2AL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE	

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

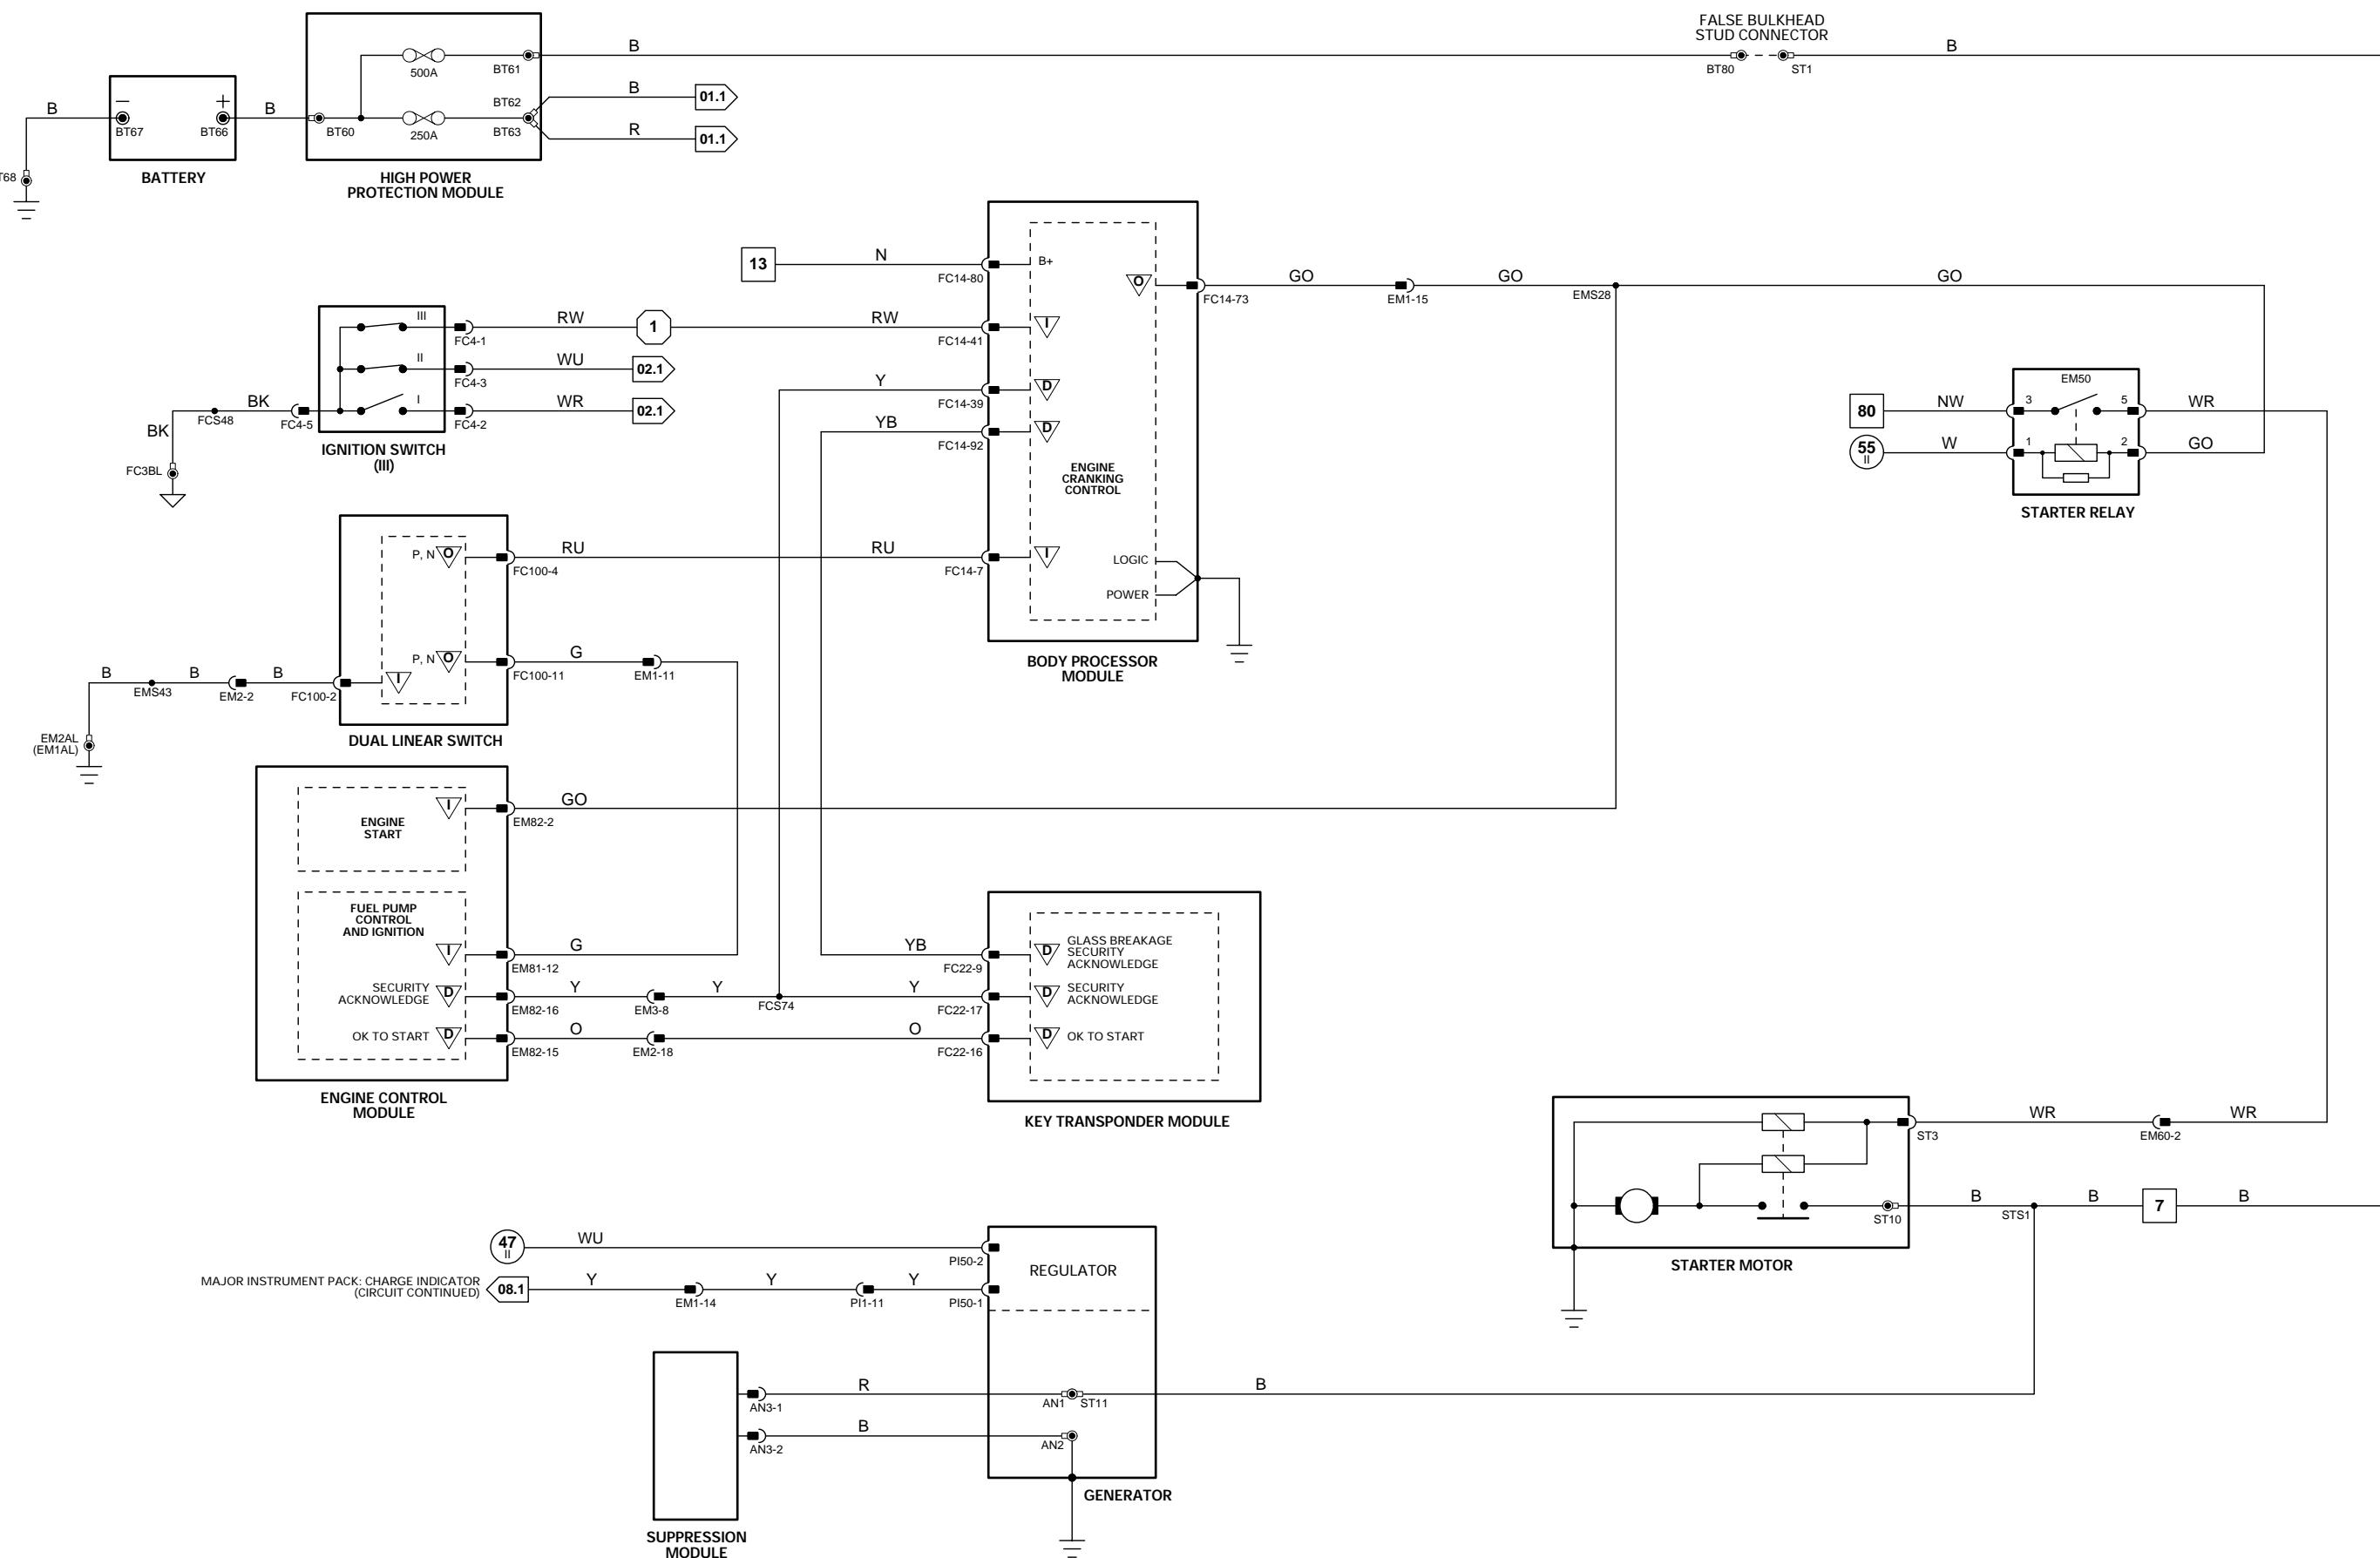


Fig. 04.1

ENGINE CONTROL MODULE

Pin	Description	Active	Inactive
O EM80-01	EVAP VALVE ACTIVATE	GROUND (VALVE OPEN)	B+
O EM80-02	CANISTER CLOSE VALVE ACTIVATE	GROUND	B+
I EM80-03	GROUND (POWER)	GROUND	GROUND
O EM80-04	THROTTLE MOTOR POWER SUPPLY	GROUND	B+
O EM80-05	THROTTLE MOTOR POWER SUPPLY	GROUND	B+
O EM80-06	THROTTLE MOTOR POWER SUPPLY	GROUND	B+
O EM80-07	THROTTLE MOTOR POWER SUPPLY	GROUND	B+
I EM80-08	THROTTLE MOTOR POWER SUPPLY	GROUND	B+
I EM80-09	THROTTLE MOTOR POWER SUPPLY	GROUND	B+
I EM80-10	EOT SIGNAL	2.5 V @ 34 °C; 0.5 V @ 90 °C; (DECREASING VOLTAGE WITH TEMPERATURE INCREASE)	GROUND
D EM80-17	SERIAL COMMUNICATIONS	GROUND	GROUND
D EM80-18	SERIAL COMMUNICATIONS	GROUND	GROUND
D EM80-19	ECM PROGRAMMING	GROUND	GROUND
I EM80-21	GROUND (THROTTLE MOTOR 1)	GROUND	GROUND
D EM80-27	ECM PROGRAMMING	GROUND	GROUND
I EM80-29	GROUND (LOGIC 2)	GROUND	GROUND
I EM80-31	GROUND (THROTTLE MOTOR 2)	GROUND	GROUND
O EM81-01	VARIABLE VALVE TIMING SOLENOID + 'A' BANK	B+ (12% DUTY CYCLE @ IDLE) (INCREASING WITH ADVANCE)	GROUND
SG EM81-02	VARIABLE VALVE TIMING SOLENOID - 'A' BANK	GROUND	GROUND
O EM81-03	EMS CONTROLLED RELAY ACTIVATE	GROUND	B+
O EM81-06	VARIABLE VALVE TIMING SOLENOID + 'B' BANK	B+ (12% DUTY CYCLE @ IDLE) (INCREASING WITH ADVANCE)	GROUND
SG EM81-07	VARIABLE VALVE TIMING SOLENOID - 'B' BANK	GROUND	GROUND
I EM81-08	GROUND (POWER)	GROUND	GROUND
I EM81-09	PEDAL POSITION SIGNAL (PPS/1)	0.6 V = FOOT OFF; 3.8 V = PEDAL FULLY DEPRESSED	GROUND
I EM81-10	TPS SIGNAL (TPS/1)	0.5 V = IDLE; 4.75 V = WOT	GROUND (R,D,4,3,2)
I EM81-12	PARK / NEUTRAL CONFIRMATION	B+ (P,N)	GROUND
I EM81-16	FUEL TANK PRESSURE SENSOR SIGNAL	4.9 V = LOW PRESSURE, 0.2 V = HIGH PRESSURE	0 V
I EM81-17	EMS SWITCHED POWER SUPPLY 1	B+	0 V
I EM81-18	PEDAL POSITION SIGNAL (PPS/2)	0.8 V = FOOT OFF; 2.4 V = PEDAL FULLY DEPRESSED	GROUND
I EM81-19	TPS SIGNAL (TPS/2)	0.5 V = IDLE; 4.85 V = WOT	GROUND
I EM81-21	GROUND (LOGIC 1)	GROUND	B+
I EM81-22	PARKING BRAKE SWITCH	GROUND (APPLIED)	GROUND
SG EM81-24	PEDAL POSITION / THROTTLE POSITION SENSORS SHIELD	GROUND	GROUND
SS EM82-01	SENSOR SUPPLY VOLTAGE 1	5 V	5 V
I EM82-02	ENGINE CRANK	GROUND (CRANKING)	GROUND
I EM82-04	H02S, UPSTREAM 'A' BANK - VARIABLE CURRENT (iA)	3.5 V	3.5 V
I EM82-05	H02S, UPSTREAM 'B' BANK - VARIABLE CURRENT (iB)	3.5 V	3.5 V
O EM82-06	THROTTLE MOTOR POWER RELAY ACTIVATE	GROUND	B+
SG EM82-07	SENSORS SIGNAL GROUND 1	GROUND	GROUND
I EM82-08	BRAKE SWITCH	GROUND	B+
I EM82-09	IGNITION SWITCHED POWER SUPPLY	B+	B+
SS EM82-10	H02S, UPSTREAM 'A' BANK - CONSTANT	3.8 V	3.8 V
SS EM82-11	H02S, UPSTREAM 'B' BANK - CONSTANT	3.8 V	3.8 V
I EM82-12	INERTIA SWITCH ACTIVATED (VEHICLE IMPACT)	GROUND	B+
I EM82-13	EMS SWITCHED POWER SUPPLY 2	B+	0 V
I EM82-14	ECT SIGNAL	0.41 V @ 90 °C (DECREASING VOLTAGE WITH TEMPERATURE INCREASE)	GROUND
D EM82-15	OK TO START	ENCODED COMMUNICATIONS	5 V
D EM82-16	SECURITY ACKNOWLEDGE	ENCODED COMMUNICATIONS	GROUND
I EM82-17	IATS SIGNAL	0.98 V @ 10 °C (DECREASING VOLTAGE WITH TEMPERATURE INCREASE)	GROUND
O EM83-03	AIR ASSIST CLOSE VALVE ACTIVATE	8 V @ IDLE (7% DUTY CYCLE)	5 V
SS EM83-05	SENSOR SUPPLY VOLTAGE 2	5 V	GROUND
SG EM83-06	SENSOR SHIELD	GROUND	GROUND
SG EM83-07	CKPS SIGNAL GROUND	GROUND	GROUND
I EM83-08	CKPS SIGNAL	5 V @ 1000 RPM = 45 Hz; 2000 RPM = 90 Hz	GROUND
SG EM83-09	CKPS, 'A' BANK SIGNAL GROUND	GROUND	GROUND
SG EM83-12	H02S SHIELD	GROUND	GROUND
SG EM83-13	SENSORS SIGNAL GROUND 2	GROUND	GROUND
I EM83-14	KNOCK SENSOR, 'A' BANK SIGNAL	0 kHz = NO KNOCK, 2 – 20 kHz = KNOCK	GROUND
C EM83-15	CAN NETWORK	15 – 1500 Hz	GROUND
C EM83-16	CAN NETWORK	15 – 1500 Hz	GROUND
SG EM83-17	CKPS, 'B' BANK SIGNAL GROUND	GROUND	GROUND
I EM83-18	CKPS, 'B' BANK SIGNAL	0.7 – 1 VAC @ 1000 RPM = 43 Hz; 2000 RPM = 72 Hz	GROUND
I EM83-19	CKPS, 'B' BANK SIGNAL	0.7 – 1 VAC @ 1000 RPM = 43 Hz; 2000 RPM = 72 Hz	B+
I EM83-20	BATTERY POWER SUPPLY	0.1 – 0.9 V @ IDLE (SWING)	B+
I EM83-21	H02S, 'A' BANK DOWNSTREAM	0.1 – 0.9 V @ IDLE (SWING)	0.1 – 0.9 V @ IDLE (SWING)
I EM83-22	H02S, 'B' BANK DOWNSTREAM	0 kHz = NO KNOCK, 2 – 20 kHz = KNOCK	0 kHz = NO KNOCK, 2 – 20 kHz = KNOCK
I EM83-23	KNOCK SENSOR, 'B' BANK SIGNAL	15 – 1500 Hz	15 – 1500 Hz
C EM83-24	CAN NETWORK	15 – 1500 Hz	15 – 1500 Hz
C EM83-25	CAN NETWORK	GROUND	GROUND
SG EM83-26	MAFS REFERENCE GROUND	GROUND	GROUND
SG EM83-27	MAFS REFERENCE GROUND	GROUND	GROUND
I EM83-28	MAFS SIGNAL	1.2 V @ IDLE, INCREASING WITH RPM INCREASE	GROUND
I EM84-01	GROUND (DOWNSTREAM H02S HEATERS)	GROUND	GROUND
O EM84-07	H02S HEATER, 'A' BANK DOWNSTREAM CONTROL	GROUND (20 – 60% DUTY CYCLE)	B+
O EM84-15	H02S HEATER, 'B' BANK DOWNSTREAM CONTROL	GROUND (20 – 60% DUTY CYCLE)	B+
I EM84-16	GROUND (INJECTORS 1A, 2B, 3B, 4A)	GROUND	GROUND
I EM84-22	GROUND (INJECTORS 1B, 2A, 3A, 4B)	GROUND	GROUND
O EM85-01	H02S HEATER, 'A' BANK UPSTREAM CONTROL	GROUND (85 – 90% DUTY CYCLE AT IDLE)	B+
O EM85-02	H02S HEATER, 'B' BANK UPSTREAM CONTROL	GROUND (85 – 90% DUTY CYCLE AT IDLE)	B+
O EM85-05	"COOL BOX" COOLING FAN ACTIVATE	GROUND	B+
I EM85-06	GROUND (H02S A UPSTREAM HEATER)	GROUND	B+
I EM85-07	GROUND (H02S B UPSTREAM HEATER)	GROUND	B+
I EM85-08	H02S HEATERS OBD MONITOR	HEATERS ACTIVE = B+ V	GROUND

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector / Type / Color	Location / Access
AIR ASSIST CLOSE VALVE	PI29 / 3-WAY SUMITOMO SS / GREY	ENGINE COMPARTMENT / THROTTLE ASSEMBLY
BRAKE SWITCH	AC24 / 4-WAY MULTILOCK 070 / WHITE	TOP OF BRAKE PEDAL
CCV: CANISTER CLOSE VALVE	BT14 / 2-WAY YAZAKI 090 / BLACK	BEHIND REAR AXLE / RIGHT HAND SIDE
CKPS: CRANKSHAFT POSITION SENSOR	PI17 / 3-WAY ECONOSEAL III LC / BLACK	ENGINE / REAR OF BED PLATE
CMPS: CAMSHAFT POSITION SENSOR - A BANK	PI16 / 2-WAY YAZAKI 090 / BLACK	'A' BANK CYLINDER HEAD, REAR
CMPS: CAMSHAFT POSITION SENSOR - B BANK	PI15 / 2-WAY YAZAKI 090 / BLACK	'B' BANK CYLINDER HEAD, REAR
ECM AND TCM COOLING FAN	EM64 / 2-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
ECTS: ENGINE COOLANT TEMPERATURE SENSOR	PI4 / 2-WAY ECONOSEAL E J2 / GREY	ENGINE COMPARTMENT / REAR OF ENGINE TOP HOSE
ENGINE CONTROL MODULE	EM80 / 31-WAY AMP 403 / NATURAL	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
	EM81 / 24-WAY AMP 403 / NATURAL	
	EM82 / 17-WAY AMP 403 / NATURAL	
	EM83 / 28-WAY AMP 403 / NATURAL	
	EM84 / 22-WAY AMP 403 / NATURAL	
	EM85 / 12-WAY MULTILOCK 070 / WHITE	
	PI38 / 2-WAY ECONOSEAL EC J2 / GREY	ENGINE BLOCK / BELOW GENERATOR
	LF58 / 2-WAY ECONOSEAL J2 / BLACK	BEHIND LEFT HAND WHEEL ARCH LINER
	FT2 / 3-WAY ECONOSEAL III LC / BLACK	TRUNK / FUEL TANK EVAPORATOR FLANGE
	H02S: HEATED OXYGEN SENSOR - A DOWNSTREAM	'A' BANK CATALYTIC CONVERTER
	EM22 / 2-WAY SUMITOMO 090 II / BLACK	'A' BANK CATALYTIC CONVERTER
	H02S: HEATED OXYGEN SENSOR - A UPSTREAM	'A' BANK CATALYTIC CONVERTER
	EM21 / 4-WAY SUMITOMO 090 II / GREY	'A' BANK CATALYTIC CONVERTER
	H02S: HEATED OXYGEN SENSOR - B DOWNSTREAM	'B' BANK CATALYTIC CONVERTER
	EM24 / 2-WAY SUMITOMO 090 II / BLACK	'B' BANK CATALYTIC CONVERTER
	H02S: HEATED OXYGEN SENSOR - B UPSTREAM	'B' BANK CATALYTIC CONVERTER
	EM23 / 4-WAY SUMITOMO 090 II / GREY	'B' BANK CATALYTIC CONVERTER
	KS: KNOCK SENSOR - A BANK	ENGINE VEE / UNDER INTAKE MANIFOLD
	KS: KNOCK SENSOR - B BANK	ENGINE VEE / UNDER INTAKE MANIFOLD
	MAFS: MASS AIR FLOW SENSOR	ENGINE COMPARTMENT / REARWARD OF AIR CLEANER
	PARKING BRAKE SWITCH	BELOW PARKING BRAKE LEVER
	PPS: PEDAL POSITION SENSORS	ENGINE COMPARTMENT / THROTTLE ASSEMBLY
	THROTTLE MOTOR	ENGINE COMPARTMENT / THROTTLE ASSEMBLY
	TPS: THROTTLE POSITION SENSORS	ENGINE COMPARTMENT / THROTTLE ASSEMBLY
	VVT SOLENOID VALVE: VARIABLE VALVE TIMING SOLENOID VALVE - A	ENGINE COMPARTMENT / 'A' BANK CYLINDER HEAD, FRONT
	VVT SOLENOID VALVE: VARIABLE VALVE TIMING SOLENOID VALVE - B	ENGINE COMPARTMENT / 'B' BANK CYLINDER HEAD, FRONT

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
THROTTLE MOTOR POWER RELAY	BROWN	EM16 / BROWN	CONTROL MODULE ENCLOSURE RELAYS
O2S HEATERS RELAY	BROWN	EM61 / BROWN	CONTROL MODULE ENCLOSURE RELAYS

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC13	20-WAY MULTILOCK 070 / YELLOW	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
EM1	20-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM2	18-WAY MULTILOCK 070 / YELLOW	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM3	14-WAY MULTILOCK 070 / GREY	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
FT1	10-WAY MULTILOCK 070 / WHITE	FUEL TANK / REAR
LF3	13-WAY ECONOSEAL III LC / WHITE	LHD: ENGINE COMPARTMENT / ADJACENT TO BRAKE SERVO RHD: ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

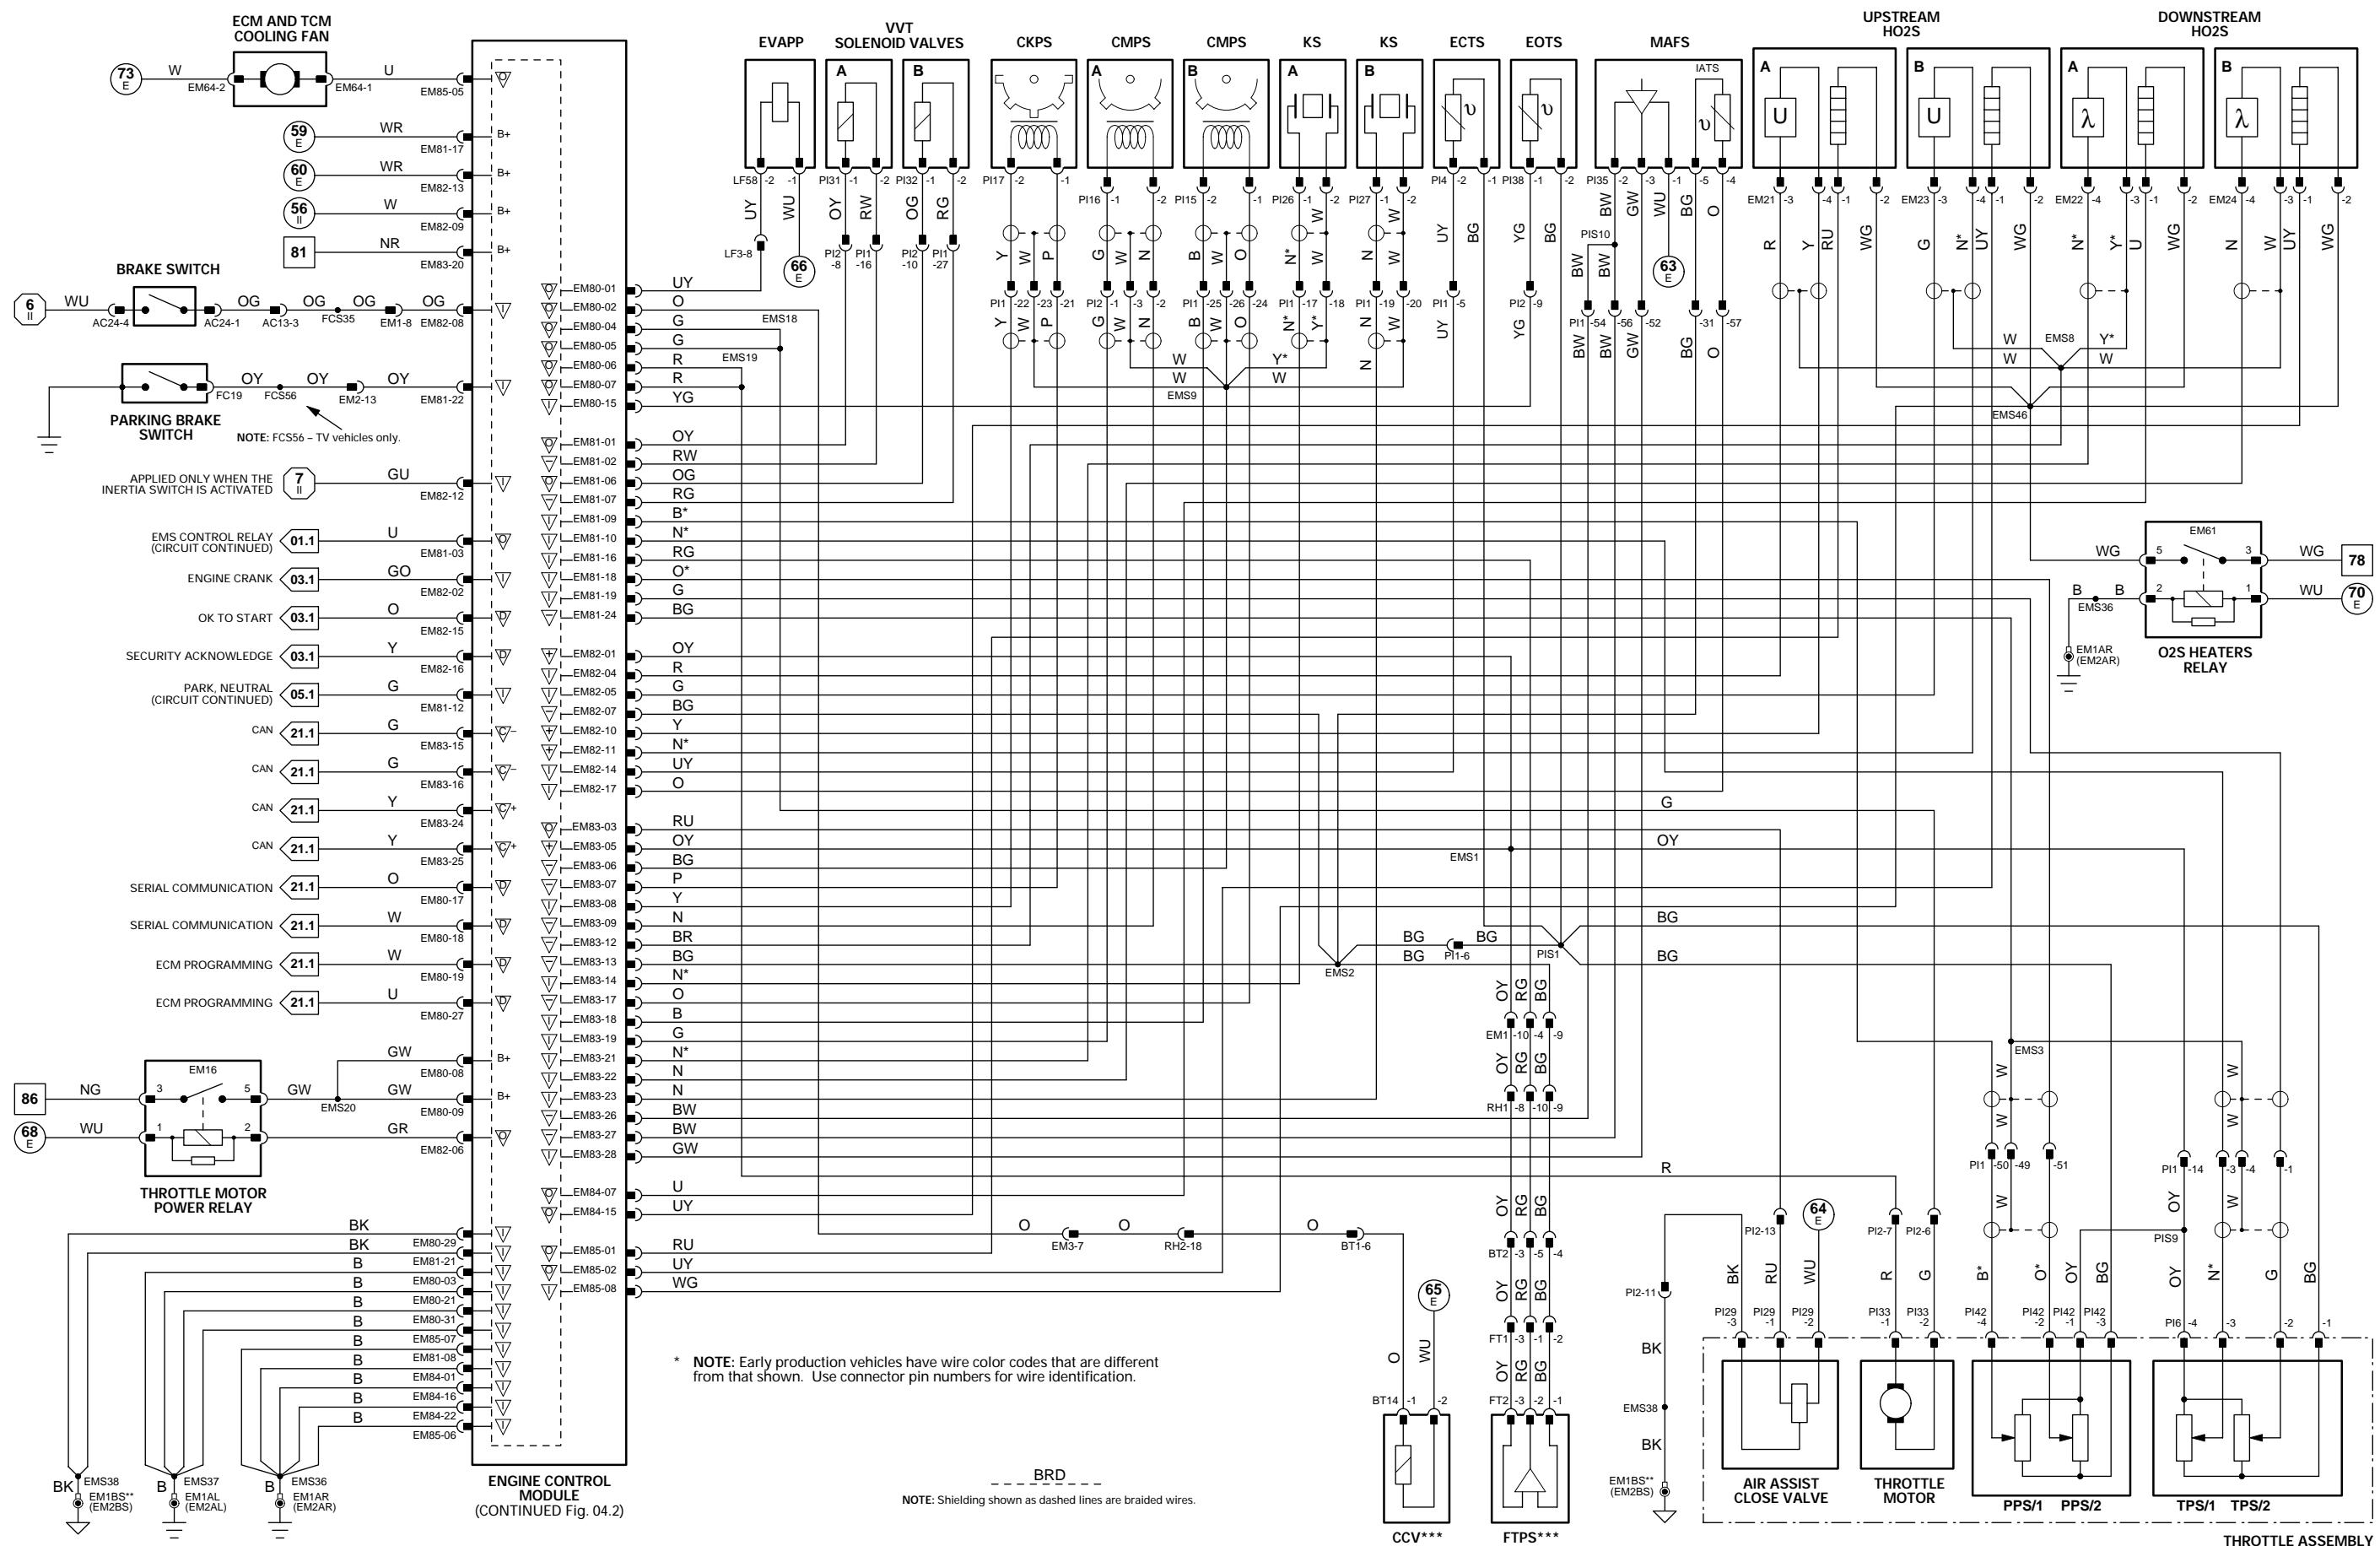


Fig. 04.2

AIR CONDITIONING CONTROL MODULE

Pin	Description
I	AC1-1 COMPRESSOR CLUTCH STATUS
O	AC3-1 AIR CONDITIONING ELECTRICAL LOAD SIGNAL
I	AC4-7 LOAD INHIBIT
O	AC4-9 COMPRESSOR CLUTCH ON REQUEST
I	AC4-17 REFRIGERANT 4-WAY PRESSURE SWITCH

ENGINE CONTROL MODULE

Pin	Description
I	EM80-10 REFRIGERANT 4-WAY PRESSURE SWITCH HIGH PRESSURE
I	EM80-11 A/CM COMPRESSOR CLUTCH REQUEST
O	EM80-12 ELECTRICAL LOAD INHIBIT
O	EM80-16 SPEED CONTROL ON STATUS LED
I	EM80-20 SPEED CONTROL BRAKE CANCEL REQUEST
I	EM80-22 REFRIGERANT 4-WAY PRESSURE SWITCH HIGH PRESSURE
I	EM80-23 A/CM ELECTRICAL LOAD REQUEST (HEATED WINDSHIELD)
O	EM80-25 AIR CONDITIONING COMPRESSOR RELAY ACTIVATE
O	EM81-04 PARALLEL (HIGH) SPEED FAN ACTIVATE
O	EM81-05 SERIES (LOW) SPEED FAN ACTIVATE
I	EM81-13 SPEED CONTROL ON REQUEST
I	EM81-14 SPEED CONTROL SET +/-
I	EM81-15 SPEED CONTROL CANCEL / RESUME
O	EM83-04 FUEL PUMP RELAY ACTIVATE
I	EM83-10 IGNITION MODULES 1A, 2B, 3B, 4A OBD MONITOR
I	EM83-11 IGNITION MODULES 1B, 2A, 3A, 4B OBD MONITOR
O	EM84-02 INJECTOR 1A ACTIVATE
O	EM84-03 INJECTOR 3B ACTIVATE
O	EM84-04 INJECTOR 2B ACTIVATE
O	EM84-05 INJECTOR 4A ACTIVATE
O	EM84-06 INJECTOR 1B ACTIVATE
O	EM84-09 IGNITION MODULE 4A SWITCHING
O	EM84-10 IGNITION MODULE 3A SWITCHING
O	EM84-11 IGNITION MODULE 2A SWITCHING
O	EM84-12 IGNITION MODULE 1A SWITCHING
O	EM84-13 INJECTOR 4B ACTIVATE
O	EM84-14 INJECTOR 3A ACTIVATE
O	EM84-17 IGNITION MODULE 4B SWITCHING
O	EM84-18 IGNITION MODULE 3B SWITCHING
O	EM84-19 IGNITION MODULE 2B SWITCHING
O	EM84-20 IGNITION MODULE 1B SWITCHING
O	EM84-21 INJECTOR 2A ACTIVATE

Pin	Active	Inactive
B+	AC1-ON	0V
B+	0V	B+
B+	B+	0V
		B+ (OUT OF ACTIVE RANGE)

Pin	Active	Inactive
B+	GROUND @ 20 BAR (290 PSI)	GROUND
B+	GROUND	B+
B+	GROUND	B+
B+	GROUND	B+
B+	GROUND @ 12 BAR (174 PSI)	GROUND
B+	GROUND	FUEL INJECTOR - 1A
B+	GROUND	FUEL INJECTOR - 1B
B+	GROUND	FUEL INJECTOR - 2A
B+	GROUND	FUEL INJECTOR - 2B
B+	GROUND	FUEL INJECTOR - 3A
B+	GROUND	FUEL INJECTOR - 3B
B+	7.3 V = (+), 8.8 V = (-)B+	FUEL INJECTOR - 4A
B+	7.3 V = RESUME, 8.8 V = CANCEL B+	FUEL INJECTOR - 4B
B+	GROUND	FUEL PUMP
B+	23 Hz @ IDLE (5 V)	FUSE BOX - TRUNK
B+	23 Hz @ IDLE (5 V)	IGNITION COIL - 1A
B+	GROUND	IGNITION COIL - 1B
B+	GROUND	IGNITION COIL - 2A
B+	GROUND	IGNITION COIL - 2B
B+	GROUND	IGNITION COIL - 3A
B+	GROUND	IGNITION COIL - 3B
B+	GROUND	IGNITION COIL - 4A
B+	GROUND	IGNITION COIL - 4B
B+	GROUND	RADIATOR FAN CONTROL RELAY MODULE
B+	GROUND	RADIATOR FAN - LH
B+	GROUND	RADIATOR FAN - RH
B+	GROUND	REFRIGERANT 4-WAY PRESSURE SWITCH

COMPONENTS

Component	Connector / Type / Color	Location / Access
AIR CONDITIONING COMPRESSOR CLUTCH	PI36 / 1-WAY SUMITOMO 090 A-TYPE / BLACK	ENGINE COMPARTMENT / A/C COMPRESSOR
AIR CONDITIONING CONTROL MODULE	AC1 / 26-WAY MULTILOCK 47 / GREY	A/C UNIT / RIGHT HAND SIDE
BRAKE CANCEL SWITCH	AC2 / 4-WAY MULTILOCK 070 / WHITE	TOP OF BRAKE PEDAL
SPEED CONTROL ON / OFF SWITCH	FC63 / 10-WAY AMP MQL / NATURAL	REARWARD OF GEAR SELECTOR
SPEED CONTROL SWITCHES (STEERING WHEEL)	SW3 / 3-WAY EPC / BLACK	CENTER OF STEERING WHEEL
ENGINE CONTROL MODULE	EM80 / 31-WAY AMP 403 / NATURAL	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
FUEL INJECTOR - 1A	PI7 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	INTAKE MANIFOLD / FUEL RAIL
FUEL INJECTOR - 1B	PI11 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	INTAKE MANIFOLD / FUEL RAIL
FUEL INJECTOR - 2A	PI8 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	INTAKE MANIFOLD / FUEL RAIL
FUEL INJECTOR - 2B	PI12 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	INTAKE MANIFOLD / FUEL RAIL
FUEL INJECTOR - 3A	PI9 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	INTAKE MANIFOLD / FUEL RAIL
FUEL INJECTOR - 3B	PI13 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	INTAKE MANIFOLD / FUEL RAIL
FUEL INJECTOR - 4A	PI10 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	INTAKE MANIFOLD / FUEL RAIL
FUEL INJECTOR - 4B	PI14 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	INTAKE MANIFOLD / FUEL RAIL
FUEL PUMP	FT3 / 6-WAY SUMITOMO DL090 / NATURAL	FUEL TANK EVAPORATIVE FLANGE
FUSE BOX - TRUNK	BT10 / 10-WAY U.T.A. FUSEBOX / NATURAL	TRUNK / ELECTRICAL CARRIER
IGNITION COIL - 1A	BT11 / 10-WAY U.T.A. FUSEBOX / BLACK	
IGNITION COIL - 1B	BT12 / 10-WAY U.T.A. FUSEBOX / GREEN	
IGNITION COIL - 2A	BT13 / 10-WAY U.T.A. FUSEBOX / BLUE	
IGNITION COIL - 2B	BT64 / EYELET	
IGNITION COIL - 3A	PI51 / 4-WAY YAZAKI / BLACK	ENGINE COMPARTMENT / CAMSHAFT COVER
IGNITION COIL - 3B	PI55 / 4-WAY YAZAKI / BLACK	ENGINE COMPARTMENT / CAMSHAFT COVER
IGNITION COIL - 4A	PI52 / 4-WAY YAZAKI / BLACK	ENGINE COMPARTMENT / CAMSHAFT COVER
IGNITION COIL - 4B	PI56 / 4-WAY YAZAKI / BLACK	ENGINE COMPARTMENT / CAMSHAFT COVER
RADIATOR FAN CONTROL RELAY MODULE	PI53 / 4-WAY YAZAKI / BLACK	ENGINE COMPARTMENT / CAMSHAFT COVER
RADIATOR FAN - LH	PI57 / 4-WAY YAZAKI / BLACK	ENGINE COMPARTMENT / CAMSHAFT COVER
RADIATOR FAN - RH	PI58 / 4-WAY YAZAKI / BLACK	ENGINE COMPARTMENT / CAMSHAFT COVER
REFRIGERANT 4-WAY PRESSURE SWITCH	LF9 / 8-WAY TRW / BLACK	ADJACENT TO LEFT HAND HORN
	LF13 / 2-WAY REINSHAGEN METRI 630 / BLACK	ENGINE COMPARTMENT / FRONT
	LF12 / 2-WAY REINSHAGEN METRI 630 / BLACK	ENGINE COMPARTMENT / FRONT
	LF57 / 6-WAY ECONOSEAL III LC / BLACK	ENGINE COMPARTMENT / REARWARD OF RADIATOR

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
AIR CONDITIONING COMPRESSOR CLUTCH RELAY	BROWN	EM17	LH ENCLOSURE RELAYS
FUEL INJECTION RELAY	BROWN	EM5 / BROWN	CONTROL MODULE ENCLOSURE RELAYS
FUEL PUMP RELAY (#4)	BROWN	BUS	TRUNK FUSE BOX
IGNITION COIL RELAY	BROWN	EM26 / BROWN	CONTROL MODULE ENCLOSURE RELAYS

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC12	20-WAY MULTILOCK 070 / WHITE	FASCIA TOP CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
AC13	20-WAY MULTILOCK 070 / YELLOW	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
EM1	20-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM2	18-WAY MULTILOCK 070 / YELLOW	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM3	14-WAY MULTILOCK 070 / GREY	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
FT1	10-WAY MULTILOCK 070 / WHITE	FUEL TANK / REAR
LF3	13-WAY ECONOSEAL III LC / WHITE	LHD: ENGINE COMPARTMENT / ADJACENT TO BRAKE SERVO RHD: ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
LF40	13-WAY ECONOSEAL III LC / BLACK	LHD: ENGINE COMPARTMENT / FORWARD OF BRAKE FLUID RESERVOIR RHD: ENGINE COMPARTMENT / BELOW CONTROL MODULE ENCLOSURE
PI1	57-WAY SUMITOMO TS090 / BLACK	ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION
PI2	13-WAY ECONOSEAL III LC / BLACK	ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION
RH1	20-WAY MULTILOCK 070 / GREY	BEHIND GLOVE BOX
SC3	12-WAY MULTILOCK 070 / GREY	RIGHT HAND SIDE OF STEERING COLUMN
SW1	12-WAY MULTILOCK 040 / BLACK	INSIDE STEERING COLUMN COWL
SW2	6-WAY JST / WHITE	CENTER OF STEERING WHEEL

GROUNDS

Ground	Location / Type
BT2AL	EYELET (PAIR) - LEFT HAND LEG / TRUNK, RIGHT REAR
EM1AL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM1AR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM2AL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
EM2AR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
LF2AL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH
LF2AR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH
LF2BL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of

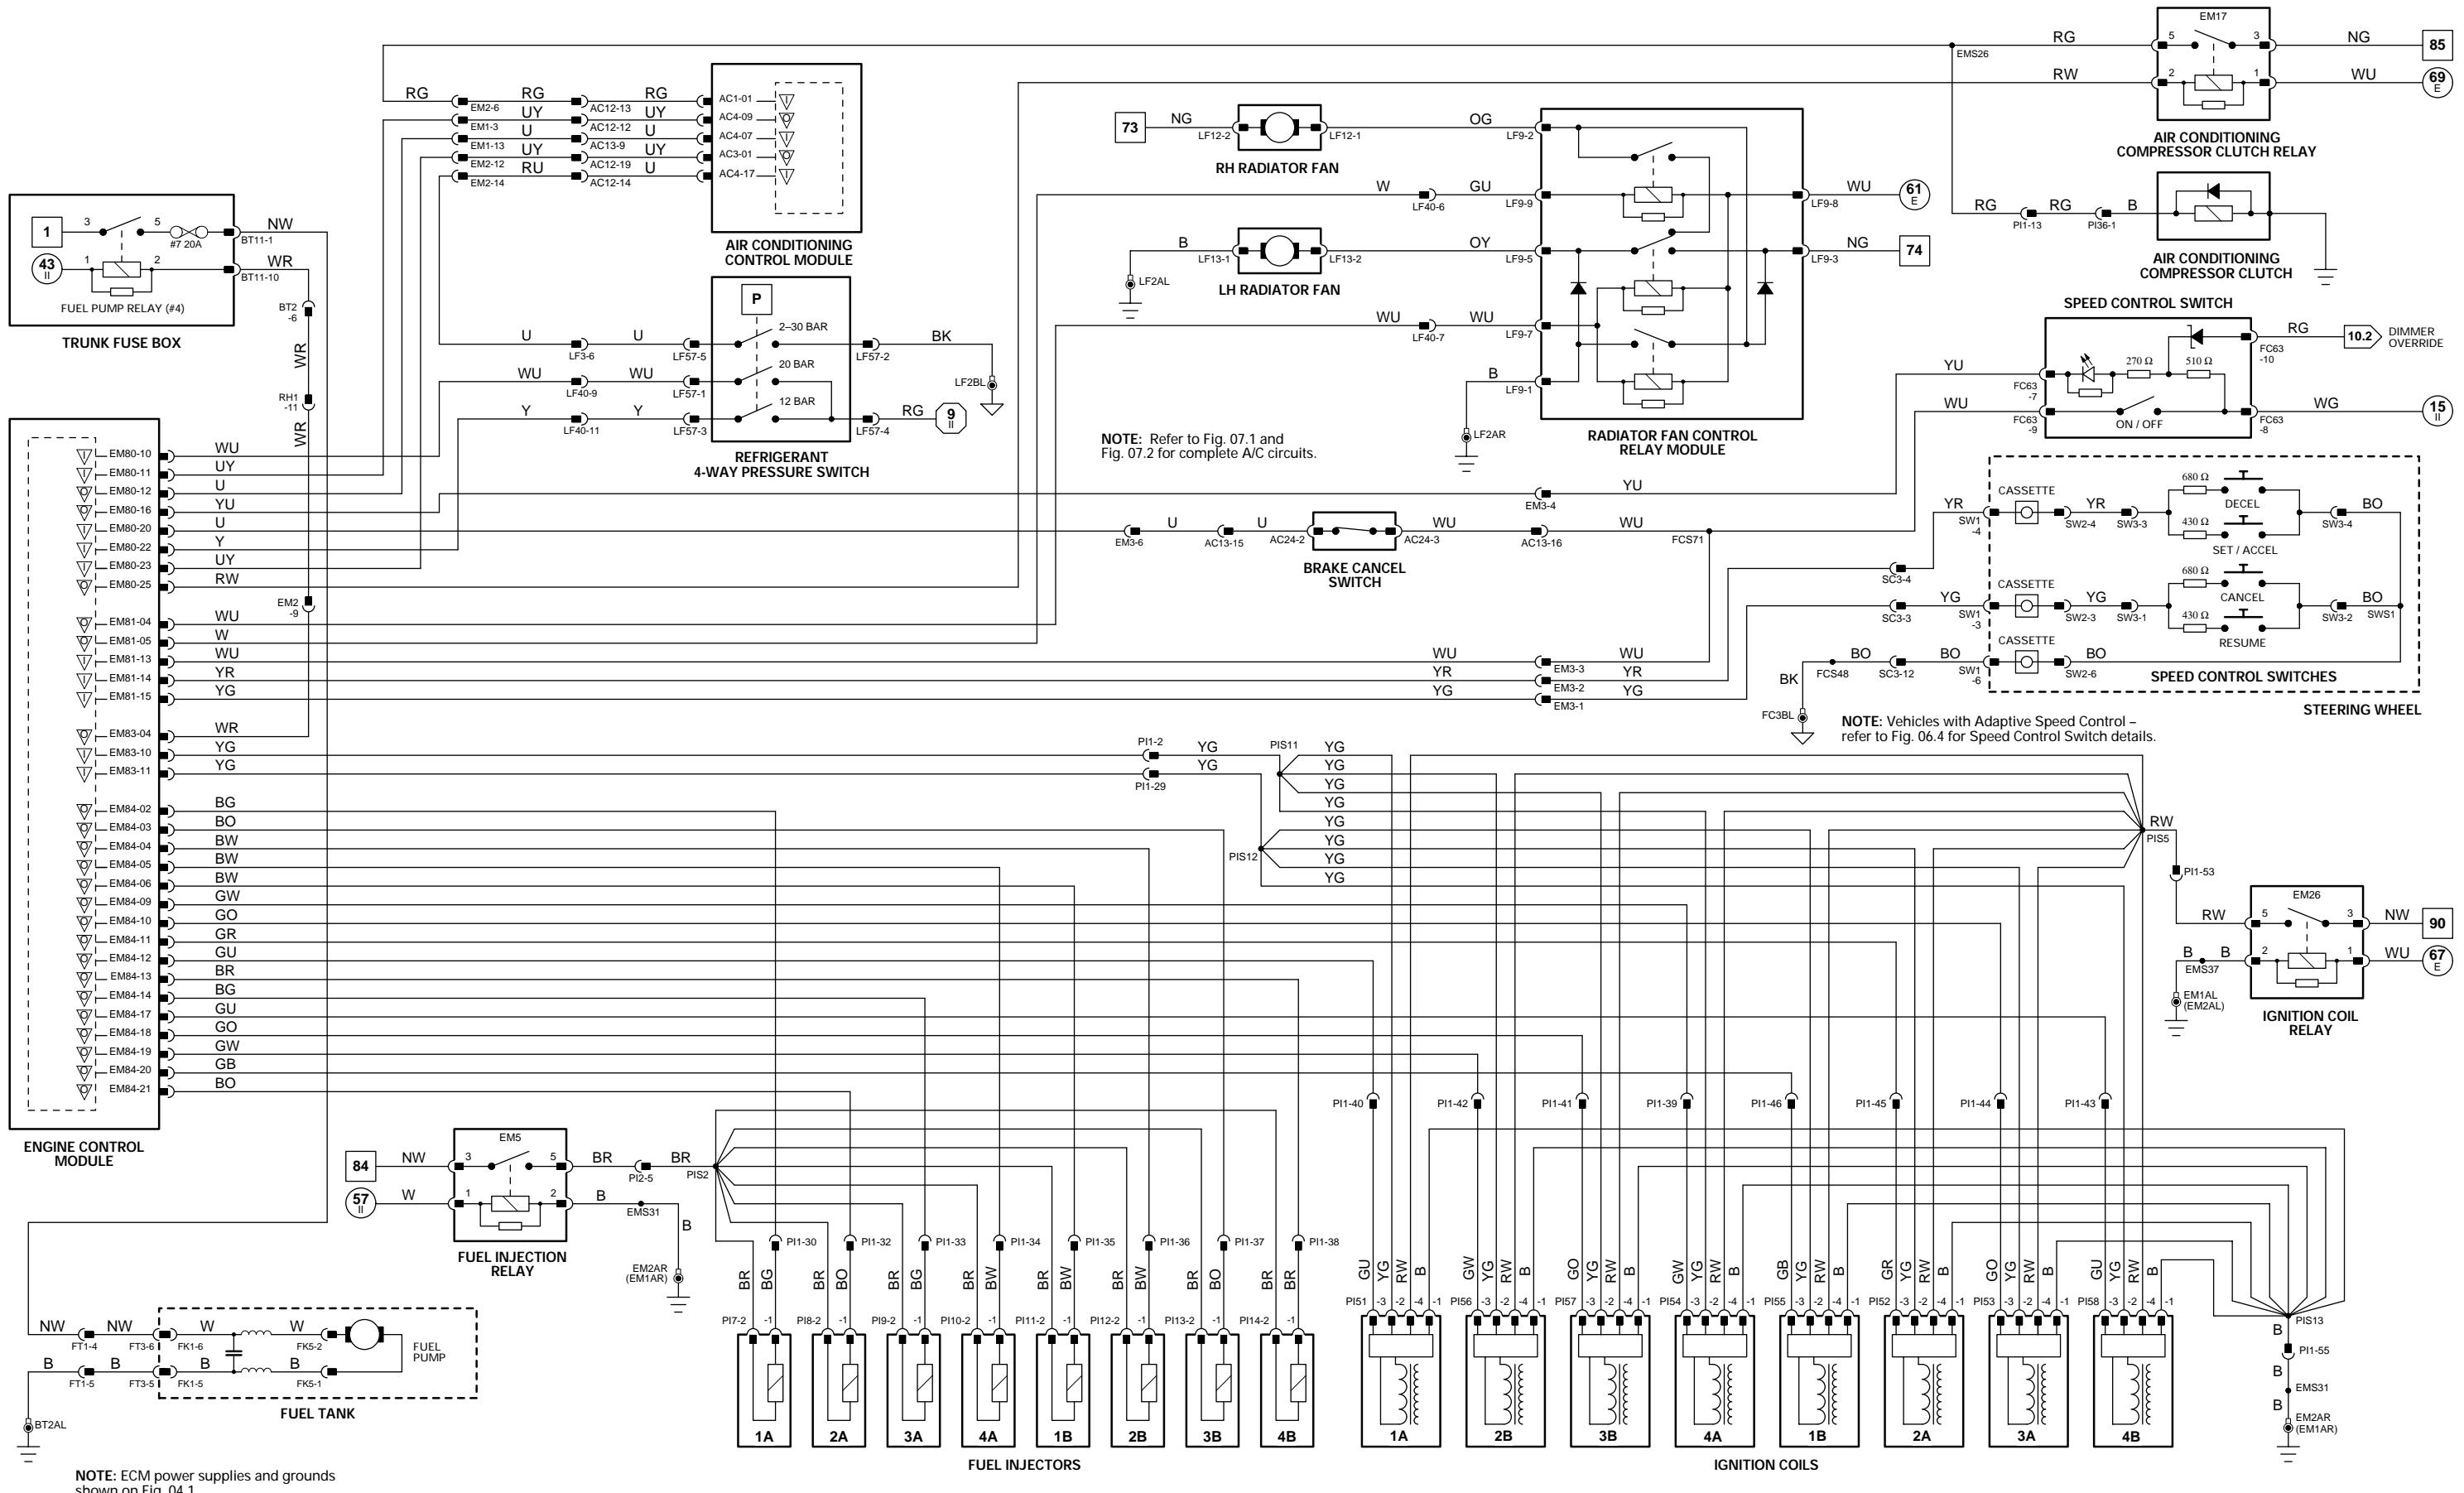


Fig. 04.3

ENGINE CONTROL MODULE

Pin	Description	Active	Inactive
O EM80-01	EVAP VALVE ACTIVATE	GROUND (VALVE OPEN)	B+
O EM80-02	CANISTER CLOSE VALVE ACTIVATE	GROUND	B+
I EM80-03	GROUND (POWER)	GROUND	GROUND
O EM80-04	THROTTLE MOTOR POWER SUPPLY	B+	GROUND
O EM80-05	THROTTLE MOTOR POWER SUPPLY	B+	GROUND
O EM80-06	THROTTLE MOTOR POWER SUPPLY	B+	GROUND
O EM80-07	THROTTLE MOTOR POWER SUPPLY	B+	GROUND
I EM80-08	THROTTLE MOTOR POWER SUPPLY	B+	GROUND
I EM80-09	THROTTLE MOTOR POWER SUPPLY	B+	GROUND
I EM80-10	EOT SIGNAL	2.5 V @ 34 °C; 0.5 V @ 90 °C; (DECREASING VOLTAGE WITH TEMPERATURE INCREASE)	GROUND
D EM80-17	SERIAL COMMUNICATIONS	GROUND	GROUND
D EM80-18	SERIAL COMMUNICATIONS	GROUND	GROUND
D EM80-19	ECM PROGRAMMING	GROUND	GROUND
I EM80-21	GROUND (THROTTLE MOTOR 1)	GROUND	GROUND
D EM80-27	ECM PROGRAMMING	1.2 V = IDLE; 3.6 V = ENGINE SWITCHED OFF	GROUND
I EM80-28	MAPS SIGNAL	GROUND	GROUND
I EM80-29	GROUND (LOGIC 2)	GROUND	GROUND
I EM80-31	GROUND (THROTTLE MOTOR 2)	GROUND	GROUND
O EM81-03	EMS CONTROLLED RELAY ACTIVATE	GROUND	B+
I EM81-08	GROUND (POWER)	GROUND	GROUND
I EM81-09	PEDAL POSITION SIGNAL (PPS/1)	0.6 V = FOOT OFF; 3.8 V = PEDAL FULLY DEPRESSED	GROUND
I EM81-10	TPS SIGNAL (TPS/1)	0.5 V = IDLE; 4.75 V = WOT	GROUND
I EM81-12	PARK / NEUTRAL CONFIRMATION	B+ (P,N)	GROUND (R,D,4,3,2)
I EM81-16	FUEL TANK PRESSURE SENSOR SIGNAL	4.9 V = LOW PRESSURE, 0.2 V = HIGH PRESSURE	0 V
I EM81-17	EMS SWITCHED POWER SUPPLY 1	B+	GROUND
I EM81-18	PEDAL POSITION SIGNAL (PPS/2)	0.8 V = FOOT OFF; 2.4 V = PEDAL FULLY DEPRESSED	GROUND
I EM81-19	TPS SIGNAL (TPS/2)	0.6 V = IDLE; 4.85 V = WOT	GROUND
I EM81-21	GROUND (LOGIC 1)	GROUND (APPLIED)	B+
I EM81-22	PARKING BRAKE SWITCH	2.38 V @ 20 °C; (DECREASING VOLTAGE WITH TEMPERATURE INCREASE)	GROUND
I EM81-23	IATS 2 SIGNAL	GROUND	GROUND
SG EM81-24	PEDAL POSITION / THROTTLE POSITION SENSORS SHIELD	5 V	5 V
SS EM82-01	SENSOR SUPPLY VOLTAGE 1	GROUND (CRANKING)	5 V
I EM82-02	ENGINE CRANK	3.5 V	5 V
I EM82-04	H02S, UPSTREAM 'A' BANK - VARIABLE CURRENT (mA)	3.5 V	5 V
I EM82-05	H02S, UPSTREAM 'B' BANK - VARIABLE CURRENT (mA)	3.5 V	5 V
O EM82-06	THROTTLE MOTOR POWER RELAY ACTIVATE	GROUND	B+
SG EM82-07	SENSORS SIGNAL GROUND 1	GROUND	GROUND
I EM82-08	BRAKE SWITCH	GROUND	B+
I EM82-09	IGNITION SWITCHED POWER SUPPLY	GROUND	B+
SS EM82-10	H02S, UPSTREAM 'A' BANK - CONSTANT	3.8 V	5 V
SS EM82-11	H02S, UPSTREAM 'B' BANK - CONSTANT	3.8 V	5 V
I EM82-12	INERTIA SWITCH ACTIVATED (VEHICLE IMPACT)	GROUND	B+
I EM82-13	EMS SWITCHED POWER SUPPLY 2	GROUND	0 V
I EM82-14	ECT SIGNAL	0.41 V @ 90 °C (DECREASING VOLTAGE WITH TEMPERATURE INCREASE)	0 V
D EM82-15	OK TO START	ENCODED COMMUNICATIONS	0 V
D EM82-16	SECURITY ACKNOWLEDGE	ENCODED COMMUNICATIONS	0 V
I EM82-17	IATS SIGNAL	0.98 V @ 10 °C (DECREASING VOLTAGE WITH TEMPERATURE INCREASE)	0 V
SS EM83-05	SENSOR SUPPLY VOLTAGE 2	5 V	5 V
SG EM83-06	SENSOR SHIELD	GROUND	GROUND
SG EM83-07	CKPS SIGNAL GROUND	GROUND	GROUND
I EM83-08	CKPS SIGNAL	5 V @ 1000 RPM = 45 Hz; 2000 RPM = 90 Hz	GROUND
SG EM83-09	CMPs, 'A' BANK SIGNAL GROUND	GROUND	GROUND
SG EM83-12	H02S SHIELD	GROUND	GROUND
SG EM83-13	SENSORS SIGNAL GROUND 2	GROUND	GROUND
I EM83-14	KNOCK SENSOR, 'A' BANK SIGNAL	0 kHz = NO KNOCK, 2 - 20 kHz = KNOCK	0 V
C EM83-15	CAN NETWORK	15 - 1500 Hz	0 V
C EM83-16	CAN NETWORK	15 - 1500 Hz	0 V
SG EM83-17	CMPs, 'B' BANK SIGNAL GROUND	GROUND	GROUND
I EM83-18	CMPs, 'B' BANK SIGNAL	0.7 - 1 VAC @ 1000 RPM = 43 Hz; 2000 RPM = 72 Hz	0 V
I EM83-19	CMPs, 'A' BANK SIGNAL	0.7 - 1 VAC @ 1000 RPM = 43 Hz; 2000 RPM = 72 Hz	0 V
I EM83-20	BATTERY POWER SUPPLY	B+	B+
I EM83-21	H02S, 'A' BANK DOWNSTREAM	0.1 - 0.9 V @ IDLE (SWING)	0 V
I EM83-22	H02S, 'B' BANK DOWNSTREAM	0.1 - 0.9 V @ IDLE (SWING)	0 V
I EM83-23	KNOCK SENSOR, 'B' BANK SIGNAL	0 kHz = NO KNOCK, 2 - 20 kHz = KNOCK	0 V
C EM83-24	CAN NETWORK	15 - 1500 Hz	0 V
C EM83-25	CAN NETWORK	15 - 1500 Hz	0 V
SG EM83-26	MAFS REFERENCE GROUND	GROUND	GROUND
SG EM83-27	MAFS REFERENCE GROUND	GROUND	GROUND
I EM83-28	MAFS SIGNAL	1.2 V @ IDLE, INCREASING WITH RPM INCREASE	0 V
I EM84-01	GROUND (DOWNSTREAM H02S HEATERS)	GROUND	GROUND
O EM84-07	H02S HEATER, 'A' BANK DOWNSTREAM CONTROL	GROUND (20 - 60% DUTY CYCLE)	B+
O EM84-15	H02S HEATER, 'B' BANK DOWNSTREAM CONTROL	GROUND (20 - 60% DUTY CYCLE)	B+
I EM84-16	GROUND (INJECTORS 1A, 2B, 3B, 4A)	GROUND	GROUND
I EM84-22	GROUND (INJECTORS 1B, 2A, 3A, 4B)	GROUND	GROUND
O EM85-01	H02S HEATER, 'A' BANK UPSTREAM CONTROL	GROUND (85 - 90% DUTY CYCLE AT IDLE)	B+
O EM85-02	H02S HEATER, 'B' BANK UPSTREAM CONTROL	GROUND (85 - 90% DUTY CYCLE AT IDLE)	B+
O EM85-03	EGR STEPPER MOTOR 'S1' WINDING SUPPLY	GROUND	B+
O EM85-04	EGR STEPPER MOTOR 'S2' WINDING SUPPLY	GROUND	B+
O EM85-05	"COOL BOX" COOLING FAN ACTIVATE	GROUND	B+
I EM85-06	GROUND (H02S A UPSTREAM HEATER)	GROUND	GROUND
I EM85-07	GROUND (H02S B UPSTREAM HEATER)	HEATERS ACTIVE = B+	GROUND
I EM85-08	H02S HEATERS OBD MONITOR	GROUND	GROUND
O EM85-09	EGR STEPPER MOTOR 'S3' WINDING SUPPLY	B+	GROUND
O EM85-10	EGR STEPPER MOTOR 'S4' WINDING SUPPLY	B+	GROUND

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector / Type / Color	Location / Access
BRAKE SWITCH	AC24 / 4-WAY MULTILOCK 070 / WHITE	TOP OF BRAKE PEDAL
CCV: CANISTER CLOSE VALVE	BT14 / 2-WAY YAZAKI 090 / BLACK	BEHIND REAR AXLE / RIGHT HAND SIDE
CKPS: CRANKSHAFT POSITION SENSOR	PI17 / 3-WAY ECONOSEAL III LC / BLACK	ENGINE / REAR OF BED PLATE
CMPS: CAMSHAFT POSITION SENSOR - A BANK	PI16 / 2-WAY YAZAKI 090 / BLACK	'A' BANK CYLINDER HEAD, REAR
CMPS: CAMSHAFT POSITION SENSOR - B BANK	PI15 / 2-WAY YAZAKI 090 / BLACK	'B' BANK CYLINDER HEAD, REAR
ECM AND TCM COOLING FAN	EM64 / 2-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
ECTS: ENGINE COOLANT TEMPERATURE SENSOR	PI4 / 2-WAY ECONOSEAL J2 / GREY	ENGINE COMPARTMENT / REAR OF ENGINE TOP HOSE
EGR VALVE	PI34 / 6-WAY SUMITOMO 92 / GREY	ENGINE COMPARTMENT / REAR OF THROTTLE ASSEMBLY
ENGINE CONTROL MODULE	EM80 / 31-WAY AMP 403 / NATURAL	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
	EM81 / 24-WAY AMP 403 / NATURAL	
	EM82 / 17-WAY AMP 403 / NATURAL	
	EM83 / 28-WAY AMP 403 / NATURAL	
	EM84 / 22-WAY AMP 403 / NATURAL	
	EM85 / 12-WAY MULTILOCK 070 / WHITE	
	PI38 / 2-WAY ECONOSEAL EC J2 / GREY	ENGINE BLOCK / BELOW GENERATOR
	LF58 / 2-WAY ECONOSEAL J2 / BLACK	BEHIND LEFT HAND WHEEL ARCH LINER
	FTPS: FUEL TANK PRESSURE SENSOR	TRUNK / FUEL TANK EVAPORATIVE FLANGE
	HO2S: HEATED OXYGEN SENSOR - A DOWNSTREAM	'A' BANK CATALYTIC CONVERTER
	HO2S: HEATED OXYGEN SENSOR - A UPSTREAM	'A' BANK CATALYTIC CONVERTER
	HO2S: HEATED OXYGEN SENSOR - B DOWNSTREAM	'B' BANK CATALYTIC CONVERTER
	HO2S: HEATED OXYGEN SENSOR - B UPSTREAM	'B' BANK CATALYTIC CONVERTER
	IATS 2: INTAKE AIR TEMPERATURE SENSOR 2	'B' BANK INTERCOOLER / REAR
	KS: KNOCK SENSOR - A BANK	ENGINE VEE / UNDER INTAKE MANIFOLD
	KS: KNOCK SENSOR - B BANK	ENGINE VEE / UNDER INTAKE MANIFOLD
	MAFS: MASS AIR FLOW SENSOR	ENGINE COMPARTMENT / REARWARD OF AIR CLEANER
	MAPS: MANIFOLD ABSOLUTE PRESSURE SENSOR	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
	PPS: PEDAL POSITION SENSORS	ENGINE COMPARTMENT / THROTTLE ASSEMBLY
	THROTTLE MOTOR	ENGINE COMPARTMENT / THROTTLE ASSEMBLY
	TPS: THROTTLE POSITION SENSORS	ENGINE COMPARTMENT / THROTTLE ASSEMBLY

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
O2S HEATERS RELAY	BROWN	EM61 / BROWN	CONTROL MODULE ENCLOSURE RELAYS
THROTTLE MOTOR POWER RELAY	BROWN	EM16 / BROWN	CONTROL MODULE ENCLOSURE RELAYS


HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC13	20-WAY MULTILOCK 070 / YELLOW	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
EM1	20-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM2	18-WAY MULTILOCK 070 / YELLOW	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM3	14-WAY MULTILOCK 070 / GREY	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
FT1	10-WAY MULTILOCK 070 / WHITE	FUEL TANK / REAR
LF3	13-WAY ECONOSEAL III LC / WHITE	LHD: ENGINE COMPARTMENT / ADJACENT TO BRAKE SERVO RHD: ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
PI1	57-WAY SUMITOMO TS090 / BLACK	ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION
PI2	13-WAY ECONOSEAL III LC / BLACK	ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION
RH1	20-WAY MULTILOCK 070 / GREY	BEHIND GLOVE BOX
RH2	20-WAY MULTILOCK 070 / WHITE	REAR OF CENTER CONSOLE ASSEMBLY

GROUNDS

Ground	Location / Type

<tbl_r cells="2" ix="3" maxcspan

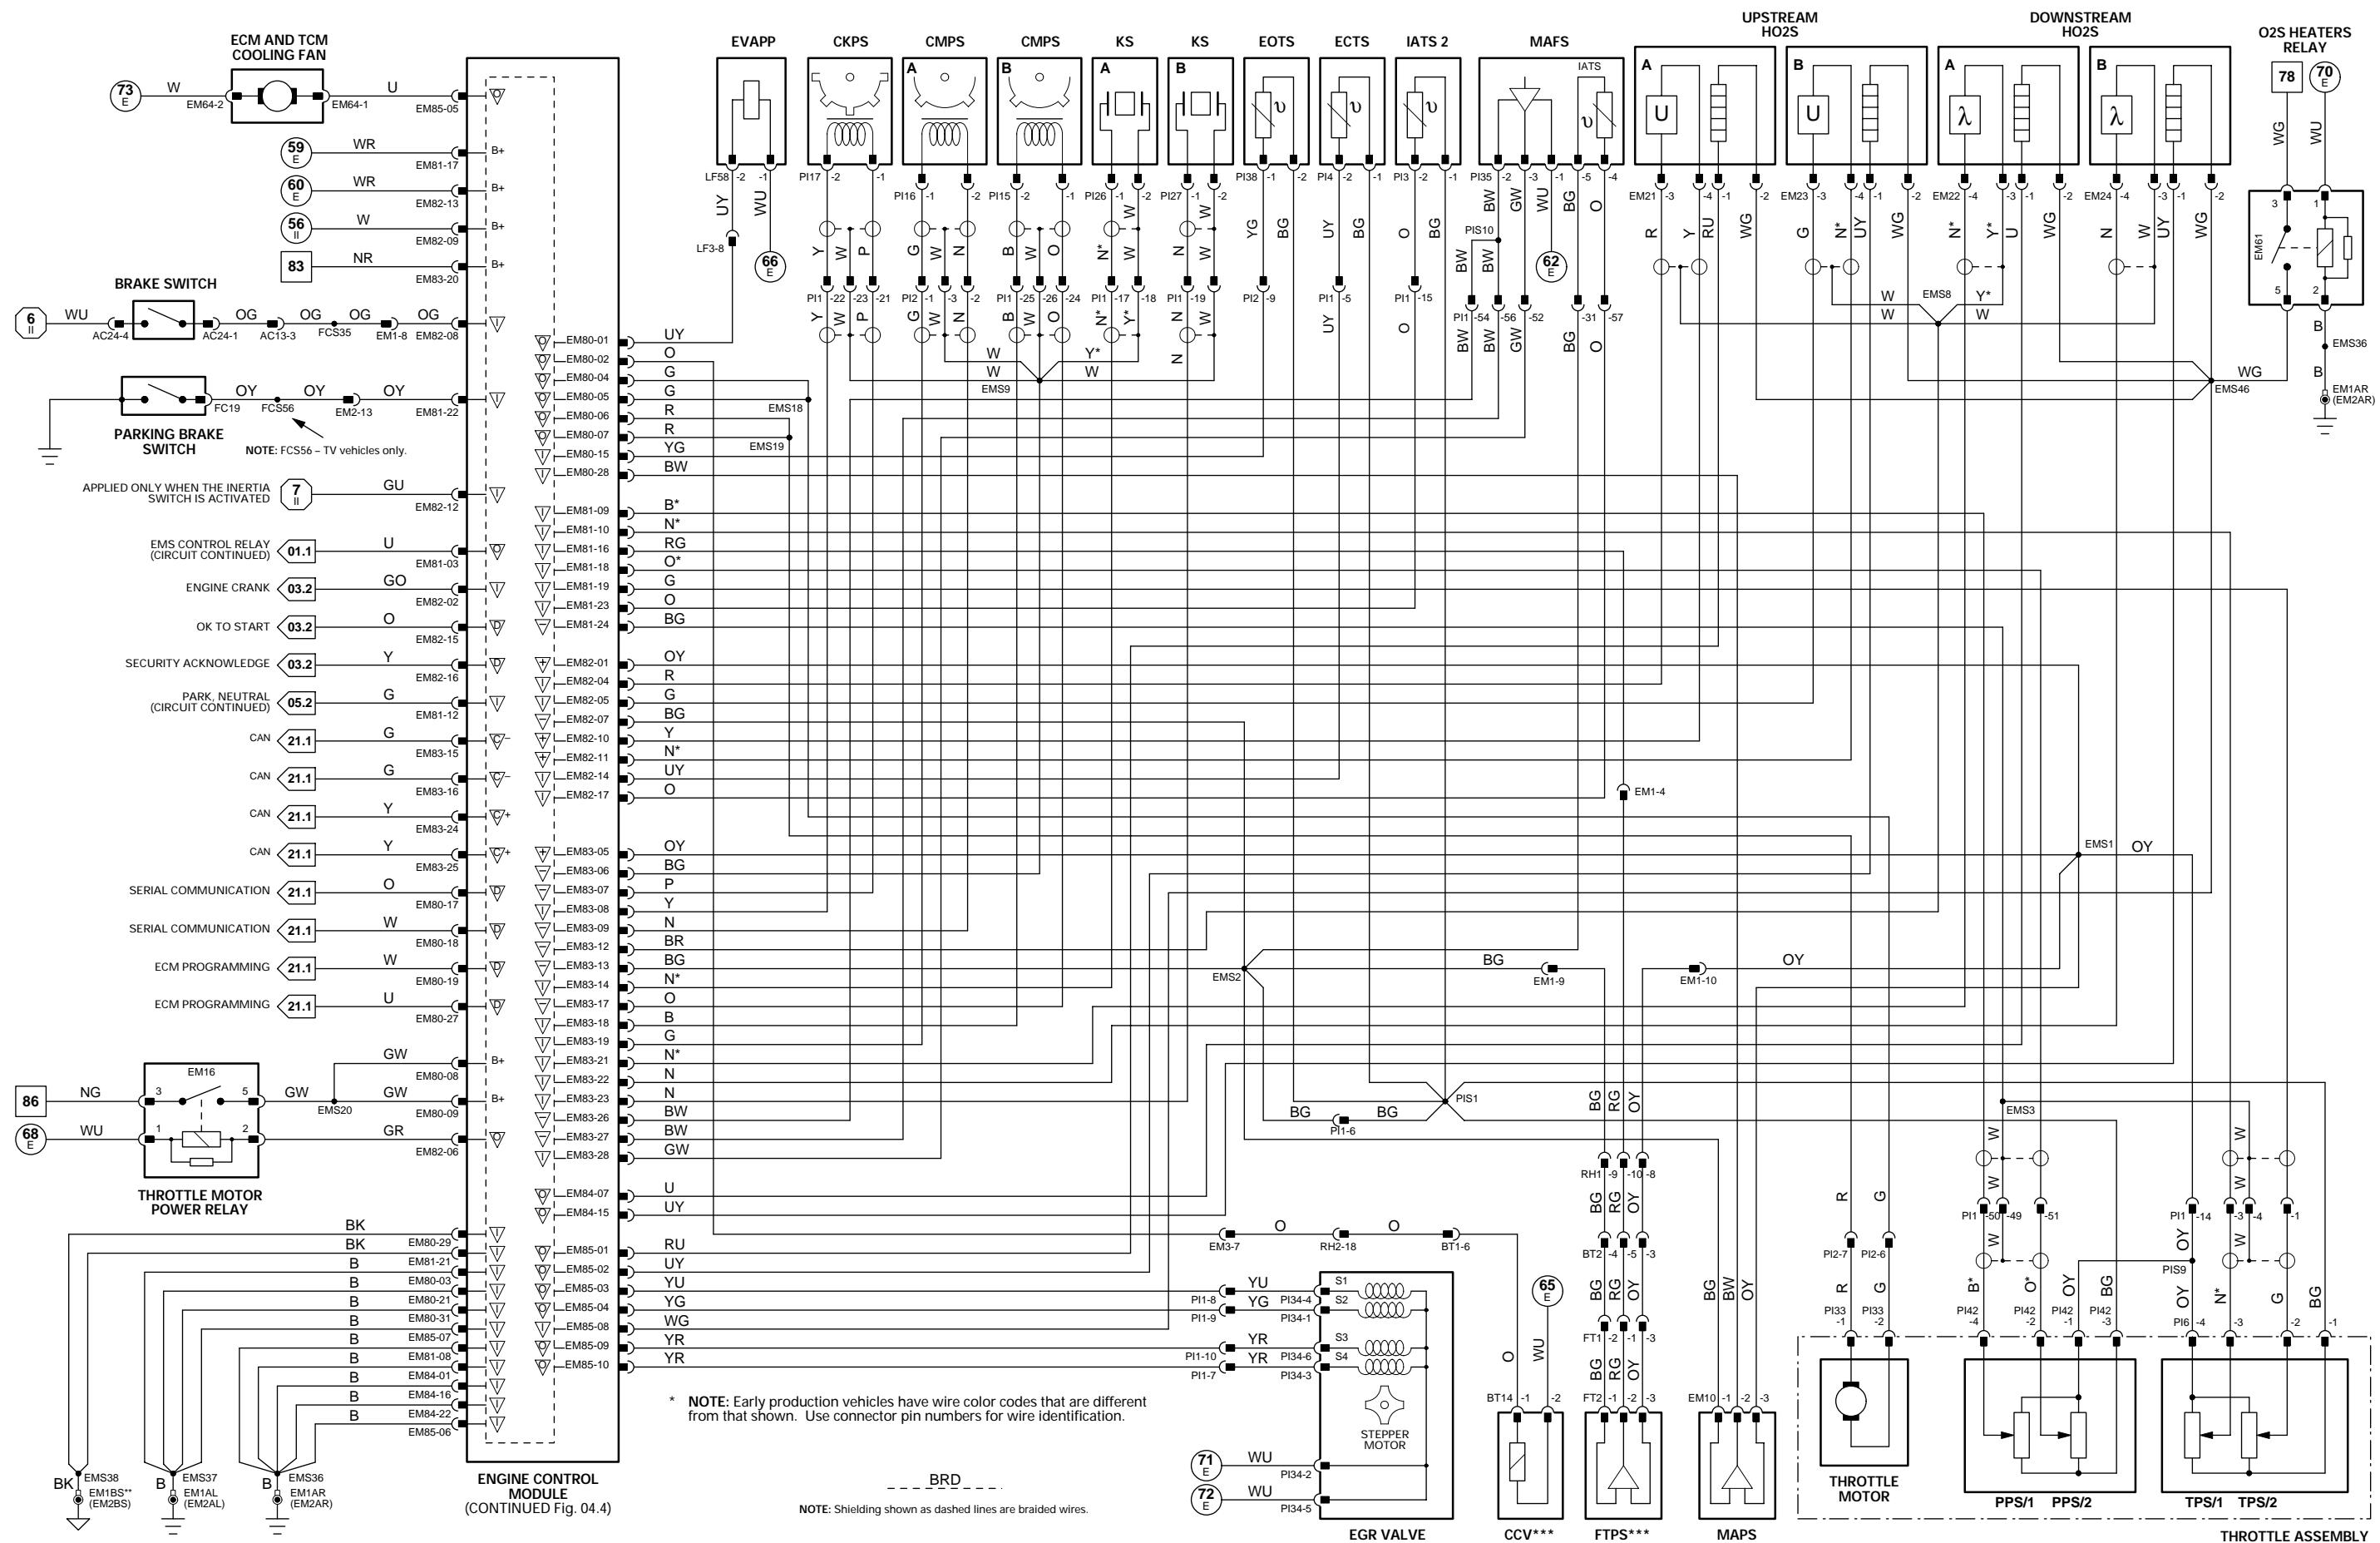

CONTROL MODULE PIN OUT INFORMATION

AIR CONDITIONING CONTROL MODULE

Pin	Description
I	AC1-1 COMPRESSOR CLUTCH STATUS
O	AC3-1 AIR CONDITIONING ELECTRICAL LOAD SIGNAL
I	AC4-7 LOAD INHIBIT
O	AC4-9 COMPRESSOR CLUTCH ON REQUEST
I	AC4-17 REFRIGERANT 4-WAY PRESSURE SWITCH

ENGINE CONTROL MODULE

Pin	Description
I	EM80-10 REFRIGERANT 4-WAY PRESSURE SWITCH HIGH PRESSURE
I	EM80-11 A/CCM COMPRESSOR CLUTCH REQUEST
O	EM80-12 ELECTRICAL LOAD INHIBIT
O	EM80-14 INTERCOOLER PUMP RELAY ACTIVATE
O	EM80-16 SPEED CONTROL ON STATUS LED
I	EM80-20 SPEED CONTROL BRAKE CANCEL REQUEST
I	EM80-22 REFRIGERANT 4-WAY PRESSURE SWITCH HIGH PRESSURE
I	EM80-23 A/CCM ELECTRICAL LOAD REQUEST (HEATED WINDSHIELD)
O	EM80-25 AIR CONDITIONING COMPRESSOR RELAY ACTIVATE
O	EM81-04 PARALLEL (HIGH) SPEED FAN ACTIVATE
O	EM81-05 SERIES (LOW) SPEED FAN ACTIVATE
I	EM81-13 SPEED CONTROL ON REQUEST
I	EM81-14 SPEED CONTROL SET +/-
I	EM81-15 SPEED CONTROL CANCEL / RESUME
O	EM82-03 FUEL PUMP RELAY 2 ACTIVATE
O	EM83-04 FUEL PUMP RELAY ACTIVATE
I	EM83-10 IGNITION MODULES 1A, 2B, 3B, 4A OBD MONITOR
I	EM83-11 IGNITION MODULES 1B, 2A, 3A, 4B OBD MONITOR
O	EM84-02 INJECTOR 1A ACTIVATE
O	EM84-03 INJECTOR 3B ACTIVATE
O	EM84-04 INJECTOR 2B ACTIVATE
O	EM84-05 INJECTOR 4A ACTIVATE
O	EM84-06 INJECTOR 1B ACTIVATE
O	EM84-09 IGNITION MODULE 4A SWITCHING
O	EM84-10 IGNITION MODULE 3A SWITCHING
O	EM84-11 IGNITION MODULE 2A SWITCHING
O	EM84-12 IGNITION MODULE 1A SWITCHING
O	EM84-13 INJECTOR 4B ACTIVATE
O	EM84-14 INJECTOR 3A ACTIVATE
O	EM84-17 IGNITION MODULE 4B SWITCHING
O	EM84-18 IGNITION MODULE 3B SWITCHING
O	EM84-19 IGNITION MODULE 2B SWITCHING
O	EM84-20 IGNITION MODULE 1B SWITCHING
O	EM84-21 INJECTOR 2A ACTIVATE

Pin	Active	Inactive
B-(ON)	0V	0V
B+	0V	B+
B+	0V	B+ (OUT OF ACTIVE RANGE)
0V (2 - 30 BAR)		

Pin	Active	Inactive
GROUND @ 20 BAR (290 PSI)	GROUND	
B+	GROUND	GROUND
B+	GROUND	B+
B+	GROUND	B+
B+	GROUND	B+
GROUND @ 12 BAR (174 PSI)	GROUND	
B+	GROUND	GROUND
B+	GROUND	B+
B+	GROUND	B+
B+	GROUND	B+
7.3 V = (+), 8.8 V = (-)B+		
7.3 V = RESUME, 8.8 V = CANCEL B+		
GROUND	B+	
GROUND	B+	
23 Hz @ IDLE (5 V)		
23 Hz @ IDLE (5 V)		
GROUND	B+	
GROUND	B+	
IGNITION MODULES 1A, 2B, 3B, 4A OBD MONITOR		
IGNITION MODULES 1B, 2A, 3A, 4B OBD MONITOR		
INJECTOR 1A ACTIVATE		
INJECTOR 3B ACTIVATE		
INJECTOR 2B ACTIVATE		
INJECTOR 4A ACTIVATE		
INJECTOR 1B ACTIVATE		
IGNITION MODULE 4A SWITCHING	GROUND (85 - 90% DUTY CYCLE @ IDLE)	
IGNITION MODULE 3A SWITCHING	GROUND (85 - 90% DUTY CYCLE @ IDLE)	
IGNITION MODULE 2A SWITCHING	GROUND (85 - 90% DUTY CYCLE @ IDLE)	
IGNITION MODULE 1A SWITCHING	GROUND (85 - 90% DUTY CYCLE @ IDLE)	
INJECTOR 4B ACTIVATE		
INJECTOR 3A ACTIVATE		
INJECTOR 4B SWITCHING	GROUND (85 - 90% DUTY CYCLE @ IDLE)	
IGNITION MODULE 3B SWITCHING	GROUND (85 - 90% DUTY CYCLE @ IDLE)	
IGNITION MODULE 2B SWITCHING	GROUND (85 - 90% DUTY CYCLE @ IDLE)	
IGNITION MODULE 1B SWITCHING	GROUND (85 - 90% DUTY CYCLE @ IDLE)	
INJECTOR 2A ACTIVATE		

Fig. 04.4

COMPONENTS

Component

AIR CONDITIONING COMPRESSOR CLUTCH
AIR CONDITIONING CONTROL MODULE

Connector / Type / Color

PI36 / 1-WAY SUMITOMO 090 A-TYPE / BLACK
AC1 / 26-WAY MULTILOCK 47 / GREY
AC2 / 16-WAY MULTILOCK 47 / GREY
AC3 / 12-WAY MULTILOCK 47 / GREY
AC4 / 22-WAY MULTILOCK 47 / GREY

Location / Access

ENGINE COMPARTMENT / A/C COMPRESSOR
A/C UNIT / RIGHT HAND SIDE

BRAKE CANCEL SWITCH

SPEED CONTROL ON / OFF SWITCH
SPEED CONTROL SWITCHES (STEERING WHEEL)

ENGINE CONTROL MODULE

TOP OF BRAKE PEDAL

REARWARD OF GEAR SELECTOR
CENTER OF STEERING WHEEL

ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

FUEL INJECTOR – 1A

FUEL INJECTOR – 1B

FUEL INJECTOR – 2A

FUEL INJECTOR – 2B

FUEL INJECTOR – 3A

FUEL INJECTOR – 3B

FUEL INJECTOR – 4A

FUEL INJECTOR – 4B

FUEL PUMPS

FUSE BOX – TRUNK

INTAKE MANIFOLD / FUEL RAIL

FUEL TANK EVAPORATIVE FLANGE

TRUNK / ELECTRICAL CARRIER

BT10 / 10-WAY U.T.A. FUSEBOX / NATURAL

BT11 / 10-WAY U.T.A. FUSEBOX / BLACK


BT12 / 10-WAY U.T.A. FUSEBOX / GREEN

BT13 / 10-WAY U.T.A. FUSEBOX / BLUE

BT64 / EYELET

INTAKE MANIFOLD / FUEL RAIL

INTAKE

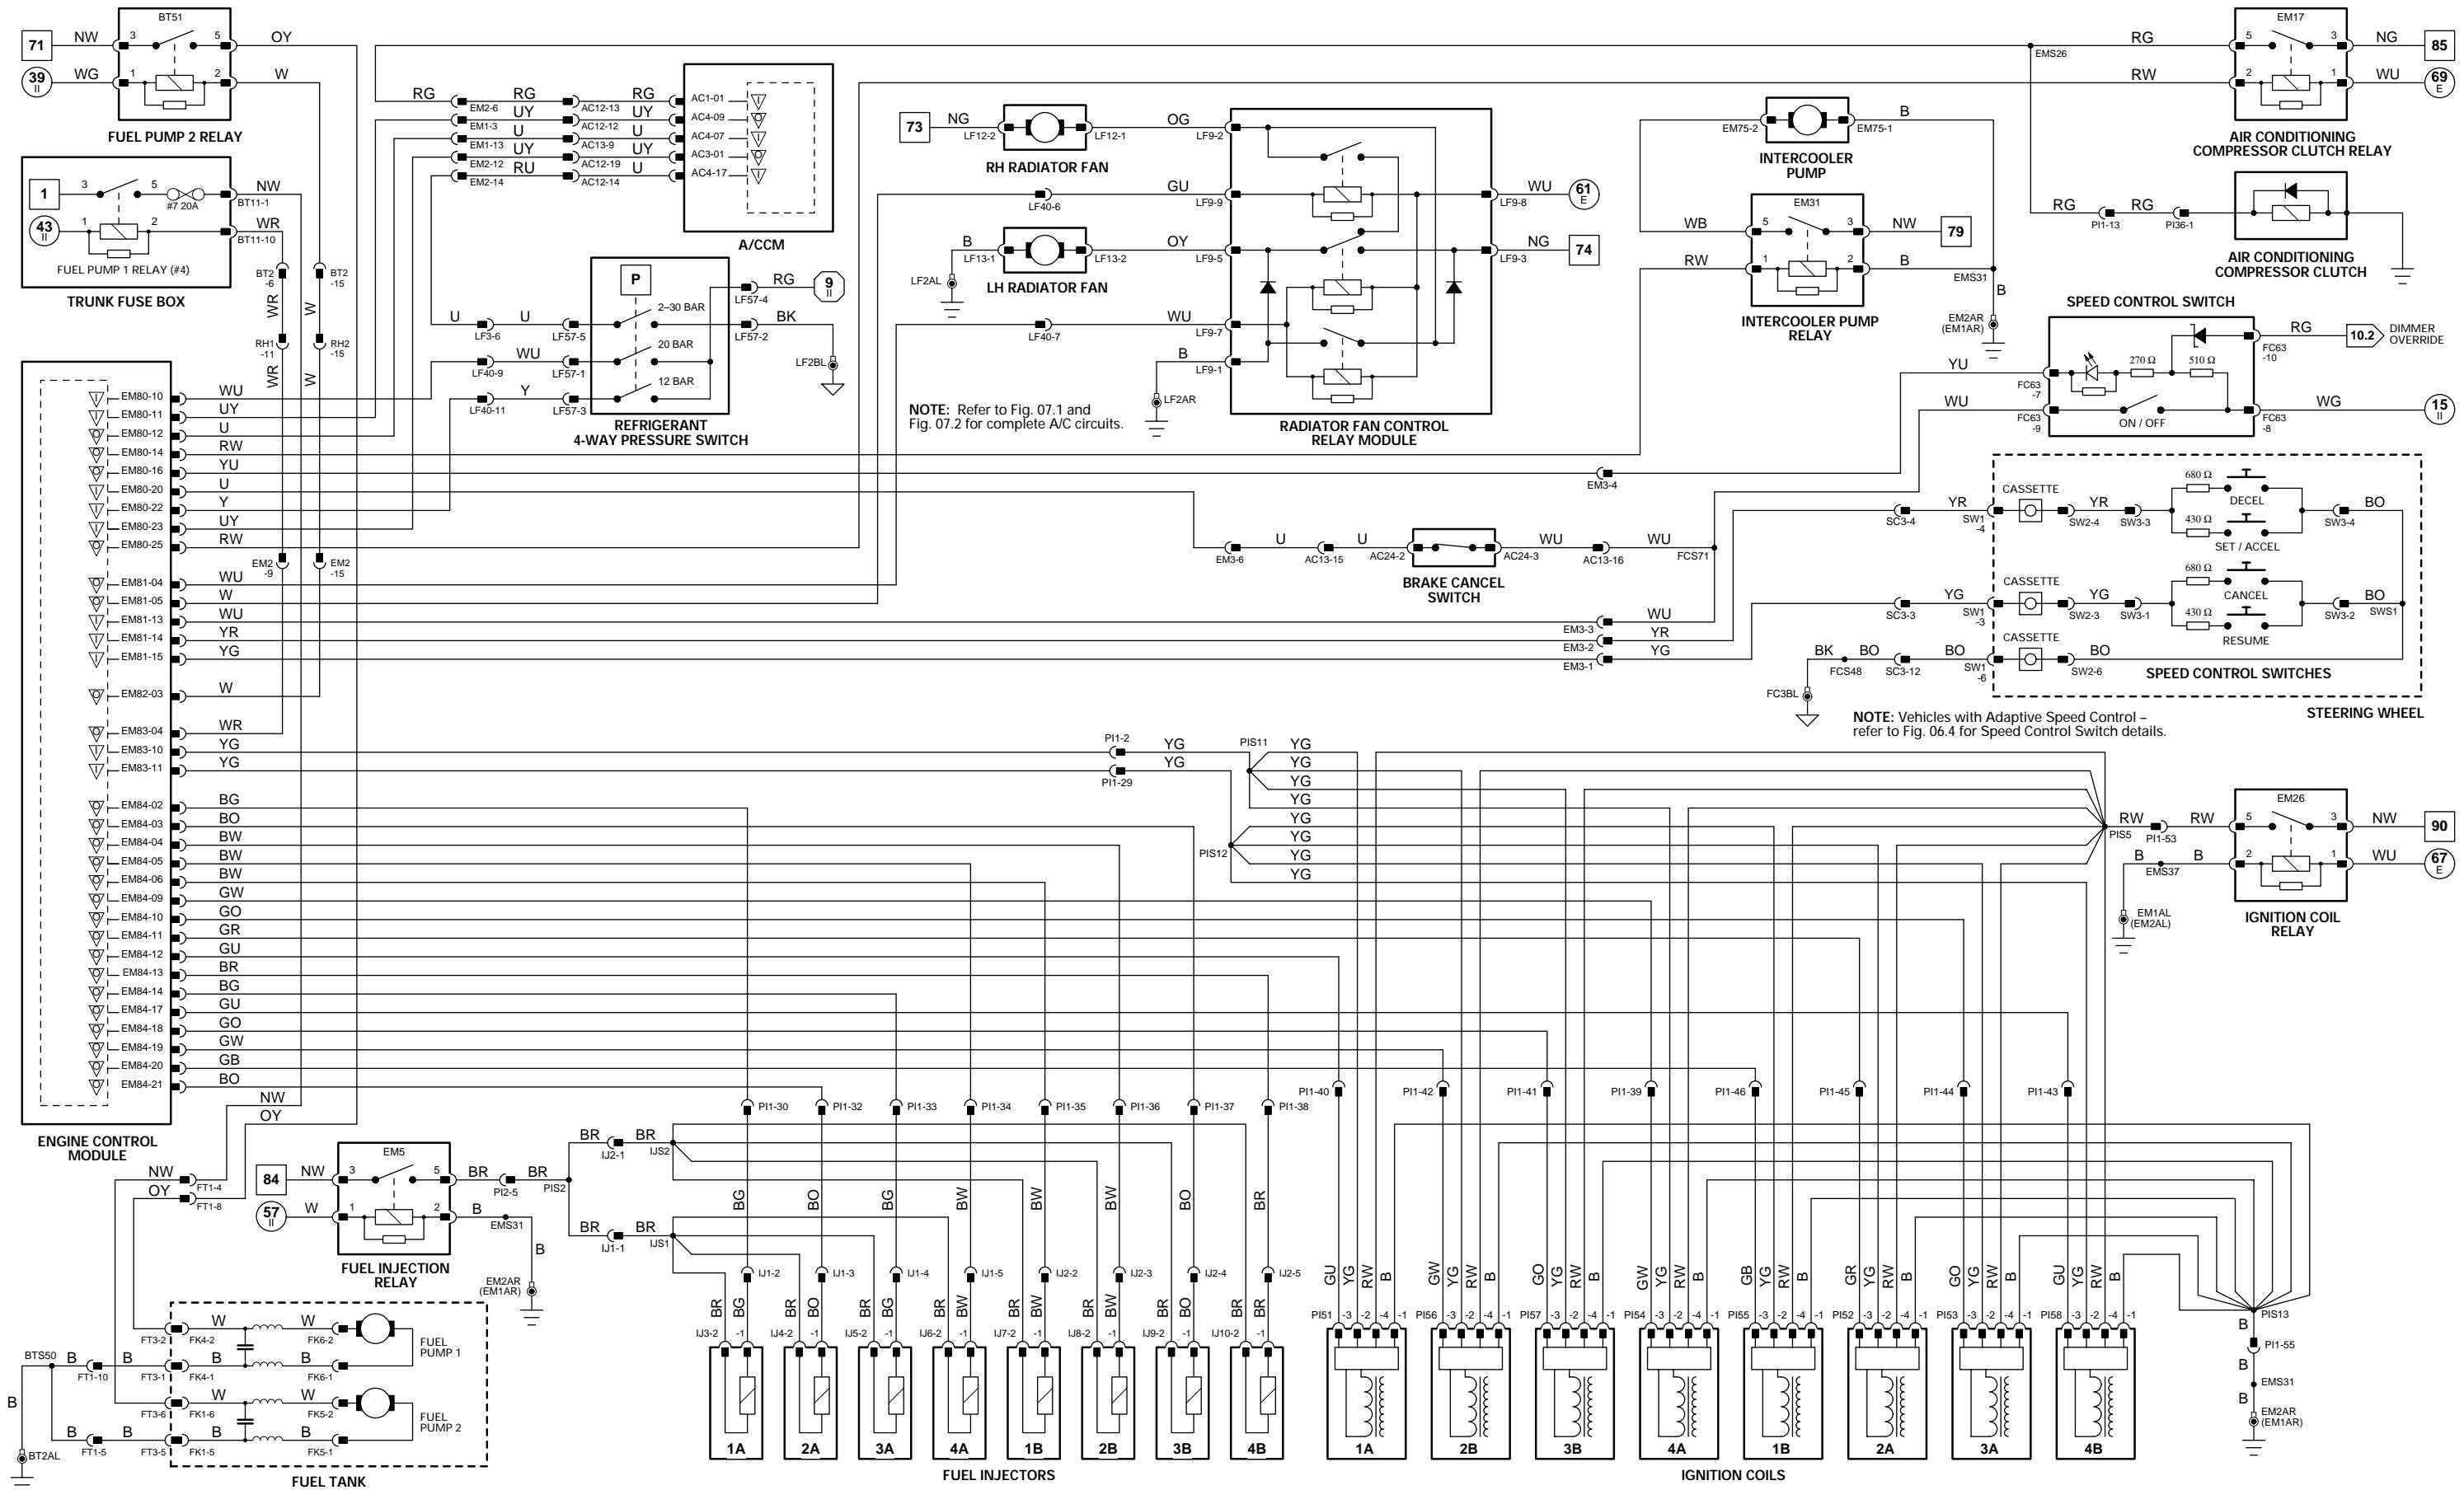

NOTE: ECM power supplies and grounds shown on Fig. 04.3.

1 → 7 Fig. 01.1 1 → 5 Fig. 01.1 8 → 50 Fig. 01.2 51 → 90 Fig. 01.3 6 → 58 Fig. 01.4 59 → 73 Fig. 01.5 1 → 18 Fig. 02.1

Input
Output
Sensor Supply V
Sensor Ground
ACP
CAN
SCP
Serial and Encoded Data

VARIANT: AJ27 SC Vehicles
VIN RANGE: A11051 →
DATE OF ISSUE: September 2000

CONTROL MODULE PIN OUT INFORMATION

GEAR SELECTOR ILLUMINATION MODULE

Pin	Description
I	FC88-1 IGNITION SWITCHED POWER SUPPLY
C	FC88-3 CAN NETWORK
C	FC88-4 CAN NETWORK
I	FC88-6 GROUND
C	FC88-8 CAN NETWORK
C	FC88-9 CAN NETWORK

TRANSMISSION CONTROL MODULE: AJ27 N/A

Pin	Description	Active	Inactive
O	EM7-1 PRESSURE REGULATOR #2	GROUND (MAXIMUM PRESSURE)	B+ (NO PRESSURE)
O	EM7-2 SPORT MODE SWITCH STATUS LED	GROUND = LED ON	B+
O	EM7-4 PRESSURE REGULATOR #4	GROUND (MAXIMUM PRESSURE)	B+ (NO PRESSURE)
O	EM7-5 PRESSURE REGULATOR #1	GROUND (MAXIMUM PRESSURE)	B+ (NO PRESSURE)
I	EM7-6 GROUND	GROUND	GROUND
I	EM7-8 ROTARY SWITCH 'L2' CONTACTS	B+	GROUND
I	EM7-9 ROTARY SWITCH 'L4' CONTACTS	B+	GROUND
I	EM7-12 SPORT MODE SWITCH STRATEGY SELECT	GROUND = SPORT	9 V = NORMAL
I	EM7-13 D-4 SWITCH	GROUND	B+
SG	EM7-14 TURBINE SPEED SENSOR SIGNAL GROUND	GROUND	GROUND
SG	EM7-15 OUTPUT SPEED SENSOR SHIELD	GROUND	GROUND
SG	EM7-16 OUTPUT SPEED SENSOR SIGNAL GROUND	GROUND	GROUND
SG	EM7-21 FLUID TEMPERATURE SENSOR SIGNAL GROUND	1.31 V	GROUND
I	EM7-22 FLUID TEMPERATURE SENSOR SIGNAL	1.15 V @ 90°C	GROUND
SG	EM7-23 TURBINE SPEED SENSOR SHIELD	GROUND	B+
I	EM7-26 BATTERY POWER SUPPLY	B+	GROUND
SG	EM7-28 ROTARY / D-4 / KICK DOWN SWITCHES COMMON GROUND	GROUND	B+ (NO PRESSURE)
O	EM7-29 PRESSURE REGULATOR #3	GROUND (MAXIMUM PRESSURE)	B+
O	EM7-30 SOLENOID VALVE #1	GROUND	B+
O	EM7-32 SOLENOID VALVE #3	GROUND	B+
O	EM7-33 SOLENOID VALVE #2	GROUND	B+
I	EM7-34 GROUND	GROUND	GROUND
I	EM7-36 ROTARY SWITCH 'L1' CONTACTS	B+	GROUND
I	EM7-37 ROTARY SWITCH 'L3' CONTACTS	B+	GROUND
I	EM7-42 TURBINE SPEED SENSOR SIGNAL	1.51 V @ 10 MPH (16 KM/H) = 250 Hz, 20 MPH (32 KM/H) = 500 Hz	GROUND = NORMAL
I	EM7-44 OUTPUT SPEED SENSOR SIGNAL	1.51 V @ 10 MPH (16 KM/H) = 223 Hz, 20 MPH (32 KM/H) = 446 Hz	B+ (NO PRESSURE)
I	EM7-45 SPORT MODE SWITCH STRATEGY SELECT	10 v = SPORT	B+
O	EM7-51 PRESSURE REGULATOR #5	GROUND (MAXIMUM PRESSURE)	B+
O	EM7-52 SOLENOID VALVES COMMON SUPPLY	B+	B+
O	EM7-53 PRESSURE REGULATORS COMMON SUPPLY	B+	B+
I	EM7-54 IGNITION SWITCHED POWER SUPPLY	B+	GROUND
I	EM7-55 IGNITION SWITCHED POWER SUPPLY	B+	GROUND
C	EM7-82 CAN NETWORK	15 - 1500 Hz	
C	EM7-83 CAN NETWORK	15 - 1500 Hz	
C	EM7-85 CAN NETWORK	15 - 1500 Hz	
C	EM7-86 CAN NETWORK	15 - 1500 Hz	

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Fig. 05.1

COMPONENTS

Component

D - 4 SWITCH	FC83 / 3-WAY MULTILOCK 070 / YELLOW
GEAR SELECTOR ILLUMINATION MODULE	FC88 / 10-WAY MULTILOCK 070 / WHITE
MODE SWITCH (TRANSMISSION)	FC35 / 10-WAY AMP MQL / BLACK
TRANSMISSION CONTROL MODULE: AJ27 N/A	EM7 / 88-WAY BOSCH / BLACK
TRANSMISSION ELECTRICAL CONNECTOR: AJ27 N/A	EM46 / 16-WAY KOSTAL / BLACK
TRANSMISSION ROTARY SWITCH	EM47 / 10-WAY METRI-PACK 150 / BLACK

Location / Access

GEAR SELECTOR ASSEMBLY, REAR
FRONT OF GEAR SELECTOR ASSEMBLY
REARWARD OF GEAR SELECTOR
ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
TRANSMISSION / LEFT HAND SIDE
TRANSMISSION / RIGHT HAND SIDE

HARNESS-TO-HARNESS CONNECTORS

Connector

AC12	20-WAY MULTILOCK 070 / WHITE
EM1	20-WAY MULTILOCK 070 / WHITE
EM3	14-WAY MULTILOCK 070 / GREY

Location / Access

FASCIA TOP CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE

GROUNDS

Ground


EM1AL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM1BR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM1BS	EYELET (SINGLE) / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM2AL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
EM2BR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
EM2BS	EYELET (SINGLE) / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.



NOTE: Gear Selector Illumination Module –
CAN ‘Listen only’ node for gear selector position indicators.

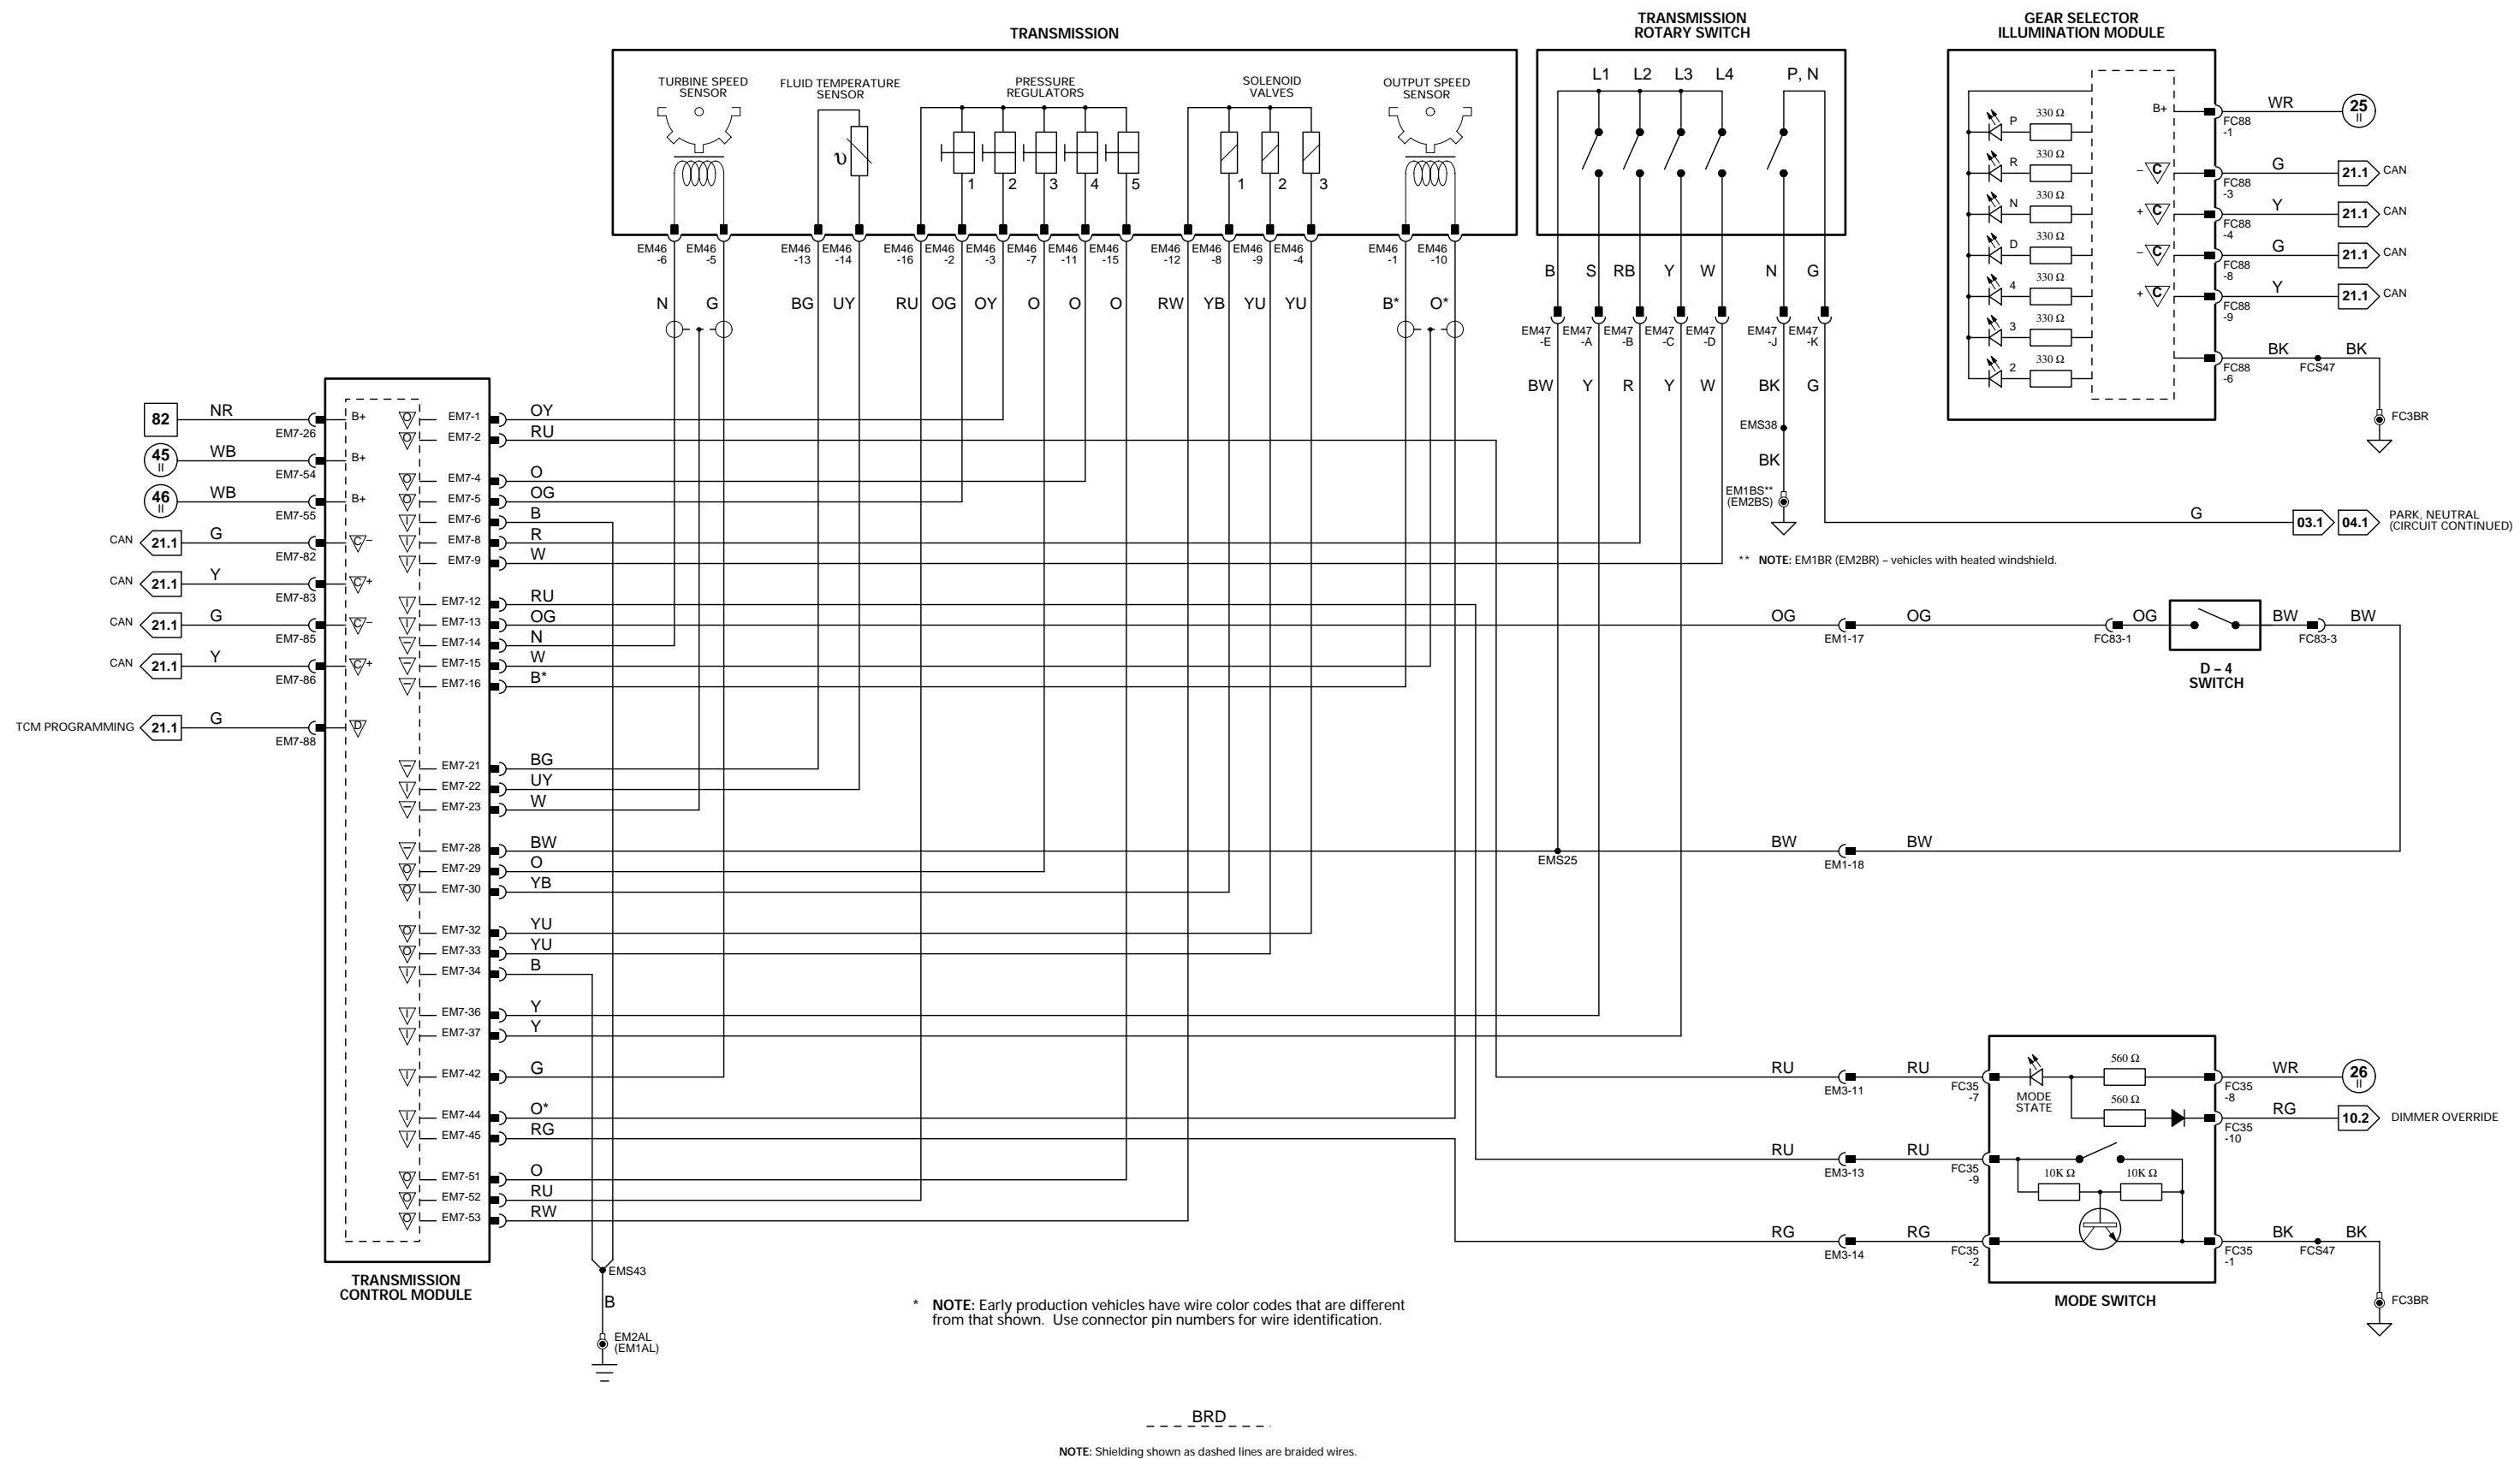

CONTROL MODULE PIN OUT INFORMATION

GEAR SELECTOR ILLUMINATION MODULE

Pin	Description
I	FC88-1 IGNITION SWITCHED POWER SUPPLY
C	FC88-3 CAN NETWORK
C	FC88-4 CAN NETWORK
I	FC88-6 GROUND
C	FC88-8 CAN NETWORK
C	FC88-9 CAN NETWORK

TRANSMISSION CONTROL MODULE: AJ27 SC

Pin	Description
C	EM72-L CAN NETWORK
C	EM72-H CAN NETWORK
I	EM72-12 n2 SPEED SENSOR SIGNAL
SS	EM72-13 SPEED SENSOR COMMON VOLTAGE SUPPLY
O	EM72-14 '1-2 / 4-5' SOLENOID ACTIVATE
O	EM72-15 '3-4' SOLENOID ACTIVATE
O	EM72-16 '2-3' SOLENOID ACTIVATE
O	EM72-17 TCC SOLENOID ACTIVATE
SG	EM72-23 SPEED SENSOR / FLUID TEMP SENSOR COMMON GROUND
I	EM72-24 FLUID TEMP. SENSOR SIGNAL
I	EM72-25 n3 SPEED SENSOR SIGNAL
O	EM72-26 MODULATION PRESSURE REGULATOR ACTIVATE
O	EM72-37 SHIFT PRESSURE REGULATOR ACTIVATE
O	EM72-38 SOLENOID VALVE / PRESSURE REGULATOR COMMON VOLTAGE SUPPLY
I	EM73-2 KICKDOWN SWITCH
I	EM73-3 SPORT MODE SWITCH
I	EM73-25 DUAL LINEAR SWITCH VOLTAGE ENCODED GEAR RECOGNITION
I	EM73-26 DUAL LINEAR SWITCH VOLTAGE ENCODED GEAR RECOGNITION
I	EM73-27 DUAL LINEAR SWITCH VOLTAGE ENCODED GEAR RECOGNITION
I	EM73-28 DUAL LINEAR SWITCH VOLTAGE ENCODED GEAR RECOGNITION
I	EM73-29 IGNITION SUPPLIED VOLTAGE
I	EM73-30 TCM / DUAL LINEAR SWITCH COMMON GROUND SUPPLY

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 05.2

COMPONENTS

Component	Connector / Type / Color	Location / Access
DUAL LINEAR SWITCH	FC100 / 12-WAY / MULTILOCK 070 / GREY	LEFT HAND SIDE OF GEAR SELECTOR / CENTER CONSOLE
GEAR SELECTOR ILLUMINATION MODULE	FC88 / 10-WAY MULTILOCK 070 / WHITE	FRONT OF GEAR SELECTOR ASSEMBLY
KICKDOWN SWITCH	AC27 / 1-WAY LUCAR RIGHT ANGLE / CLEAR	UNDER ACCELERATOR PEDAL
MODE SWITCH (TRANSMISSION)	AC28 / 1-WAY LUCAR RIGHT ANGLE / CLEAR	
TRANSMISSION CONTROL MODULE: AJ27 SC	FC35 / 10-WAY AMP MQL / BLACK	REARWARD OF GEAR SELECTOR
TRANSMISSION ELECTRICAL CONNECTOR: AJ27 SC	EM72 / 14-WAY AMP JUNIOR POWER TIMER / BLACK	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
	EM73 / 18-WAY AMP JUNIOR POWER TIMER / BLACK	
	GB1 / 13-WAY KOSTAL 1.5 / BLACK	TRANSMISSION

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC12	20-WAY MULTILOCK 070 / WHITE	FASCIA TOP CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
EM1	20-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM2	18-WAY MULTILOCK 070 / YELLOW	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM3	14-WAY MULTILOCK 070 / GREY	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
GB2	12-WAY AUGAT 1.6 / BLACK	ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION

GROUNDS

Ground	Location / Type
EM1AL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM2AL	EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

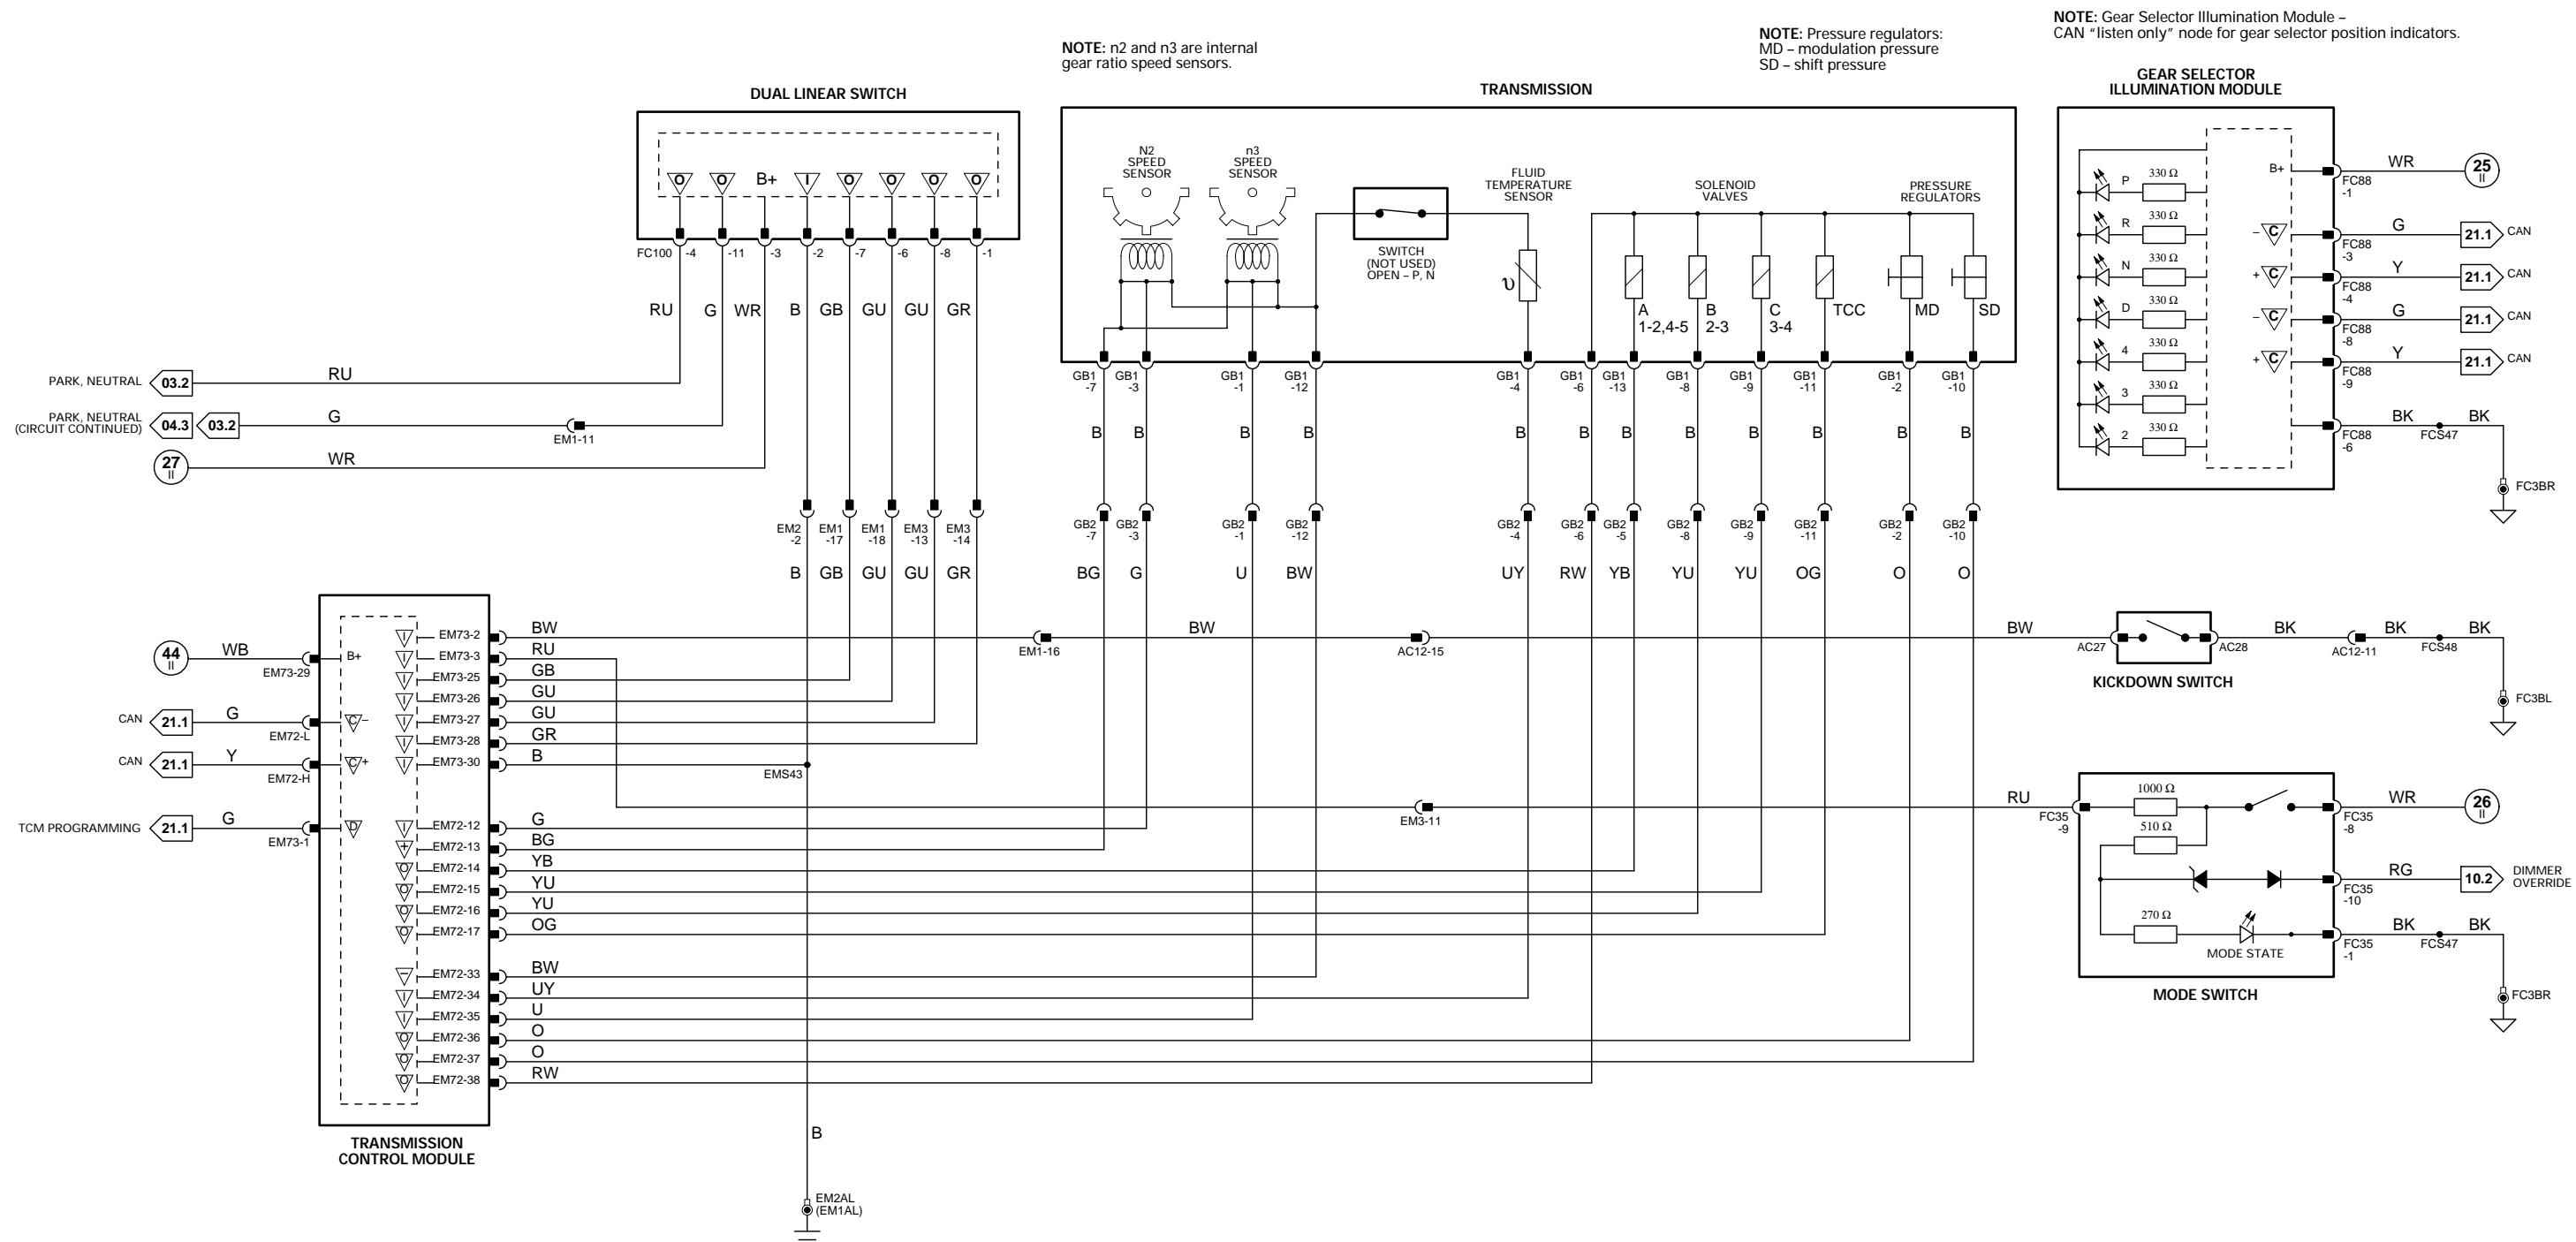


Fig. 05.3

BODY PROCESSOR MODULE

Pin	Description	Active	Inactive
I	FC14-15	IGNITION SWITCHED GROUND SUPPLY	GROUND
I	FC14-32	IGNITION SWITCHED GROUND SUPPLY	GROUND
O	FC14-48	GEARSHIFT INTERLOCK SOLENOID SUPPLY	B+ (GEARSHIFT FREE)
O	FC14-51	KEY LOCK SOLENOID SUPPLY	B+ (KEY CAPTIVE)
I	FC14-58	NOT-IN-PARK	GROUND (R,N,D,4,3,2)
I	FC14-80	BATTERY POWER SUPPLY (LOGIC)	B+
S	FC14-84	SCP NETWORK	2 - 1600 Hz
S	FC14-85	SCP NETWORK	2 - 1600 Hz
I	FC14-104	LIGHTING / MOTORS BATTERY POWER SUPPLY	B+

ENGINE CONTROL MODULE

Pin	Description	Active	Inactive
I	EM82-08	BRAKE SWITCH	GROUND
C	EM83-16	CAN NETWORK	15 - 1500 Hz
C	EM83-25	CAN NETWORK	15 - 1500 Hz

GEAR SELECTOR ILLUMINATION MODULE

Pin	Description	Active	Inactive
C	FC88-4	CAN NETWORK	15 - 1500 Hz @ 2.5 V
C	FC88-3	CAN NETWORK	15 - 1500 Hz @ 2.5 V
C	FC88-8	CAN NETWORK	15 - 1500 Hz @ 2.5 V
C	FC88-9	CAN NETWORK	15 - 1500 Hz @ 2.5 V

MAJOR INSTRUMENT PACK

Pin	Description	Active	Inactive
C	FC25-11	CAN NETWORK	15 - 1500 Hz
S	FC25-13	SCP NETWORK	2 - 1600 Hz
S	FC25-14	SCP NETWORK	2 - 1600 Hz
C	FC25-23	CAN NETWORK	15 - 1500 Hz

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

COMPONENTS

Component
BODY PROCESSOR MODULE
BRAKE SWITCH
ENGINE CONTROL MODULE

Connector / Type / Color
FC14 / 104-WAY AMP EEEC / GREY
AC24 / 4-WAY MULTILOCK 070 / WHITE
EM80 / 31-WAY AMP 403 / NATURAL
EM81 / 24-WAY AMP 403 / NATURAL
EM82 / 17-WAY AMP 403 / NATURAL
EM83 / 28-WAY AMP 403 / NATURAL
EM84 / 22-WAY AMP 403 / NATURAL
EM85 / 12-WAY MULTILOCK 070 / WHITE

Location / Access
PASSENGER SIDE FASCIA / AIRBAG BRACKET
TOP OF BRAKE PEDAL
ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

Front of Gear Selector Assembly
Gear Selector Assembly
Steering Column
Fascia

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color
AC13	20-WAY MULTILOCK 070 / YELLOW
EM1	20-WAY MULTILOCK 070 / WHITE

Location / Access
Fascia Bottom Connector Mounting Bracket / Right Hand Side
Engine Compartment / Adjacent to Right Hand Enclosure

GROUNDS

Ground	Location / Type
FC2BR	EYELET (PAIR) - Right Hand Leg / Right Hand 'A' Post
FC3BR	EYELET (PAIR) - Right Hand Leg / Transmission Tunnel, Left Hand Side
FC4BR	EYELET (PAIR) - Right Hand Leg / Left Hand 'A' Post

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

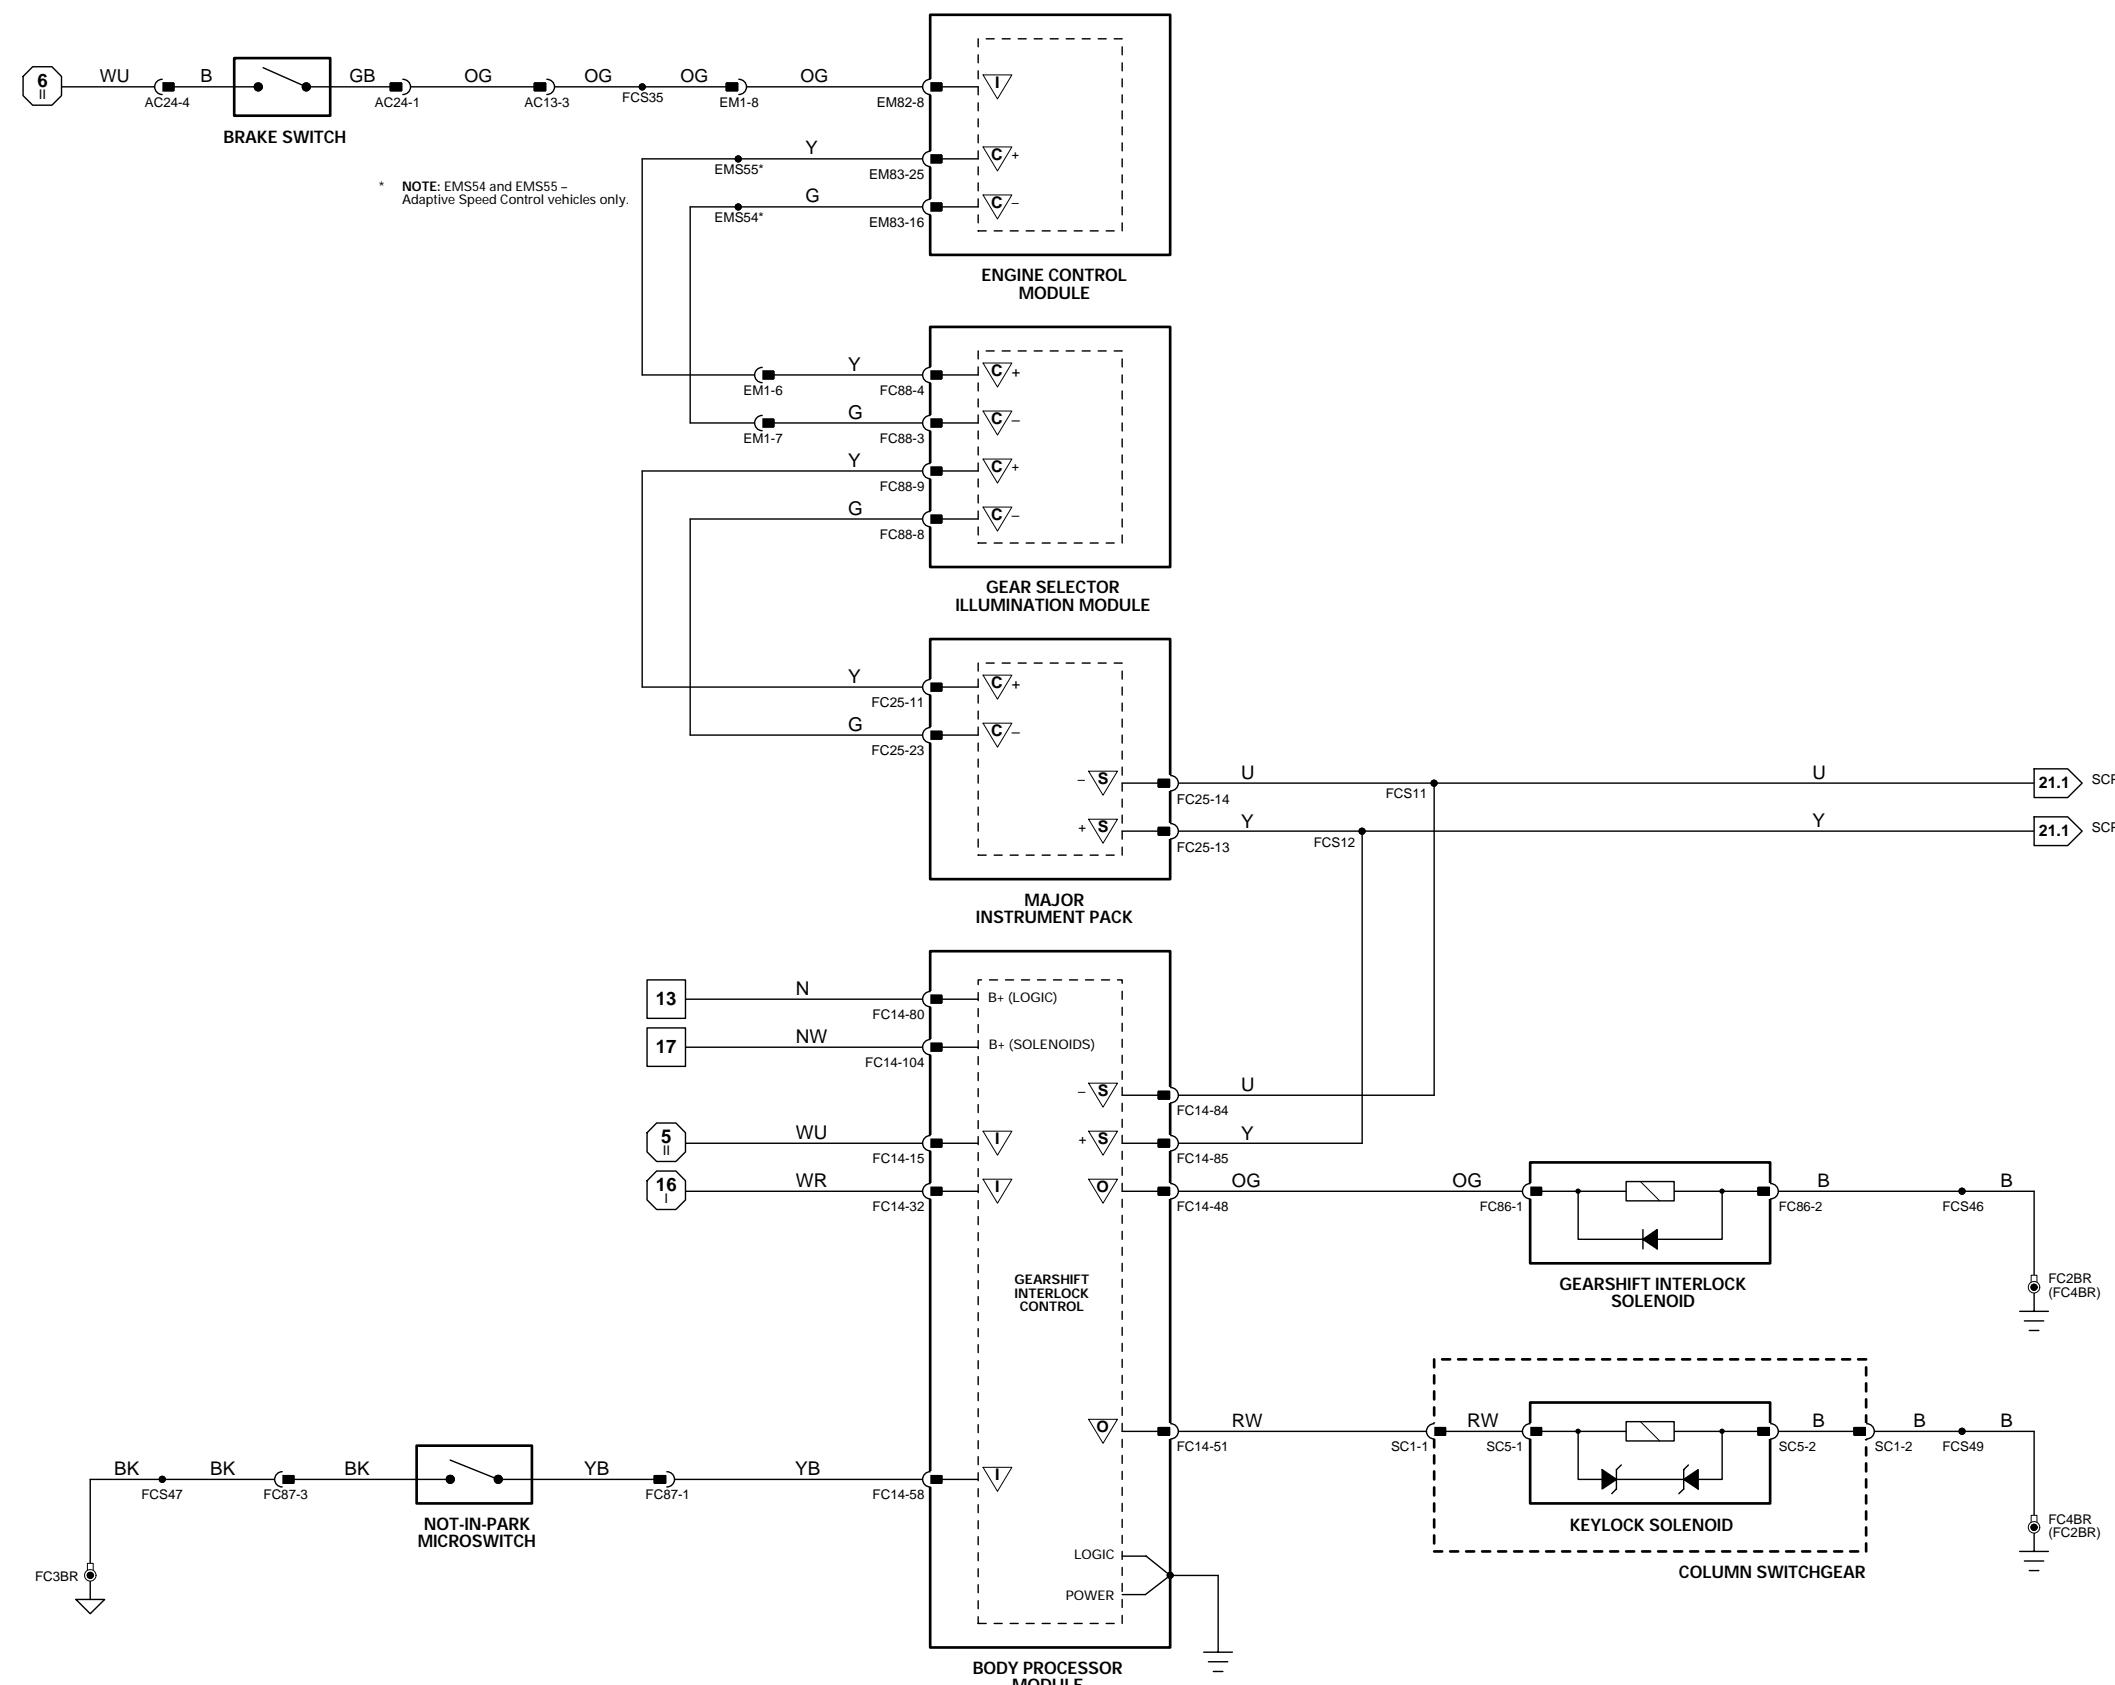

CONTROL MODULE PIN OUT INFORMATION

ABS / TRACTION CONTROL CONTROL MODULE

Pin	Description	Active	Inactive
O	LF37-1	BRAKE FLUID RESERVOIR LEVEL SWITCH REFERENCE	B+
I	LF37-2	BRAKE SWITCH	GROUND
I	LF37-3	RH FRONT WHEEL SPEED SENSOR SIGNAL	2.5 V @ 10 MPH (16 KM/H) = 100 Hz; 20 MPH (32 KM/H) = 200 Hz
SG	LF37-4	RH FRONT WHEEL SPEED SENSOR SIGNAL GROUND	2.5 V @ REST
C	LF37-5	CAN NETWORK	15 - 1500 Hz
SG	LF37-6	RH REAR WHEEL SPEED SENSOR SIGNAL GROUND	2.5 V @ REST
I	LF37-7	RH REAR WHEEL SPEED SENSOR SIGNAL	2.5 V @ 10 MPH (16 KM/H) = 100 Hz; 20 MPH (32 KM/H) = 200 Hz
I	LF37-8	GROUND	GROUND
I	LF37-9	BATTERY POWER SUPPLY	B+
I	LF37-10	NOT USED	
I	LF37-11	NOT USED	
I	LF37-12	BRAKE FLUID RESERVOIR LEVEL SWITCH	GROUND
I	LF37-14	STABILITY / TRACTION CONTROL SWITCH	GROUND (MOMENTARY)
C	LF37-15	CAN NETWORK	15 - 1500 Hz
O	LF37-16	STABILITY / TRACTION CONTROL SWITCH STATE LED	GROUND
I	LF37-17	LH FRONT WHEEL SPEED SENSOR SIGNAL	2.5 V @ 10 MPH (16 KM/H) = 100 Hz; 20 MPH (32 KM/H) = 200 Hz
SG	LF37-18	LH FRONT WHEEL SPEED SENSOR SIGNAL GROUND	2.5 V @ REST
I	LF37-19	NOT USED	
I	LF37-20	IGNITION SWITCHED SUPPLY	B+
I	LF37-21	LH REAR WHEEL SPEED SENSOR SIGNAL	2.5 V @ 10 MPH (16 KM/H) = 100 Hz; 20 MPH (32 KM/H) = 200 Hz
SG	LF37-22	LH REAR WHEEL SPEED SENSOR SIGNAL GROUND	2.5 V @ REST
I	LF37-24	GROUND	GROUND
I	LF37-25	BATTERY POWER SUPPLY	B+

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 06.1

COMPONENTS

Component	Connector / Type / Color	Location / Access
ABS / TRACTION CONTROL CONTROL MODULE	LF37 / 25-WAY AMP HYBRID / BLACK	ENGINE COMPARTMENT / FRONT LEFT
BRAKE FLUID RESERVOIR	EM37 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	ENGINE COMPARTMENT / BRAKE BOOSTER ENCLOSURE
BRAKE SWITCH	AC24 / 4-WAY MULTILOCK 070 / WHITE	TOP OF BRAKE PEDAL
STABILITY / TRACTION CONTROL SWITCH (CENTER CONSOLE SWITCH PACK)	FC55 / 20-WAY FORD IDC / BLACK	CENTER CONSOLE SWITCH PACK
WHEEL SPEED SENSOR - LH FRONT	FL1 / 2-WAY REINSHAGEN METRI 630 / BLACK	WHEEL HUB
WHEEL SPEED SENSOR - LH REAR	RL1 / 2-WAY REINSHAGEN METRI 630 / BLACK	WHEEL HUB
WHEEL SPEED SENSOR - RH FRONT	FR1 / 2-WAY REINSHAGEN METRI 630 / BLACK	WHEEL HUB
WHEEL SPEED SENSOR - RH REAR	RR1 / 2-WAY REINSHAGEN METRI 630 / BLACK	WHEEL HUB

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC13	20-WAY MULTILOCK 070 / YELLOW	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT72	4-WAY ECONOSEAL III LC / BLACK	REAR OF REAR HUB ASSEMBLY / LEFT HAND SIDE
BT73	4-WAY ECONOSEAL III LC / BLACK	REAR OF REAR HUB ASSEMBLY / RIGHT HAND SIDE
LF40	13-WAY ECONOSEAL III LC / BLACK	LHD: ENGINE COMPARTMENT / FORWARD OF BRAKE FLUID RESERVOIR RHD: ENGINE COMPARTMENT / BELOW CONTROL MODULE ENCLOSURE
LF41	2-WAY ECONOSEAL III LC / BLACK	ENGINE COMPARTMENT / ADJACENT TO ENGINE COMPARTMENT FUSE BOX
LF42	2-WAY ECONOSEAL III LC / BLACK	ENGINE COMPARTMENT / ADJACENT TO AIR CLEANER
LF60	20-WAY MULTILOCK 070 / WHITE	LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
RH1	20-WAY MULTILOCK 070 / GREY	BEHIND GLOVE BOX

GROUNDS

Ground	Location / Type
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST
LF3AS	EYELET (SINGLE) / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

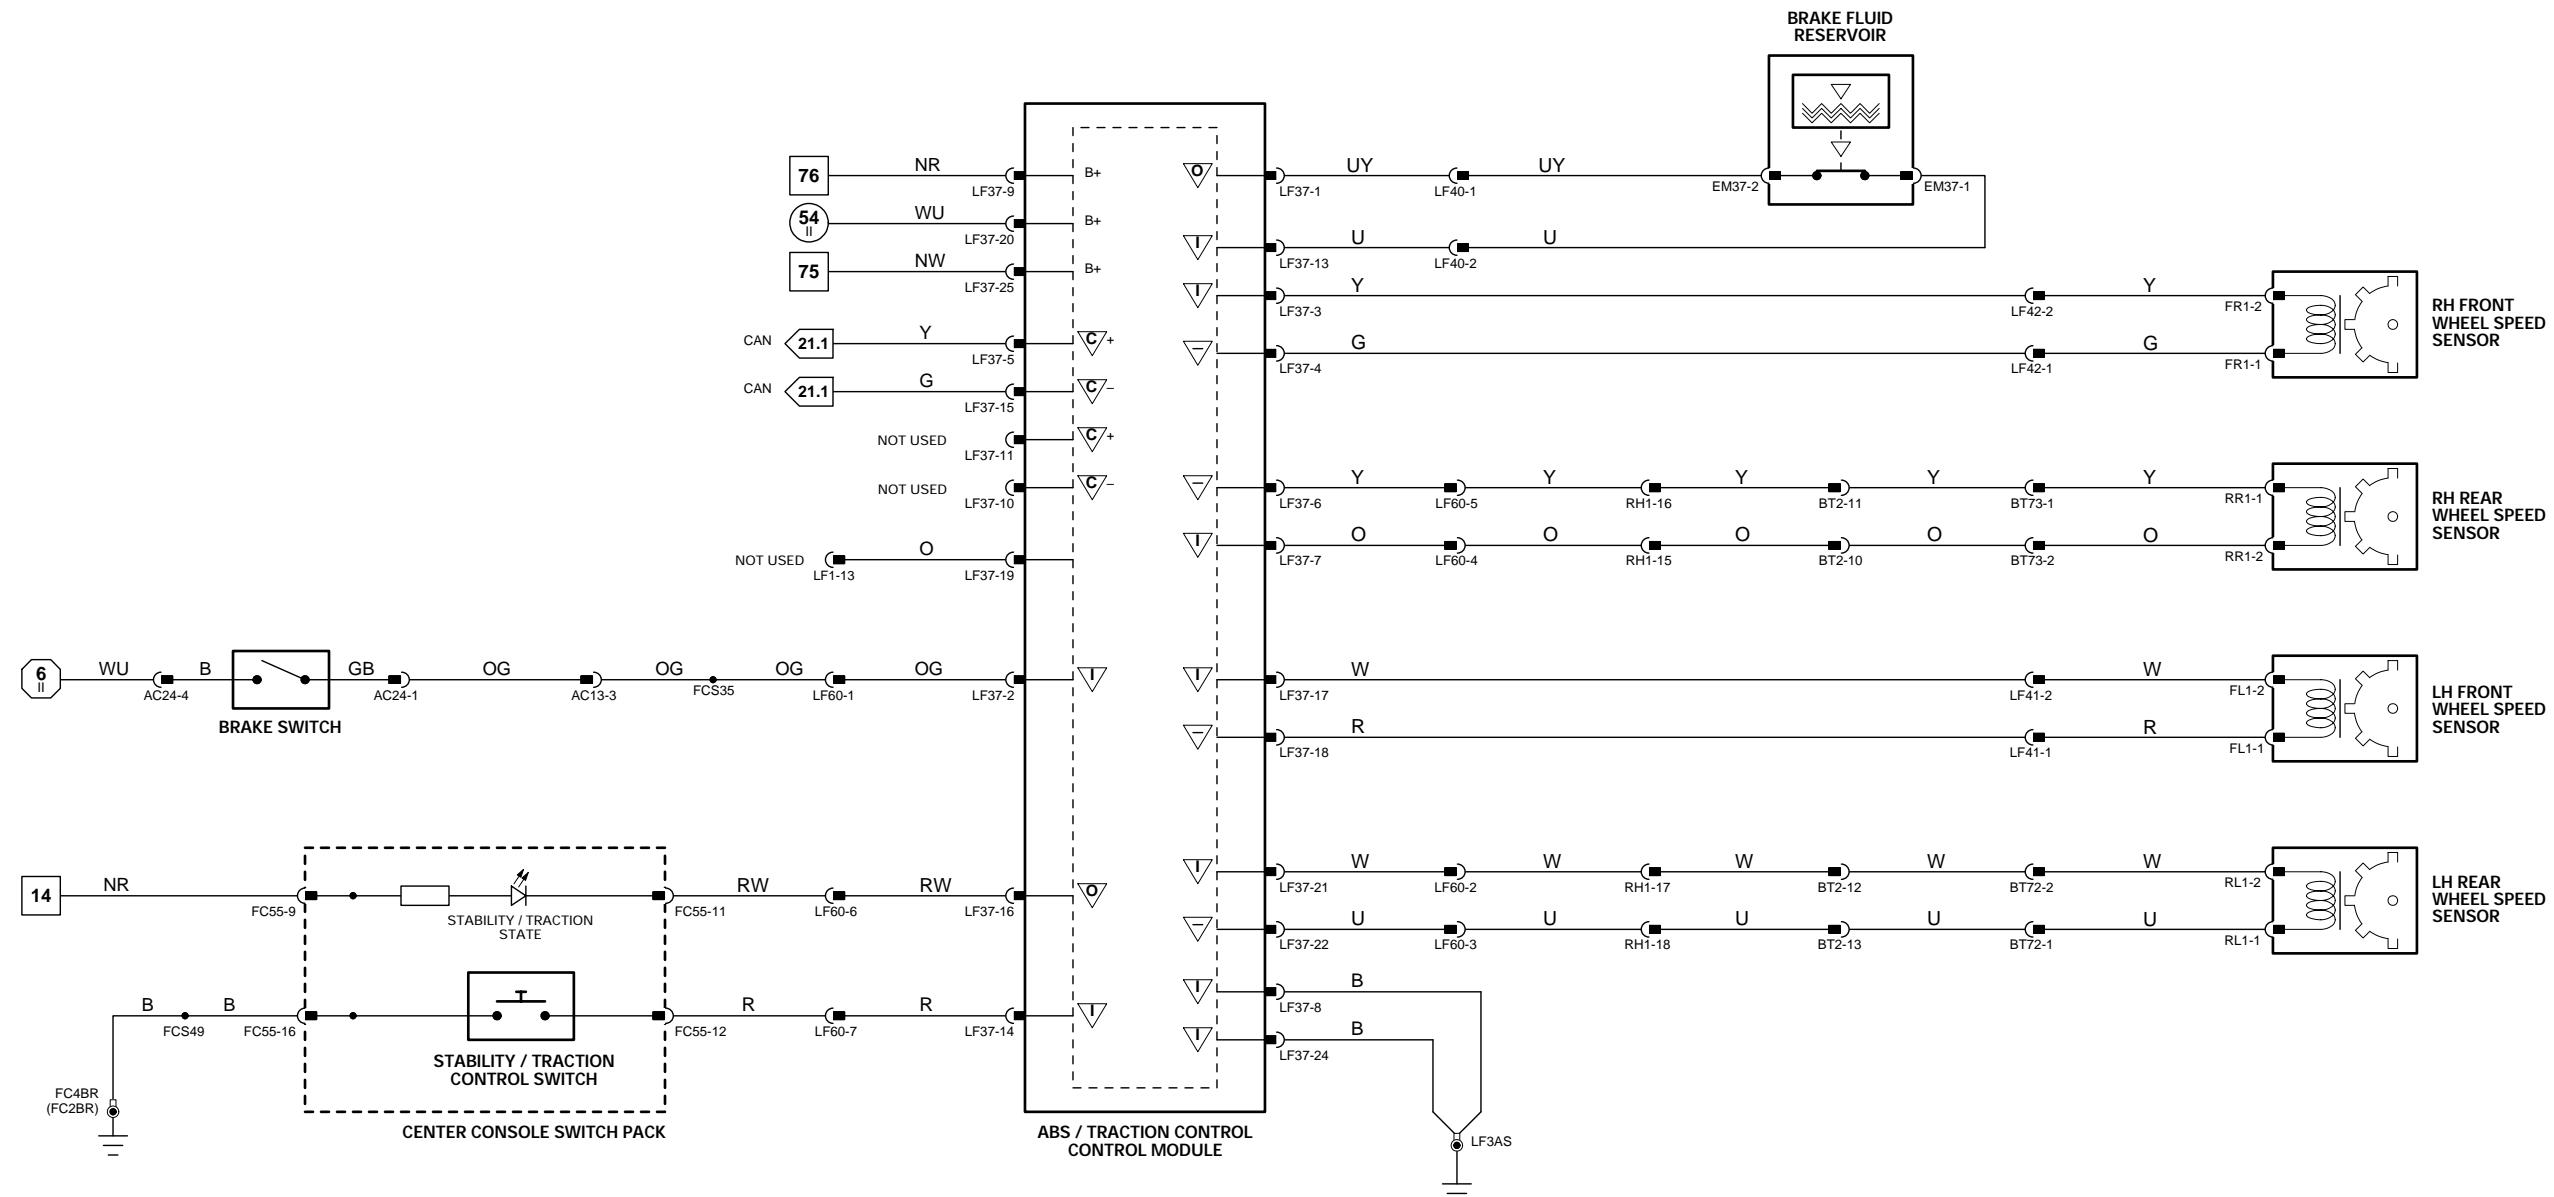

CONTROL MODULE PIN OUT INFORMATION

POWER ASSISTED STEERING CONTROL MODULE

Pin	Description
O FC16-2	TRANSDUCER NEGATIVE
I FC16-4	VEHICLE SPEED
O FC16-5	TRANSDUCER POSITIVE
I FC16-6	IGNITION SWITCHED POWER SUPPLY
I FC16-8	GROUND

Active	Inactive
2 V @ IDLE DECREASING WITH VEHICLE SPEED B+ @ 10 MPH (16 KM/H) = 20 Hz, 20 MPH (32 KM/H) = 40 Hz	
9 V @ IDLE INCREASING WITH VEHICLE SPEED	
B+	0 V
0 V	0 V

Fig. 06.2

COMPONENTS

Component
POWER ASSISTED STEERING CONTROL MODULE
VARIABLE STEERING CONVERTER – LHD
VARIABLE STEERING CONVERTER – RHD

Connector / Type / Color
FC16 / 9-WAY RISTS RELAY / BLACK AND RED
LL2 / 2-WAY AMP JUNIOR POWER TIMER / BLACK
EM18 / 2-WAY AMP JUNIOR POWER TIMER / NATURAL

Location / Access
FASCIA / ADJACENT TO RH SIDE FUSE BOX
STEERING RACK / CONTROL VALVE
STEERING RACK / CONTROL VALVE

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color
EM2	18-WAY MULTILOCK 070 / YELLOW
LL1	2-WAY ECONOSEAL III LC / BLACK

Location / Access
ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
ENGINE COMPARTMENT / ADJACENT TO STARTER MOTOR

GROUNDS

Ground	Location / Type
FC2BR	EYELET (PAIR) – RIGHT HAND LEG / RIGHT HAND 'A' POST
FC4BR	EYELET (PAIR) – RIGHT HAND LEG / LEFT HAND 'A' POST

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000


CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

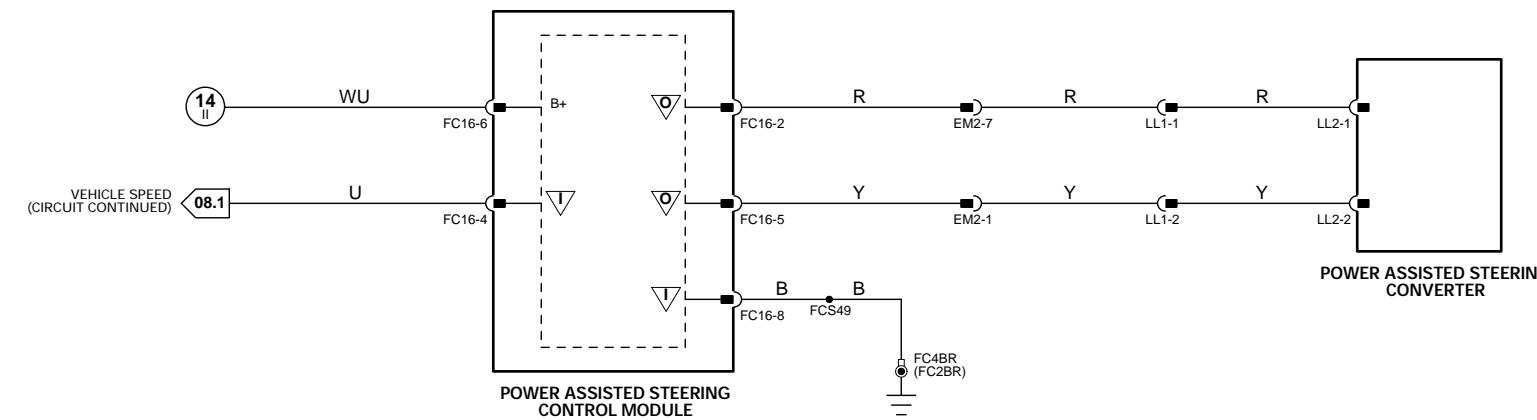

LHD

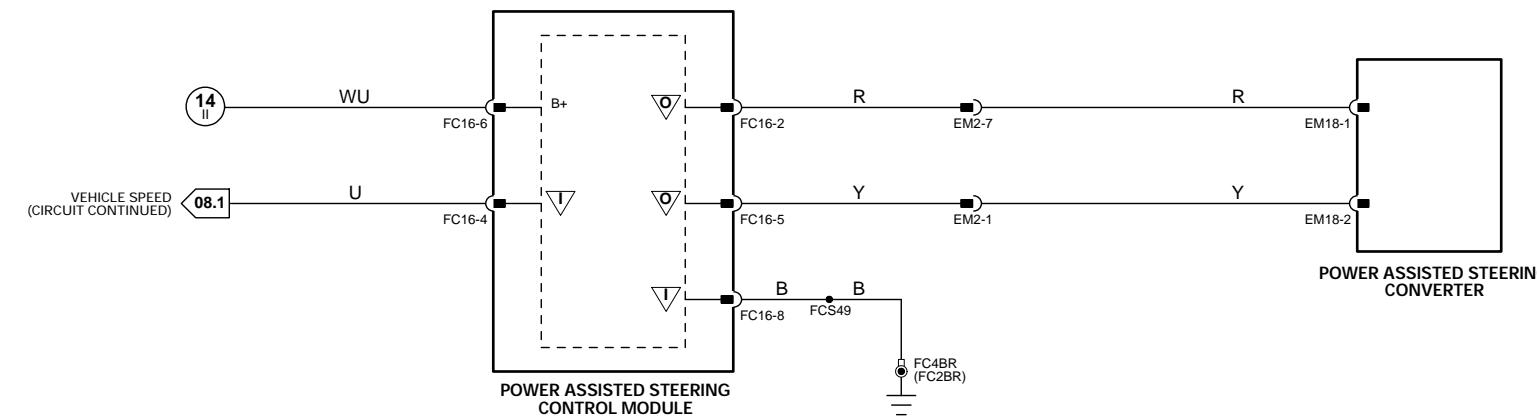

RHD

ADAPTIVE DAMPING CONTROL MODULE

Pin	Description	Active	Inactive
O	BT69-1	MAJOR INSTRUMENT PACK ADAPTIVE DAMPING MIL	GROUND
O	BT69-3	ACCELEROMETER COMMON GROUND SUPPLY	GROUND
D	BT69-10	SERIAL COMMUNICATIONS	B+
I	BT69-11	IGNITION SWITCHED POWER SUPPLY	GROUND
O	BT69-13	LH REAR DAMPER BATTERY POWER SUPPLY	B+
O	BT69-14	RH FRONT DAMPER BATTERY POWER SUPPLY	B+
O	BT69-15	RH REAR DAMPER BATTERY POWER SUPPLY	B+
I	BT69-18	GROUND	GROUND
I	BT69-20	FRONT LATERAL ACCELEROMETER FEEDBACK	< 0.2 V OR > 4.8 V
I	BT69-21	FRONT VERTICAL ACCELEROMETER FEEDBACK	< 0.2 V OR > 4.8 V
I	BT69-22	REAR VERTICAL ACCELEROMETER FEEDBACK	< 0.2 V OR > 4.8 V
I	BT69-24	VEHICLE SPEED SIGNAL	22 Hz @ 10 MPH (16 KM/H); 44 Hz @ 20 MPH (32 KM/H) @ B+
O	BT69-25	ACCELEROMETER COMMON VOLTAGE SUPPLY	5V
I	BT69-26	BRAKE SWITCH	GROUND
I	BT69-27	BATTERY POWER SUPPLY	B+
D	BT69-28	SERIAL COMMUNICATIONS	B+
O	BT69-30	LH FRONT DAMPER BATTERY POWER SUPPLY	GROUND
O	BT69-31	LH FRONT DAMPER	B+
O	BT69-32	LH REAR DAMPER	B+
O	BT69-33	RH FRONT DAMPER	B+
O	BT69-34	RH REAR DAMPER	GROUND

Fig. 06.3

COMPONENTS

Component

ACCELEROMETER - FRONT LATERAL
ACCELEROMETER - REAR VERTICAL
ACCELEROMETER - FRONT VERTICAL
ADAPTIVE DAMPING CONTROL MODULE
BRAKE SWITCH
DAMPER SOLENOID - LH FRONT
DAMPER SOLENOID - LH REAR
DAMPER SOLENOID - RH FRONT
DAMPER SOLENOID - RH REAR

Connector / Type / Color

EM59 / 3-WAY AMP MQL / BLACK
BT52 / 3-WAY AMP MQL / BLACK
FC7 / 3-WAY AMP MQL / BLACK
BT69 / 35-WAY AMP / BLACK
AC24 / 4-WAY MULTILOCK 070 / WHITE
LF43 / 2-WAY DELPHI/REINSHAGEN / BLACK
DL2 / 2-WAY DELPHI/REINSHAGEN / BLACK
LF44 / 2-WAY DELPHI/REINSHAGEN / BLACK
DR2 / 2-WAY DELPHI/REINSHAGEN / BLACK

Location / Access

ENGINE COMPARTMENT / ADJACENT TO ECM
TRUNK / BELOW FUEL TANK
CENTER CONSOLE / BEHIND ICE HEAD UNIT
TRUNK / ADJACENT TO ELECTRICAL CARRIER
TOP OF BRAKE PEDAL
TOP OF LEFT HAND FRONT DAMPER
TOP OF LEFT HAND REAR DAMPER
TOP OF RIGHT HAND FRONT DAMPER
TOP OF RIGHT HAND REAR DAMPER

HARNESS-TO-HARNESS CONNECTORS

Connector

AC13 20-WAY MULTILOCK 070 / YELLOW
BT1 20-WAY MULTILOCK 070 / WHITE
BT3 18-WAY MULTILOCK 070 / YELLOW
BT72 4-WAY ECONOSEAL III LC / BLACK
BT73 4-WAY ECONOSEAL III LC / BLACK
EM3 14-WAY MULTILOCK 070 / GREY
LF1 20-WAY MULTILOCK 070 / GREY
LF60 20-WAY MULTILOCK 070 / WHITE
RH1 20-WAY MULTILOCK 070 / GREY
RH12 18-WAY MULTILOCK 070 / YELLOW
RL3 2-WAY AUGAT 1.6 / BLACK
RR3 2-WAY AUGAT 1.6 / BLACK

Location / Access

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
TRUNK / BELOW FUEL TANK
TRUNK / BELOW FUEL TANK
ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
BEHIND GLOVE BOX
REAR OF CENTER CONSOLE ASSEMBLY
REAR OF REAR HUB ASSEMBLY / LEFT HAND SIDE
REAR OF REAR HUB ASSEMBLY / RIGHT HAND SIDE

GROUNDS

Ground

BT2BL Location / Type
EYELET (PAIR) - LEFT HAND LEG / TRUNK, RIGHT REAR

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	KHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

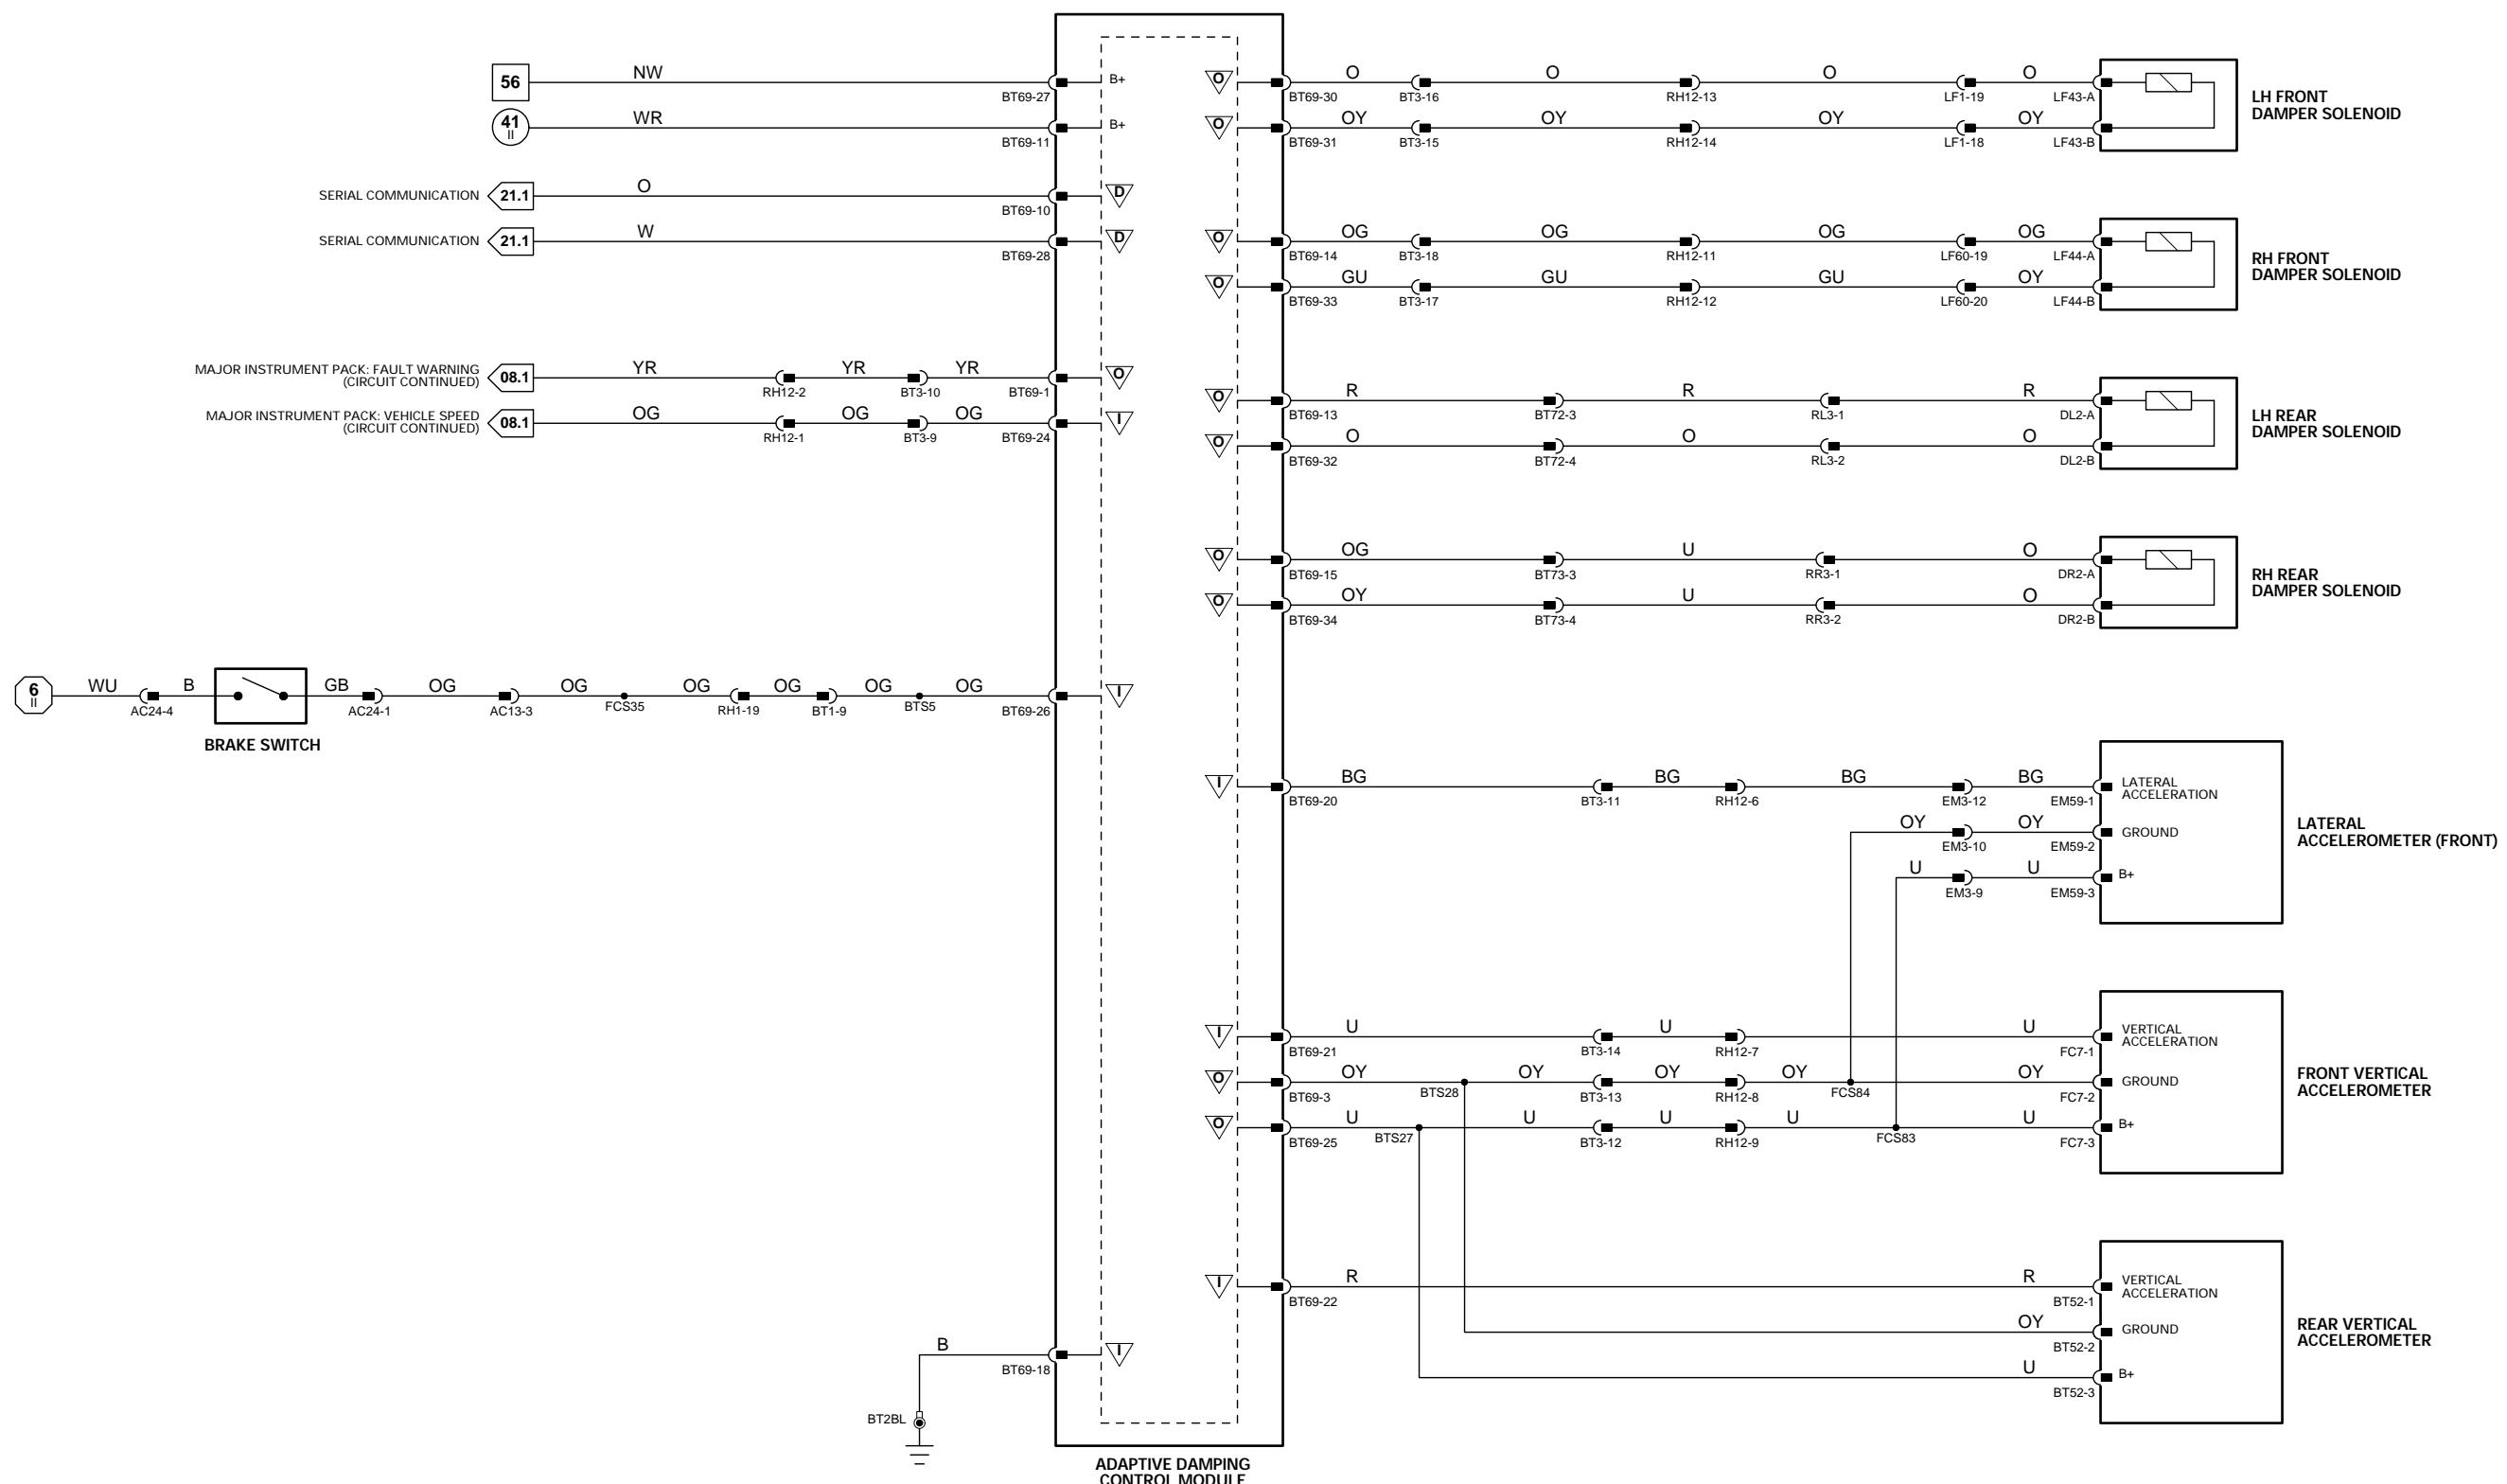

CONTROL MODULE PIN OUT INFORMATION

ADAPTIVE SPEED CONTROL BOOSTER CONTROL MODULE

Pin	Description	Active	Inactive
O AL4-01	AIR CONTROL VALVE SOLENOID DRIVE	PWM (-VE)	
SS AL4-02	RELEASE SWITCH REFERENCE VOLTAGE	5V	
SS AL4-04	BRAKE BOOSTER PRESSURE SENSOR 2 REFERENCE VOLTAGE	5V	
SG AL4-05	BRAKE BOOSTER PRESSURE SENSOR 2 SIGNAL GROUND	GND	
SG AL4-07	BRAKE BOOSTER PRESSURE SENSOR 1 SIGNAL GROUND	GND	
SS AL4-08	BRAKE BOOSTER PRESSURE SENSOR 1 REFERENCE VOLTAGE	5V	
O AL4-09	AIR CONTROL VALVE SOLENOID POWER SUPPLY	5V	
I AL4-10	RELEASE SWITCH NORMALLY OPEN	GND	
I AL4-11	RELEASE SWITCH NORMALLY CLOSED	5V	
I AL4-13	BRAKE BOOSTER PRESSURE SENSOR 2 FEEDBACK	0-5V	
I AL4-16	BRAKE BOOSTER PRESSURE SENSOR 1 FEEDBACK	0-5V	
I EM67-02	IGNITION SWITCHED SUPPLY	B+	
C EM67-03	CAN NETWORK	15-1500 Hz	
I EM67-06	BATTERY POWER SUPPLY	B+	
C EM67-07	CAN NETWORK	15-1500 Hz	
I EM67-10	POWER GROUND	GND	

ADAPTIVE SPEED CONTROL CONTROL MODULE

Pin	Description	Active	Inactive
I LF61-01	BATTERY POWER SUPPLY	B+	
I LF61-02	POWER GROUND	GND	
I LF61-07	IGNITION SWITCHED POWER SUPPLY	B+	
C LF61-04	CAN NETWORK	15-1500 Hz	
C LF61-05	CAN NETWORK	15-1500 Hz	
C LF61-10	CAN NETWORK	15-1500 Hz	
C LF61-11	CAN NETWORK	15-1500 Hz	

ENGINE CONTROL MODULE

Pin	Description	Active	Inactive
O EM80-16	SPEED CONTROL ON STATUS LED	GND	
I EM80-20	SPEED CONTROL BRAKE CANCEL REQUEST	GND	
I EM81-13	SPEED CONTROL ON REQUEST	B+	
I EM81-14	SPEED CONTROL SET +/-	7.3V (+), 8.8V (-)B+	
I EM81-15	SPEED CONTROL CANCEL / RESUME	7.3V = RESUME, 8.8V = CANCEL B+	
C EM83-15	CAN NETWORK	15-1500 Hz	
C EM83-16	CAN NETWORK	15-1500 Hz	
C EM83-24	CAN NETWORK	15-1500 Hz	
C EM83-25	CAN NETWORK	15-1500 Hz	

TRANSMISSION CONTROL MODULE: AJ27 N/A

Pin	Description	Active	Inactive
C EM7-82	CAN NETWORK	15-1500 Hz	
C EM7-83	CAN NETWORK	15-1500 Hz	
C EM7-85	CAN NETWORK	15-1500 Hz	
C EM7-86	CAN NETWORK	15-1500 Hz	

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 06.4

COMPONENTS

Component
ADAPTIVE SPEED CONTROL BOOSTER CONTROL MODULE
ADAPTIVE SPEED CONTROL BRAKE BOOSTER
ADAPTIVE SPEED CONTROL CONTROL MODULE
ADAPTIVE SPEED CONTROL MASTER SWITCH
BRAKE BOOSTER PRESSURE SENSOR 1
BRAKE BOOSTER PRESSURE SENSOR 2
BRAKE CANCEL SWITCH
ENGINE CONTROL MODULE
SPEED CONTROL SWITCHES (STEERING WHEEL)

Connector / Type / Color
AL4 / 16-WAY / BLACK
EM87 / 10-WAY AMP JUNIOR POWER TIMER / BLACK
AL1 / 6-WAY / BLACK
LF61 / 12-WAY ECONOSEAL III LC / BLACK
FC63 / 10-WAY AMP MQL / NATURAL
AL2 / 3-WAY / BLACK
AL3 / 3-WAY / BLACK
AC24 / 4-WAY MULTILOCK 070 / WHITE
EM80 / 31-WAY AMP 403 / NATURAL
EM81 / 24-WAY AMP 403 / NATURAL
EM82 / 17-WAY AMP 403 / NATURAL
EM83 / 28-WAY AMP 403 / NATURAL
EM84 / 22-WAY AMP 403 / NATURAL
EM85 / 12-WAY MULTILOCK 070 / WHITE
SW3 / 3-WAY EPC / BLACK

Location / Access
ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
ADJACENT TO BRAKE FLUID RESERVOIR
ENGINE COMPARTMENT / FORWARD OF RADIATOR
REARWARD OF GEAR SELECTOR
ADJACENT TO BRAKE FLUID RESERVOIR
ADJACENT TO BRAKE FLUID RESERVOIR
TOP OF BRAKE PEDAL
ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
CENTER OF STEERING WHEEL

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color
AC13	20-WAY MULTILOCK 070 / YELLOW
EM3	14-WAY MULTILOCK 070 / GREY
LF40	13-WAY ECONOSEAL III LC / BLACK
SC3	12-WAY MULTILOCK 070 / GREY

Location / Access
FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
LHD: ENGINE COMPARTMENT / FORWARD OF BRAKE FLUID RESERVOIR
RHD: ENGINE COMPARTMENT / BELOW CONTROL MODULE ENCLOSURE
RIGHT HAND SIDE OF STEERING COLUMN

GROUNDS

Ground	Location / Type
EM1BR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM2BR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
LF1BS	EYELET (SINGLE) / RIGHT HAND HEADLAMP

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

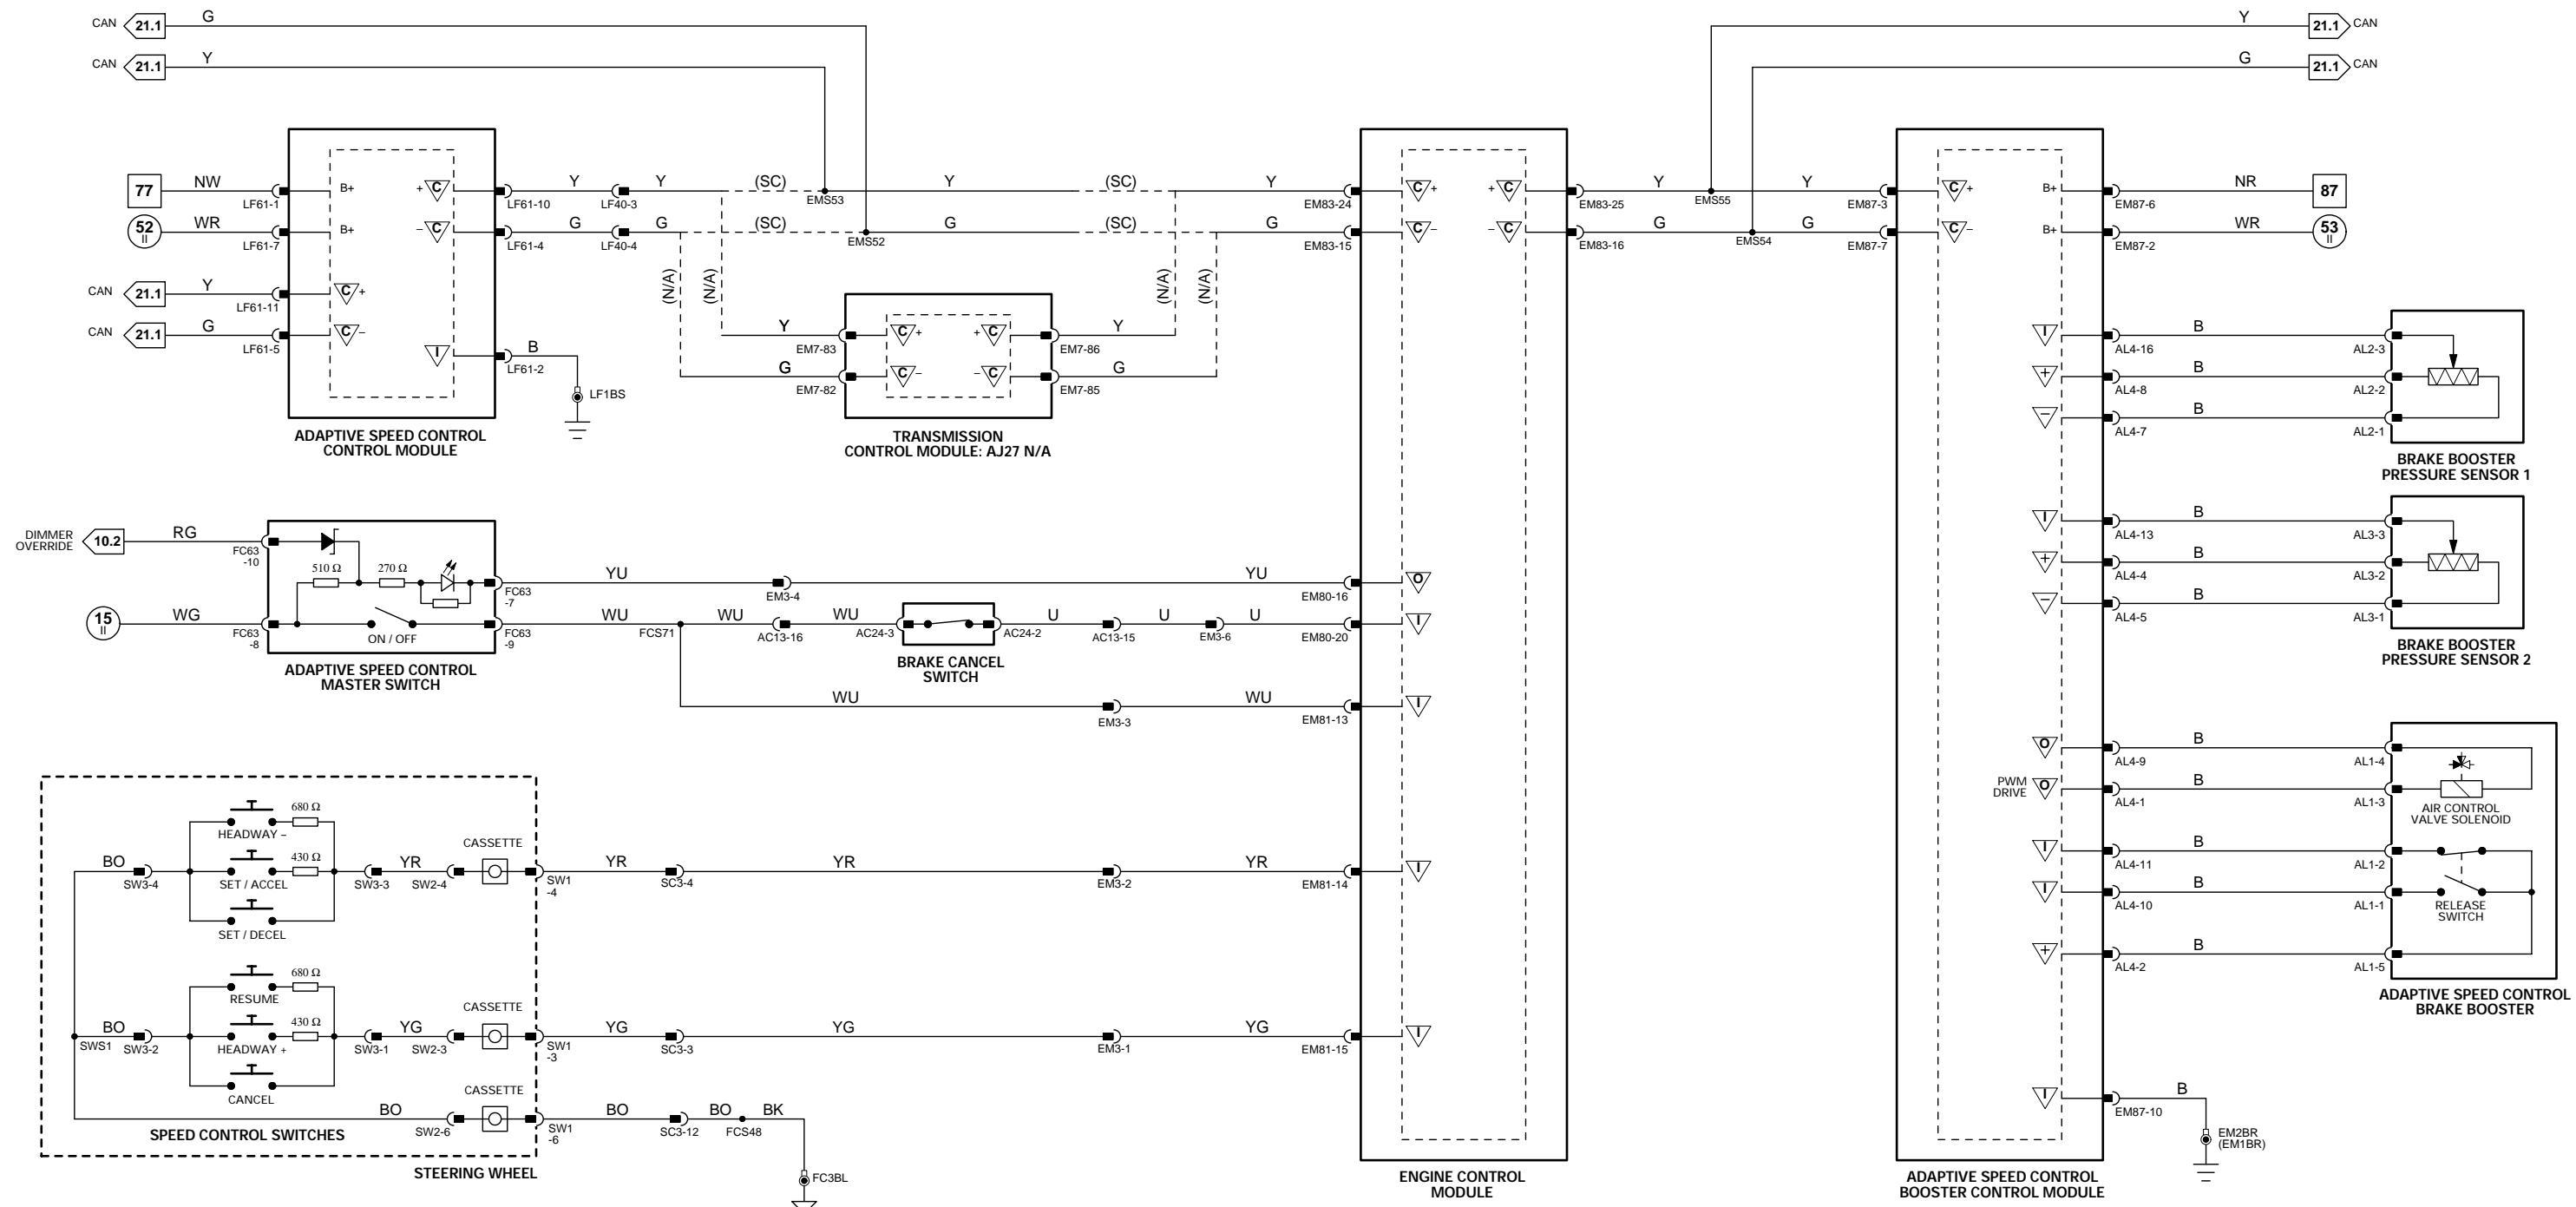

NOTE: ECM power supplies and grounds
shown on Figs. 04.1, 04.3.

NOTE: Refer to Figs. 04.1 and 04.3 for the
Throttle Control portion of Engine Management.

AIR CONDITIONING CONTROL MODULE

	Pin	Description	Active	Inactive
O	AC1-6	DEFROST VENT SERVO MOTOR	B+	0V
O	AC1-7	CENTER VENT SERVO MOTOR	B+	0V
O	AC1-8	LH FRESH / RECIRCULATION VENT MOTOR	B+	0V
O	AC1-9	RH FRESH / RECIRCULATION VENT MOTOR	B+	0V
O	AC1-12	FOOTWELL VENT SERVO MOTOR	B+	0V
O	AC1-13	COOL AIR BYPASS VENT SERVO MOTOR	B+	0V
O	AC1-19	DEFROST VENT SERVO MOTOR	B+	0V
O	AC1-20	CENTER VENT SERVO MOTOR	B+	0V
O	AC1-21	LH FRESH / RECIRCULATION VENT SERVO MOTOR	B+	0V
O	AC1-22	RH FRESH / RECIRCULATION VENT SERVO MOTOR	B+	0V
O	AC1-25	FOOTWELL SERVO MOTOR	B+	0V
O	AC1-26	COOL AIR BYPASS SERVO MOTOR	B+	0V
I	AC2-1	SOLAR SENSOR FEEDBACK	0.75 V - 4.75 V; INCREASING WITH SOLAR LOAD >3.5 V = OPEN >3.5 V = OPEN B+ (1.45 Hz)	<1V = CLOSED <1V = CLOSED <1V = CLOSED <1V = CLOSED <1V = CLOSED <1V = CLOSED
I	AC2-2	CENTER VENT POTENTIOMETER FEEDBACK		
I	AC2-3	RH FRESH / RECIRCULATION VENT POTENTIOMETER FEEDBACK		
I	AC2-5	COOL AIR BYPASS VENT POTENTIOMETER FEEDBACK		
I	AC2-6	ENGINE COOLANT TEMPERATURE		
I	AC2-10	DEFROST VENT POTENTIOMETER FEEDBACK	2.5 V @ 90°C; DECREASING WITH TEMPERATURE >3.5 V = OPEN	<1V = CLOSED
I	AC2-11	LH FRESH / RECIRCULATION VENT POTENTIOMETER FEEDBACK	>3.5 V = OPEN	<1V = CLOSED
I	AC2-13	FOOTWELL VENT POTENTIOMETER FEEDBACK	>3.5 V = OPEN	<1V = CLOSED
O	AC3-2	CLOCK		
D	AC3-3	SERIAL DATA OUTPUT TO CONTROL PANEL		
I	AC3-5	AMBIENT TEMPERATURE SENSOR FEEDBACK	2.18 V @ 25°C; DECREASING WITH TEMPERATURE	
I	AC3-6	HEATER MATRIX TEMPERATURE SENSOR FEEDBACK	2.25 V @ 20°C; DECREASING WITH TEMPERATURE	
D	AC3-7	SERIAL DATA INPUT FROM CONTROL PANEL		
O	AC3-8	START	B+ (MOMENTARY)	0V
I	AC3-11	IN CAR TEMPERATURE SENSOR FEEDBACK	3.25 V @ 0°C; DECREASING WITH TEMPERATURE	
I	AC3-12	EVAPORATOR TEMPERATURE SENSOR FEEDBACK	3.25 V @ 0°C; DECREASING WITH TEMPERATURE	
I	AC4-1	IGNITION SWITCHED POWER SUPPLY	B+	0V
I	AC4-2	ISOLATE RELAY CONTROLLED BATTERY POWER SUPPLY	B+	0V
I	AC4-3	IGNITION SWITCHED GROUND	0V	B+
O	AC4-4	CONTROL PANEL BATTERY POWER SUPPLY	B+	0V
I	AC4-5	BATTERY POWER SUPPLY	B+	B+
I	AC4-6	ENGINE SPEED SIGNAL	5 V @ 1000 RPM = 45 Hz; 2000 RPM = 90 Hz	
SS	AC4-8	POTENTIOMETER COMMON REFERENCE VOLTAGE	5 V	5V
D	AC4-10	SERIAL COMMUNICATIONS INPUT		
O	AC4-12	CONTROL PANEL BATTERY POWER SUPPLY	B+	B+
I	AC4-13	GROUND	0V	0V
O	AC4-14	CONTROL PANEL GROUND SUPPLY	B+	0V
O	AC4-15	ISOLATE RELAY ACTIVE	0V	0V
I	AC4-16	VEHICLE SPEED SIGNAL	B+	0V
O	AC4-18	ASPIRATOR MOTOR POWER SUPPLY	22 Hz @ 10 MPH (16 KM/H); 44 Hz @ 20 MPH (32 KM/H) @ B+	
SG	AC4-19	POTENTIOMETER COMMON REFERENCE GROUND	B+	0V
I	AC4-20	GROUND	0V	0V
D	AC4-21	SERIAL COMMUNICATIONS OUTPUT		

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Fig. 07.1

COMPONENTS			
Component	Connector / Type / Color	Location / Access	
AIR CONDITIONING CONTROL MODULE	AC1 / 26-WAY MULTILOCK 47 / GREY AC2 / 16-WAY MULTILOCK 47 / GREY AC3 / 12-WAY MULTILOCK 47 / GREY AC4 / 22-WAY MULTILOCK 47 / GREY	A/C UNIT / RIGHT HAND SIDE	
AIR CONDITIONING CONTROL PANEL	FC43 / 12-WAY MULTILOCK 040 / BLUE	CENTER CONSOLE	
AIR INTAKE - LH BLOWER	AC5 / 15-WAY SUMITOMO 090 HYBRID / GREEN	A/C UNIT / LEFT HAND SIDE	
AIR INTAKE - RH BLOWER	AC6 / 15-WAY SUMITOMO 090 HYBRID / GREEN	A/C UNIT / RIGHT HAND SIDE	
AMBIENT TEMPERATURE SENSOR	LF29 / 2-WAY YAZAKI 0902 / BLACK	ADJACENT TO RIGHT HAND HORN	
ASPIRATOR ASSEMBLY	FC12 / 4-WAY MULTILOCK 070 / WHITE	DRIVER KNEE BOLSTER	
EVAPORATOR / HEATER MATRIX ASSEMBLY	AC7 / 12-WAY MULTILOCK 040 / BLACK	A/C UNIT / LEFT HAND SIDE	
SOLAR SENSOR	FC52 / 2-WAY MULTILOCK 070 / GREY	DRIVER SIDE FASCIA / ADJACENT TO DEFROST VENT	
VENT ASSEMBLY	FC44 / 12-WAY MULTILOCK 040 / BLACK	A/C UNIT / TOP	
RELAYS			
Relay	Color / Stripe	Connector / Color	Location / Access
AIR CONDITIONING ISOLATE RELAY	BLACK	FC24 / BLACK	RH FASCIA RELAYS
HARNESS-TO-HARNESS CONNECTORS			
Connector	Type / Color	Location / Access	
AC12	20-WAY MULTILOCK 070 / WHITE	FASCIA TOP CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE	
AC13	20-WAY MULTILOCK 070 / YELLOW	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE	
AC15	20-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE	
AC15	20-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE	
LF60	20-WAY MULTILOCK 070 / WHITE	LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM	
GROUNDS			
Ground	Location / Type		
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST		
FC3CS	EYELET (SINGLE) / TRANSMISSION TUNNEL, LEFT HAND SIDE		
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST		

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

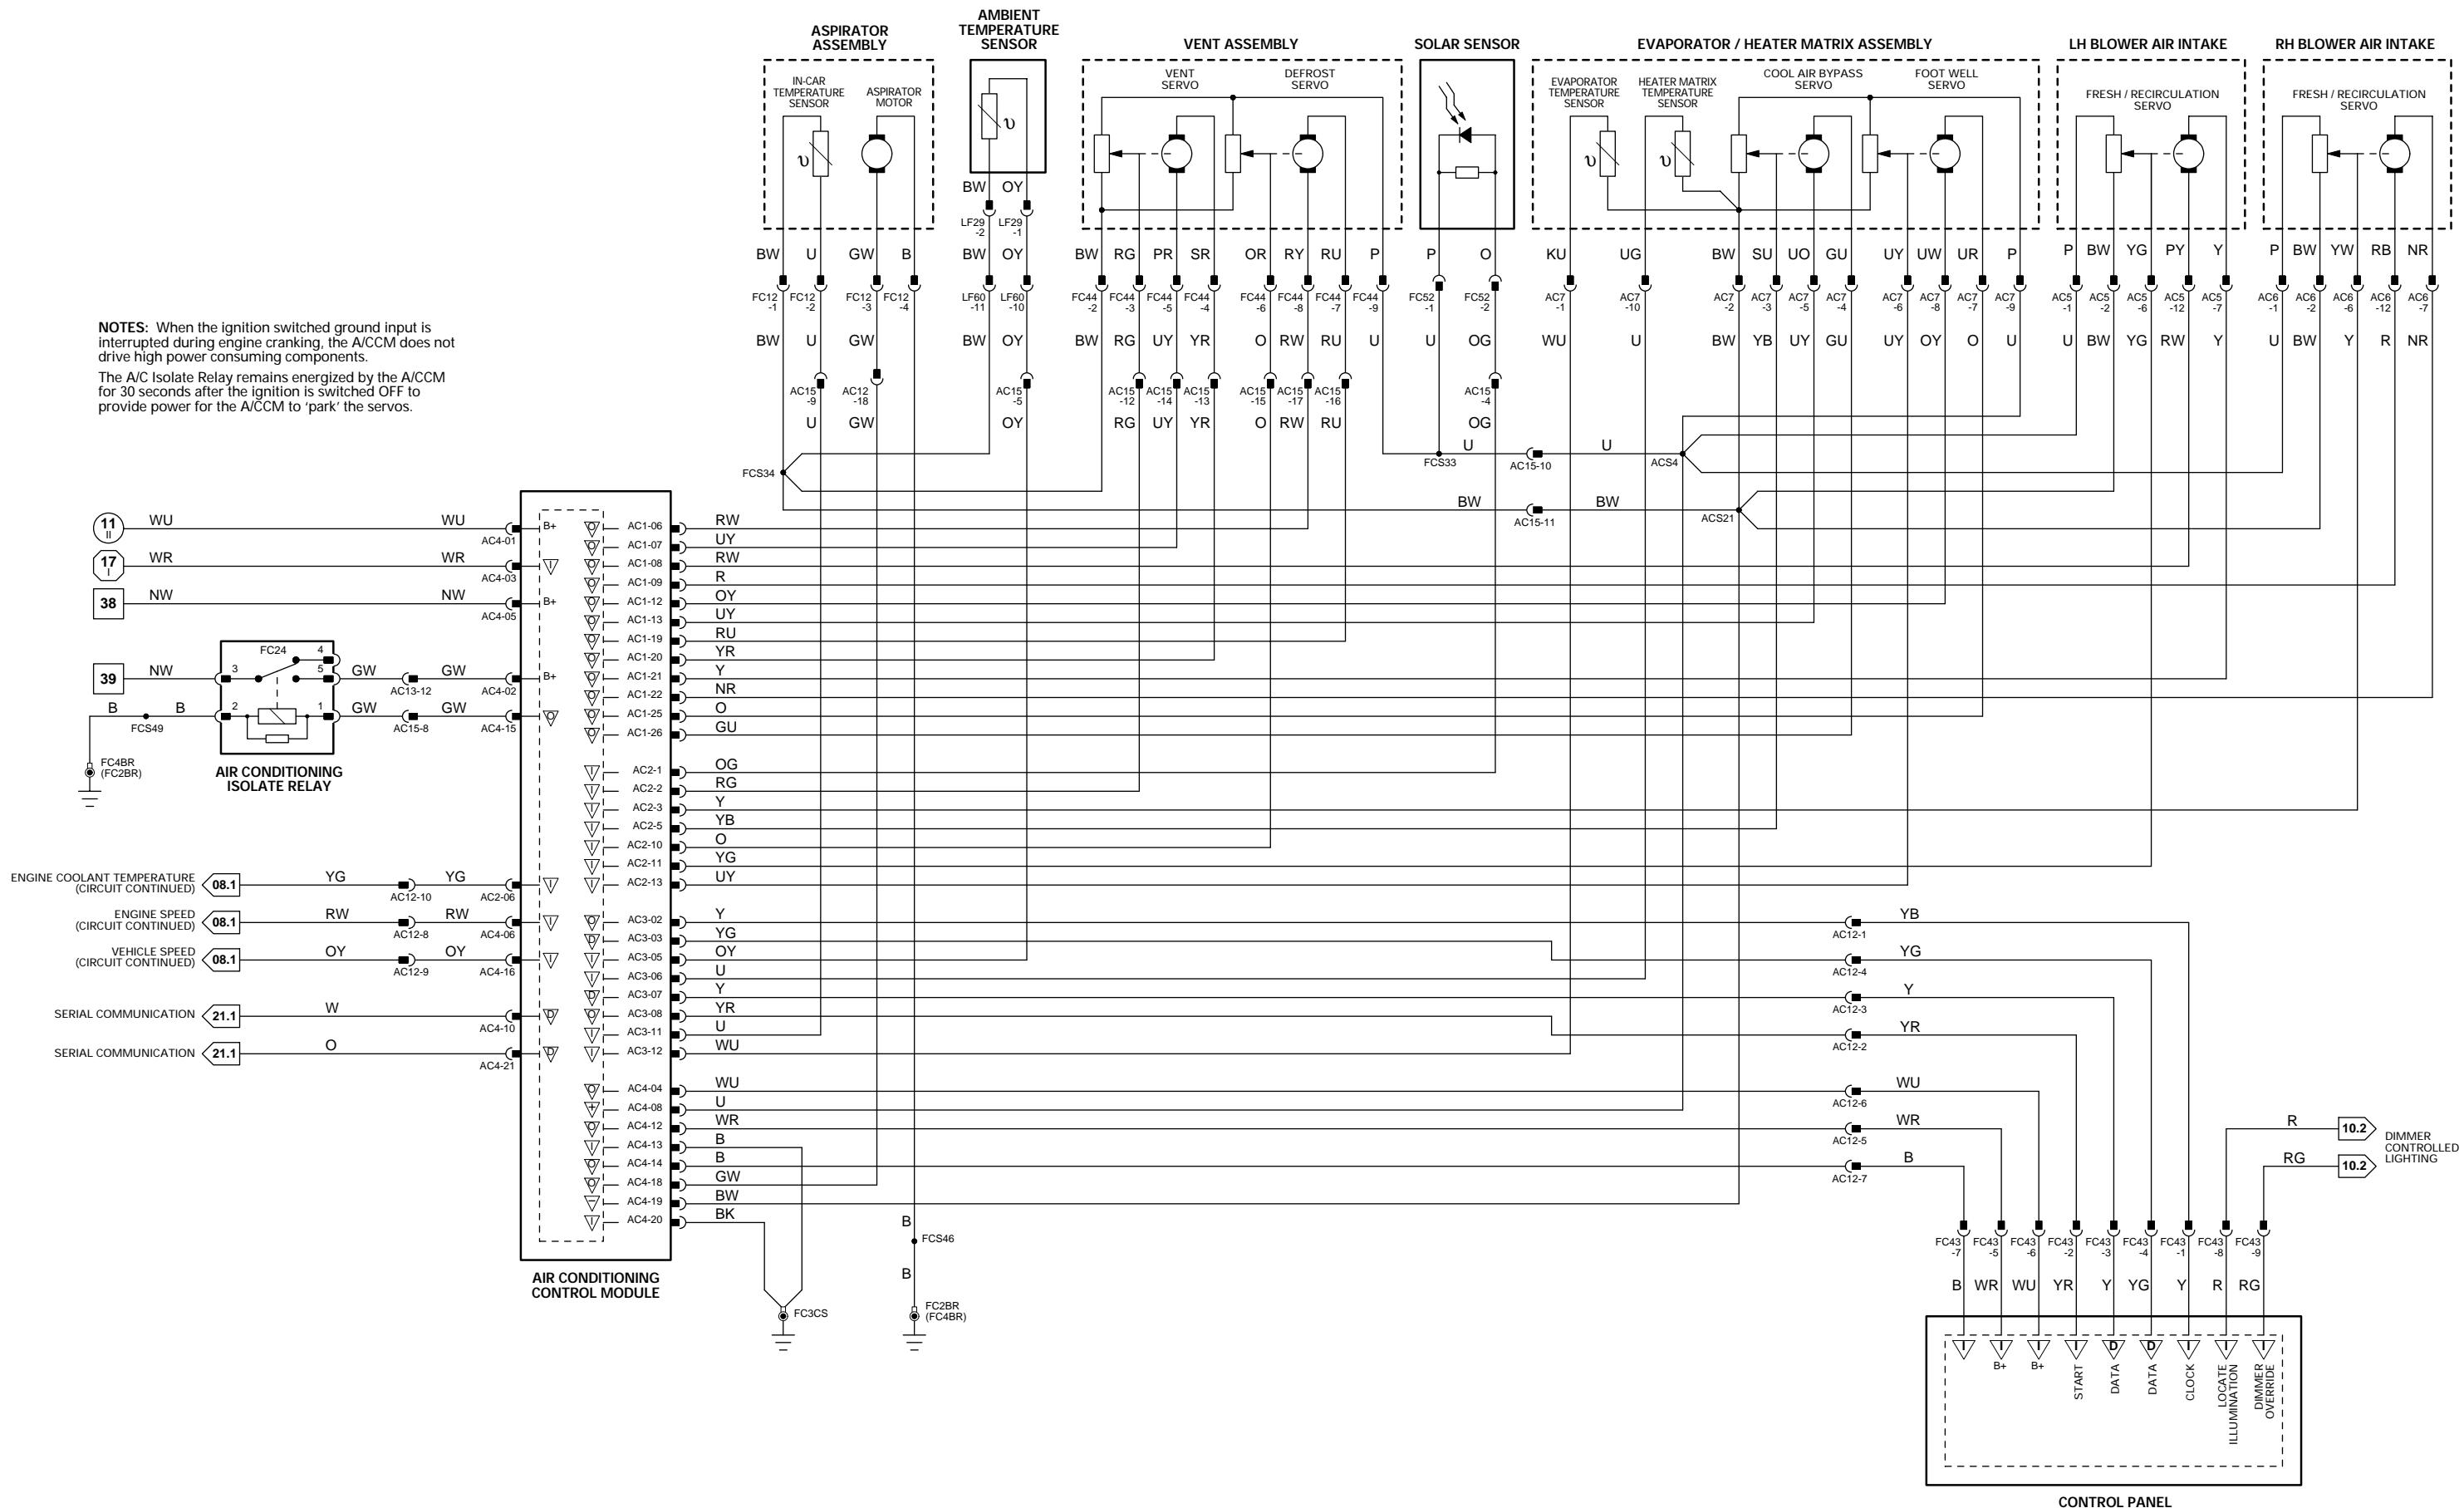


Fig. 07.2

AIR CONDITIONING CONTROL MODULE

Pin	Description	Active	Inactive
I	AC1-1	COMPRESSOR CLUTCH STATUS	B+(ON)
O	AC1-2	HEATER VALVE ACTIVE	B+
O	AC1-3	RH BLOWER MOTOR RELAY ACTIVE	0 V
O	AC1-4	LH / RH WINDSHIELD HEATER RELAYS ACTIVATE	0 V
O	AC1-5	DOOR MIRROR HEATER RELAY ACTIVATE	B+
O	AC1-6	LH BLOWER MOTOR RELAY ACTIVE	0 V
O	AC1-7	HEATER PUMP RELAY ACTIVE	B+
O	AC1-8	HEATED BACKLIGHT RELAY ACTIVE	0 V
I	AC2-7	RH BLOWER SPEED FEEDBACK	7.6 V = LOW SPEED
O	AC2-8	RH BLOWER SPEED CONTROL DRIVE SIGNAL	1.3 V = LOW SPEED
I	AC2-15	LH BLOWER SPEED FEEDBACK	7.6 V = LOW SPEED
O	AC2-16	LH BLOWER SPEED CONTROL DRIVE SIGNAL	1.3 V = LOW SPEED
O	AC3-1	AIR CONDITIONING ELECTRICAL LOAD SIGNAL	B+
I	AC4-7	LOAD INHIBIT	0 V
O	AC4-9	COMPRESSOR CLUTCH ON REQUEST	B+
I	AC4-17	REFRIGERANT 4-WAY PRESSURE SWITCH	0 V (2 - 30 BAR)

ENGINE CONTROL MODULE

Pin	Description	Active	Inactive
I	EM80-10	REFRIGERANT 4-WAY PRESSURE SWITCH HIGH PRESSURE	GROUND @ 20 BAR (290 PSI)
I	EM80-11	A/CM COMPRESSOR CLUTCH REQUEST	B+
O	EM80-12	ELECTRICAL LOAD INHIBIT	GROUND
I	EM80-22	REFRIGERANT 4-WAY PRESSURE SWITCH HIGH PRESSURE	GROUND @ 12 BAR (174 PSI)
I	EM80-23	A/CM ELECTRICAL LOAD REQUEST (HEATED WINDSHIELD)	B+
O	EM80-25	AIR CONDITIONING COMPRESSOR RELAY ACTIVE	GROUND
O	EM81-04	PARALLEL (HIGH) SPEED FAN ACTIVATE	GROUND
O	EM81-05	SERIES (LOW) SPEED FAN ACTIVATE	GROUND

COMPONENTS

Component	Connector / Type / Color	Location / Access
AIR CONDITIONING COMPRESSOR CLUTCH	PI36 / 1-WAY SUMITOMO 090 A-TYPE / BLACK	ENGINE COMPARTMENT / A/C COMPRESSOR
AIR CONDITIONING CONTROL MODULE	AC1 / 26-WAY MULTILOCK 47 / GREY	A/C UNIT / RIGHT HAND SIDE
BLOWER MOTOR – LH	AC2 / 16-WAY MULTILOCK 47 / GREY	A/C UNIT / LEFT HAND SIDE
BLOWER MOTOR – RH	AC3 / 12-WAY MULTILOCK 47 / GREY	A/C UNIT / RIGHT HAND SIDE
ENGINE CONTROL MODULE	AC4 / 22-WAY MULTILOCK 47 / GREY	ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
FUSE BOX – ENGINE COMPARTMENT	AC5 / 15-WAY SUMITOMO 090 HYBRID / GREEN	ENGINE COMPARTMENT / LEFT FRONT
FUSE BOX – TRUNK	AC6 / 15-WAY SUMITOMO 090 HYBRID / GREEN	TRUNK / ELECTRICAL CARRIER
HEATED BACKLIGHT	EM80 / 31-WAY AMP 403 / NATURAL	BACKLIGHT / RIGHT HAND SIDE
HEATER PUMP	EM81 / 24-WAY AMP 403 / NATURAL	ENGINE COMPARTMENT / BULKHEAD, LEFT HAND SIDE
HEATER VALVE	EM82 / 17-WAY AMP 403 / NATURAL	ENGINE COMPARTMENT / BULKHEAD, LEFT HAND SIDE
MIRROR – DRIVER	EM83 / 28-WAY AMP 403 / NATURAL	DRIVER DOOR
MIRROR – PASSENGER	EM84 / 22-WAY AMP 403 / NATURAL	PASSENGER DOOR
RADIATOR FAN CONTROL RELAY MODULE	EM85 / 12-WAY MULTILOCK 070 / WHITE	ADJACENT TO LEFT HAND HORN
RADIATOR FAN – LH	LF5 / 10-WAY U.T.A. FUSEBOX / NATURAL	ENGINE COMPARTMENT / FRONT
RADIATOR FAN – RH	LF6 / 10-WAY U.T.A. FUSEBOX / BLACK	ENGINE COMPARTMENT / FRONT
REFRIGERANT 4-WAY PRESSURE SWITCH	LF7 / 10-WAY U.T.A. FUSEBOX / GREEN	ENGINE COMPARTMENT / REARWARD OF RADIATOR
WINDSHIELD HEATER – LH	LF8 / 10-WAY U.T.A. FUSEBOX / BLUE	ENGINE COMPARTMENT
WINDSHIELD HEATER – RH	LF70 / EYELET	ENGINE COMPARTMENT
	BT10 / 10-WAY U.T.A. FUSEBOX / NATURAL	
	BT11 / 10-WAY U.T.A. FUSEBOX / BLACK	
	BT12 / 10-WAY U.T.A. FUSEBOX / GREEN	
	BT13 / 10-WAY U.T.A. FUSEBOX / BLUE	
	BT64 / EYELET	
	RH17 / 1-WAY LUCAR POSILOCK / BLACK	
	RH18 / 1-WAY LUCAR POSILOCK / BLACK	
	HEATED BACKLIGHT	
	HEATER PUMP	
	HEATER VALVE	
	MIRROR – DRIVER	
	MIRROR – PASSENGER	
	RADIATOR FAN CONTROL RELAY MODULE	
	RADIATOR FAN – LH	
	RADIATOR FAN – RH	
	REFRIGERANT 4-WAY PRESSURE SWITCH	
	WINDSHIELD HEATER – LH	
	WINDSHIELD HEATER – RH	

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
AIR CONDITIONING COMPRESSOR CLUTCH RELAY	BROWN	BUS	LH ENCLOSURE RELAYS
BLOWER MOTOR RELAY – LH	BLACK	AC20 / BLACK	DRIVESHAFT TUNNEL RELAYS
BLOWER MOTOR RELAY – RH	BLACK	AC20 / BLACK	DRIVESHAFT TUNNEL RELAYS
DOOR MIRROR HEATER RELAY	BLACK	FC28 / BLACK	LH FASCIA RELAYS
HEATED BACKLIGHT RELAY (#2)	BROWN	BUS	TRUNK RELAYS
HEATER PUMP RELAY (#1)	BROWN	BUS	ENGINE COMPARTMENT FUSE BOX RELAYS
WINDSHIELD HEATER RELAY – LH	BROWN	EM44 / BROWN	RH ENCLOSURE RELAYS
WINDSHIELD HEATER RELAY – RH	BROWN	EM45 / BROWN	RH ENCLOSURE RELAYS

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC12	20-WAY MULTILOCK 070 / WHITE	FASCIA TOP CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
AC13	20-WAY MULTILOCK 070 / YELLOW	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
AC15	20-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT58	4-WAY ECONOSEAL III HC / BLACK	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
DD1	23-WAY AMP – FORD / BLACK	DRIVER SIDE 'A' POST MOUNTING BRACKET/ 'A' POST TRIM
DP1	23-WAY AMP – FORD / BLACK	PASSENGER SIDE 'A' POST / 'A' POST TRIM
EM1	20-WAY MULTILOCK 070 / WHITE	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM2	18-WAY MULTILOCK 070 / YELLOW	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
LF3	13-WAY ECONOSEAL III LC / WHITE	LHD: ENGINE COMPARTMENT / ADJACENT TO BRAKE SERVO RHD: ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
LF40	13-WAY ECONOSEAL III LC / BLACK	LHD: ENGINE COMPARTMENT / FORWARD OF BRAKE FLUID RESERVOIR RHD: ENGINE COMPARTMENT / BELOW CONTROL MODULE ENCLOSURE
LF60	20-WAY MULTILOCK 070 / WHITE	LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
PI1	57-WAY SUMITOMO TS090 / BLACK	ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION
RH2	20-WAY MULTILOCK 070 / WHITE	REAR OF CENTER CONSOLE ASSEMBLY

GROUNDS

Ground	Location / Type
EM1AR	EYELET (PAIR) – RIGHT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM1BL	EYELET (PAIR) – RIGHT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM1BS	EYELET (SINGLE) / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM2AR	EYELET (PAIR) – RIGHT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
EM2BL	EYELET (PAIR) – LEFT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
EM2BS	EYELET (SINGLE) / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
FC2AL	EYELET (PAIR) – LEFT HAND LEG / RIGHT HAND 'A' POST
FC4AL	EYELET (PAIR) – LEFT HAND LEG / LEFT HAND 'A' POST
LF2AL	EYELET (PAIR) – LEFT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH
LF2AR	EYELET (PAIR) – RIGHT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH
LF2BL	EYELET (PAIR) – LEFT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH
RH2S	EYELET (SINGLE) / LEFT HAND REAR QUARTER

The following abbreviations are used to represent values for Control Module Pin-Out data


I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

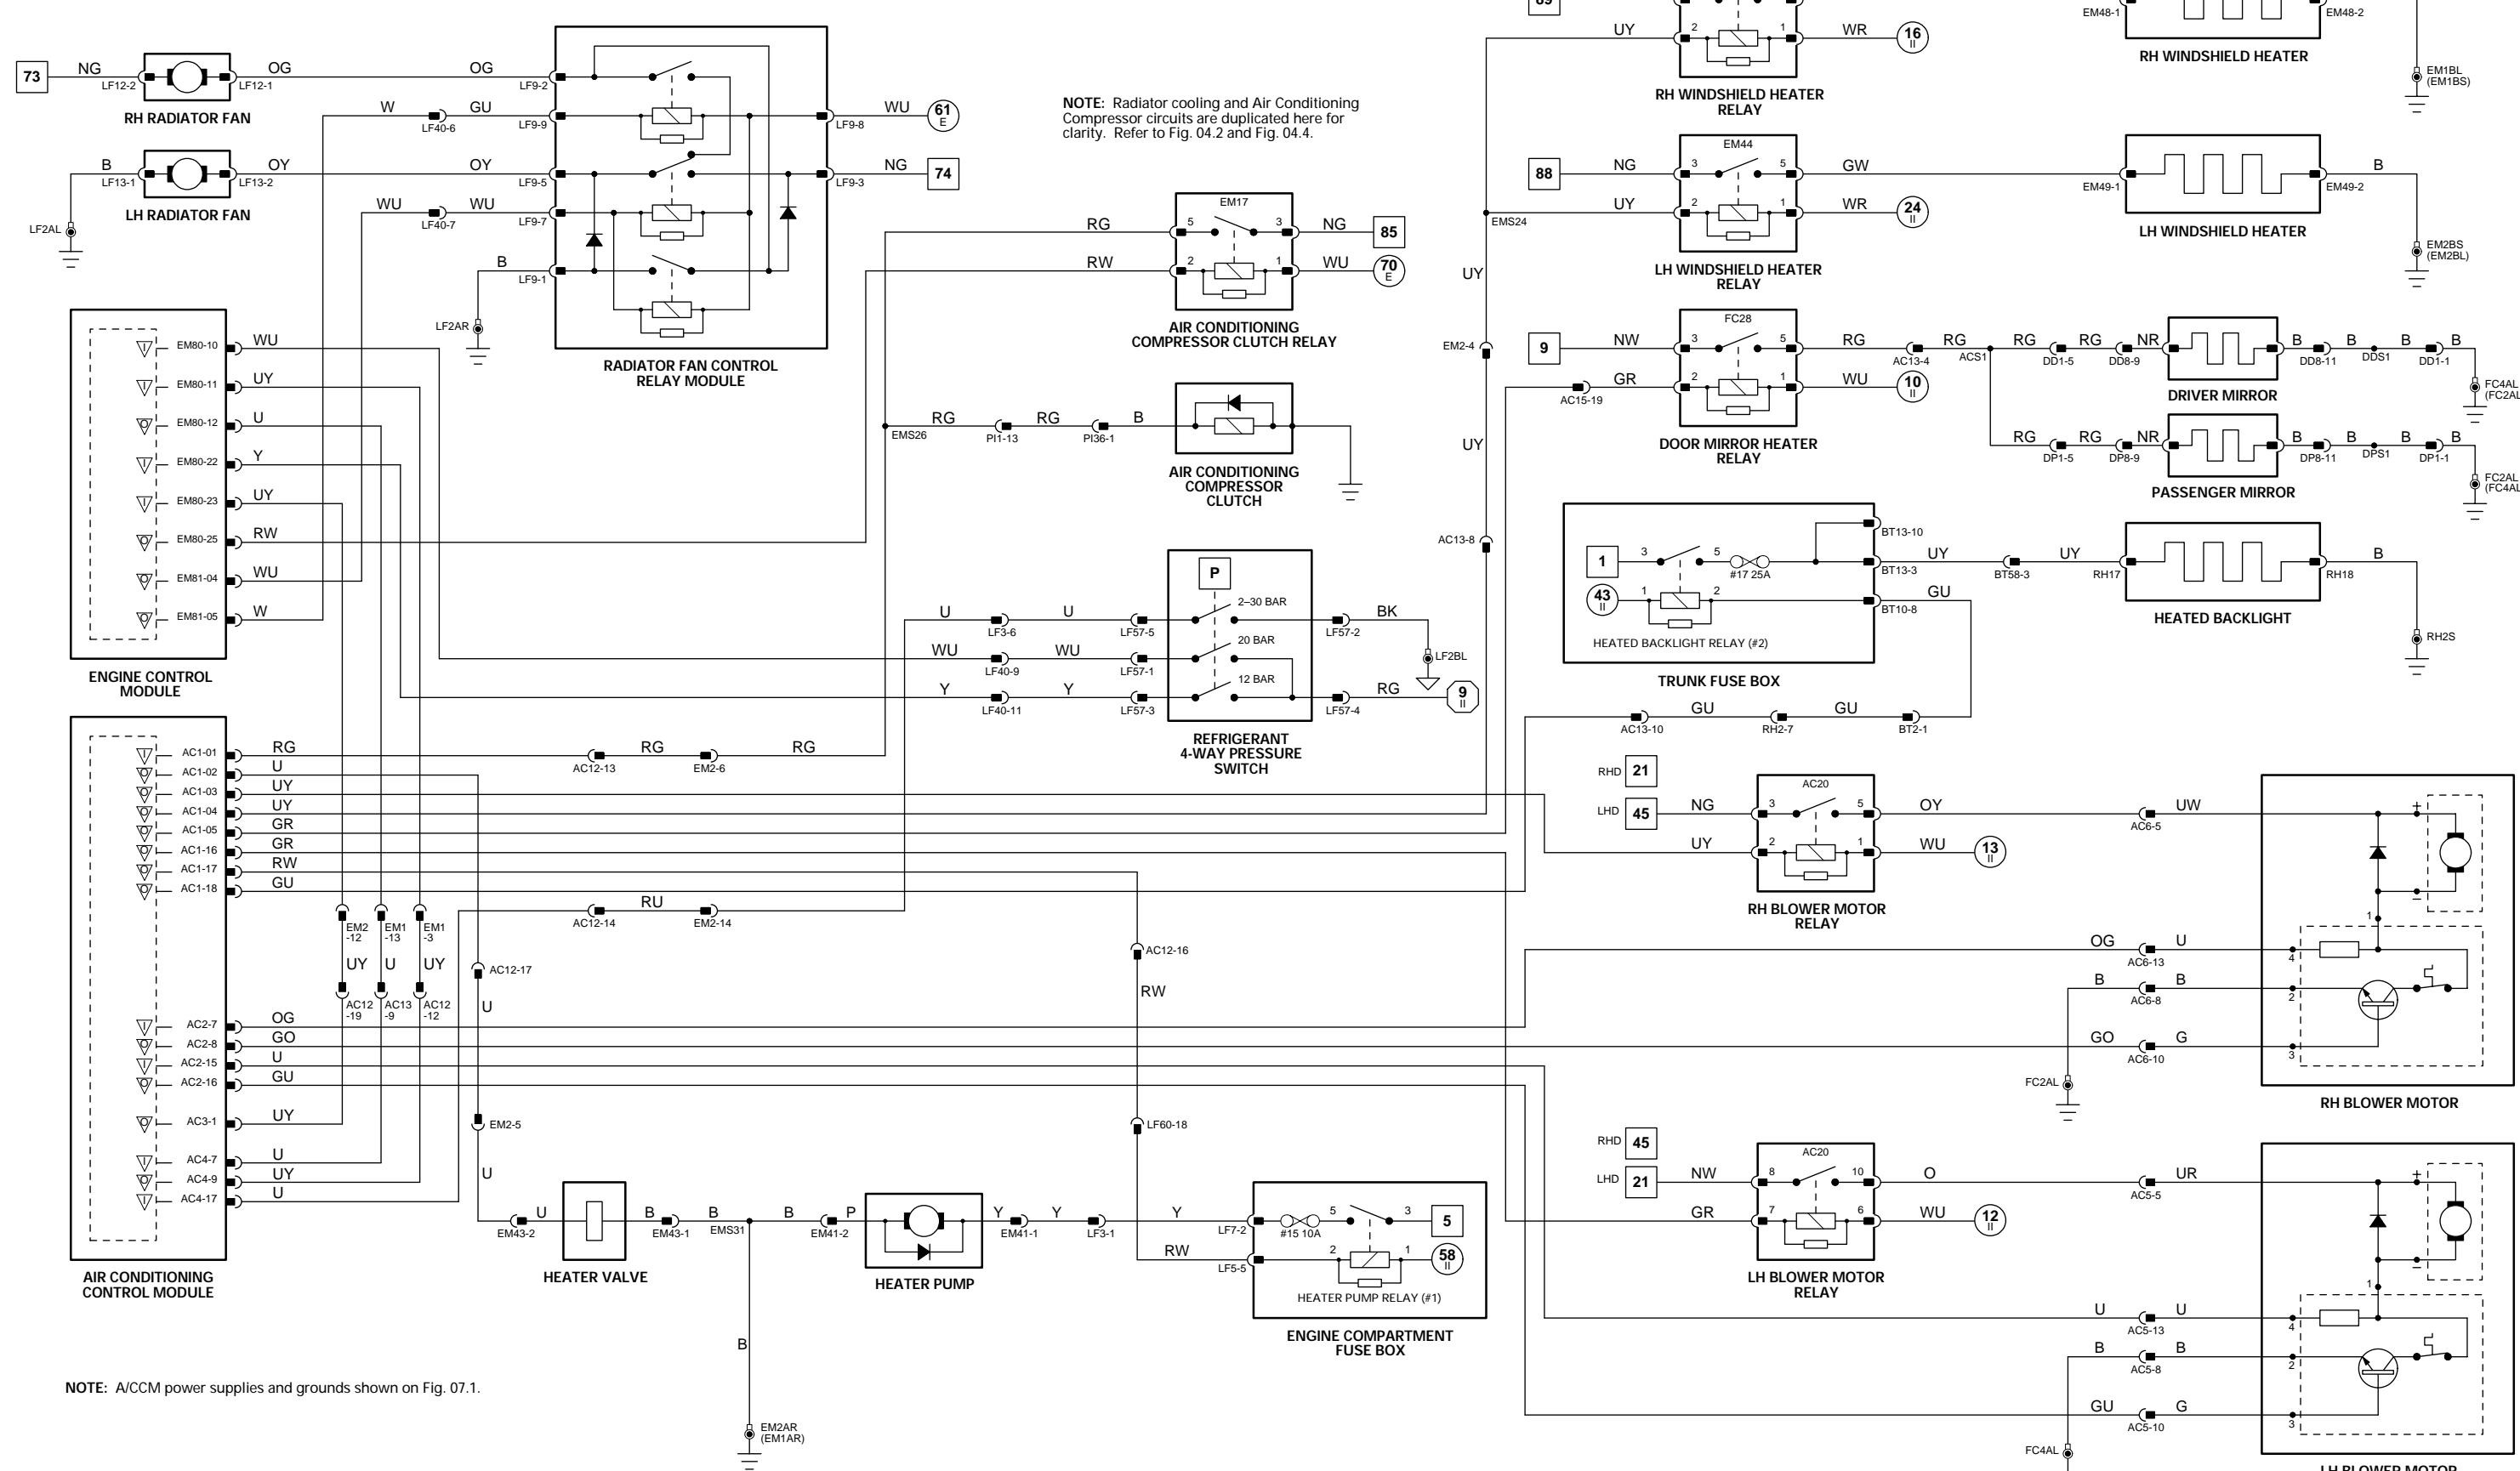

CONTROL MODULE PIN OUT INFORMATION

MAJOR INSTRUMENT PACK

Pin	Description	Active	Inactive
I FC25-01	IGNITION SWITCHED POWER SUPPLY	B+	GROUND
O FC25-02	MINOR INSTRUMENT PACK BATTERY POWER SUPPLY	B+	GROUND
I FC25-03	ADAPTIVE DAMPING WARNING	GROUND	GROUND
I FC25-04	GROUND	GROUND	GROUND
I FC25-06	ILLUMINATION SUPPLY	B+	GROUND
I FC25-07	TRIP CYCLE	GROUND (MOMENTARY)	GROUND
I FC25-08	'A/B' TRIP SELECT	GROUND (MOMENTARY)	GROUND (MOMENTARY)
I FC25-09	'ML/KM' SELECT	GROUND (MOMENTARY)	GROUND (MOMENTARY)
C FC25-10	CAN NETWORK	15 - 1500 Hz	15 - 1500 Hz
C FC25-11	CAN NETWORK	2 - 1600 Hz	2 - 1600 Hz
S FC25-13	SCP NETWORK	2 - 1600 Hz	2 - 1600 Hz
S FC25-14	SCP NETWORK	B+	GROUND
I FC25-15	BATTERY POWER SUPPLY	GROUND	GROUND
I FC25-16	GROUND	B+	GROUND
O FC25-17	MINOR INSTRUMENT PACK ILLUMINATION SUPPLY	B+	GROUND
I FC25-18	'CLEAR' SELECT	GROUND (MOMENTARY)	GROUND
I FC25-19	'000' SELECT	GROUND (MOMENTARY)	GROUND
C FC25-23	CAN NETWORK	15 - 1500 Hz	15 - 1500 Hz
C FC25-24	CAN NETWORK	15 - 1500 Hz	15 - 1500 Hz
O FC25-25	GROUND REFERENCE	GROUND	GROUND
O FC26-1	BATTERY CHARGE WARNING	< 3 V	GROUND
O FC26-2	OIL PRESSURE WARNING	< 3 V = < 3 PSI	B+
O FC26-3	ENGINE SPEED	5 V @ 1000 RPM = 45 Hz; 2000 RPM = 90 Hz	B+
O FC26-4	ENGINE COOLANT TEMPERATURE	6 V = 90°C	B+
O FC26-5	VEHICLE SPEED - ACCM	22 Hz @ 10 MPH (16 KM/H); 44 Hz @ 20 MPH (32 KM/H) @ B+	B+
O FC26-6	VEHICLE SPEED - PAS	22 Hz @ 10 MPH (16 KM/H); 44 Hz @ 20 MPH (32 KM/H) @ B+	B+
O FC26-7	VEHICLE SPEED - ADAPTIVE DAMPING CONTROL MODULE	22 Hz @ 10 MPH (16 KM/H); 44 Hz @ 20 MPH (32 KM/H) @ B+	B+
O FC26-8	BATTERY VOLTAGE GAUGE POSITION FEEDBACK	5 V (MIDPOINT)	B+
O FC26-9	BATTERY VOLTAGE GAUGE POSITION FEEDBACK	5 V (MIDPOINT)	B+
O FC26-10	OIL PRESSURE GAUGE POSITION FEEDBACK	5 V = 0 PSI; 3.3 V = NORMAL (MIDPOINT)	B+
O FC26-11	BATTERY VOLTAGE GAUGE MOVEMENT	3.7 - 5 V (PULSE)	B+
O FC26-12	BATTERY VOLTAGE GAUGE MOVEMENT	3.7 - 5 V (PULSE)	B+
I FC26-13	FUEL LEVEL GAUGE FEEDBACK	B+ = EMPTY	0 V = FULL
O FC26-14	FUEL LEVEL GAUGE REFERENCE GROUND	GROUND	GROUND
O FC26-15	OIL PRESSURE GAUGE POSITION FEEDBACK	5 V = 0 PSI; 3.3 V = NORMAL (MIDPOINT)	B+
I FC26-16	AIR BAG MIL	GROUND (ON)	B+
O FC26-17	OIL PRESSURE GAUGE MOVEMENT	3.7 - 5 V (PULSE)	B+
O FC26-18	OIL PRESSURE GAUGE MOVEMENT	3.7 - 5 V (PULSE)	B+
I FC26-19	LOW OIL PRESSURE WARNING	> 3 V = > 3 PSI	B+
O FC26-20	VEHICLE SPEED	22 Hz @ 10 MPH (16 KM/H); 44 Hz @ 20 MPH (32 KM/H) @ B+	B+
I FC26-21	DIMMER OVERRIDE	GROUND	B+
I FC26-22	CHARGE WARNING	B+	GROUND
I FC26-23	LOW COOLANT WARNING	GROUND	B+

MINOR INSTRUMENT PACK

Pin	Description	Active	Inactive
I FC79-8	MINOR INSTRUMENT PACK ILLUMINATION SUPPLY	B+	B+
I FC79-9	OIL PRESSURE GAUGE MOVEMENT	3.7 - 5 V (PULSE)	B+
I FC79-10	OIL PRESSURE GAUGE MOVEMENT	3.7 - 5 V (PULSE)	B+
I FC79-11	CHARGE WARNING	< 3 V	B+
I FC79-12	BATTERY VOLTAGE GAUGE POSITION FEEDBACK	5 V (MIDPOINT)	B+
I FC79-13	BATTERY VOLTAGE GAUGE POSITION FEEDBACK	5 V (MIDPOINT)	B+
I FC79-14	BATTERY VOLTAGE GAUGE MOVEMENT	3.7 - 5 V (PULSE)	B+
I FC79-15	BATTERY VOLTAGE GAUGE MOVEMENT	3.7 - 5 V (PULSE)	B+
I FC79-16	GROUND	GROUND	GROUND
I FC79-17	BATTERY POWER SUPPLY	B+	B+
I FC79-18	LOW OIL PRESSURE WARNING	GROUND (< 3 PSI)	B+
I FC79-19	OIL PRESSURE GAUGE POSITION FEEDBACK	5 V = 0 PSI; 3.3 V = NORMAL (MIDPOINT)	B+
I FC79-20	OIL PRESSURE GAUGE POSITION FEEDBACK	5 V = 0 PSI; 3.3 V = NORMAL (MIDPOINT)	B+

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 08.1

COMPONENTS

Component

COOLANT LEVEL SWITCH	EM55 / 2-WAY AMP JUNIOR POWER TIMER / BROWN
FUEL LEVEL SENSOR	FT3 / 6-WAY SUMITOMO DL090 / NATURAL
MAJOR INSTRUMENT PACK	FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK
MINOR INSTRUMENT PACK	FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW
OIL PRESSURE SWITCH	FC79 / 20-WAY MULTILOCK 040 / BLACK
TRIP COMPUTER SWITCH PACK	PI40 / 1-WAY ECONOSEAL ECJ2 / BLACK
TRIP CYCLE SWITCH (COLUMN SWITCHGEAR)	FC27 / 10-WAY AMP MQL / BLACK
	SC2 / 10-WAY MULTILOCK 070 / YELLOW

Connector / Type / Color
EM55 / 2-WAY AMP JUNIOR POWER TIMER / BROWN
FT3 / 6-WAY SUMITOMO DL090 / NATURAL
FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK
FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW
FC79 / 20-WAY MULTILOCK 040 / BLACK
PI40 / 1-WAY ECONOSEAL ECJ2 / BLACK
FC27 / 10-WAY AMP MQL / BLACK
SC2 / 10-WAY MULTILOCK 070 / YELLOW

Location / Access
ENGINE COMPARTMENT / COOLANT RESERVOIR
FUEL TANK EVAPORATIVE FLANGE
FASCIA
FASCIA
ENGINE BLOCK / RIGHT HAND SIDE
FASCIA / DRIVER SIDE
STEERING COLUMN

HARNESS-TO-HARNESS CONNECTORS

Connector

Connector	Type / Color
BT2	20-WAY MULTILOCK 070 / WHITE
EM1	20-WAY MULTILOCK 070 / WHITE
EM2	18-WAY MULTILOCK 070 / YELLOW
FT1	10-WAY MULTILOCK 070 / WHITE
PI1	57-WAY SUMITOMO TS090 / BLACK
RH1	20-WAY MULTILOCK 070 / GREY

Location / Access
TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
FUEL TANK / REAR
ENGINE COMPARTMENT / BRACKET ON TOP OF TRANSMISSION
BEHIND GLOVE BOX

GROUNDS

Ground

Ground	Location / Type
EM1BR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM2BR	EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC4BR	EYELET (PAIR) - LEFT HAND LEG / LEFT HAND 'A' POST

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

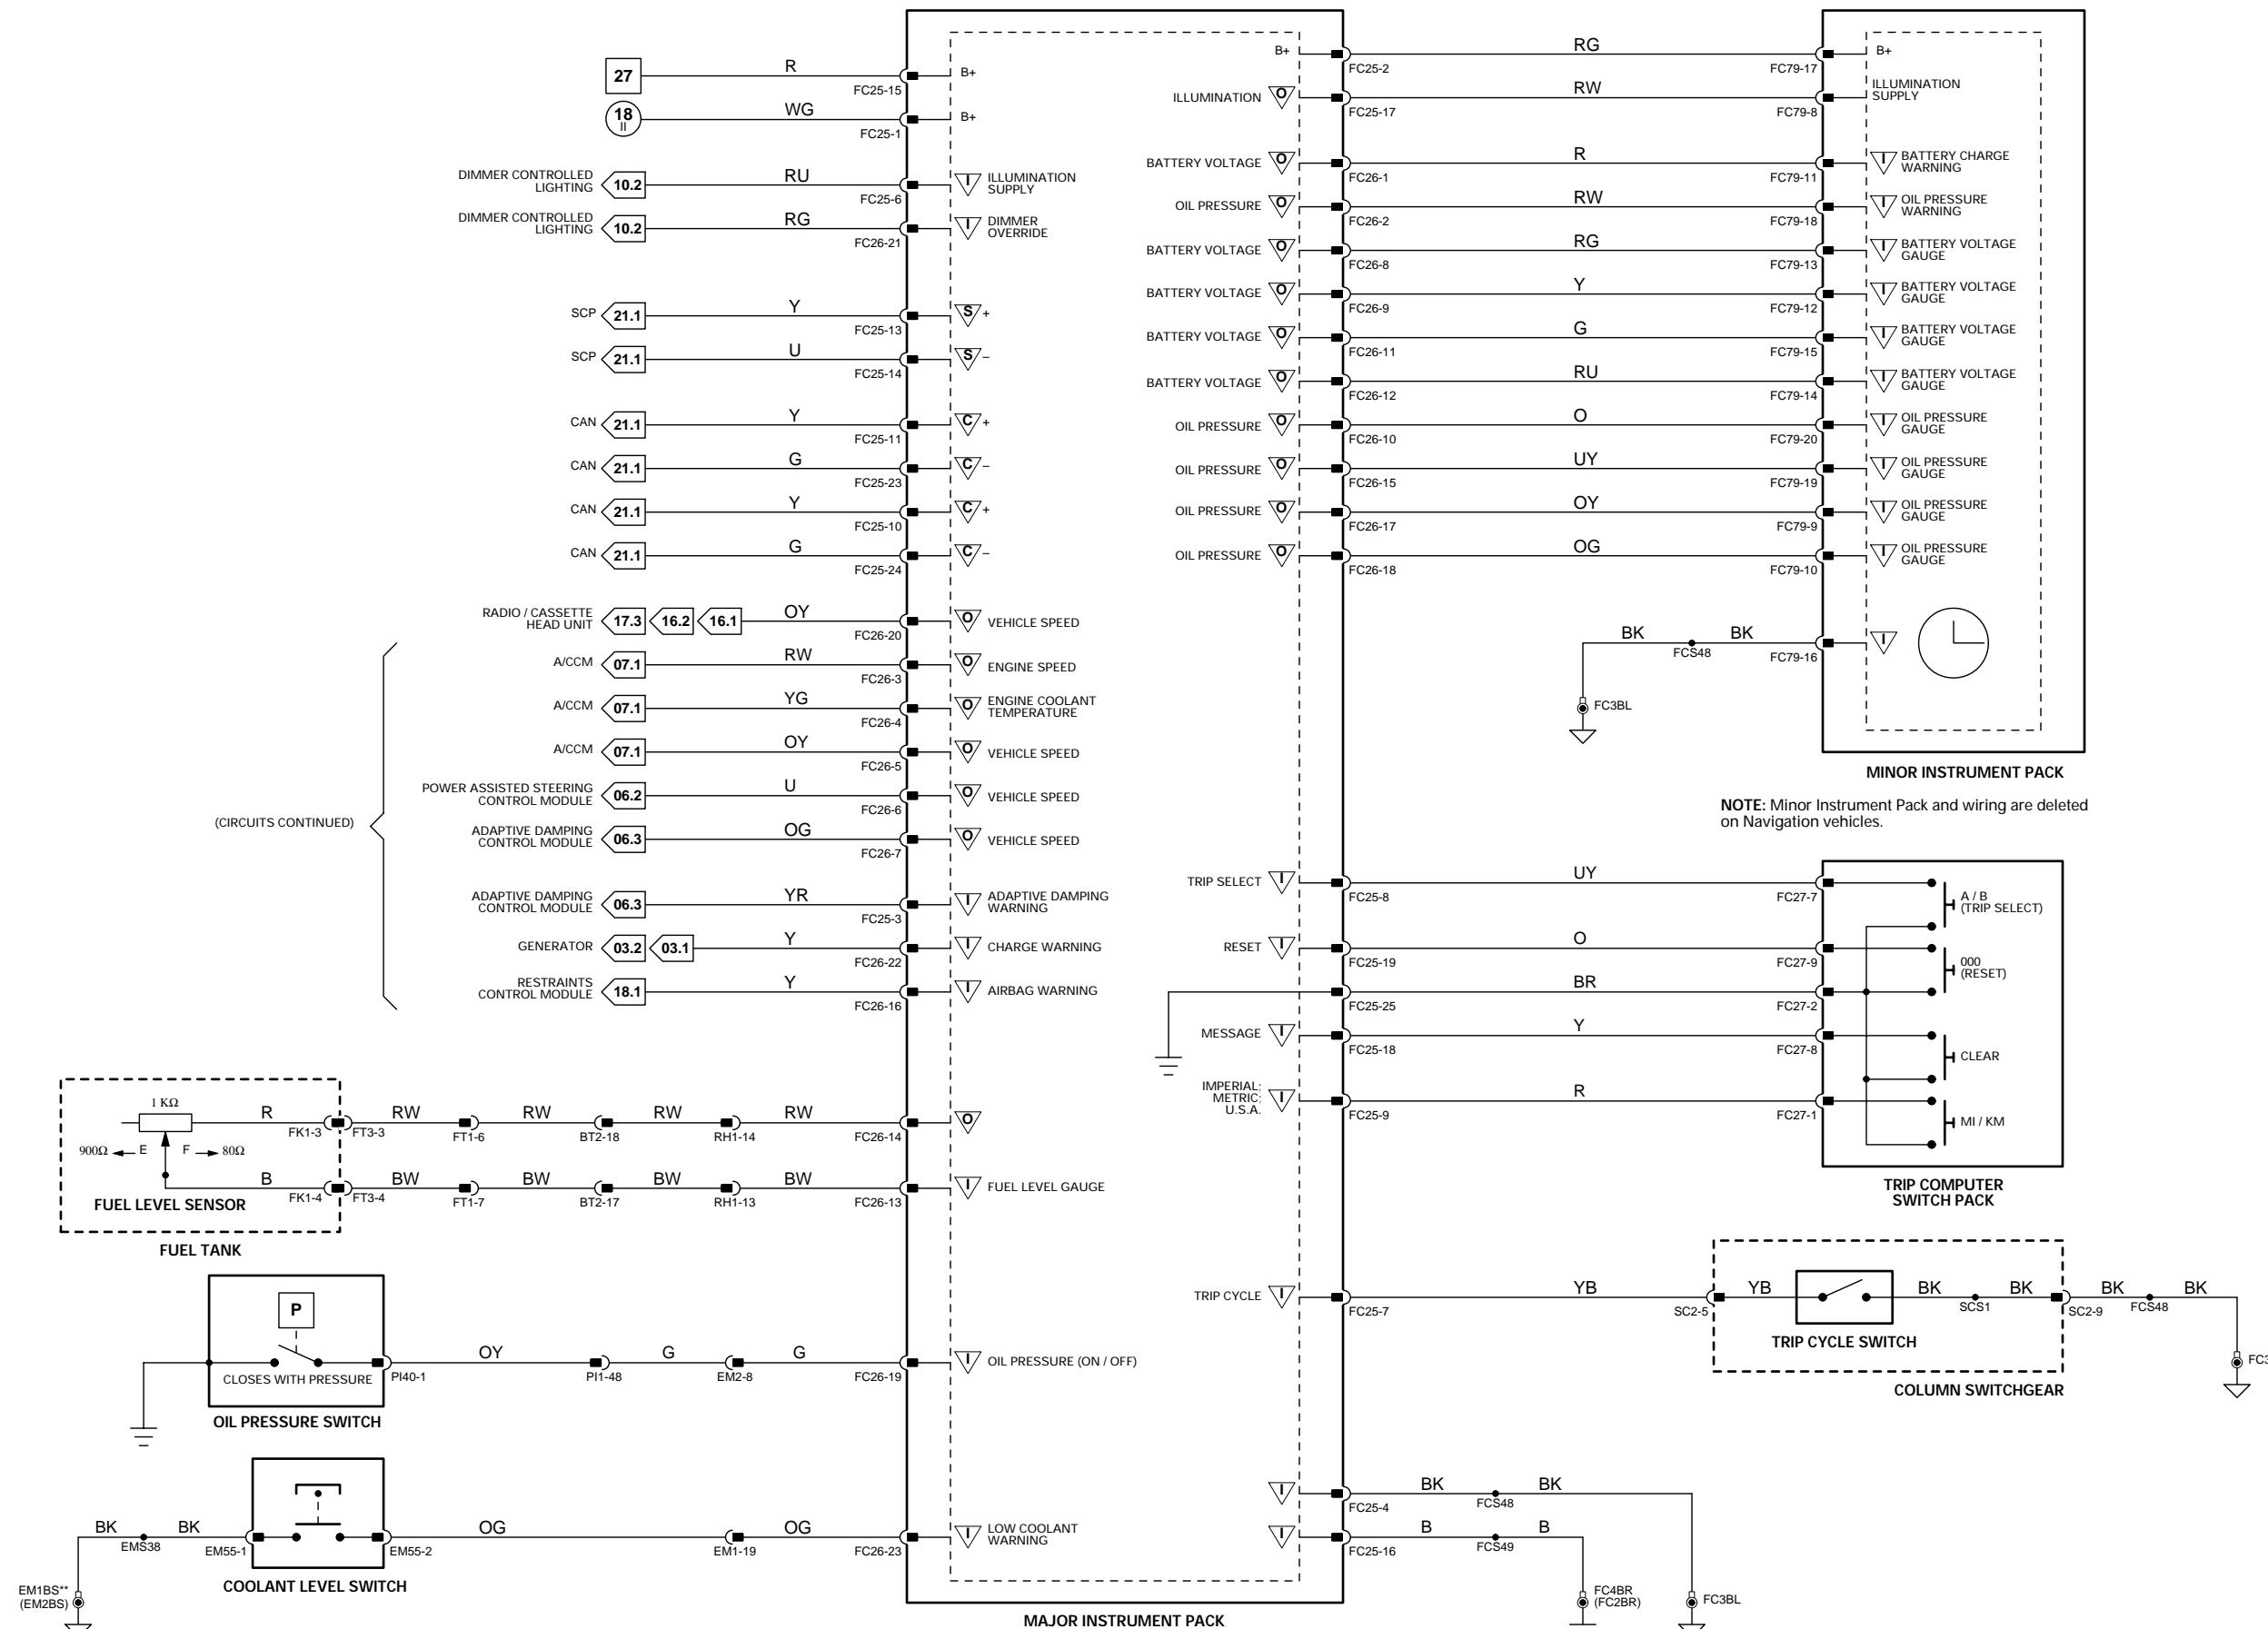

BODY PROCESSOR MODULE

	Pin	Description	Active	Inactive
I	FC14-8	AIRBAG WARNING	GROUND	B+
I	FC14-15	IGNITION SWITCHED GROUND SUPPLY	GROUND	GROUND
I	FC14-32	IGNITION SWITCHED GROUND SUPPLY	GROUND	GROUND
I	FC14-41	IGNITION SWITCHED GROUND SUPPLY	GROUND	GROUND
I	FC14-80	BATTERY POWER SUPPLY (LOGIC)	B+	B+
O	FC14-82	AUDIBLE WARNING SPEAKER OUTPUT	AUDIO OUTPUT	AUDIO OUTPUT
O	FC14-83	AUDIBLE WARNING SPEAKER OUTPUT	2 - 1600 Hz	2 - 1600 Hz
S	FC14-84	SCP NETWORK	B+	B+
S	FC14-85	SCP NETWORK	B+	B+
I	FC14-104	BATTERY POWER SUPPLY	B+	B+

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 08.2

COMPONENTS

Component

AUDIBLE WARNING SPEAKER (COLUMN SWITCHGEAR)
BODY PROCESSOR MODULE

Connector / Type / Color

SC1 / 12-WAY MULTILOCK 070 / WHITE
FC14 / 104-WAY AMP EEEC / GREY

Location / Access

RIGHT HAND SIDE OF STEERING COLUMN
PASSENGER SIDE FASCIA / AIRBAG BRACKET

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000


CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.



- SCP SOURCES:**
- DIRECTION INDICATORS; HAZARD WARNING; SIDE LAMPS – Fig. 09.1, Fig. 09.2
 - VALET SWITCH; TRUNK RELEASE – Fig. 13.1
 - MEMORY – Fig. 11.1, Fig. 11.2, Fig. 12.1
 - CONVERTIBLE TOP MOVEMENT – Fig. 15.2
 - KEY-IN-IGNITION SWITCH / DRIVER DOOR SWITCH – Fig. 13.1
 - NOT-IN-PARK MICROSWITCH – Fig. 05.3
 - SEAT BELT SWITCH – Fig. 12.1, Fig. 12.2

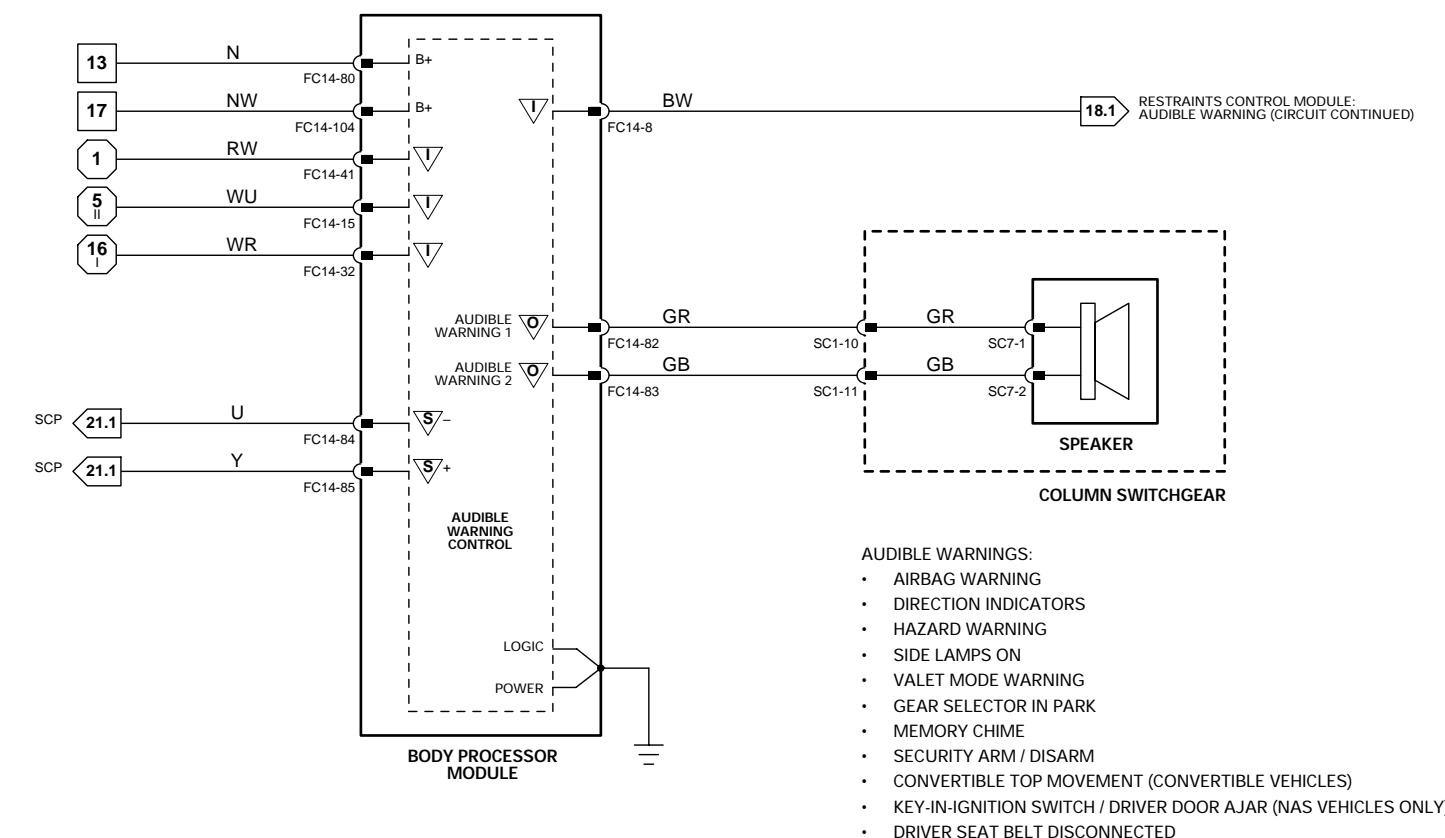

- AUDIBLE WARNINGS:**
- AIRBAG WARNING
 - DIRECTION INDICATORS
 - HAZARD WARNING
 - SIDE LAMPS ON
 - VALET MODE WARNING
 - GEAR SELECTOR IN PARK
 - MEMORY CHIME
 - SECURITY ARM / DISARM
 - CONVERTIBLE TOP MOVEMENT (CONVERTIBLE VEHICLES)
 - KEY-IN-IGNITION SWITCH / DRIVER DOOR AJAR (NAS VEHICLES ONLY)
 - DRIVER SEAT BELT DISCONNECTED

Fig. 09.1

BODY PROCESSOR MODULE

Pin	Description	Active	Inactive
O	FC14-1	RH FRONT SIDE LAMP BULB SUPPLY	GROUND
O	FC14-2	LH FRONT DI BULB SUPPLY	GROUND
O	FC14-3	RH FRONT DI BULB SUPPLY	GROUND
I	FC14-14	HEADLAMP MAIN BEAM REQUEST	B+
I	FC14-15	IGNITION SWITCHED GROUND SUPPLY	GROUND
I	FC14-16	SIDE LAMP REQUEST	GROUND
O	FC14-20	FRONT FOG LAMP RELAY ACTIVATE / STATUS LED	GROUND (LIGHTS ON / LED ON)
O	FC14-27	LH SIDE DI REPEATER SUPPLY (ROW ONLY)	B+
O	FC14-28	RH SIDE DI REPEATER SUPPLY (ROW ONLY)	B+
I	FC14-30	HEADLAMP FLASH REQUEST	GROUND (MOMENTARY)
I	FC14-38	FRONT FOG LAMP SWITCH	GROUND (MOMENTARY)
I	FC14-41	IGNITION GROUND SUPPLY	GROUND
I	FC14-42	DIPPED BEAM REQUEST	GROUND
O	FC14-45	MAIN BEAM RELAY ACTIVATE	GROUND
O	FC14-53	LH FRONT SIDE LAMP SUPPLY	B+ (LIGHT ON)
O	FC14-54	LH SIDE MARKER SUPPLY (NAS ONLY)	B+ (LIGHT ON)
I	FC14-59	HAZARD LAMP REQUEST	GROUND (MOMENTARY)
I	FC14-61	RH DI REQUEST	GROUND
O	FC14-66	DIP BEAM RELAY ACTIVATE	GROUND (LIGHTS ON)
I	FC14-79	BATTERY POWER SUPPLY	B+
I	FC14-80	BATTERY POWER SUPPLY (LOGIC)	B+
O	FC14-81	RH SIDE DI REPEATER SUPPLY (ROW ONLY)	B+ (LIGHTS ON)
S	FC14-84	SCP NETWORK	2 - 1600 Hz
S	FC14-85	SCP NETWORK	2 - 1600 Hz
I	FC14-88	LH DI REQUEST	GROUND
O	FC14-96	HAZARD STATUS INDICATOR	B+ (PULSED)

MAJOR INSTRUMENT PACK

Pin	Description	Active	Inactive
S	FC25-13	SCP NETWORK	2 - 1600 Hz
S	FC25-14	SCP NETWORK	2 - 1600 Hz

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

COMPONENTS

Component	Connector / Type / Color	Location / Access
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
CENTER CONSOLE SWITCH PACK	FC55 / 20-WAY IDC / BLACK	CENTER CONSOLE
FRONT FOG LAMP – LH	LF32 / 2-WAY REINSHAGEN METRI 630 / BLACK	FRONT BUMPER / WHEEL ARCH LINER PANEL
FRONT FOG LAMP – RH	LF22 / 2-WAY REINSHAGEN METRI 630 / BLACK	FRONT BUMPER / WHEEL ARCH LINER PANEL
FRONT LAMP UNIT – LH	LF31 / 6-WAY ECONOSEAL III LC / BLACK	LEFT HAND HEADLAMP ASSEMBLY
FRONT LAMP UNIT – RH	LF21 / 6-WAY ECONOSEAL III LC / BLACK	RIGHT HAND HEADLAMP ASSEMBLY
FUSE BOX – ENGINE COMPARTMENT	LF5 / 10-WAY U.T.A. FUSEBOX / NATURAL LF6 / 10-WAY U.T.A. FUSEBOX / BLACK LF7 / 10-WAY U.T.A. FUSEBOX / GREEN LF8 / 10-WAY U.T.A. FUSEBOX / BLUE LF70 / EYELET	ENGINE COMPARTMENT / LEFT FRONT
LIGHTING STALK (COLUMN SWITCHGEAR)	SC2 / 10-WAY MULTILOCK 070 / YELLOW	STEERING COLUMN
MAJOR INSTRUMENT PACK	FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW	FASCIA
SIDE DI REPEATER – LH (ROW)	LF4 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	BEHIND WHEEL ARCH LINER
SIDE DI REPEATER – RH (ROW)	EL5 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	BEHIND WHEEL ARCH LINER
FRONT SIDE MARKER – LH (NAS ONLY)	LF11 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	BEHIND WHEEL ARCH LINER
FRONT SIDE MARKER – RH (NAS ONLY)	LF10 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	BEHIND WHEEL ARCH LINER

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
DIP BEAM RELAY (#5)	BROWN	BUS	ENGINE COMPARTMENT FUSE BOX
FRONT FOG RELAY (#2)	BROWN	BUS	ENGINE COMPARTMENT FUSE BOX
MAIN BEAM RELAY (#3)	BROWN	BUS	ENGINE COMPARTMENT FUSE BOX

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
EL6	2-WAY ECONOSEAL III LC / BLACK	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
EM2	18-WAY MULTILOCK 070 / YELLOW	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
LF1	20-WAY MULTILOCK 070 / GREY	LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

GROUNDS

Ground	Location / Type
EM1AR	EYELET (PAIR) – RIGHT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EM2AR	EYELET (PAIR) – RIGHT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
FC2BR	EYELET (PAIR) – RIGHT HAND LEG / RIGHT HAND 'A' POST
FC3BL	EYELET (PAIR) – LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC3BR	EYELET (PAIR) – RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC4BR	EYELET (PAIR) – RIGHT HAND LEG / LEFT HAND 'A' POST
LF1AL	EYELET (PAIR) – LEFT HAND LEG / RIGHT HAND HEADLAMP
LF2BR	EYELET (PAIR) – RIGHT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

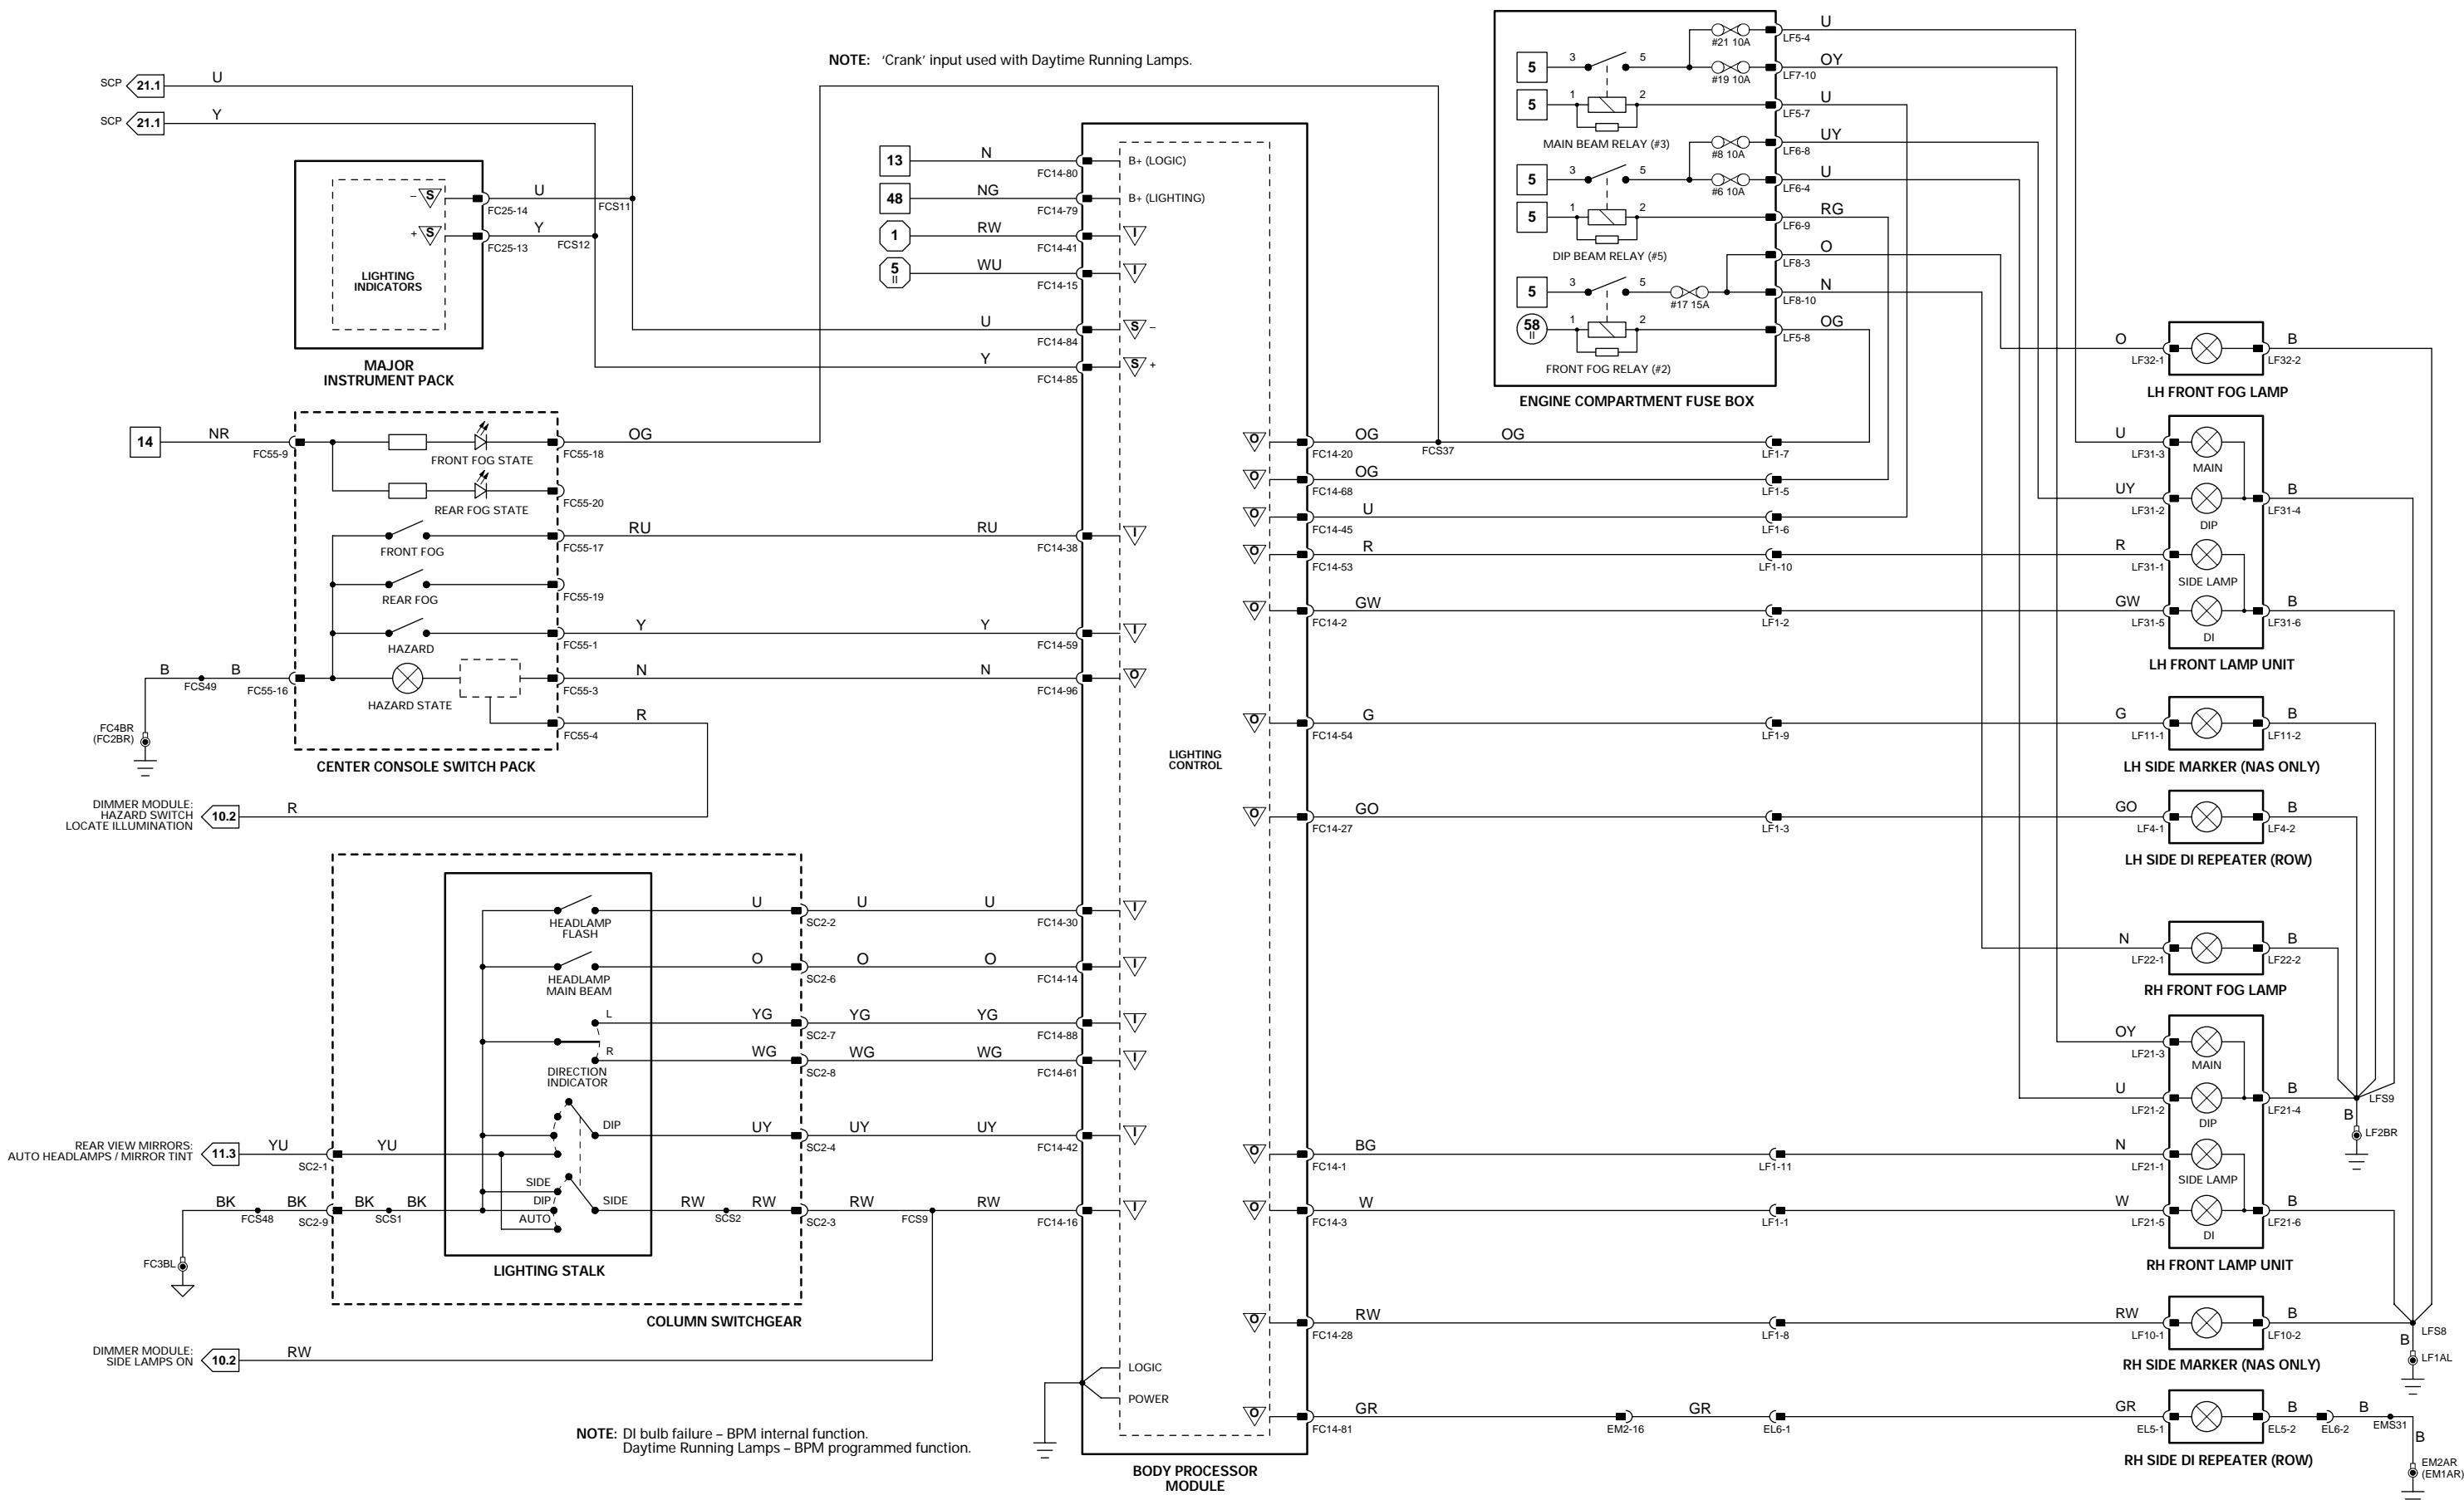


Fig. 09.2

BODY PROCESSOR MODULE

Pin	Description	Active	Inactive
I	FC14-12 REAR FOG LAMP REQUEST	GROUND (MOMENTARY)	B+
I	FC14-15 IGNITION SWITCHED GROUND SUPPLY	GROUND	B+
I	FC14-16 SIDE LAMP REQUEST	GROUND	B+
I	FC14-41 IGNITION GROUND SUPPLY	GROUND	B+
I	FC14-42 DIPPED BEAM REQUEST	GROUND	B+
O	FC14-44 REAR FOG LAMP STATUS LED	GROUND (LED ON)	B+ (LIGHT ON)
O	FC14-50 LH REAR DI LAMP SUPPLY	2 - 1600 Hz	GROUND
I	FC14-61 RH DI REQUEST	GROUND	B+ (LIGHTS ON)
O	FC14-76 RH REAR DI LAMP SUPPLY	GROUND (LIGHTS ON)	B+
I	FC14-79 BATTERY POWER SUPPLY	B+	B+
I	FC14-80 BATTERY POWER SUPPLY (LOGIC)	B+	B+
S	FC14-84 SCP NETWORK	2 - 1600 Hz	B+
S	FC14-85 SCP NETWORK	2 - 1600 Hz	B+
I	FC14-88 LH DI REQUEST	GROUND	B+
O	FC14-95 TAIL LAMP RELAY ACTIVATE	GROUND (LIGHTS ON)	B+
I	FC14-104 LIGHTING / MOTORS BATTERY POWER SUPPLY	B+	B+

MAJOR INSTRUMENT PACK

Pin	Description	Active	Inactive
C	FC25-11 CAN NETWORK	15 - 1500 Hz	
S	FC25-13 SCP NETWORK	2 - 1600 Hz	
S	FC25-14 SCP NETWORK	2 - 1600 Hz	
C	FC25-23 CAN NETWORK	15 - 1500 Hz	

SECURITY AND LOCKING CONTROL MODULE

Pin	Description	Active	Inactive
O	BT40-5 REVERSE LAMP SUPPLY	B+	GROUND
I	BT40-6 BATTERY POWER SUPPLY	B+	GROUND
O	BT40-7 REAR FOG LAMP RELAY ACTIVATE	GROUND	B+
S	BT40-8 SCP NETWORK	2 - 1600 Hz	GROUND
I	BT40-13 GROUND	GROUND	GROUND
I	BT40-14 GROUND	GROUND	GROUND
S	BT40-16 SCP NETWORK	2 - 1600 Hz	GROUND
O	BT41-12 SIDE MARKER LAMP SUPPLY	B+	GROUND
I	BT41-13 SIDE MARKER LAMP SUPPLY	B+	GROUND
O	BT42-1 RH STOP LAMP SUPPLY	B+	GROUND
O	BT42-2 LH STOP LAMP SUPPLY	B+	GROUND
O	BT42-3 RH TAIL LAMP SUPPLY	B+	GROUND
O	BT42-4 LH TAIL LAMP SUPPLY	B+	GROUND
O	BT42-5 NUMBER PLATE LAMP SUPPLY	B+	GROUND
I	BT42-6 RH STOP LAMP SUPPLY	B+	GROUND
I	BT42-7 LH STOP LAMP SUPPLY	B+	GROUND
I	BT42-8 RH TAIL LAMP SUPPLY	B+	GROUND
I	BT42-9 LH TAIL LAMP SUPPLY	B+	GROUND
I	BT42-10 NUMBER PLATE LAMP SUPPLY	B+	GROUND

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

COMPONENTS

Component	Connector / Type / Color	Location / Access
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
Brake Switch	AC24 / 4-WAY MULTILOCK 070 / WHITE	TOP OF BRAKE PEDAL
Center Console Switch Pack	FC55 / 20-WAY FORD IDC / BLACK	CENTER CONSOLE
Fuse Box - Trunk	BT10 / 10-WAY U.T.A. FUSEBOX / NATURAL	TRUNK / ELECTRICAL CARRIER
	BT11 / 10-WAY U.T.A. FUSEBOX / BLACK	
	BT12 / 10-WAY U.T.A. FUSEBOX / GREEN	
	BT13 / 10-WAY U.T.A. FUSEBOX / BLUE	
	BT64 / EYELET	
High Mount Stop Lamp (Conv.)	BL8 / 2-WAY MULTILOCK 070 / WHITE	TRUNK / UNDERSIDE OF LID
High Mount Stop Lamp (Coupé)	RH8 / 2-WAY MULTILOCK 070 / WHITE	TRUNK / REARWARD OF SUB WOOFER SPEAKER
Lamp Control Module	BT18 / 26-WAY AMP MOS / YELLOW	TRUNK / ELECTRICAL CARRIER
Lighting Stalk (Column Switchgear)	SC2 / 10-WAY MULTILOCK 070 / YELLOW	STEERING COLUMN
Major Instrument Pack	FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK	FASCIA
Number Plate Lamp - LH	FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW	
Number Plate Lamp - RH	BL4 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	TRUNK LID / LINER
Security and Locking Control Module	BL5 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	TRUNK LID / LINER
	BT40 / 16-WAY FORD 2.8 TIMER / BLACK	TRUNK / ELECTRICAL CARRIER
	BT41 / 26-WAY FORD IDC / BLACK	
	BT42 / 10-WAY FORD 2.8 TIMER / BLACK	
	RH20 / COAXIAL CONNECTOR	
Rear Side Marker - LH (NAS ONLY)	BT27 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	TRUNK / LEFT HAND SIDE
Rear Side Marker - RH (NAS ONLY)	BT26 / 2-WAY AMP JUNIOR POWER TIMER / BLACK	TRUNK / RIGHT HAND SIDE
Tail Lamp Unit - LH	BT31 / 7-WAY FORD 2.8 TIMER / BLACK	TRUNK / LEFT HAND SIDE
Tail Lamp Unit - RH	BT30 / 7-WAY FORD 2.8 TIMER / BLACK	TRUNK / RIGHT HAND SIDE

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
REAR FOG RELAY (#1)	BROWN	BUS	TRUNK FUSE BOX
STOP LAMP RELAY (#5)	BROWN	BUS	TRUNK FUSE BOX
TAIL LAMP RELAY (#3)	BROWN	BUS	TRUNK FUSE BOX

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC13	20-WAY MULTILOCK 070 / YELLOW	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BB1	4-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BL1	4-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
RH1	20-WAY MULTILOCK 070 / GREY	BEHIND GLOVE BOX
RH2	20-WAY MULTILOCK 070 / WHITE	REAR OF CENTER CONSOLE ASSEMBLY

GROUNDS

Ground	Location / Type
BT1AR	EYELET (PAIR) - RIGHT HAND LEG / ADJACENT TO BATTERY
BT2AR	EYELET (PAIR) - RIGHT HAND LEG / TRUNK, RIGHT REAR
BT3S	EYELET (SINGLE) / TRUNK, LEFT REAR
FC1BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, RIGHT HAND SIDE
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST
RH1S	EYELET (SINGLE) / RIGHT HAND REAR QUARTER

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

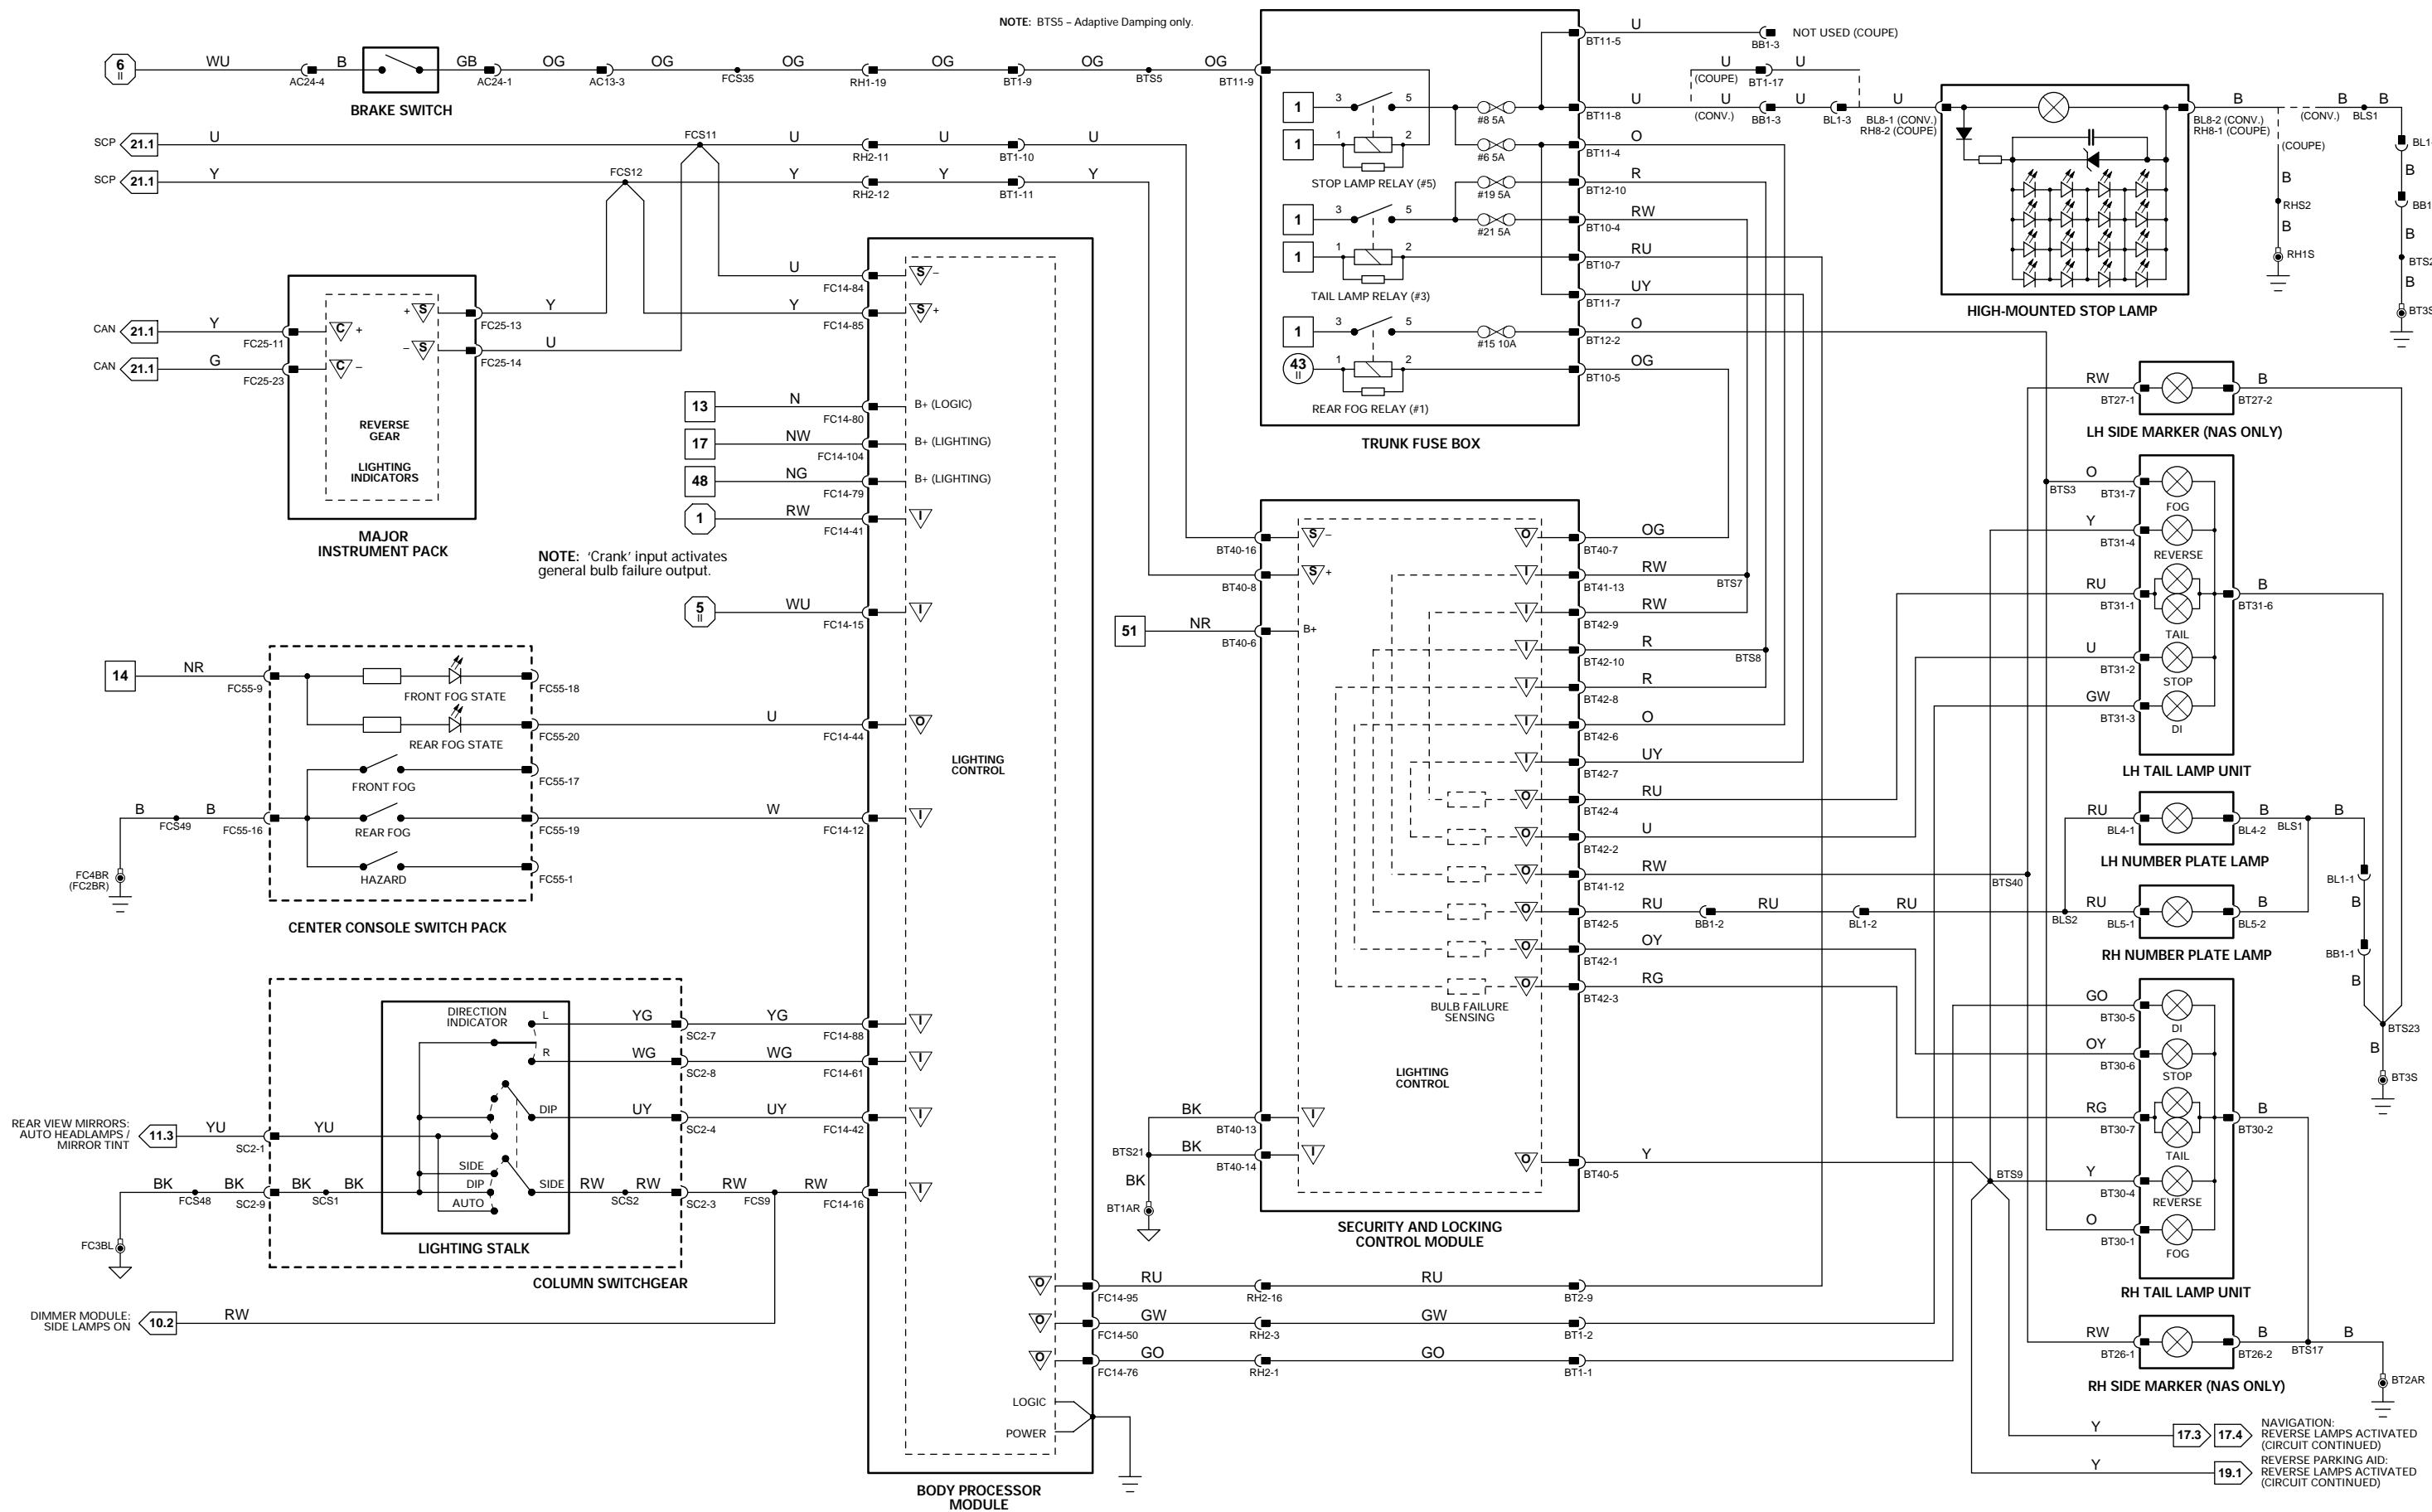


Fig. 09.3

COMPONENTS

Component

HEADLAMP LEVELING ACTUATOR – LH
HEADLAMP LEVELING ACTUATOR – RH
LEVELING SWITCH (CENTER CONSOLE SWITCH PACK)

Connector / Type / Color

LF34 / 3-WAY REINSHAGEN / BLACK
LF24 / 3-WAY REINSHAGEN / BLACK
FC55 / 20-WAY FORD IDC / BLACK

Location / Access

HEADLAMP ASSEMBLY / REAR
HEADLAMP ASSEMBLY / REAR
CENTER CONSOLE SWITCH PACK

HARNESS-TO-HARNESS CONNECTORS

Connector

LF60

Type / Color

20-WAY MULTILOCK 070 / WHITE

Location / Access

LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

GROUNDS


Ground

FC3BR
LF1AL
LF2BR

Location / Type

EYELET (PAIR) – RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
EYELET (PAIR) – LEFT HAND LEG / RIGHT HAND HEADLAMP
EYELET (PAIR) – RIGHT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

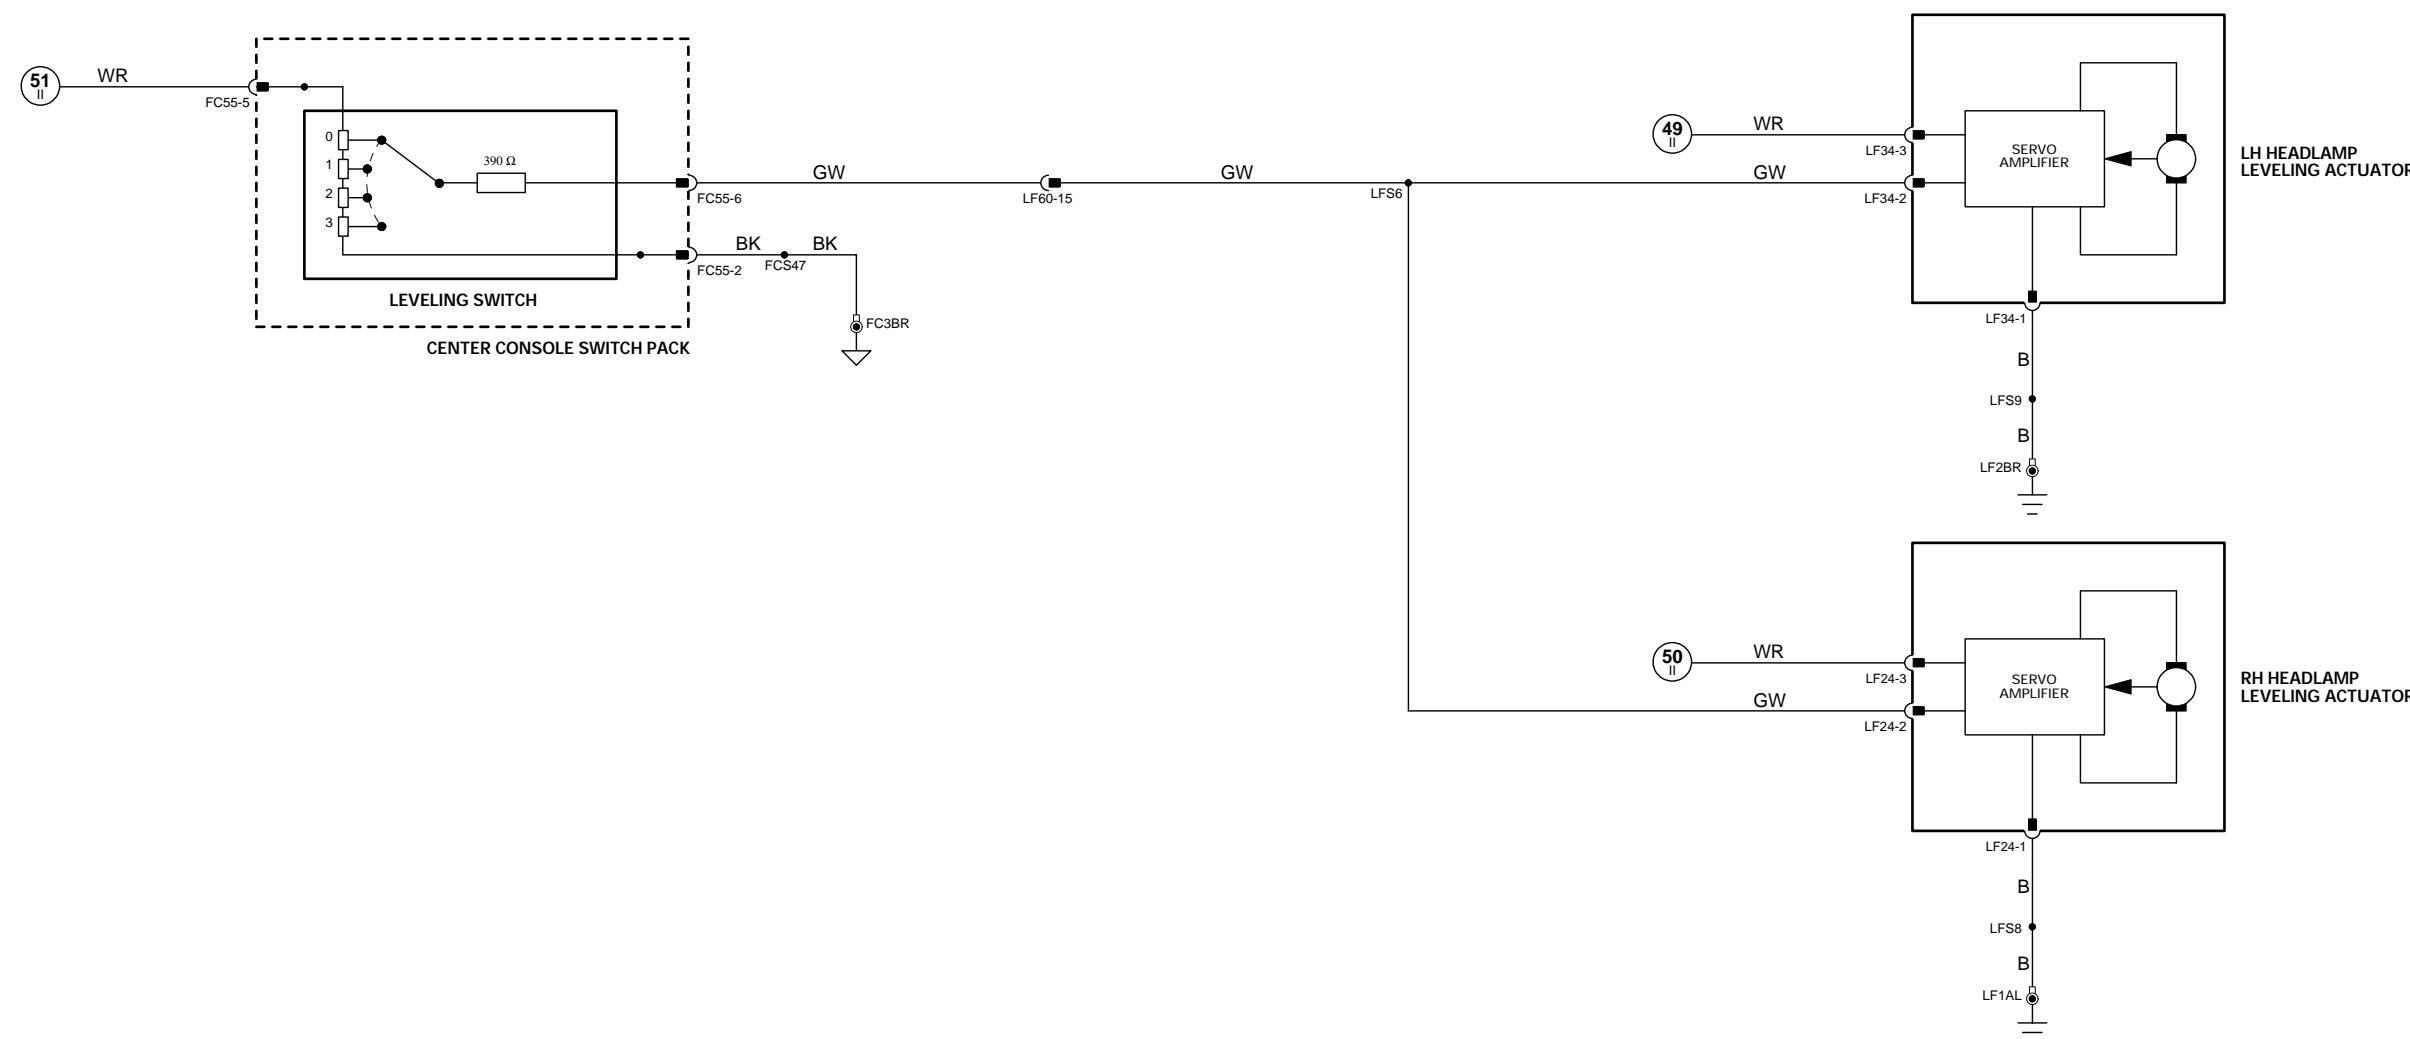

DRIVER DOOR CONTROL MODULE

Pin	Description	Active	Inactive
I	DD10-1	BATTERY POWER SUPPLY	B+
I	DD10-8	LOGIC GROUND	GROUND
S	DD10-9	SCP NETWORK	2 - 1600 Hz
O	DD10-14	DRIVER DOOR PUDDLE LAMP SUPPLY	B+
S	DD10-16	SCP NETWORK	2 - 1600 Hz
I	DD10-17	POWER GROUND	GROUND
I	DD11-4	DRIVER DOOR LOCK BARREL UNLOCK REQUEST	B+ (MOMENTARY)
I	DD11-12	DRIVER DOOR LOCK BARREL LOCK REQUEST	B+ (MOMENTARY)
I	DD11-20	DRIVER DOOR SWITCH	GROUND (DOOR OPEN)

PASSENGER DOOR CONTROL MODULE

Pin	Description	Active	Inactive
I	DP10-1	BATTERY POWER SUPPLY	B+
I	DP10-8	LOGIC GROUND	GROUND
S	DP10-9	SCP NETWORK	2 - 1600 Hz
O	DP10-14	PASSENGER DOOR PUDDLE LAMP SUPPLY	B+ (LIGHT ON)
S	DP10-16	SCP NETWORK	2 - 1600 Hz
I	DP10-17	POWER GROUND	GROUND
I	DP11-20	PASSENGER DOOR SWITCH	GROUND (DOOR OPEN)

BODY PROCESSOR MODULE

Pin	Description	Active	Inactive
I	FC14-15	IGNITION SWITCHED GROUND SUPPLY	GROUND
O	FC14-24	FOOTWELL / INTERIOR LAMP SUPPLY	B+
I	FC14-32	IGNITION SWITCHED GROUND SUPPLY	GROUND
I	FC14-41	IGNITION GROUND SUPPLY	GROUND
I	FC14-67	KEY IN IGNITION	GROUND (KEY IN)
O	FC14-74	INTERIOR LAMP FADE 2 OUTPUT	B+ (FADES TO 0 V)
I	FC14-80	BATTERY POWER SUPPLY (LOGIC)	B+
S	FC14-84	SCP NETWORK	2 - 1600 Hz
S	FC14-88	SCP NETWORK	2 - 1600 Hz
O	FC14-101	TRUNK / GLOVE BOX / VANTY LAMP POWER SUPPLY	B+
I	FC14-104	LIGHTING / MOTORS BATTERY POWER SUPPLY	B+

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 10.1

COMPONENTS

Component

BODY PROCESSOR MODULE

DIODE (BT29) – TRUNK SWITCH

DOOR CONTROL MODULE – DRIVER

DOOR CONTROL MODULE – PASSENGER

DOOR LOCK SWITCHES – DRIVER

DOOR SWITCH – PASSENGER

FOOTWELL LAMP – DRIVER

FOOTWELL LAMP – PASSENGER

GLOVE BOX LAMP

IGNITION SWITCH (KEY-IN SWITCH)

PUDDLE LAMP – DRIVER DOOR

PUDDLE LAMP – PASSENGER DOOR

REAR INTERIOR LAMP (COUPE ONLY)

ROOF CONSOLE

TRUNK LAMP – LH

TRUNK LAMP – RH

TRUNK SWITCH

VANITY LAMP – LH

VANITY LAMP – RH

FC31 / 2-WAY AMP JUNIOR POWER TIMER / BLACK

FC32 / 2-WAY AMP JUNIOR POWER TIMER / BLACK

FC33 / 1-WAY LUCAR STRAIGHT / CLEAR

FC34 / 1-WAY LUCAR STRAIGHT / CLEAR

FC4 / 8-WAY MULTILOCK 070 / WHITE

DD14 / 2-WAY AMP JUNIOR POWER TIMER / BLACK

DP14 / 2-WAY AMP JUNIOR POWER TIMER / BLACK

RH3 / 2-WAY AMP JUNIOR POWER TIMER / WHITE

RF10 / 6-WAY MULTILOCK 070 / GREY

BT56 / 2-WAY AMP JUNIOR POWER TIMER / WHITE

BT59 / 2-WAY AMP JUNIOR POWER TIMER / WHITE

BT46 / 2-WAY AUGAT 1.6 / BLACK

RF8 / 3-WAY MULTILOCK 070 / YELLOW

RF7 / 3-WAY MULTILOCK 070 / YELLOW

Location / Access

PASSENGER SIDE FASCIA / AIRBAG BRACKET

TRUNK / ADJACENT TO BATTERY

DRIVER DOOR / DOOR CASING

PASSENGER DOOR / DOOR CASING

DRIVER DOOR / DOOR CASING

DRIVER DOOR / DOOR CASING

PASSENGER DOOR / DOOR CASING

LEFT HAND FOOTWELL

RIGHT HAND FOOTWELL

GLOVE BOX

STEERING COLUMN

DRIVER DOOR

PASSENGER DOOR

REAR CENTER OF HEAD LINING

INTERIOR ROOF

TRUNK / LEFT HAND SIDE

TRUNK / RIGHT HAND SIDE

TRUNK

SUN VISOR

SUN VISOR

HARNESS-TO-HARNESS CONNECTORS

Connector

Type / Color

BT1 20-WAY MULTILOCK 070 / WHITE

DD1 23-WAY AMP – FORD / BLACK

DP1 23-WAY AMP – FORD / BLACK

RF1 24-WAY CONNECTOR / BLACK

RF5 8-WAY MULTILOCK 070 / WHITE

RH2 20-WAY MULTILOCK 070 / WHITE

Location / Access

TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH

DRIVER SIDE 'A' POST MOUNTING BRACKET/ 'A' POST TRIM

PASSENGER SIDE 'A' POST / 'A' POST TRIM

RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

LOWER RH 'A' POST / 'A' POST TRIM

REAR OF CENTER CONSOLE ASSEMBLY

GROUNDS

Ground

BT1AR EYELET (PAIR) – RIGHT HAND LEG / ADJACENT TO BATTERY

FC2AL EYELET (PAIR) – LEFT HAND LEG / RIGHT HAND 'A' POST

FC2AR EYELET (PAIR) – RIGHT HAND LEG / RIGHT HAND 'A' POST

FC2BL EYELET (PAIR) – LEFT HAND LEG / RIGHT HAND 'A' POST

FC2BR EYELET (PAIR) – RIGHT HAND LEG / RIGHT HAND 'A' POST

FC3BL EYELET (PAIR) – LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FC3BR EYELET (PAIR) – RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FC4AL EYELET (PAIR) – LEFT HAND LEG / LEFT HAND 'A' POST

FC4AR EYELET (PAIR) – RIGHT HAND LEG / LEFT HAND 'A' POST

FC4BL EYELET (PAIR) – LEFT HAND LEG / LEFT HAND 'A' POST

FC4BR EYELET (PAIR) – RIGHT HAND LEG / LEFT HAND 'A' POST

RH1S EYELET (SINGLE) / RIGHT HAND REAR QUARTER

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

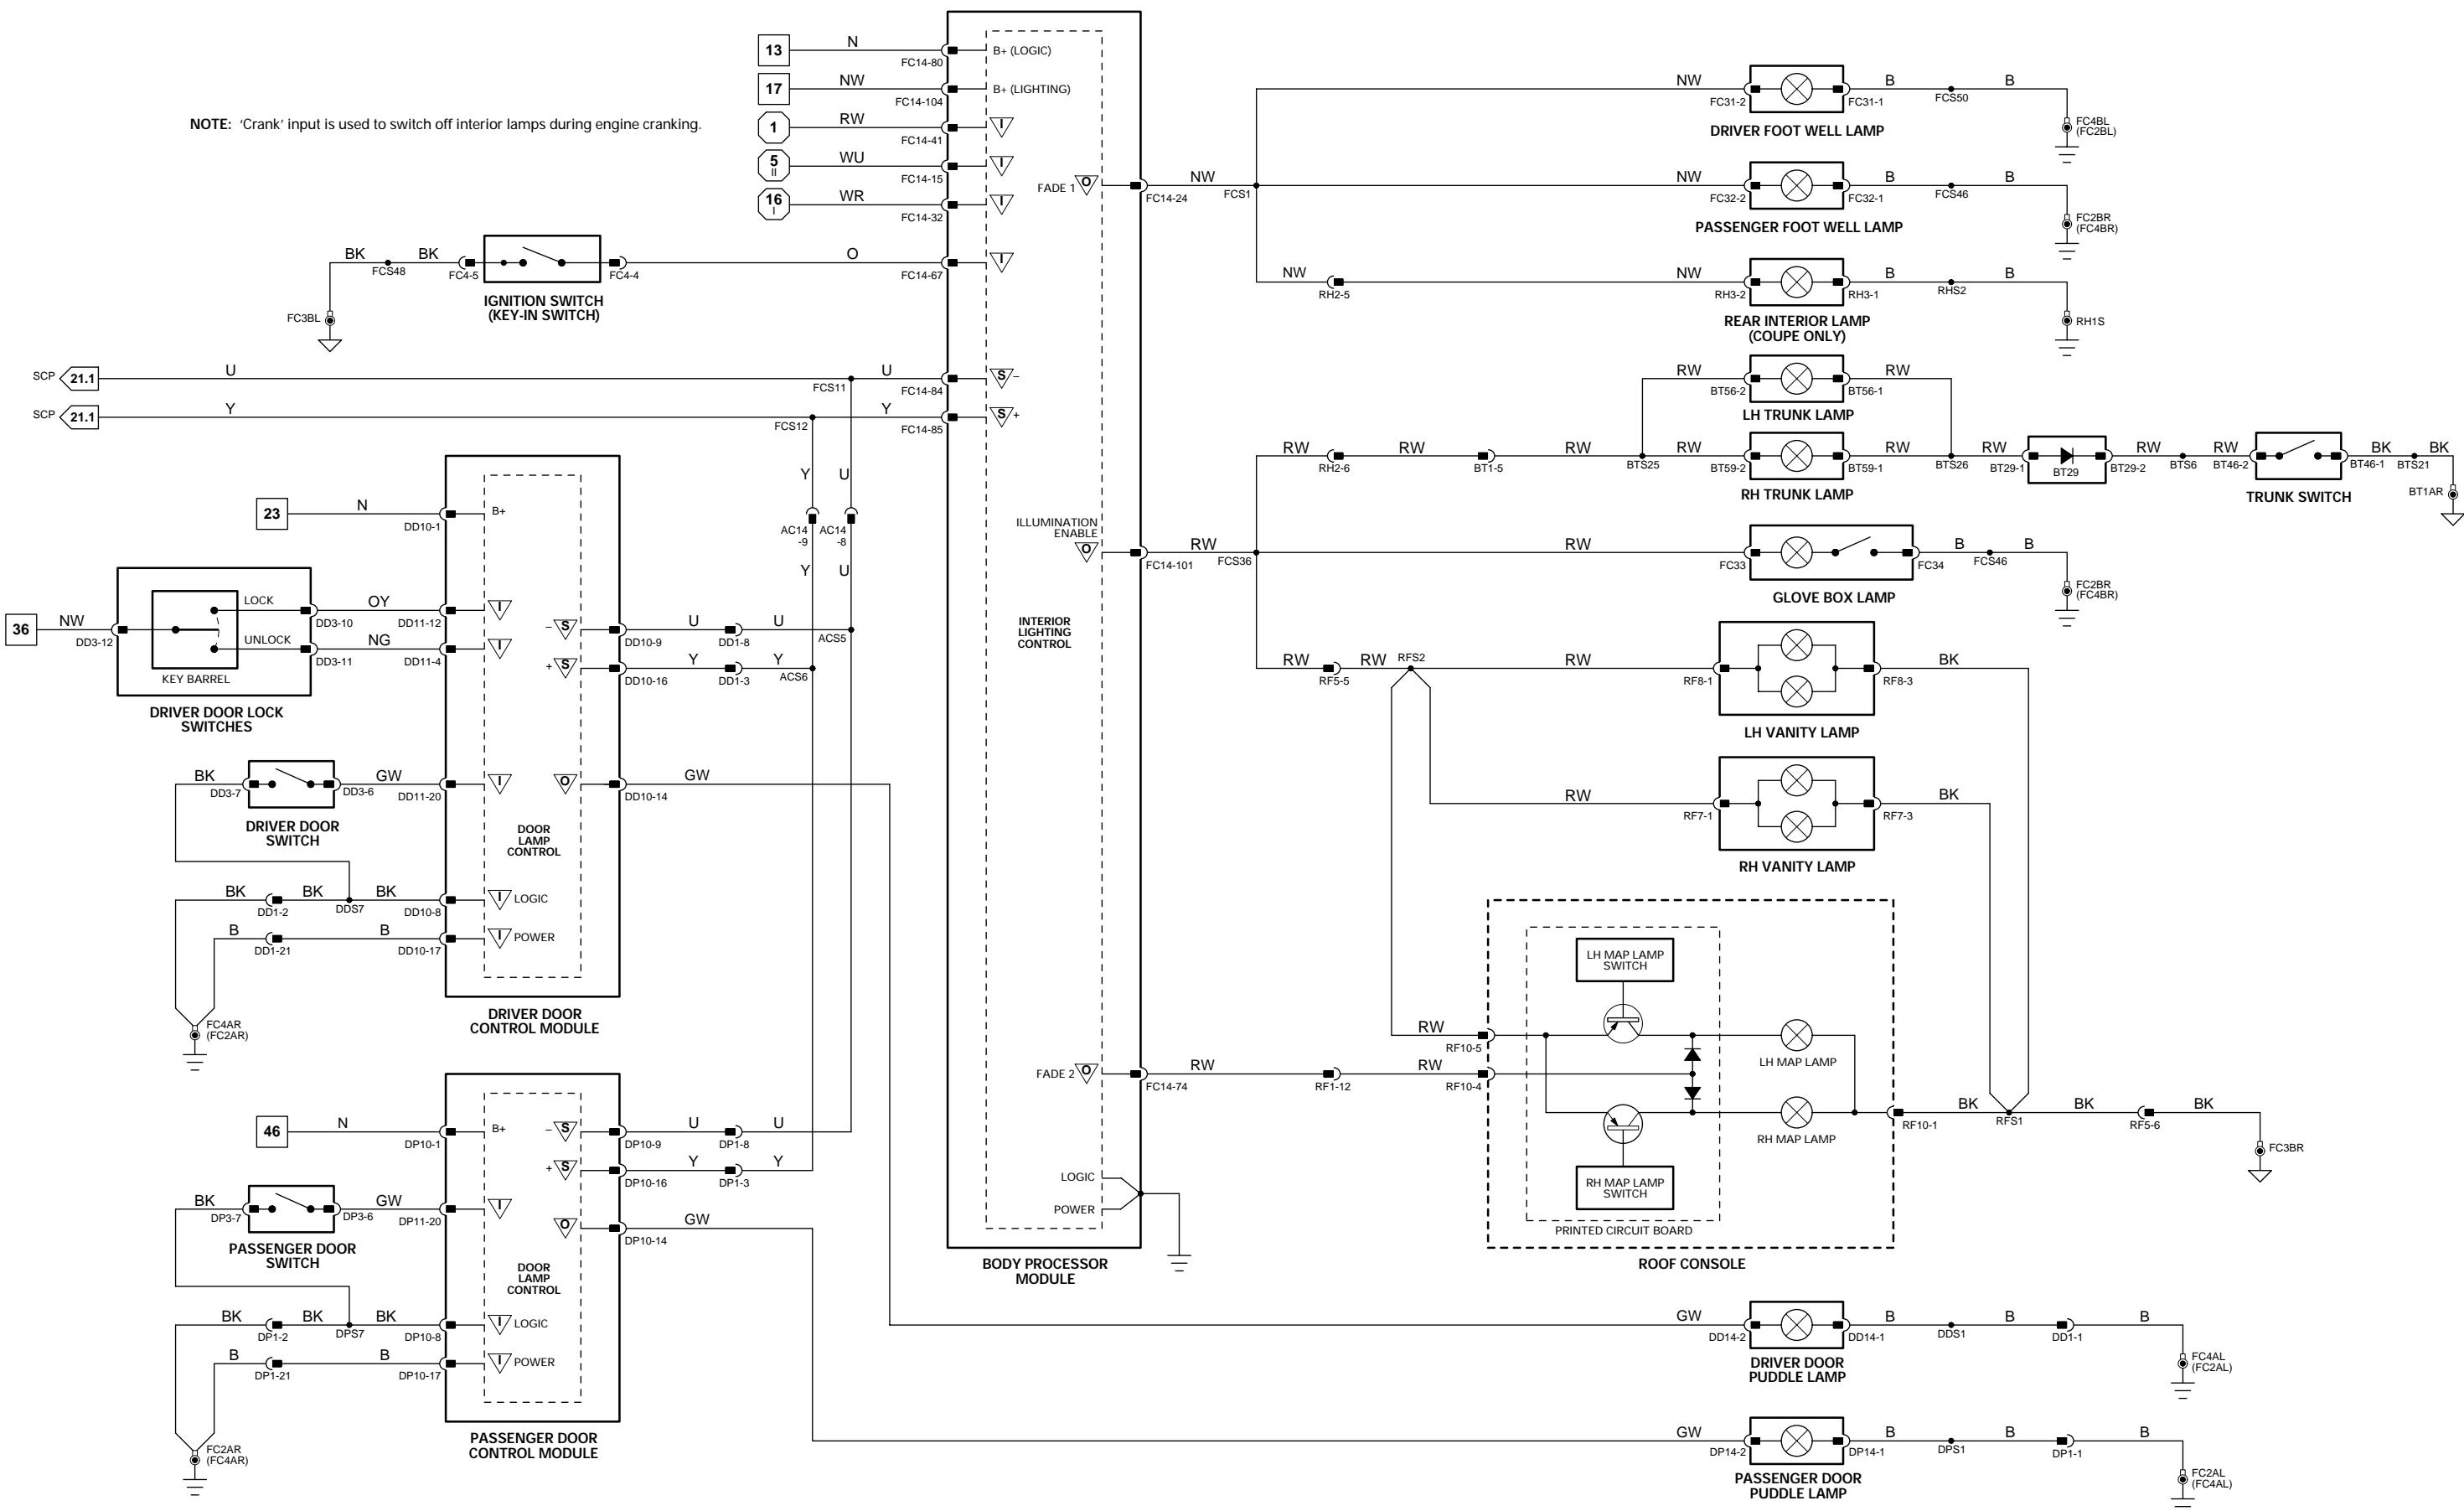


Fig. 10.2

DIMMER MODULE

Pin	Description
O	FC23-1 MAJOR INSTRUMENT PACK ILLUMINATION BULB SUPPLY
O	FC23-2 MAJOR INSTRUMENT PACK ILLUMINATION BULB SUPPLY
I	FC23-3 IGNITION SWITCHED GROUND SUPPLY
I	FC23-4 SIDE LAMPS ON REQUEST
I	FC23-5 DIMMER POTENTIOMETER FEEDBACK VOLTAGE
O	FC23-6 DIMMER POTENTIOMETER REFERENCE GROUND
O	FC23-7 GENERAL ILLUMINATION BULB SUPPLY
O	FC23-8 GENERAL ILLUMINATION BULB SUPPLY
I	FC23-9 GROUND SUPPLY
I	FC23-10 BATTERY POWER SUPPLY
I	FC23-11 BATTERY POWER SUPPLY
O	FC23-12 DIMMER POTENTIOMETER REFERENCE VOLTAGE

Active	Inactive
B+ (LIGHTS ON)	GROUND
B+ (LIGHTS ON)	GROUND
GROUND	GROUND
GROUND	1.3 V = DIM; 4 V = BRIGHT
GROUND	GROUND
B+ (LIGHTS ON)	GROUND
B+ (LIGHTS ON)	GROUND
GROUND	GROUND
B+	GROUND
B+	GROUND
4 V	0 V

COMPONENTS

Component	Connector / Type / Color	Location / Access
AIR CONDITIONING CONTROL PANEL	FC43 / 12-WAY MULTILOCK 040 / BLUE	CENTER CONSOLE
CENTER CONSOLE SWITCH PACK	FC55 / 20-WAY FORD IDC / BLACK	CENTER CONSOLE
CIGAR LIGHTER	FC42 / 2-WAY AMP / METALLIC	FORWARD OF GEAR SELECTOR
CONVERTIBLE TOP SWITCH	FC59 / LUCAR POSILOCK / BLACK	FORWARD OF GEAR SELECTOR
SPEED CONTROL ON / OFF SWITCH	FC62 / 10-WAY AMP MQL / BLACK	REARWARD OF GEAR SELECTOR
DIMMER CONTROL (COLUMN SWITCHGEAR)	FC63 / 10-WAY AMP MQL / NATURAL	STEERING COLUMN COWL
DIMMER MODULE	SC11 / 6-WAY MULTILOCK 070 / WHITE	ADJACENT TO RIGHT HAND FASCIA FUSE BOX
GEAR SELECTOR ILLUMINATION MODULE	FC23 / 12-WAY MULTILOCK 040 / BLACK	FRONT OF GEAR SELECTOR ASSEMBLY
LIGHTING STALK (COLUMN SWITCHGEAR)	FC28 / 10-WAY MULTILOCK 070 / WHITE	STEERING COLUMN
MAJOR INSTRUMENT PACK	SC2 / 10-WAY MULTILOCK 070 / YELLOW	FASCIA
MINOR INSTRUMENT PACK	FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK	
MODE SWITCH (TRANSMISSION)	FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW	
NAVIGATION CONTROL MODULE	FC79 / 20-WAY MULTILOCK 040 / BLACK	FASCIA
NAVIGATION DISPLAY	FC35 / 10-WAY AMP MQL / BLACK	REARWARD OF GEAR SELECTOR
RADIO / CASSETTE HEAD UNIT	IC7 / 8-WAY ALPINE / BLACK	TRUNK / RIGHT HAND SIDE
ROOF CONSOLE	IC22 / 16-WAY AMP ML42 / BLACK	
SWITCH PACK - DRIVER DOOR	IC23 / 24-WAY AMP ML42 / BLACK	
SWITCH PACK - DRIVER DOOR MEMORY	FC97 / 12-WAY AMP ML42 / BLACK	BEHIND NAVIGATION DISPLAY
SWITCH PACK - PASSENGER DOOR	FC98 / 16-WAY AMP ML42 / BLACK	
TRIP COMPUTER SWITCH PACK	IC8 / 8-WAY ALPINE / BLACK	CENTER CONSOLE
TRUNK AND FUEL FILL RELEASE SWITCH	IC19 / 12-WAY MULTILOCK 070 / WHITE	
VALET SWITCH	IC20 / 26-WAY MGS / YELLOW	
	RF10 / 6-WAY MULTILOCK 070 / GREY	INTERIOR ROOF
	DD17 / 20-WAY MULTILOCK 040 / BLACK	DRIVER DOOR
	DD5 / 10-WAY AMP MQL / BLACK	DRIVER DOOR
	DP17 / 8-WAY MULTILOCK 040 / BLACK	PASSENGER DOOR
	FC27 / 10-WAY AMP MQL / BLACK	FASCIA / DRIVER SIDE
	FC41 / 10-WAY AMP MQL / NATURAL	FASCIA / DRIVER SIDE
	FC67 / 10-WAY AMP MQL / BLACK	DRIVER KNEE BOLSTER

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC15	20-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
DD1	23-WAY AMP - FORD / BLACK	DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM
DP1	23-WAY AMP - FORD / BLACK	PASSENGER SIDE 'A' POST / 'A' POST TRIM
IC1	20-WAY MULTILOCK 070 / YELLOW	BELOW CENTER CONSOLE GLOVE BOX
RF1	24-WAY CONNECTOR / BLACK	RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
SC3	12-WAY MULTILOCK 070 / GREY	RIGHT HAND SIDE OF STEERING COLUMN

GROUNDS

Ground	Location / Type
CE2	EYELET (SINGLE) / ABOVE RIGHT HAND SIDE OF TRANSMISSION TUNNEL
FC2AL	EYELET (PAIR) - LEFT HAND LEG / RIGHT HAND 'A' POST
FC2BL	EYELET (PAIR) - LEFT HAND LEG / RIGHT HAND 'A' POST
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC4AL	EYELET (PAIR) - LEFT HAND LEG / LEFT HAND 'A' POST
FC4BL	EYELET (PAIR) - LEFT HAND LEG / LEFT HAND 'A' POST
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

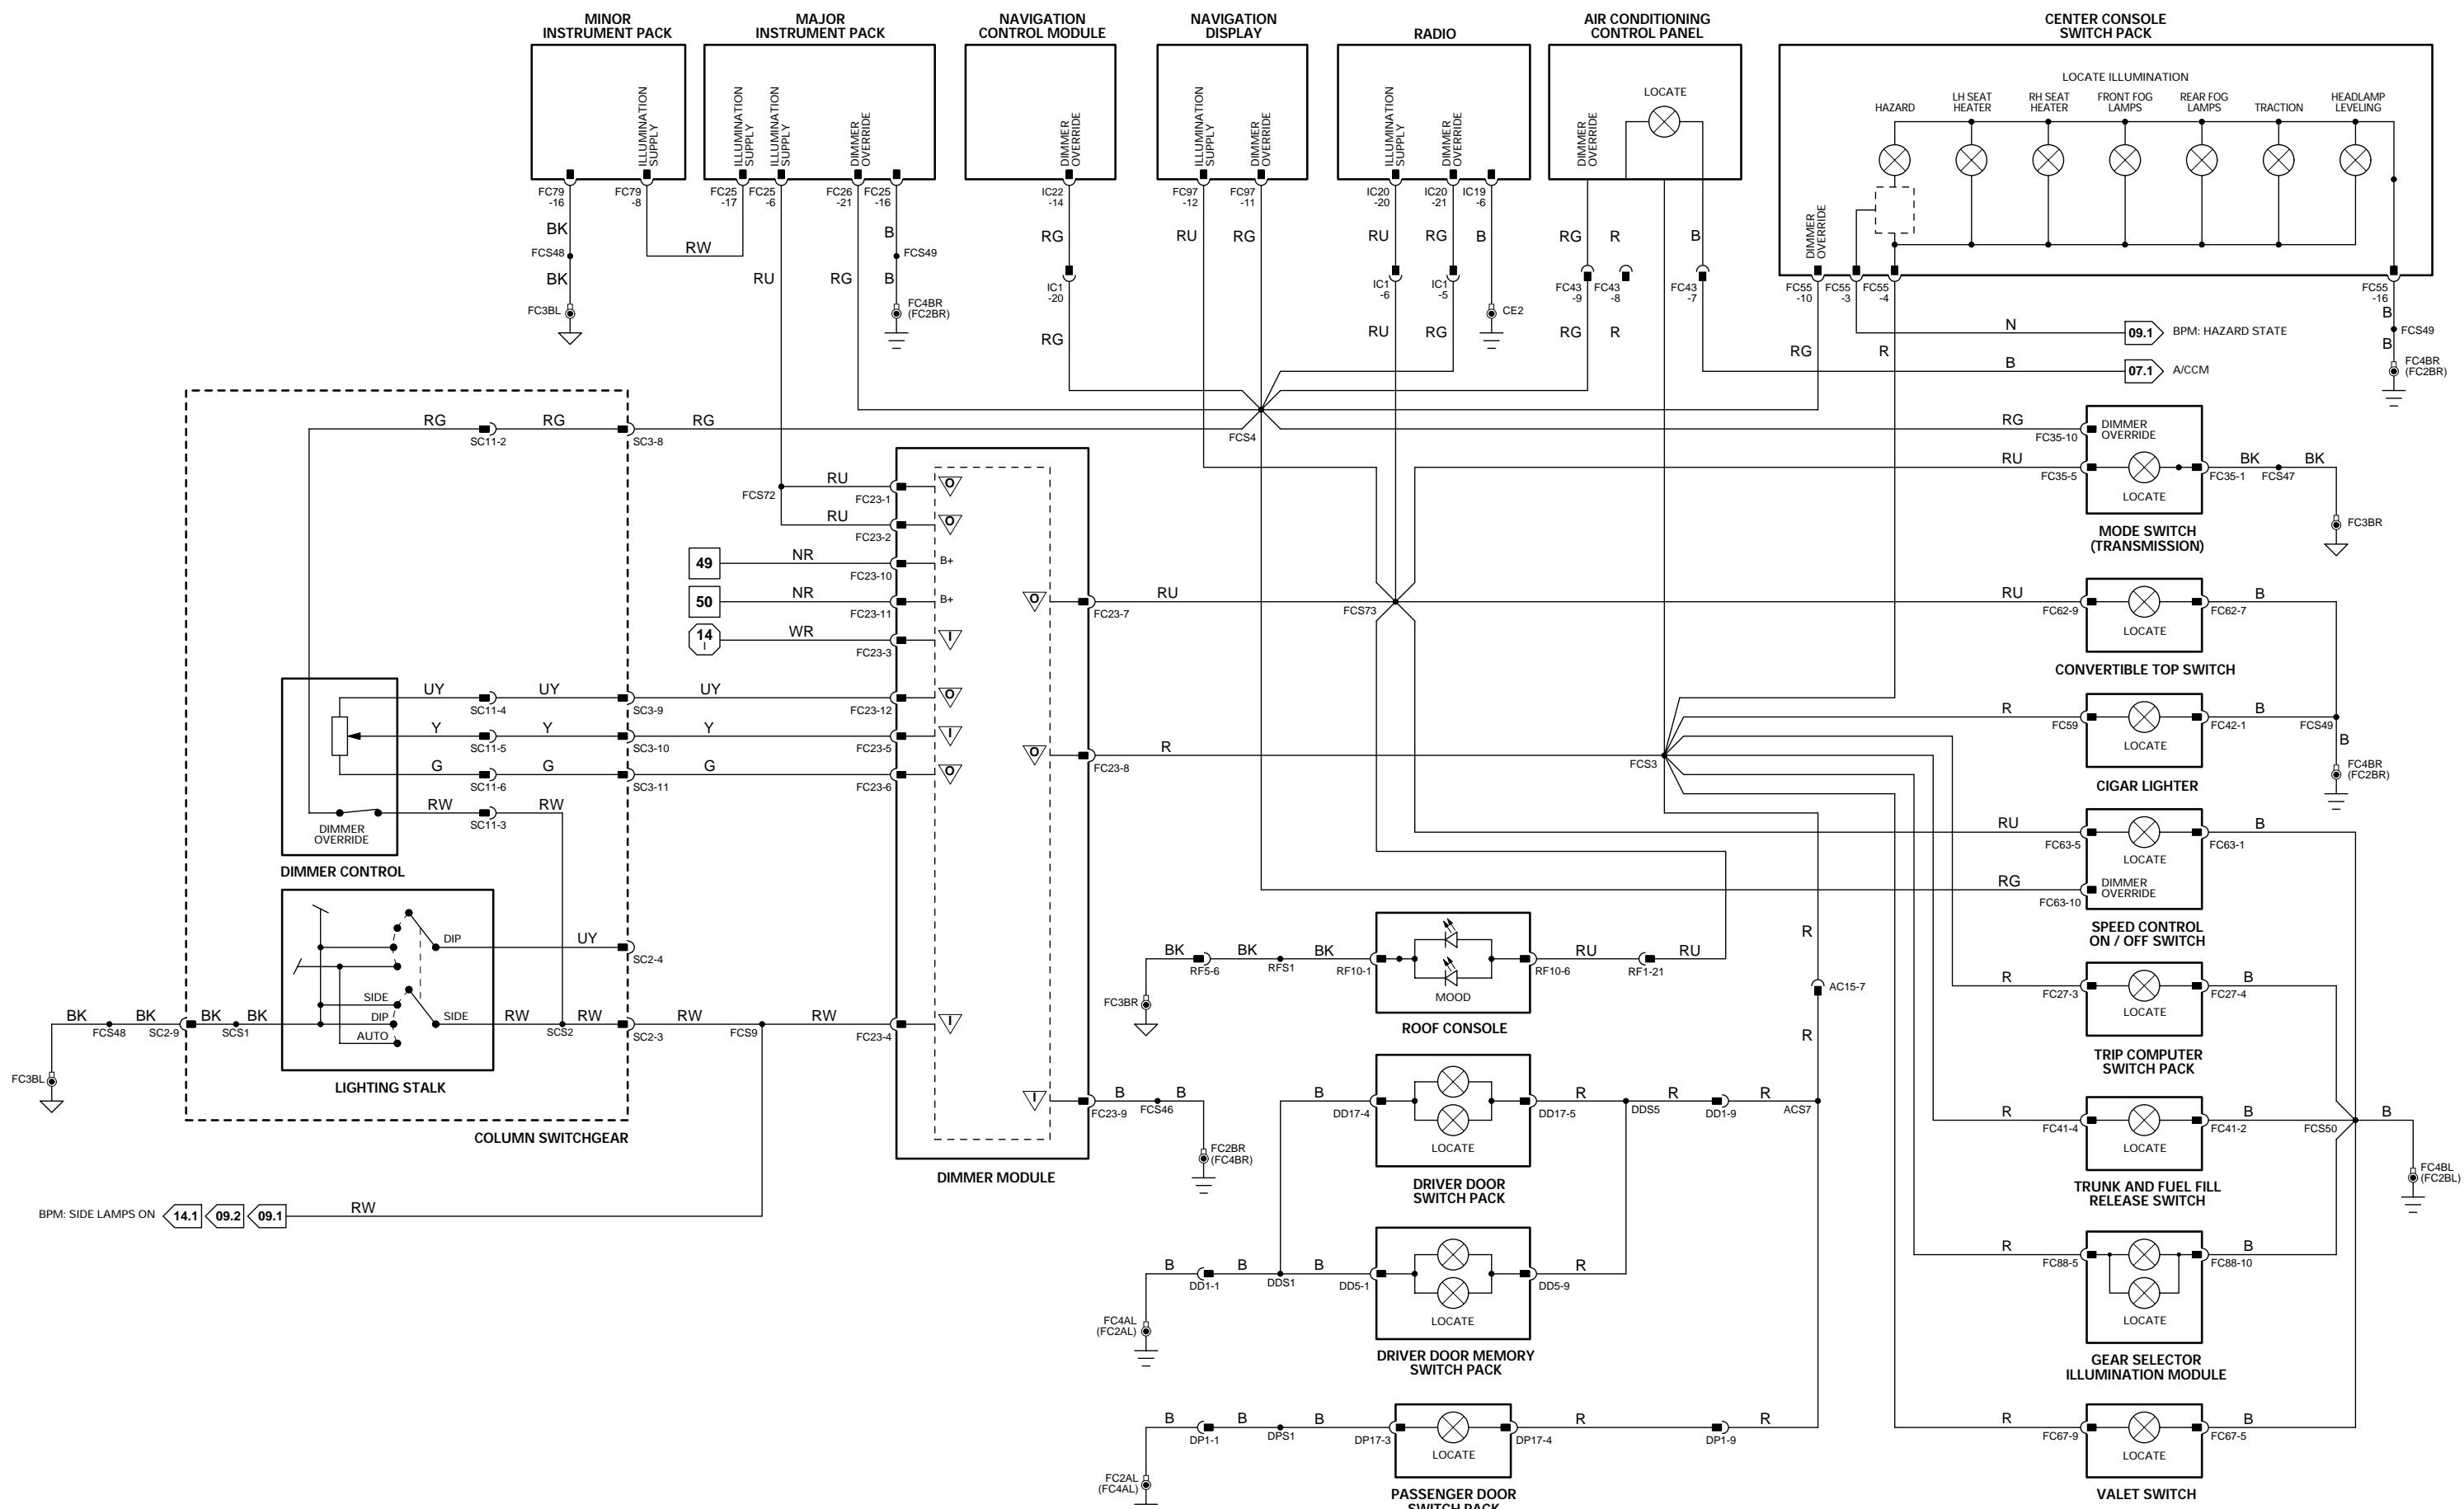

BODY PROCESSOR MODULE

Pin	Description	Active	Inactive
I	FC14-11 AUTO TILT REQUEST	GROUND	B+
I	FC14-15 IGNITION SWITCHED GROUND SUPPLY	GROUND	GROUND
I	FC14-25 COLUMN MOTOR GROUND SUPPLY	GROUND	GROUND
I	FC14-32 IGNITION SWITCHED GROUND SUPPLY	GROUND	GROUND
O	FC14-40 COLUMN MOTOR POTENTIOMETER REFERENCE VOLTAGE	5 V	5 V
I	FC14-41 IGNITION GROUND SUPPLY	GROUND	GROUND
O	FC14-52 COLUMN REACH MOTOR SUPPLY	B+	GROUND
I	FC14-58 NOT-IN-PARK	GROUND (R,N,D,4,3,2)	B+ (PARK)
I	FC14-66 COLUMN REACH MOTOR POTENTIOMETER FEEDBACK	0.5 V (OUT); 4 V (IN)	GROUND (KEY IN)
I	FC14-67 KEY IN IGNITION	B+	B+
O	FC14-78 COLUMN REACH MOTOR SUPPLY	B+	GROUND
I	FC14-80 BATTERY POWER SUPPLY (LOGIC)	B+	B+
S	FC14-84 SCP NETWORK	2 - 1600 Hz	2 - 1600 Hz
S	FC14-85 SCP NETWORK	UP = 10.1 V, DOWN = 12.1 V, RETRACT = 8.5 V, EXTEND = 6.8 V	GROUND
I	FC14-87 COLUMN MOVEMENT REQUEST	GROUND	GROUND
O	FC14-90 COLUMN TILT MOTOR POTENTIOMETER REFERENCE GROUND	GROUND	GROUND
O	FC14-91 COLUMN REACH MOTOR POTENTIOMETER REFERENCE GROUND	GROUND	GROUND
I	FC14-93 COLUMN TILT MOTOR POTENTIOMETER FEEDBACK	UP = 4 V, DOWN = 0.5 V	GROUND
O	FC14-99 COLUMN TILT MOTOR SUPPLY	B+	GROUND
O	FC14-100 COLUMN TILT MOTOR SUPPLY	B+	GROUND
I	FC14-102 COLUMN MOVEMENT MOTORS BATTERY POWER SUPPLY	B+	GROUND

DRIVER DOOR CONTROL MODULE

Pin	Description	Active	Inactive
I	DD10-1 BATTERY POWER SUPPLY	B+	GROUND
I	DD10-8 LOGIC GROUND	GROUND	GROUND
S	DD10-9 SCP NETWORK	2 - 1600 Hz	2 - 1600 Hz
S	DD10-16 SCP NETWORK	2 - 1600 Hz	2 - 1600 Hz
I	DD10-17 POWER GROUND	GROUND	GROUND
O	DD11-2 SEAT MEMORY STATUS LED	GROUND (LED ON)	B+
I	DD11-6 MEMORY SET REQUEST	B+	GROUND (DOOR OPEN)
I	DD11-20 DRIVER DOOR SWITCH	B+ (MOMENTARY)	B+ (MOMENTARY)
I	DD11-21 MEMORY 1 RECALL REQUEST	B+ (MOMENTARY)	B+ (MOMENTARY)
I	DD11-22 MEMORY 2 RECALL REQUEST	B+ (MOMENTARY)	GROUND

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 11.1

COMPONENTS

Component

AUTO TILT SWITCH (COLUMN SWITCHGEAR)
BODY PROCESSOR MODULE
COLUMN JOY STICK (COLUMN SWITCHGEAR)
DOOR CONTROL MODULE - DRIVER
DOOR SWITCH - DRIVER

SC9 / 8-WAY GROTE AND HARTMAN MDK / BLACK
FC14 / 104-WAY AMP EEEC / GREY
SC9 / 8-WAY GROTE AND HARTMAN MDK / BLACK
DD10 / 22-WAY FORD 2.8 TIMER / BLUE
DD11 / 22-WAY FORD 2.8 TIMER / BLACK
DD3 / 13-WAY ECONOSEAL III LC / BLACK
FC4 / 8-WAY MULTILOCK 070 / WHITE
FC87 / 3-WAY MULTILOCK 070 / WHITE
FC60 / 6-WAY MULTILOCK 070 / WHITE
FC61 / 8-WAY MULTILOCK 070 / YELLOW
DD5 / 10-WAY AMP MQL / BLACK

STEERING COLUMN / LEFT HAND SIDE
PASSENGER SIDE FASCIA / AIRBAG BRACKET
STEERING COLUMN / LEFT HAND SIDE
DRIVER DOOR / DOOR CASING
DRIVER DOOR / DOOR CASING
STEERING COLUMN
GEAR SELECTOR ASSEMBLY
STEERING COLUMN
DRIVER DOOR

HARNESS-TO-HARNESS CONNECTORS

Connector

Connector	Type / Color
AC14	14-WAY MULTILOCK 070 / GREY
DD1	23-WAY AMP - FORD / BLACK
SC2	10-WAY MULTILOCK 070 / YELLOW
SC3	12-WAY MULTILOCK 070 / GREY

Location / Access
FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM
ADJACENT TO STEERING COLUMN MOTOR
RIGHT HAND SIDE OF STEERING COLUMN

GROUNDS

Ground

Ground	Location / Type
FC2AR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC4AR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

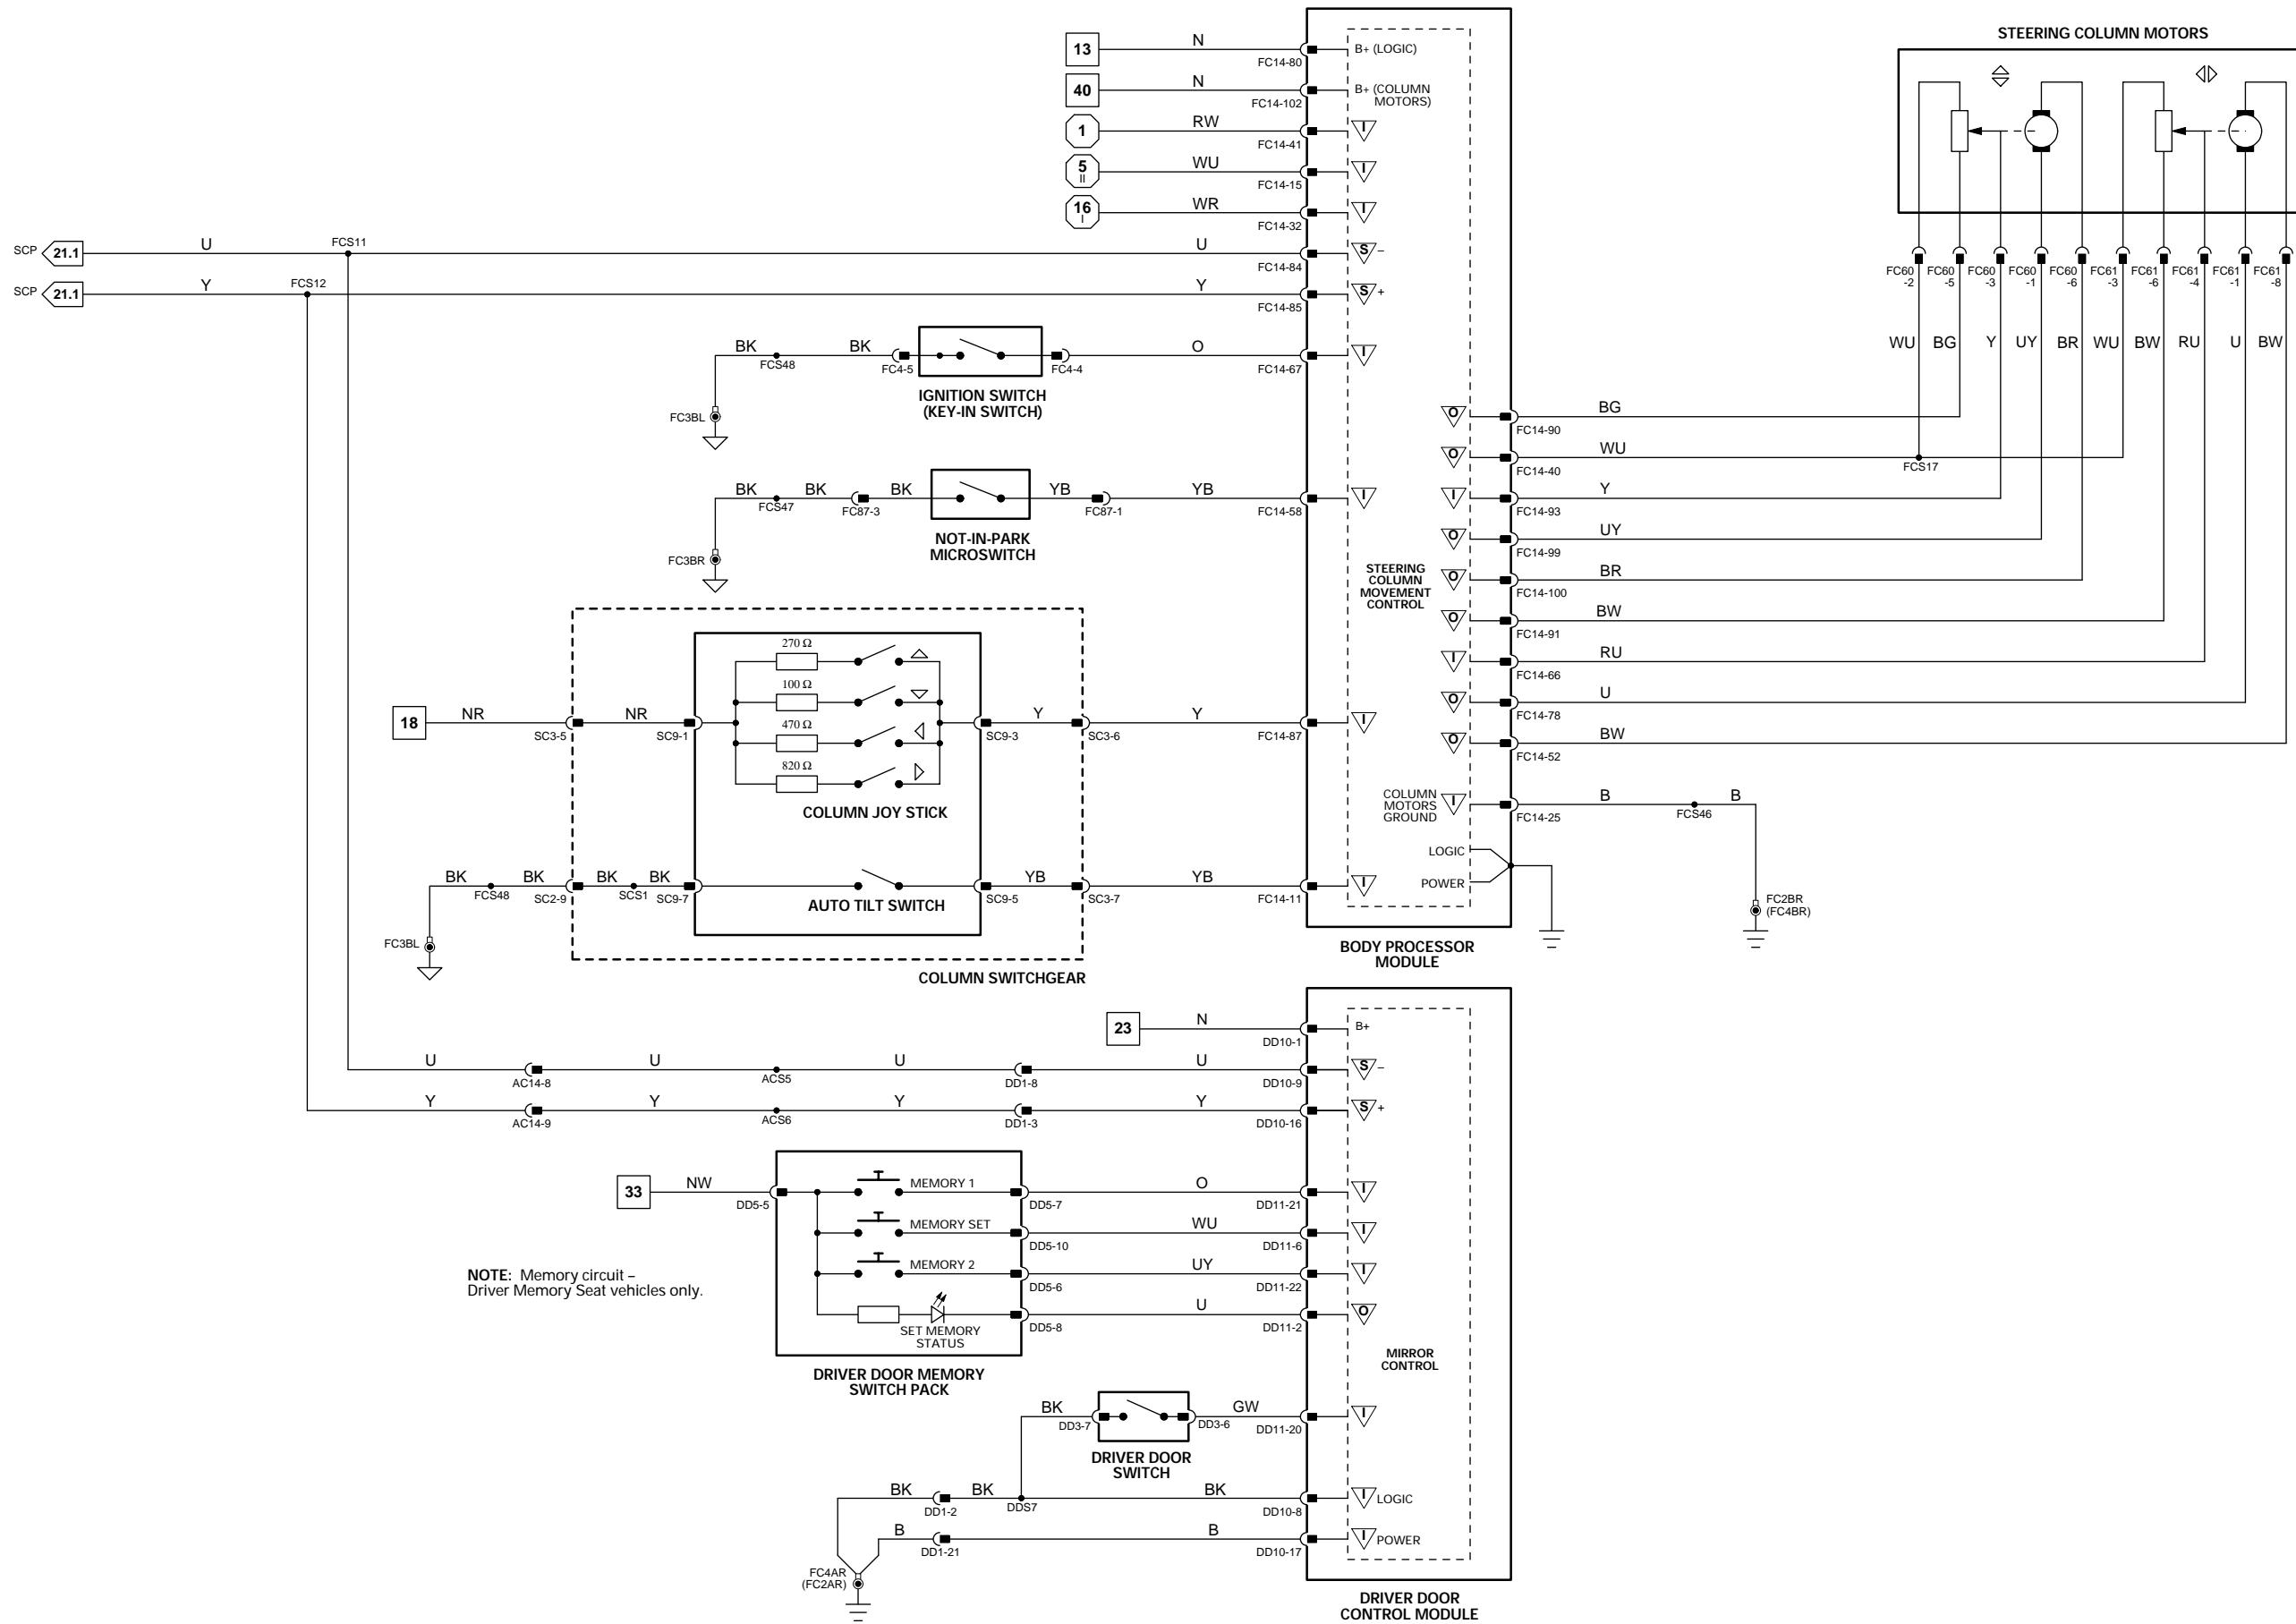

CONTROL MODULE PIN OUT INFORMATION

BODY PROCESSOR MODULE

Pin	Description
I	FC14-15 IGNITION SWITCHED GROUND SUPPLY
I	FC14-32 IGNITION SWITCHED GROUND SUPPLY
I	FC14-41 IGNITION GROUND SUPPLY
I	FC14-58 NOT-IN-PARK
I	FC14-80 BATTERY POWER SUPPLY (LOGIC)
S	FC14-84 SCP NETWORK
S	FC14-85 SCP NETWORK

DRIVER DOOR CONTROL MODULE

Pin	Description
I	DD10-1 BATTERY POWER SUPPLY
O	DD10-2 DRIVER DOOR MIRROR VERTICAL / HORIZONTAL MOTOR COMMON SUPPLY
O	DD10-3 DRIVER DOOR MIRROR HORIZONTAL MOVEMENT MOTOR
O	DD10-4 DRIVER DOOR MIRROR VERTICAL MOVEMENT MOTOR
I	DD10-8 LOGIC GROUND
S	DD10-9 SCP NETWORK
S	DD10-16 SCP NETWORK
I	DD10-17 POWER GROUND
O	DD10-20 DRIVER DOOR MIRROR POTENTIOMETER COMMON REFERENCE VOLTAGE
I	DD10-21 DRIVER DOOR MIRROR POTENTIOMETER HORIZONTAL POSITION FEEDBACK
I	DD10-22 DRIVER DOOR MIRROR POTENTIOMETER VERTICAL POSITION FEEDBACK
I	DD11-1 MIRROR SELECT
O	DD11-2 SEAT MEMORY STATUS LED
I	DD11-3 RH VERTICAL MOVEMENT REQUEST
I	DD11-6 MEMORY SET REQUEST
I	DD11-9 RH HORIZONTAL MOVEMENT REQUEST
I	DD11-10 LH HORIZONTAL MOVEMENT REQUEST
I	DD11-17 LH VERTICAL MOVEMENT REQUEST
I	DD11-20 DRIVER DOOR SWITCH
I	DD11-21 MEMORY 1 RECALL REQUEST
I	DD11-22 MEMORY 2 RECALL REQUEST

MAJOR INSTRUMENT PACK

Pin	Description
C	FC25-11 CAN NETWORK
S	FC25-13 SCP NETWORK
S	FC25-14 SCP NETWORK
C	FC25-23 CAN NETWORK

PASSENGER DOOR CONTROL MODULE

Pin	Description
I	DP10-1 BATTERY POWER SUPPLY
O	DP10-2 PASSENGER DOOR MIRROR VERTICAL / HORIZONTAL MOVEMENT MOTORS COMMON
O	DP10-3 PASSENGER DOOR MIRROR HORIZONTAL MOVEMENT MOTOR
O	DP10-4 PASSENGER DOOR MIRROR VERTICAL MOVEMENT MOTOR
I	DP10-8 LOGIC GROUND
S	DP10-9 SCP NETWORK
S	DP10-16 SCP NETWORK
I	DP10-17 POWER GROUND
O	DP10-20 PASSENGER DOOR MIRROR POTENTIOMETER COMMON REFERENCE VOLTAGE
I	DP10-21 PASSENGER DOOR MIRROR POTENTIOMETER HORIZONTAL POSITION FEEDBACK VOLTAGE
I	DP10-22 PASSENGER DOOR MIRROR POTENTIOMETER VERTICAL POSITION FEEDBACK VOLTAGE

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Fig. 11.2

COMPONENTS		
Component	Connector / Type / Color	Location / Access
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
DOOR CONTROL MODULE - DRIVER	DD10 / 22-WAY FORD 2.8 TIMER / BLUE	DRIVER DOOR / DOOR CASING
DOOR CONTROL MODULE - PASSENGER	DD11 / 22-WAY FORD 2.8 TIMER / BLACK	PASSENGER DOOR / DOOR CASING
DOOR MIRROR MOTORS - DRIVER	DP10 / 22-WAY FORD 2.8 TIMER / BLUE	BEHIND MIRROR
DOOR MIRROR MOTORS - PASSENGER	DP11 / 22-WAY FORD 2.8 TIMER / BLACK	BEHIND MIRROR
DOOR SWITCH - DRIVER	MD1 / 8-WAY CONNECTOR / BLUE	DRIVER DOOR / DOOR CASING
MAJOR INSTRUMENT PACK	MP1 / 8-WAY CONNECTOR / BLUE	FASCIA
MIRROR JOYSTICK (DRIVER DOOR SWITCH PACK)	DD25 / 26-WAY AMP MICRO QUAD LOCK / BLACK	DRIVER DOOR SWITCH PACK
NOT-IN-PARK MICROSWITCH	FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW	GEAR SELECTOR ASSEMBLY
SWITCH PACK - DRIVER DOOR MEMORY	DD5 / 10-WAY AMP MQL / BLACK	DRIVER DOOR
HARNESS-TO-HARNESS CONNECTORS		
Connector	Type / Color	Location / Access
AC14	14-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
DD1	23-WAY AMP - FORD / BLACK	DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM
DD8	12-WAY MULTILOCK 040 / BLUE	DRIVER DOOR / DOOR CASING
DP1	23-WAY AMP - FORD / BLACK	PASSENGER SIDE 'A' POST / 'A' POST TRIM
DP8	12-WAY MULTILOCK 040 / BLUE	PASSENGER DOOR / DOOR CASING
GROUNDS		
Ground	Location / Type	
FC2AR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST	
FC3AS	EYELET (SINGLE) / TRANSMISSION TUNNEL, LEFT HAND SIDE	
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE	
FC4AR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST	

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

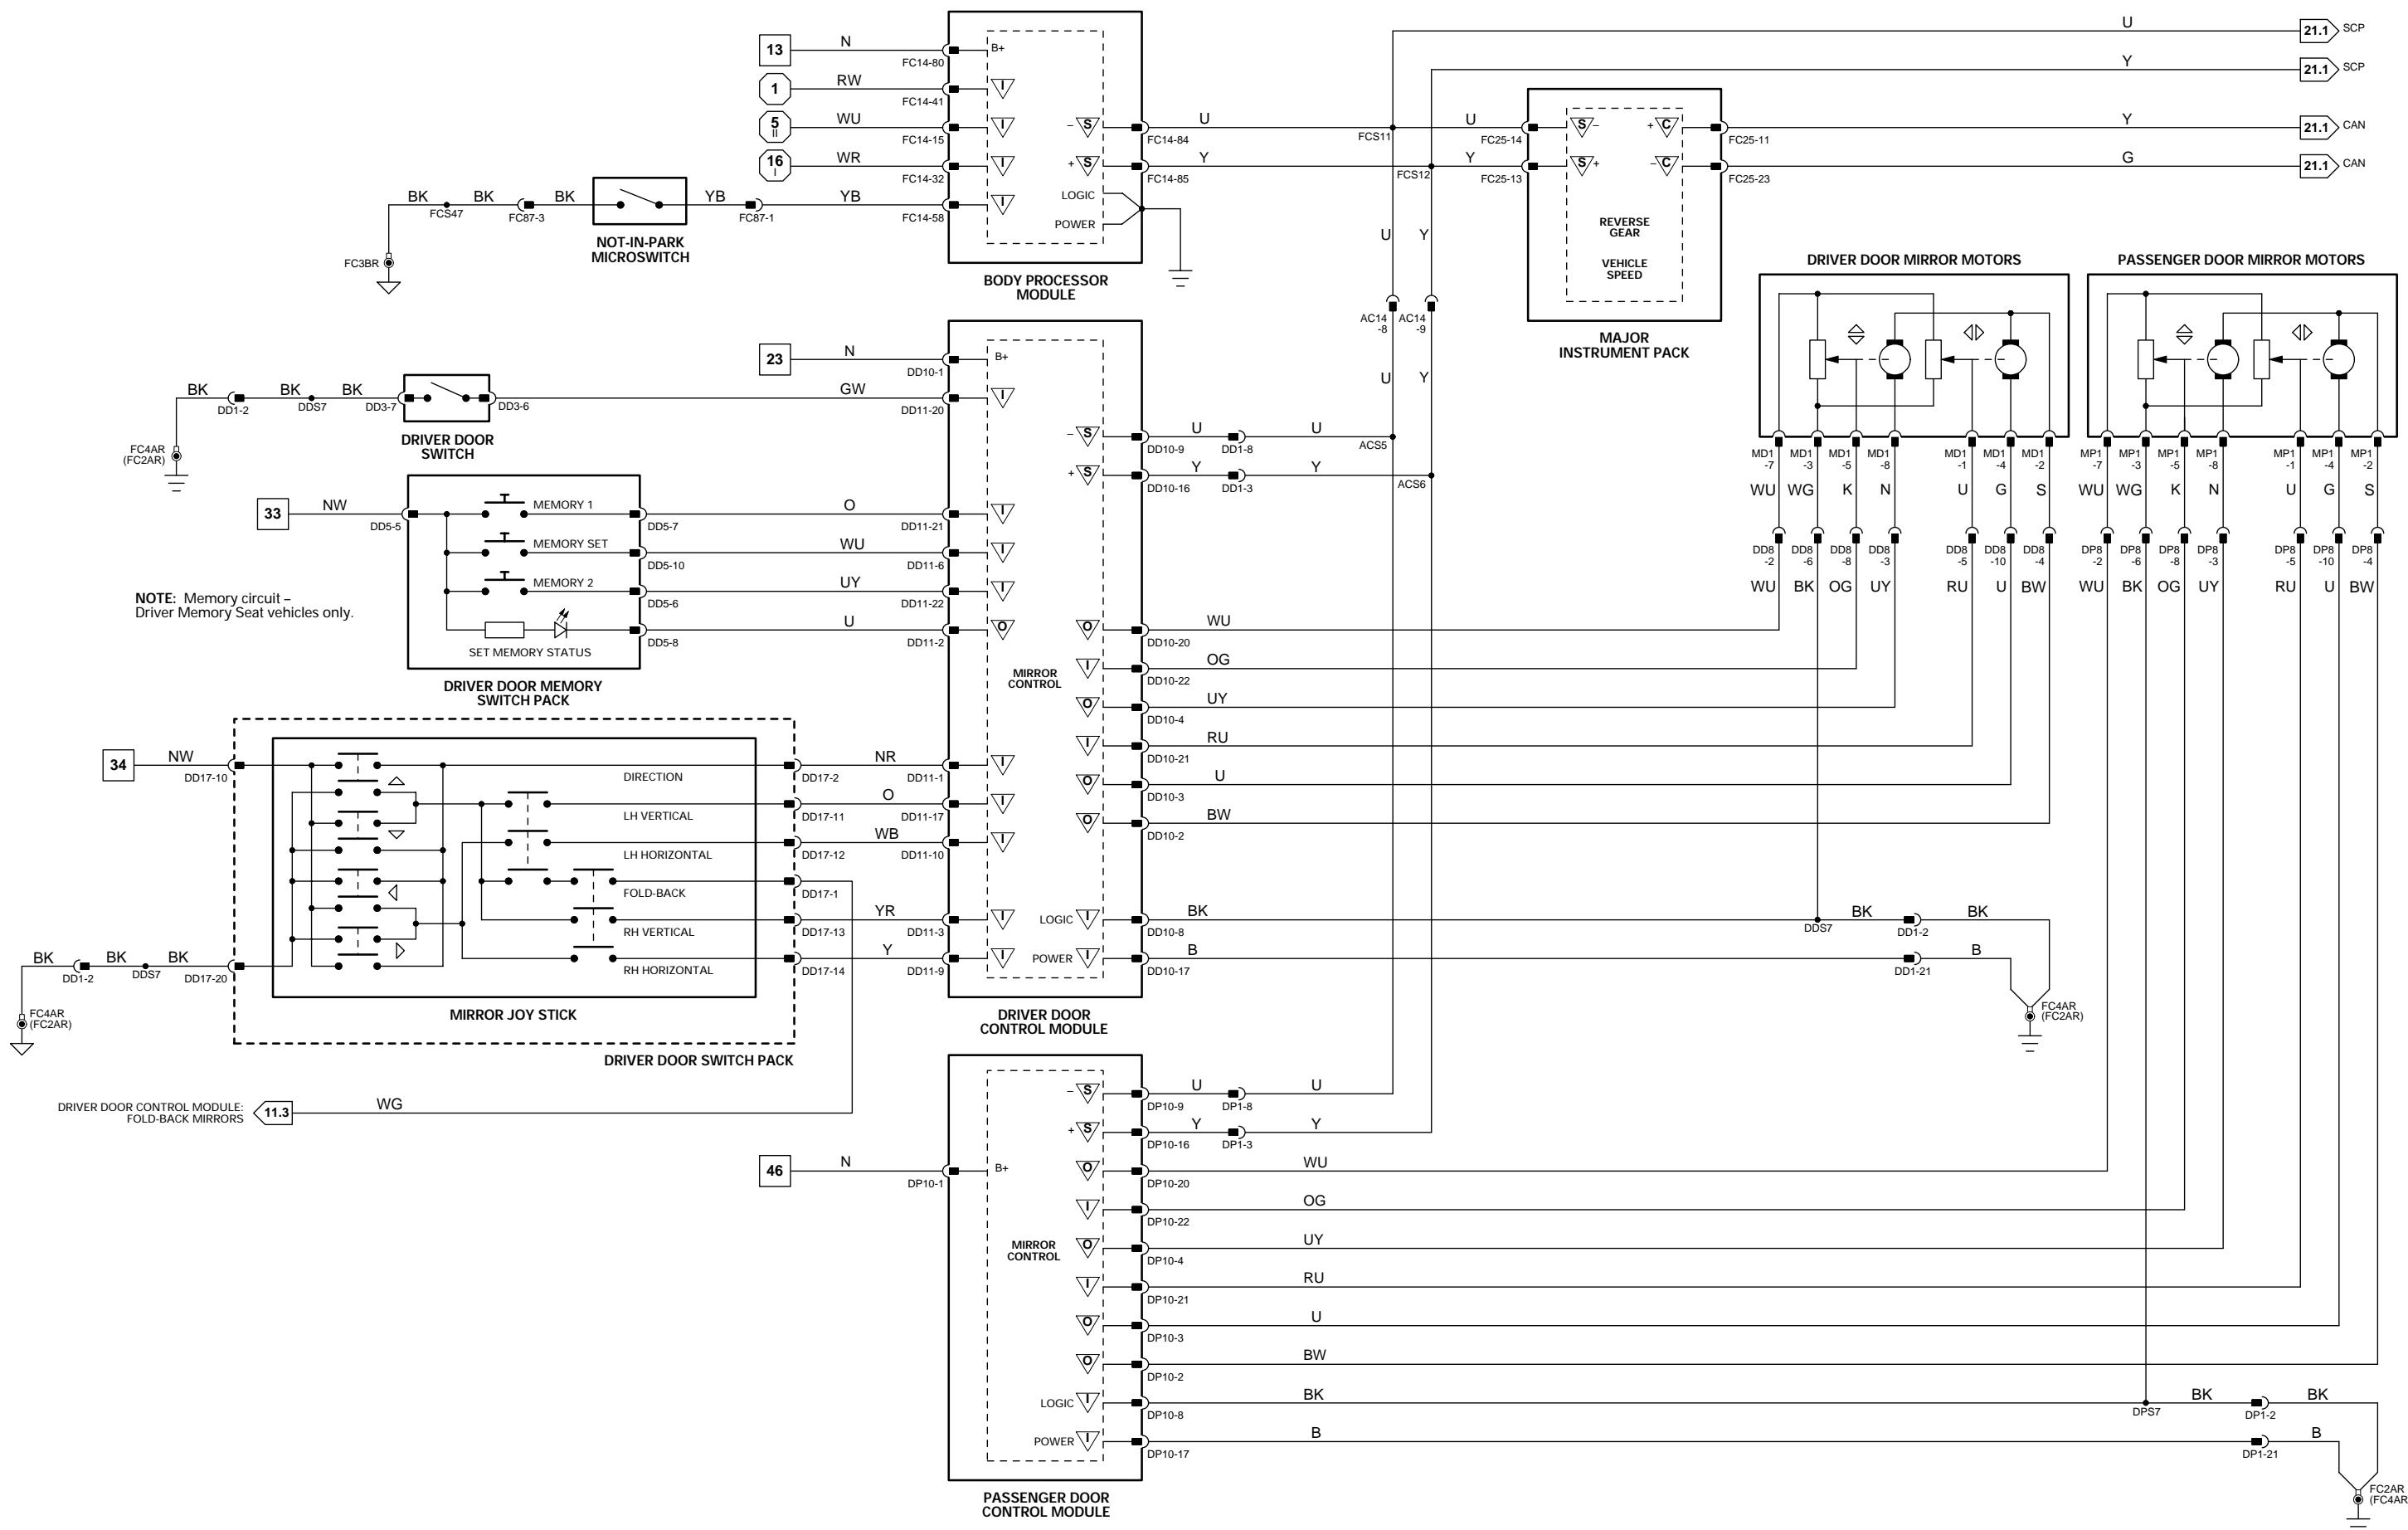


Fig. 11.3

BODY PROCESSOR MODULE

Pin	Description
I	FC14-15 IGNITION SWITCHED GROUND SUPPLY
I	FC14-16 SIDE LAMP REQUEST
I	FC14-42 DIPPED BEAM REQUEST
I	FC14-79 BATTERY POWER SUPPLY
I	FC14-80 BATTERY POWER SUPPLY (LOGIC)
S	FC14-84 SCP NETWORK
S	FC14-85 SCP NETWORK

DRIVER DOOR CONTROL MODULE

Pin	Description
I	DD10-1 BATTERY POWER SUPPLY
I	DD10-8 LOGIC GROUND
S	DD10-9 SCP NETWORK
S	DD10-16 SCP NETWORK
I	DD11-15 DOOR MIRROR POWER FOLD BACK REQUEST

DRIVER SEAT CONTROL MODULE

Pin	Description
O	SD3-4 DOOR MIRROR FOLD BACK ACTIVATE
I	SD5-2 POWER GROUND
I	SD5-5 BATTERY POWER SUPPLY
S	SD5-9 SCP NETWORK
S	SD5-10 SCP NETWORK

MAJOR INSTRUMENT PACK

Pin	Description
C	FC25-11 CAN NETWORK
S	FC25-13 SCP NETWORK
S	FC25-14 SCP NETWORK
C	FC25-23 CAN NETWORK

PASSENGER SEAT CONTROL MODULE

Pin	Description
O	SP3-4 DOOR MIRROR FOLD OUT ACTIVATE
I	SP5-2 POWER GROUND
I	SP5-5 BATTERY POWER SUPPLY
S	SP5-9 SCP NETWORK
S	SP5-10 SCP NETWORK

SECURITY AND LOCKING CONTROL MODULE

Pin	Description
O	BT40-5 REVERSE LAMP SUPPLY
I	BT40-6 BATTERY POWER SUPPLY
S	BT40-8 SCP NETWORK
I	BT40-13 GROUND
I	BT40-14 GROUND
S	BT40-16 SCP NETWORK

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Fig. 11.3

COMPONENTS

Component

BODY PROCESSOR MODULE

DOOR CONTROL MODULE - DRIVER

DOOR MIRROR - DRIVER

DOOR MIRROR - PASSENGER

INTERIOR REAR VIEW MIRROR

LIGHTING STALK (COLUMN SWITCHGEAR)

MAJOR INSTRUMENT PACK

MIRROR JOY STICK (DRIVER DOOR SWITCH PACK)

SEAT CONTROL MODULE - DRIVER

SEAT CONTROL MODULE - PASSENGER

SECURITY AND LOCKING CONTROL MODULE

Connector / Type / Color

FC14 / 104-WAY AMP EEEC / GREY

DD10 / 22-WAY FORD 2.8 TIMER / BLUE

DD11 / 22-WAY FORD 2.8 TIMER / BLACK

DD8 / 12-WAY MULTILOCK 040 / BLACK

DP8 / 12-WAY MULTILOCK 040 / BLACK

RF2 / 6-WAY MULTILOCK 070 / YELLOW

SC2 / 10-WAY MULTILOCK 070 / YELLOW

FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK

FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW

DD17 / 20-WAY MULTILOCK 040 / BLACK

SD3 / 16-WAY FORD 2.8 TIMER / BLACK

SD4 / 26-WAY FORD IDC / BLACK

SD5 / 10-WAY FORD 2.8 TIMER / BLACK

SP3 / 16-WAY FORD 2.8 TIMER / BLACK

SP5 / 10-WAY FORD 2.8 TIMER / BLACK

BT40 / 16-WAY FORD 2.8 TIMER / BLACK

BT41 / 26-WAY FORD IDC / BLACK

BT42 / 10-WAY FORD 2.8 TIMER / BLACK

RH20 / COAXIAL CONNECTOR

Location / Access

PASSENGER SIDE FASCIA / AIRBAG BRACKET

DRIVER DOOR / DOOR CASING

DRIVER DOOR

PASSENGER DOOR

WINDSHIELD / FORWARD OF ROOF CONSOLE

STEERING COLUMN

FASCIA

DRIVER DOOR SWITCH PACK

BELOW SEAT CUSHION

BELOW SEAT CUSHION

TRUNK / ELECTRICAL CARRIER

HARNESS-TO-HARNESS CONNECTORS

Connector Type / Color

AC13 20-WAY MULTILOCK 070 / YELLOW

AC14 14-WAY MULTILOCK 070 / GREY

AC16 6-WAY MULTILOCK 070 / YELLOW

BT1 20-WAY MULTILOCK 070 / WHITE

DD1 23-WAY AMP - FORD / BLACK

DP1 23-WAY AMP - FORD / BLACK

RF1 24-WAY CONNECTOR / BLACK

RF5 8-WAY MULTILOCK 070 / WHITE

RH2 20-WAY MULTILOCK 070 / WHITE

RH12 18-WAY MULTILOCK 070 / YELLOW

SD1 14-WAY MULTILOCK 070 / YELLOW

SP1 14-WAY MULTILOCK 070 / YELLOW

Location / Access

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE

LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH

DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM

PASSENGER SIDE 'A' POST / 'A' POST TRIM

RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

LOWER RH 'A' POST / 'A' POST TRIM

REAR OF CENTER CONSOLE ASSEMBLY

REAR OF CENTER CONSOLE ASSEMBLY

BELOW DRIVER SEAT

BELOW PASSENGER SEAT

GROUNDS

Ground Location / Type

BT1AR EYELET (PAIR) - RIGHT HAND LEG / ADJACENT TO BATTERY

FC2AR EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST

FC3BL EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FC3BR EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FC4AR EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST

FC5L EYELET (PAIR) - LEFT HAND LEG / RIGHT HAND SEAT

FC5S EYELET (SINGLE) / RIGHT HAND SEAT

FC6L EYELET (PAIR) - LEFT HAND LEG / LEFT HAND SEAT

FC6S EYELET (SINGLE) / LEFT HAND SEAT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

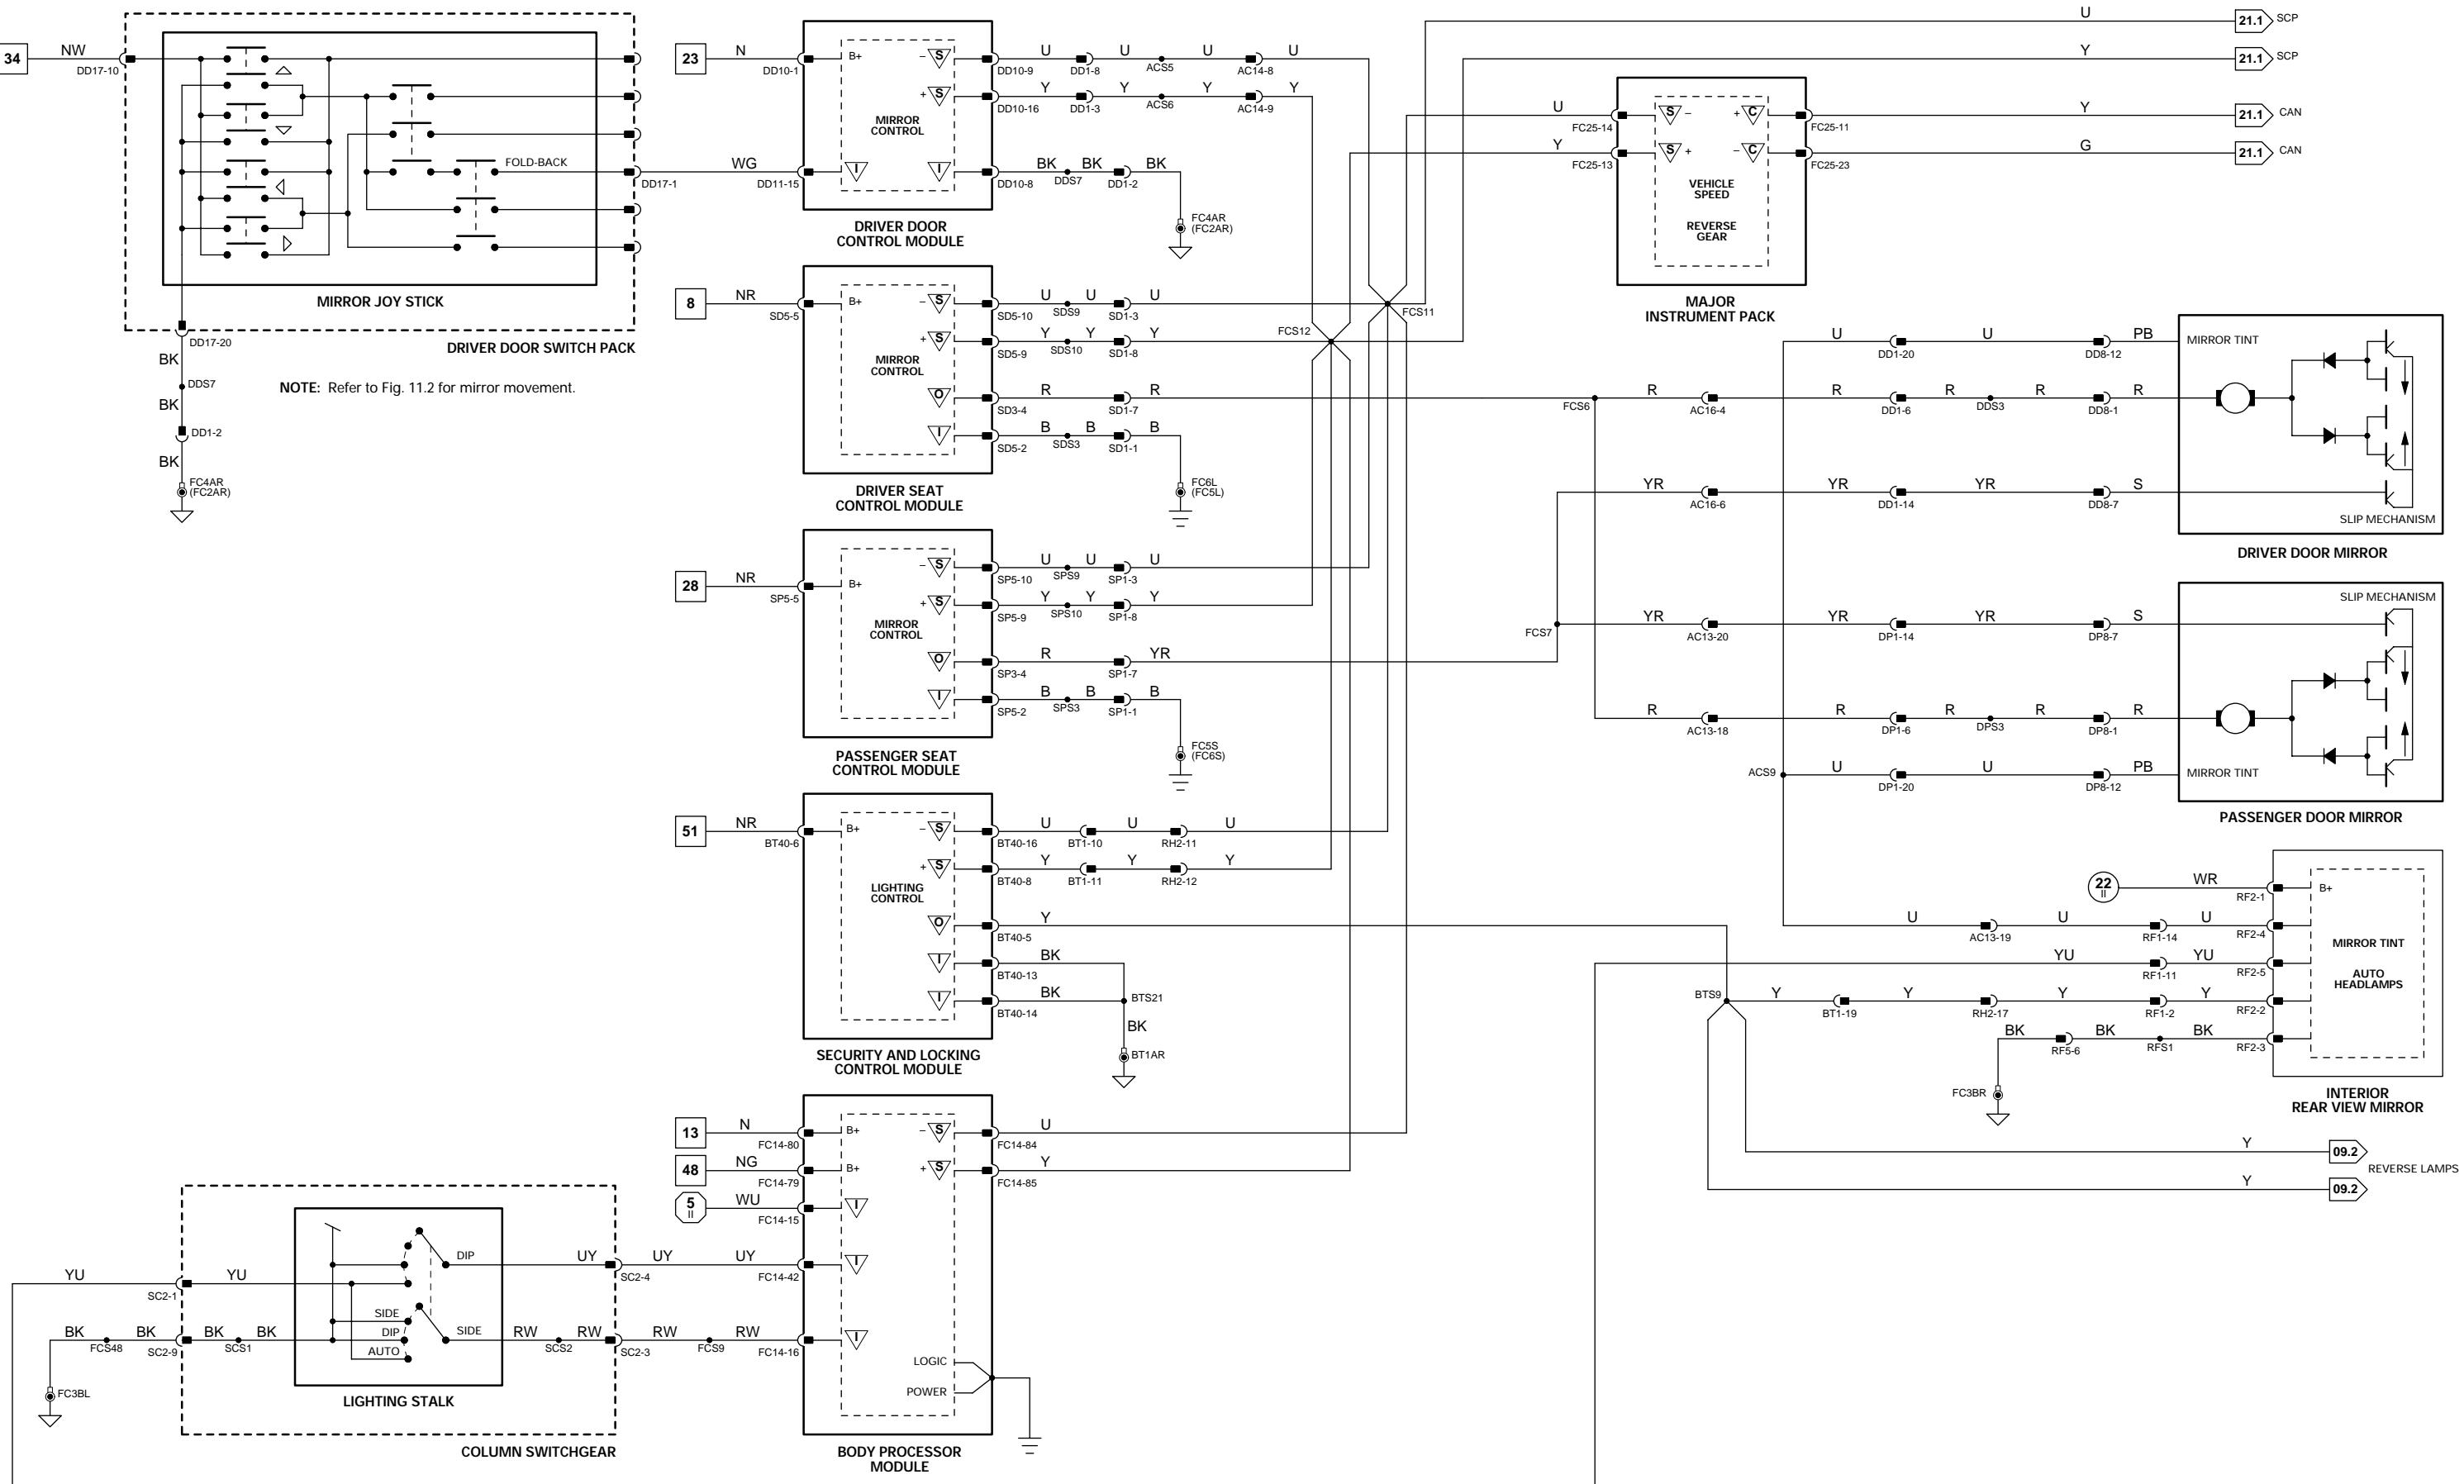


Fig. 12.1

BODY PROCESSOR MODULE

Pin	Description
O FC14-17	LHD RH (RHD LH) SEAT HEATER STATE LED
I FC14-35	LHD RH (RHD LH) SEAT HEATER REQUEST
O FC14-69	LHD LH SEAT HEATER STATUS LED (RHD = RH)
I FC14-80	BATTERY POWER SUPPLY (LOGIC)
S FC14-84	SCP NETWORK
S FC14-85	SCP NETWORK
I FC14-86	LHD LH (RHD RH) SEAT HEATER REQUEST

DRIVER DOOR CONTROL MODULE

Pin	Description
I DD10-1	BATTERY POWER SUPPLY
I DD10-8	LOGIC GROUND
S DD10-9	SCP NETWORK
S DD10-16	SCP NETWORK
I DD10-17	POWER GROUND
O DD11-2	SEAT MEMORY STATUS LED
I DD11-6	MEMORY SET REQUEST
I DD11-21	MEMORY 1 RECALL REQUEST
I DD11-22	MEMORY 2 RECALL REQUEST

DRIVER HEAD RESTRAINT CONTROL MODULE

Pin	Description
I SD22-1	BATTERY POWER SUPPLY
I SD22-3	HEAD RESTRAINT UP REQUEST
O SD22-4	HEAD RESTRAINT MOTOR
O SD22-5	HEAD RESTRAINT MOTOR
I SD22-6	LOGIC GROUND
I SD22-7	POWER GROUND
I SD22-8	DRIVER OR PASSENGER SEAT IDENTIFICATION
I SD22-9	HEAD RESTRAINT DOWN REQUEST
SG SD22-10	HEAD RESTRAINT POTENTIOMETER GROUND
I SD22-11	HEAD RESTRAINT POTENTIOMETER SIGNAL
SS SD22-12	HEAD RESTRAINT POTENTIOMETER SUPPLY
S SD22-13	SCP NETWORK
S SD22-14	SCP NETWORK
I SD22-15	SEAT BACK LATCHED
I SD22-16	SEAT BACK TILT

DRIVER SEAT CONTROL MODULE

Pin	Description
O SD3-1	DRIVER SEAT SQUAB MOTOR SUPPLY - FORWARD
O SD3-2	DRIVER SEAT SQUAB MOTOR SUPPLY - REAR
O SD3-3	DRIVER SEAT HEATER ELEMENTS SUPPLY
O SD3-5	DRIVER SEAT REAR SEAT HEIGHT MOTOR SUPPLY
O SD3-6	DRIVER SEAT REAR SEAT HEIGHT MOTOR SUPPLY
O SD3-7	DRIVER SEAT FORE / AFT MOTOR SUPPLY
O SD3-8	DRIVER SEAT FORE / AFT MOTOR SUPPLY
I SD3-9	DRIVER SEAT FORE MOVEMENT REQUEST
I SD3-10	DRIVER SEAT AFT MOVEMENT REQUEST
I SD3-11	DRIVER SEAT LOWER REQUEST
I SD3-12	DRIVER SEAT RAISE REQUEST
I SD3-13	DRIVER SEAT REAR HEIGHT LOWER REQUEST
I SD3-14	DRIVER SEAT REAR HEIGHT RAISE REQUEST
I SD3-15	DRIVER SEAT SQUAB AFT RECLINE REQUEST
I SD3-16	DRIVER SEAT SQUAB FORE RECLINE REQUEST
SG SD4-1	DRIVER SEAT SQUAB POTENTIOMETER REFERENCE GROUND
SS SD4-2	DRIVER SEAT FORE / AFT MOVEMENT POTENTIOMETER REFERENCE VOLTAGE
SS SD4-5	DRIVER SEAT SQUAB POTENTIOMETER REFERENCE VOLTAGE
SG SD4-6	DRIVER SEAT FORE / AFT MOVEMENT POTENTIOMETER REFERENCE GROUND
I SD4-8	DRIVER SEAT REAR SEAT HEIGHT POTENTIOMETER SIGNAL
I SD4-10	DRIVER SEAT RAISE / LOWER POTENTIOMETER SIGNAL
I SD4-11	DRIVER SEAT SQUAB POTENTIOMETER SIGNAL
I SD4-12	DRIVER SEAT FORE / AFT POTENTIOMETER SIGNAL
SS SD4-14	DRIVER SEAT RAISE / LOWER POTENTIOMETER REFERENCE VOLTAGE
SS SD4-15	DRIVER SEAT REAR SEAT HEIGHT POTENTIOMETER REFERENCE VOLTAGE
SG SD4-18	DRIVER SEAT RAISE / LOWER POTENTIOMETER REFERENCE GROUND
SG SD4-19	DRIVER SEAT REAR SEAT HEIGHT POTENTIOMETER REFERENCE GROUND
I SD5-1	DRIVER OR PASSENGER SEAT IDENTIFICATION
I SD5-2	POWER GROUND
O SD5-3	DRIVER SEAT RAISE / LOWER MOTOR SUPPLY
O SD5-4	DRIVER SEAT RAISE / LOWER MOTOR SUPPLY
I SD5-5	BATTERY POWER SUPPLY
I SD5-8	DRIVER SEAT BELT FASTENED
S SD5-9	SCP NETWORK
S SD5-10	SCP NETWORK

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Fig. 12.1

COMPONENTS

Component

BODY PROCESSOR MODULE

DOOR CONTROL MODULE - DRIVER

HEAD RESTRAINT CONTROL MODULE - DRIVER

HEAD RESTRAINT MOTOR - DRIVER

SEAT BACK LATCH SWITCH

SEAT BACK TILT SWITCH

SEAT BELT COMFORT SOLENOID - DRIVER

LHD: RH5 / 3-WAY CONNECTOR / BLACK
RHD: RH56 / 3-WAY CONNECTOR / BLACKSD2 / 16-WAY FORD IDC / BLACK
DD10 / 22-WAY FORD 2.8 TIMER / BLUE
DD11 / 22-WAY FORD 2.8 TIMER / BLACKSD23 / 6-WAY MULTILOCK 070 / YELLOW
SD25 / 2-WAY CONNECTOR / BLACKSD24 / 2-WAY CONNECTOR / BLACK
LHD: RH5 / 3-WAY CONNECTOR / BLACK
RHD: RH56 / 3-WAY CONNECTOR / BLACKSD20 / 2-WAY MULTILOCK 040 / BLACK
SD3 / 16-WAY FORD 2.8 TIMER / BLACK
SD4 / 26-WAY FORD IDC / BLACKSD5 / 10-WAY FORD 2.8 TIMER / BLACK
SD19 / 3-WAY MULTILOCK 070 / YELLOW
FC55 / 20-WAY FORD IDC / BLACKSD14 / 3-WAY MULTILOCK 070 / YELLOW
SD7 / 6-WAY MULTILOCK 070 / WHITE
SD8 / 6-WAY MULTILOCK 070 / WHITESD9 / 6-WAY MULTILOCK 070 / GREY
SD10 / 6-WAY MULTILOCK 070 / YELLOW
SD17 / 3-WAY MULTILOCK 070 / GREY
DD5 / 10-WAY AMP MQL / BLACK
SD11 / 16-WAY MULTILOCK 040 / BLACKSEAT SQUAB
DRIVER DOOR
DRIVER SEAT

HARNESS-TO-HARNESS CONNECTORS

Connector

Type / Color

AC14 14-WAY MULTILOCK 070 / GREY

DD1 23-WAY AMP - FORD / BLACK

RH9 20-WAY MULTILOCK 070 / YELLOW

SD1 14-WAY MULTILOCK 070 / YELLOW

Location / Access

FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE

DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM

BELOW CENTER CONSOLE

BELOW DRIVER SEAT

GROUNDS

Ground

Location / Type

FC1S EYELET (SINGLE) / TRANSMISSION TUNNEL, RIGHT HAND SIDE

FC2AR EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST

FC2BR EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST

FC4AR EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST

FC4BR EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST

FC5L EYELET (PAIR) - LEFT HAND LEG / RIGHT HAND SEAT

FC5R EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND SEAT

FC6L EYELET (PAIR) - LEFT HAND LEG / LEFT HAND SEAT

FC6R EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND SEAT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

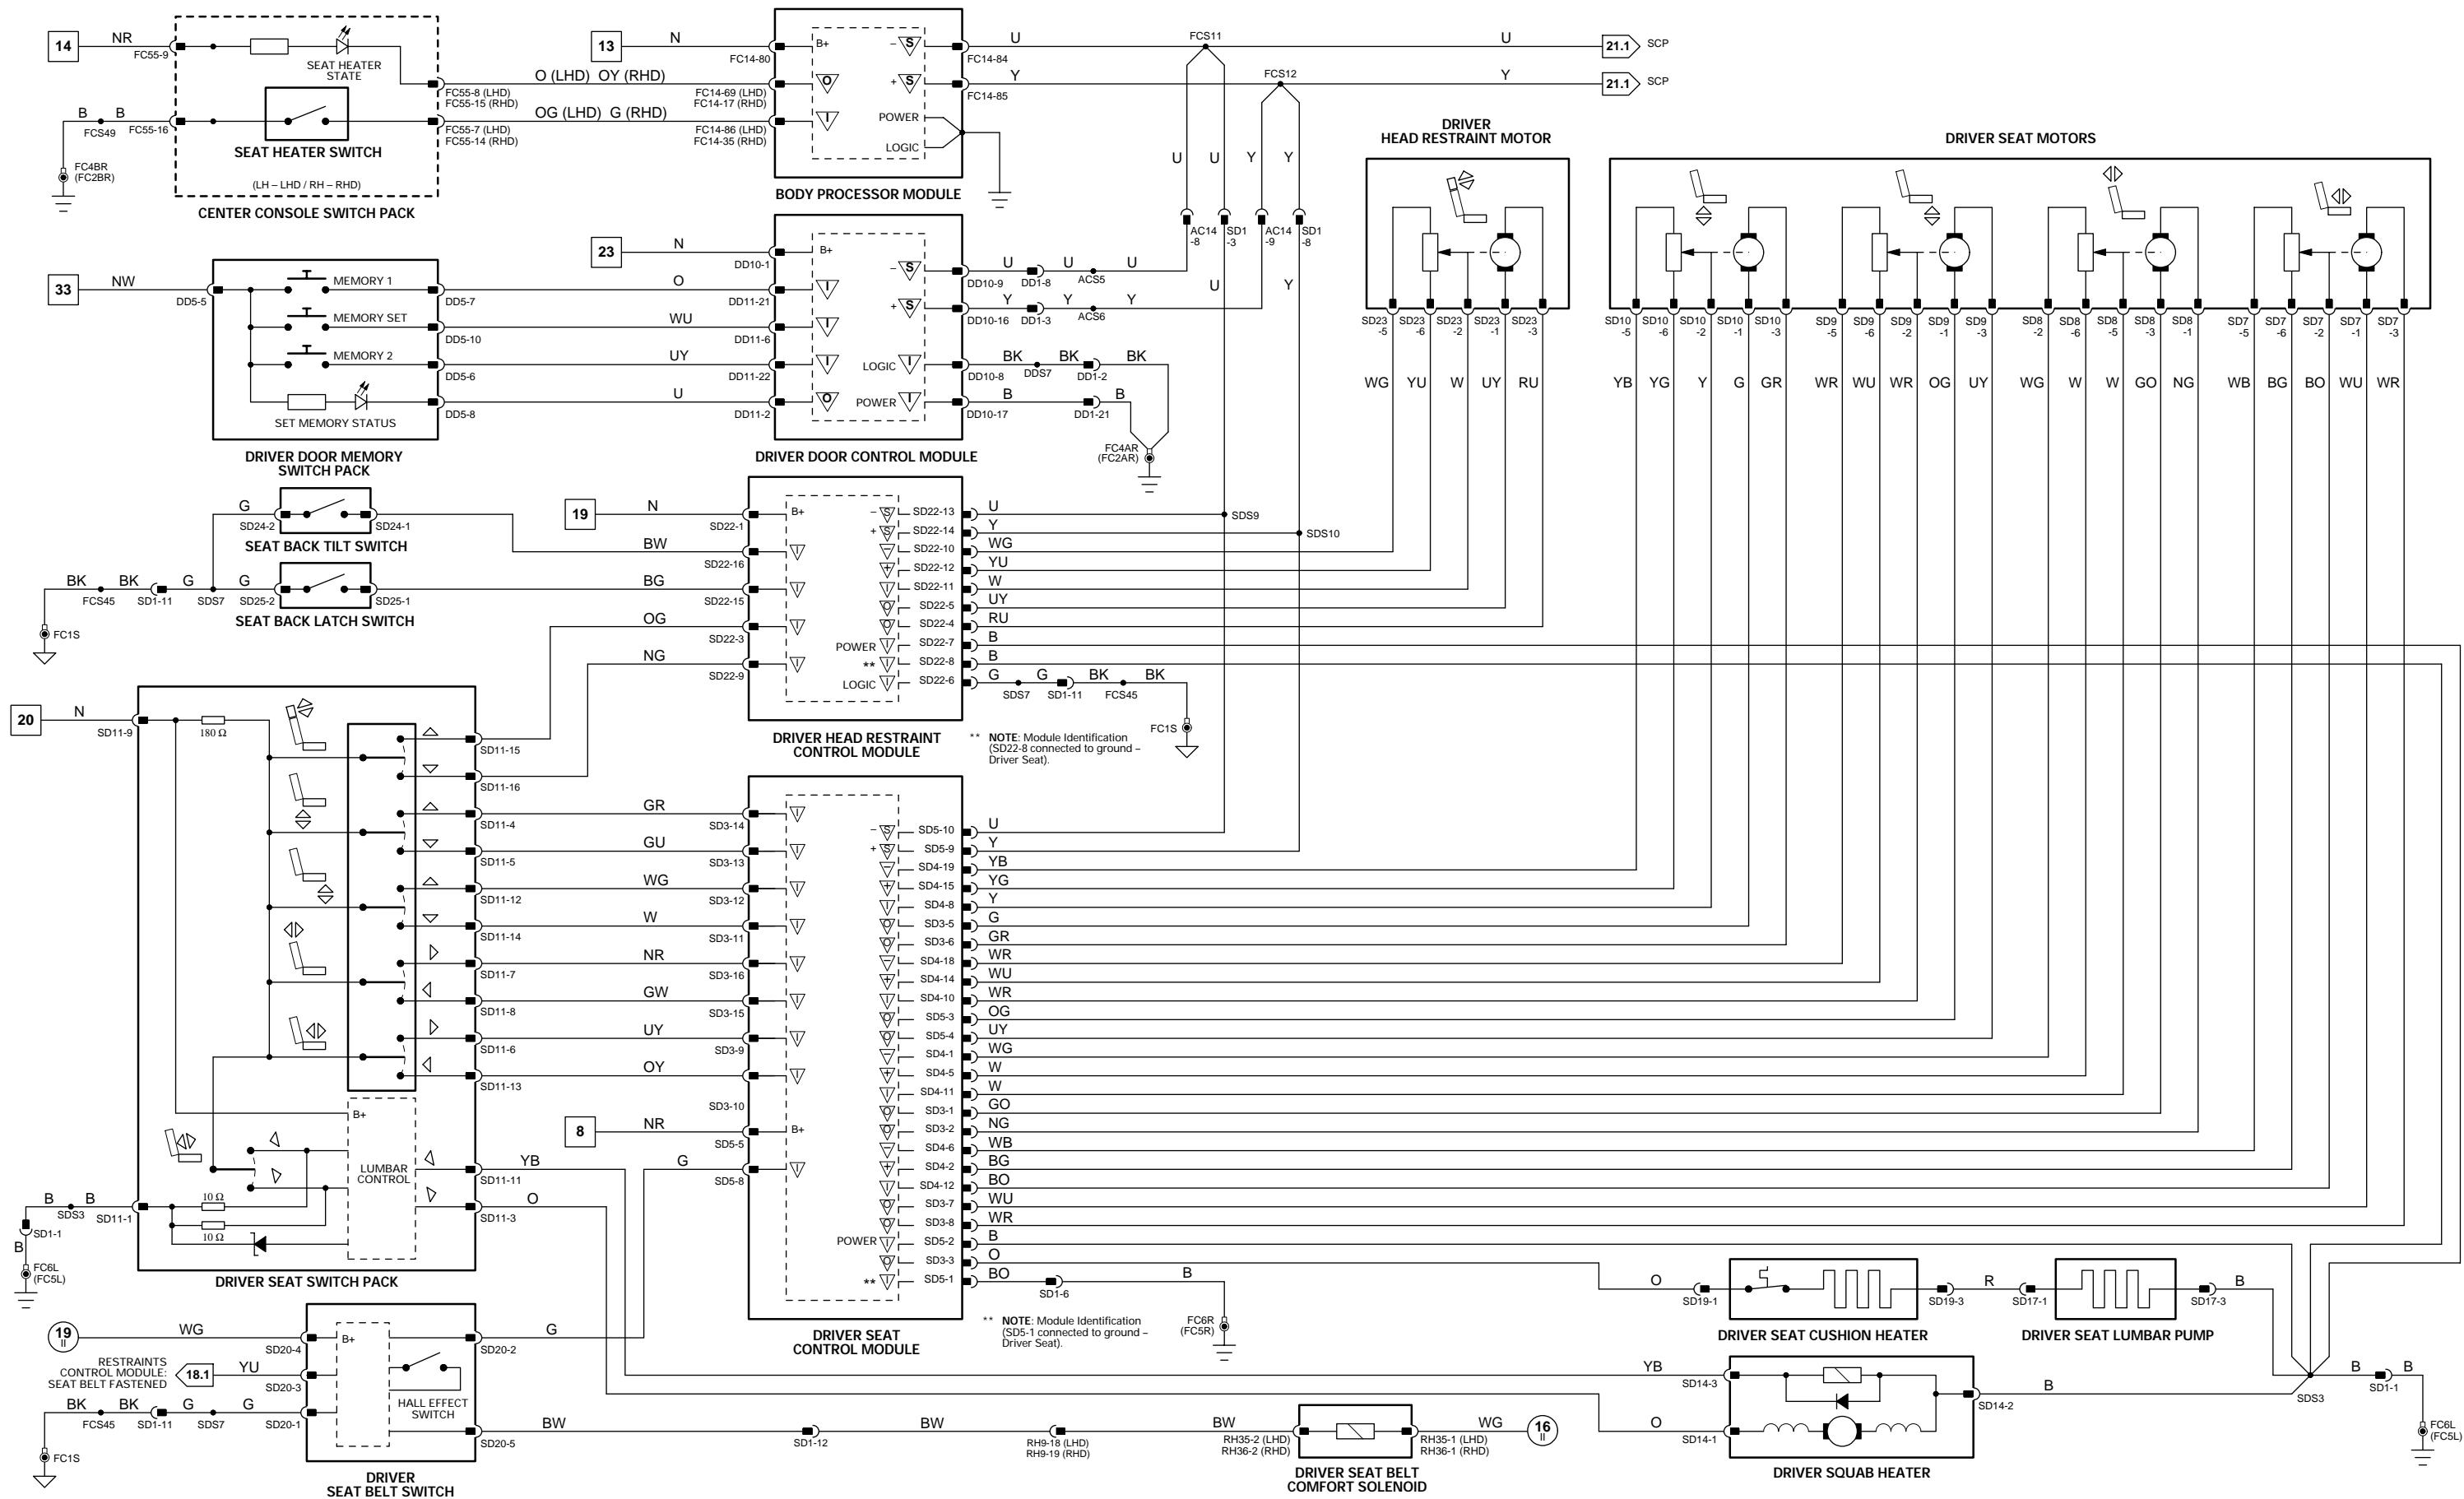


Fig. 12.2

BODY PROCESSOR MODULE

Pin	Description	Active
O	FC14-17	LHD RH (RHD LH) SEAT HEATER STATUS LED GROUND (LED ON)
I	FC14-35	LHD RH (RHD LH) SEAT HEATER REQUEST GROUND
O	FC14-69	LHD LH (RHD RH) SEAT HEATER STATUS LED GROUND
I	FC14-80	BATTERY POWER SUPPLY (LOGIC) B+
S	FC14-84	SCP NETWORK 2 – 1600 Hz
S	FC14-85	SCP NETWORK 2 – 1600 Hz
I	FC14-86	LHD LH (RHD RH) SEAT HEATER REQUEST GROUND (MOMENTARY)

DRIVER HEAD RESTRAINT CONTROL MODULE

Pin	Description	Active
I SD22-1	BATTERY POWER SUPPLY	B+
I SD22-3	HEAD RESTRAINT UP REQUEST	B+ (MOMENTARY)
O SD22-4	HEAD RESTRAINT MOTOR	B+
O SD22-5	HEAD RESTRAINT MOTOR	B+
I SD22-6	LOGIC GROUND	GROUND
I SD22-7	POWER GROUND	GROUND
I SD22-8	DRIVER OR PASSENGER SEAT IDENTIFICATION	GROUND (DRIVER)
I SD22-9	HEAD RESTRAINT DOWN REQUEST	B+ (MOMENTARY)
SG SD22-10	HEAD RESTRAINT POTENTIOMETER GROUND	GROUND
I SD22-11	HEAD RESTRAINT POTENTIOMETER SIGNAL	10 V = UP; 2 V = DOWN
SS SD22-12	HEAD RESTRAINT POTENTIOMETER SUPPLY	B+
S SD22-13	SCP NETWORK	2 - 1600 Hz
S SD22-14	SCP NETWORK	2 - 1600 Hz
I SD22-15	SEAT BACK LATCHED	GROUND
I SD22-16	SEAT BACK TILT	GROUND

DRIVER SEAT CONTROL MODULE

Pin	Description	Active
O	SD3-1	DRIVER SEAT SQUAB MOTOR SUPPLY – FORWARD
O	SD3-2	DRIVER SEAT SQUAB MOTOR SUPPLY – REAR
O	SD3-3	DRIVER SEAT HEATER ELEMENTS SUPPLY
O	SD3-5	DRIVER SEAT REAR SEAT HEIGHT MOTOR SUPPLY
O	SD3-6	DRIVER SEAT REAR SEAT HEIGHT MOTOR SUPPLY
O	SD3-7	DRIVER SEAT FORE / AFT MOTOR SUPPLY
O	SD3-8	DRIVER SEAT FORE / AFT MOTOR SUPPLY
I	SD3-9	DRIVER SEAT FORE MOVEMENT REQUEST
I	SD3-10	DRIVER SEAT AFT MOVEMENT REQUEST
I	SD3-11	DRIVER SEAT LOWER REQUEST
I	SD3-12	DRIVER SEAT RAISE REQUEST
I	SD3-13	DRIVER SEAT REAR HEIGHT LOWER REQUEST
I	SD3-14	DRIVER SEAT REAR HEIGHT RAISE REQUEST
I	SD3-15	DRIVER SEAT SQUAB AFT RECLINE REQUEST
I	SD3-16	DRIVER SEAT SQUAB FORE RECLINE REQUEST
I	SD5-1	DRIVER OR PASSENGER SEAT IDENTIFICATION
I	SD5-2	POWER GROUND
O	SD5-3	DRIVER SEAT RAISE / LOWER MOTOR SUPPLY
O	SD5-4	DRIVER SEAT RAISE / LOWER MOTOR SUPPLY
I	SD5-5	BATTERY POWER SUPPLY
I	SD5-8	DRIVER SEAT BELT FASTENED
S	SD5-9	SCP NETWORK
S	SD5-10	SCP NETWORK

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

COMPONENTS

Component

BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
HEAD RESTRAINT CONTROL MODULE – DRIVER	SD22 / 16-WAY FORD IDC / BLACK	BEHIND SEAT BACK FINISHER
HEAD RESTRAINT MOTOR – DRIVER	SD23 / 6-WAY MULTILOCK 070 / YELLOW	BEHIND SEAT BACK FINISHER
SEAT BACK LATCH SWITCH	SD25 / 2-WAY CONNECTOR / BLACK	BEHIND SEAT BACK FINISHER
SEAT BACK TILT SWITCH	SD24 / 2-WAY CONNECTOR / BLACK	BEHIND SEAT BACK FINISHER
SEAT BELT COMFORT SOLENOID – DRIVER	LHD: RH35 / 3-WAY CONNECTOR / BLACK RHD: RH36 / 3-WAY CONNECTOR / BLACK	BEHIND REAR QUARTER TRIM PANEL
SEAT BELT SWITCH – DRIVER	SD20 / 2-WAY MULTILOCK 040 / BLACK	BELOW SEAT CUSHION
SEAT CONTROL MODULE – DRIVER	SD3 / 16-WAY FORD 2.8 TIMER / BLACK SD4 / 26-WAY FORD IDC / BLACK SD5 / 10-WAY FORD 2.8 TIMER / BLACK	BELOW SEAT CUSHION
SEAT CUSHION (HEATER) – DRIVER	SD19 / 3-WAY MULTILOCK 070 / YELLOW	SEAT CUSHION
SEAT HEATER SWITCH (CENTER CONSOLE SWITCH PACK)	FC55 / 20-WAY FORD IDC / BLACK	CENTER CONSOLE SWITCH PACK
SEAT LUMBAR PUMP – DRIVER	SD14 / 3-WAY MULTILOCK 070 / YELLOW	SEAT BACK
SEAT MOTORS – DRIVER	SD7 / 6-WAY MULTILOCK 070 / WHITE SD8 / 6-WAY MULTILOCK 070 / WHITE SD9 / 6-WAY MULTILOCK 070 / GREY SD10 / 6-WAY MULTILOCK 070 / YELLOW	BELOW SEAT CUSHION
SQUAB (HEATER) – DRIVER	SD17 / 3-WAY MULTILOCK 070 / GREY	SEAT SQUAB
SWITCH PACK – DRIVER SEAT	SD11 / 16-WAY MULTILOCK 040 / BLACK	DRIVER SEAT

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
RH9	20-WAY MULTILOCK 070 / YELLOW	BELOW CENTER CONSOLE
SD1	14-WAY MULTILOCK 070 / YELLOW	BELOW DRIVER SEAT

ROADS

Ground	Location / Type
FC1S	EYELET (SINGLE) / TRANSMISSION TUNNEL, RIGHT HAND SIDE
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST
FC5L	EYELET (PAIR) - LEFT HAND LEG / RIGHT HAND SEAT
FC5R	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND SEAT
FC6L	EYELET (PAIR) - LEFT HAND LEG / LEFT HAND SEAT
FC6R	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND SEAT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

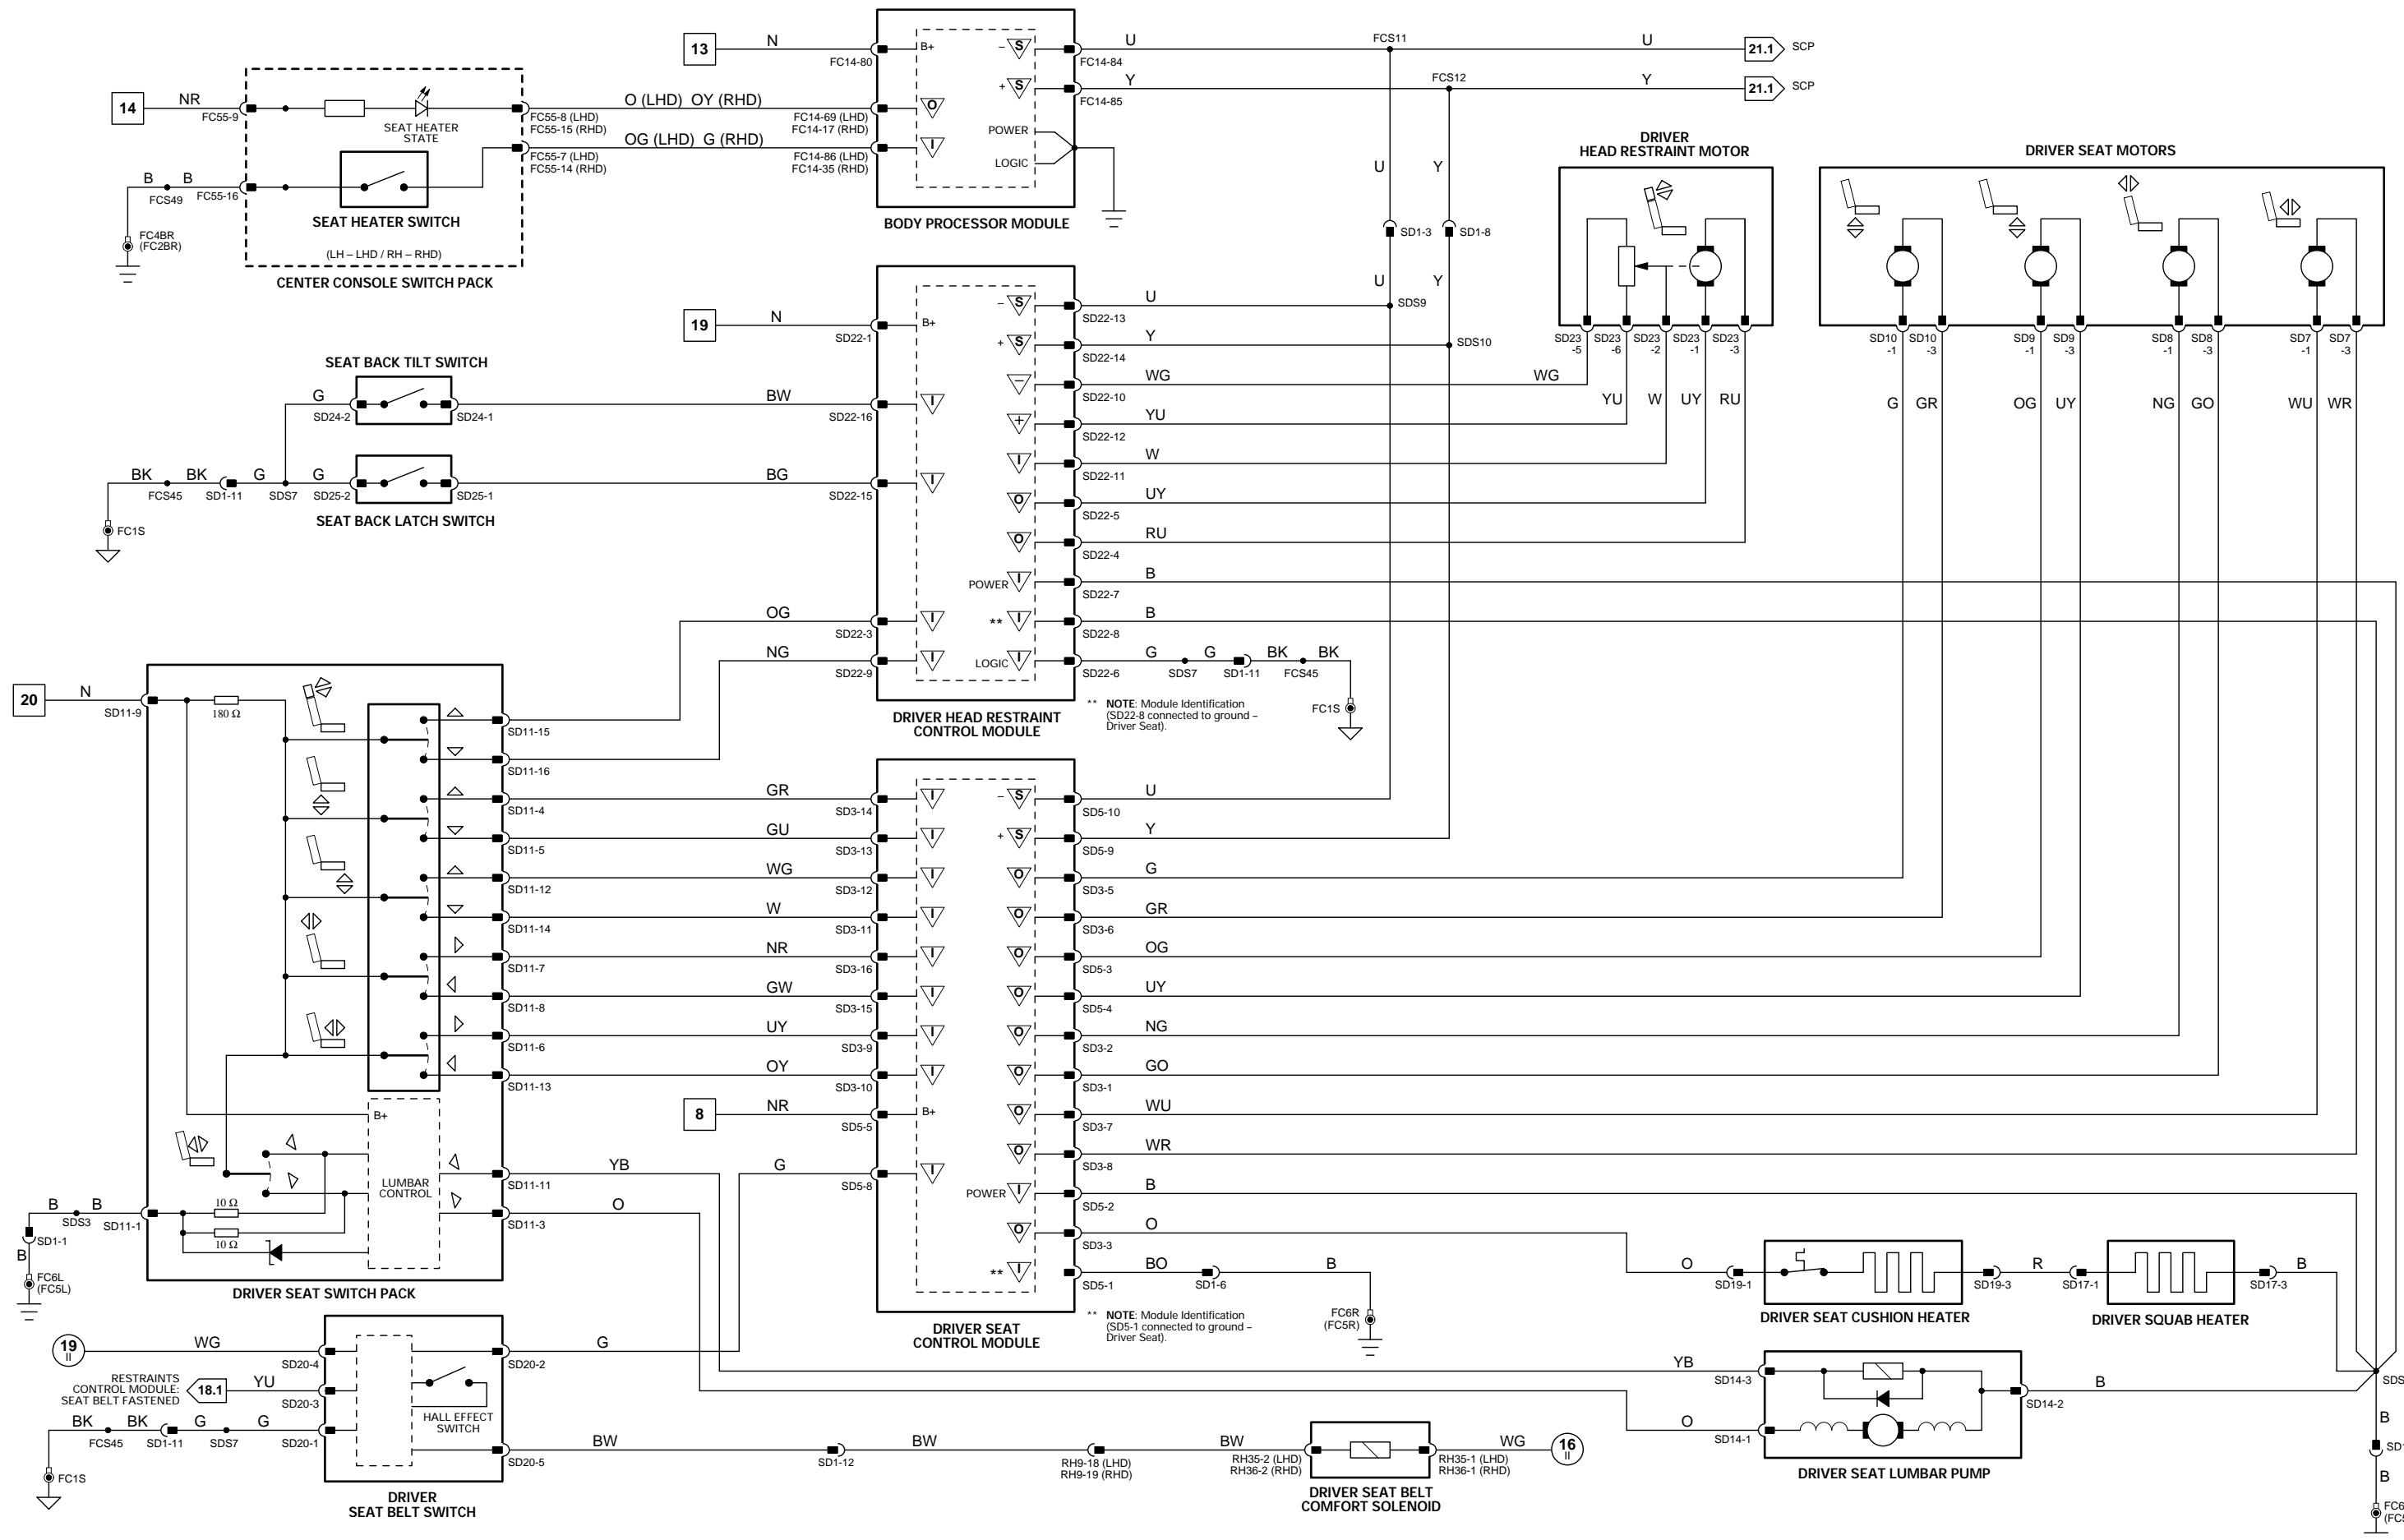


Fig. 12.3

BODY PROCESSOR MODULE

Pin	Description
O	FC14-17 LHD RH (RHD LH) SEAT HEATER STATUS LED
I	FC14-35 LHD RH (RHD LH) SEAT HEATER REQUEST
O	FC14-69 LHD LH (RHD RH) SEAT HEATER STATUS LED
I	FC14-80 BATTERY POWER SUPPLY (LOGIC)
S	FC14-84 SCP NETWORK
S	FC14-85 SCP NETWORK
I	FC14-86 LHD LH (RHD RH) SEAT HEATER REQUEST

PASSENGER HEAD RESTRAINT CONTROL MODULE

Pin	Description
I	SP22-1 BATTERY POWER SUPPLY
I	SP22-3 HEAD RESTRAINT UP REQUEST
O	SP22-4 HEAD RESTRAINT MOTOR
O	SP22-5 HEAD RESTRAINT MOTOR
I	SP22-6 LOGIC GROUND
I	SP22-7 POWER GROUND
I	SP22-8 DRIVER OR PASSENGER SEAT IDENTIFICATION
I	SP22-9 HEAD RESTRAINT DOWN REQUEST
SG	SP22-10 HEAD RESTRAINT POTENTIOMETER GROUND
I	SP22-11 HEAD RESTRAINT POTENTIOMETER SIGNAL
SS	SP22-12 HEAD RESTRAINT POTENTIOMETER SUPPLY
S	SP22-13 SCP NETWORK
S	SP22-14 SCP NETWORK
I	SP22-15 SEAT BACK LATCHED
I	SP22-16 SEAT BACK TILT

PASSENGER SEAT CONTROL MODULE

Pin	Description
O	SP3-1 PASSENGER SEAT SQUAB MOTOR SUPPLY - FORWARD
O	SP3-2 PASSENGER SEAT SQUAB MOTOR SUPPLY - REAR
O	SP3-3 PASSENGER SEAT HEATER ELEMENTS SUPPLY
O	SP3-5 PASSENGER SEAT REAR SEAT HEIGHT MOTOR SUPPLY
O	SP3-6 PASSENGER SEAT REAR SEAT HEIGHT MOTOR SUPPLY
O	SP3-7 PASSENGER SEAT FORE / AFT MOTOR SUPPLY
O	SP3-8 PASSENGER SEAT FORE / AFT MOTOR SUPPLY
I	SP3-9 PASSENGER SEAT FORE MOVEMENT REQUEST
I	SP3-10 PASSENGER SEAT AFT MOVEMENT REQUEST
I	SP3-11 PASSENGER SEAT LOWER REQUEST
I	SP3-12 PASSENGER SEAT RAISE REQUEST
I	SP3-13 PASSENGER SEAT REAR HEIGHT LOWER REQUEST
I	SP3-14 PASSENGER SEAT REAR HEIGHT RAISE REQUEST
I	SP3-15 PASSENGER SEAT SQUAB AFT RECLINE REQUEST
I	SP3-16 PASSENGER SEAT SQUAB FORE RECLINE REQUEST
I	SP5-1 PASSENGER OR PASSENGER SEAT IDENTIFICATION
I	SP5-2 POWER GROUND
O	SP5-3 PASSENGER SEAT RAISE / LOWER MOTOR SUPPLY
O	SP5-4 PASSENGER SEAT RAISE / LOWER MOTOR SUPPLY
I	SP5-5 BATTERY POWER SUPPLY
S	SP5-9 SCP NETWORK
S	SP5-10 SCP NETWORK

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Fig. 12.3

COMPONENTS		
Component	Connector / Type / Color	Location / Access
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
HEAD RESTRAINT CONTROL MODULE - PASSENGER	SP22 / 16-WAY FORD IDC / BLACK	BEHIND SEAT BACK FINISHER
HEAD RESTRAINT MOTOR - PASSENGER	SP23 / 6-WAY MULTILOCK 070 / YELLOW	BEHIND SEAT BACK FINISHER
SEAT BACK LATCH SWITCH	SP25 / 2-WAY CONNECTOR / BLACK	BEHIND SEAT BACK FINISHER
SEAT BACK TILT SWITCH	SP24 / 2-WAY CONNECTOR / BLACK	BEHIND SEAT BACK FINISHER
SEAT BELT COMFORT SOLENOID - PASSENGER	RHD: RH35 / 3-WAY CONNECTOR / BLACK LHD: RH36 / 3-WAY CONNECTOR / BLACK	BEHIND REAR QUARTER TRIM PANEL
SEAT BELT SWITCH - PASSENGER	SP20 / 2-WAY MULTILOCK 040 / BLACK	BELOW SEAT CUSHION
SEAT CONTROL MODULE - PASSENGER	SP3 / 16-WAY FORD 2.8 TIMER / BLACK SP4 / 26-WAY FORD IDC / BLACK	BELOW SEAT CUSHION
SEAT CUSHION (HEATER) - PASSENGER	SP19 / 3-WAY MULTILOCK 070 / YELLOW	SEAT CUSHION
SEAT HEATER SWITCH (CENTER CONSOLE SWITCH PACK)	FC55 / 20-WAY FORD IDC / BLACK	CENTER CONSOLE SWITCH PACK
SEAT LUMBAR PUMP - PASSENGER	SP14 / 3-WAY MULTILOCK 070 / YELLOW	SEAT BACK
SEAT MOTORS - PASSENGER	SP7 / 6-WAY MULTILOCK 070 / WHITE SP8 / 6-WAY MULTILOCK 070 / WHITE	BELOW SEAT CUSHION
SQUAB (HEATER) - PASSENGER	SP10 / 6-WAY MULTILOCK 070 / YELLOW	SEAT SQUAB
SWITCH PACK - PASSENGER SEAT	SP17 / 3-WAY MULTILOCK 070 / GREY SP11 / 16-WAY MULTILOCK 040 / BLACK	PASSENGER SEAT
HARNESS-TO-HARNESS CONNECTORS		
Connector	Type / Color	Location / Access
RH9	20-WAY MULTILOCK 070 / YELLOW	BELOW CENTER CONSOLE
SP1	14-WAY MULTILOCK 070 / YELLOW	BELOW PASSENGER SEAT
GROUNDS		
Ground	Location / Type	
FC1S	EYELET (SINGLE) / TRANSMISSION TUNNEL, RIGHT HAND SIDE	
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST	
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST	
FC5S	EYELET (SINGLE) / RIGHT HAND SEAT	
FC6S	EYELET (SINGLE) / LEFT HAND SEAT	

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

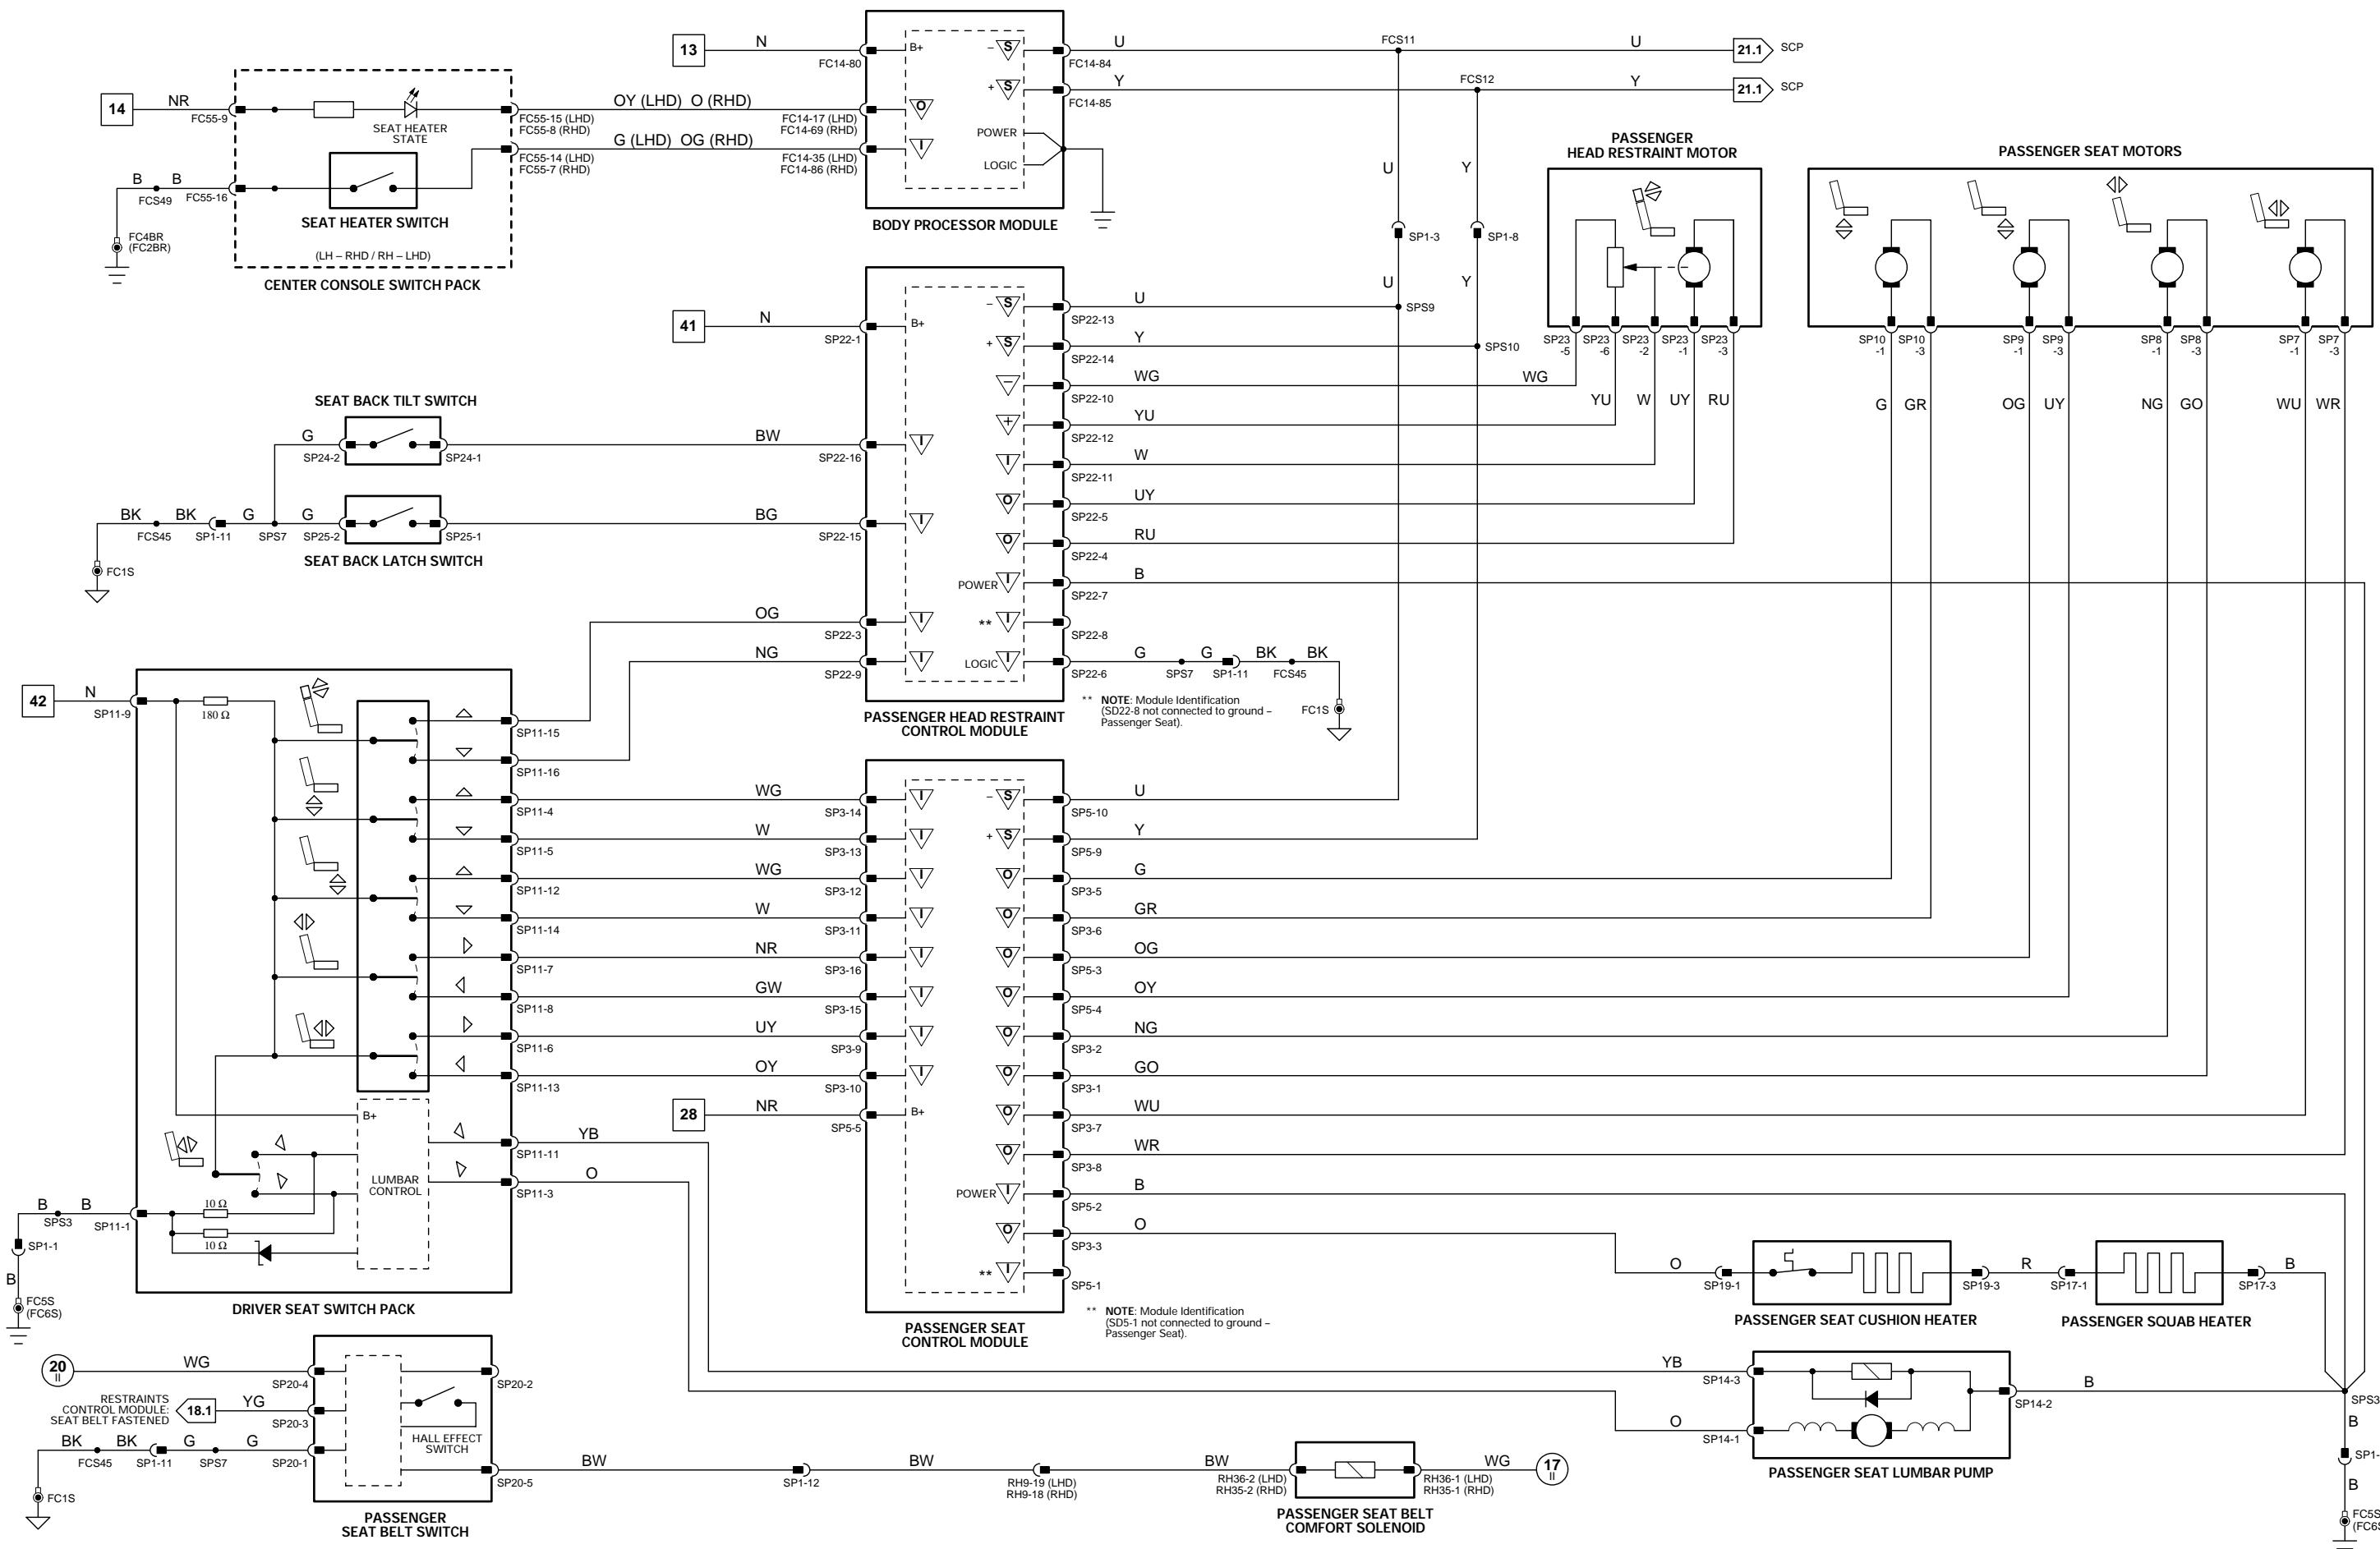


Fig. 12.4

BODY PROCESSOR MODULE

Pin	Description	Active	Inactive
O	FC14-17	LHD RH (RHD LH) SEAT HEATER STATUS LED	GROUND (LED ON)
I	FC14-35	LHD RH (RHD LH) SEAT HEATER REQUEST	GROUND
O	FC14-69	LHD LH (RHD RH) SEAT HEATER STATUS LED	GROUND
I	FC14-80	BATTERY POWER SUPPLY (LOGIC)	B+
S	FC14-84	SCP NETWORK	2 - 1600 Hz
S	FC14-85	SCP NETWORK	2 - 1600 Hz
I	FC14-86	LHD LH (RHD RH) SEAT HEATER REQUEST	GROUND (MOMENTARY)

PASSENGER HEAD RESTRAINT CONTROL MODULE

Pin	Description	Active	Inactive
I	SP22-1	BATTERY POWER SUPPLY	B+
I	SP22-3	HEAD RESTRAINT UP REQUEST	B+ (MOMENTARY)
O	SP22-4	HEAD RESTRAINT MOTOR	GROUND
O	SP22-5	HEAD RESTRAINT MOTOR	GROUND
I	SP22-6	LOGIC GROUND	B+
I	SP22-7	POWER GROUND	GROUND
I	SP22-8	DRIVER OR PASSENGER SEAT IDENTIFICATION	GROUND (DRIVER)
I	SP22-9	HEAD RESTRAINT DOWN REQUEST	B+ (MOMENTARY)
SG	SP22-10	HEAD RESTRAINT POTENTIOMETER GROUND	GROUND
I	SP22-11	HEAD RESTRAINT POTENTIOMETER SIGNAL	10 V = UP; 2 V = DOWN
SS	SP22-12	HEAD RESTRAINT POTENTIOMETER SUPPLY	B+
S	SP22-13	SCP NETWORK	2 - 1600 Hz
S	SP22-14	SCP NETWORK	2 - 1600 Hz
I	SP22-15	SEAT BACK LATCHED	GROUND
I	SP22-16	SEAT BACK TILT	GROUND

PASSENGER SEAT CONTROL MODULE

Pin	Description	Active	Inactive
O	SP3-1	PASSENGER SEAT SQUAB MOTOR SUPPLY - FORWARD	B+
O	SP3-2	PASSENGER SEAT SQUAB MOTOR SUPPLY - REAR	B+
O	SP3-3	PASSENGER SEAT HEATER ELEMENTS SUPPLY	B+
O	SP3-7	PASSENGER SEAT FORE / AFT MOTOR SUPPLY	B+
O	SP3-8	PASSENGER SEAT FORE / AFT MOTOR SUPPLY	B+
I	SP3-9	PASSENGER SEAT FORE MOVEMENT REQUEST	B+ (MOMENTARY)
I	SP3-10	PASSENGER SEAT AFT MOVEMENT REQUEST	B+ (MOMENTARY)
I	SP3-11	PASSENGER SEAT LOWER REQUEST	B+ (MOMENTARY)
I	SP3-12	PASSENGER SEAT RAISE REQUEST	B+ (MOMENTARY)
I	SP3-13	PASSENGER SEAT REAR HEIGHT LOWER REQUEST	B+ (MOMENTARY)
I	SP3-14	PASSENGER SEAT REAR HEIGHT RAISE REQUEST	B+ (MOMENTARY)
I	SP3-15	PASSENGER SEAT SQUAB AFT RECLINE REQUEST	B+ (MOMENTARY)
I	SP3-16	PASSENGER SEAT SQUAB FORE RECLINE REQUEST	B+ (MOMENTARY)
I	SP5-1	PASSENGER OR PASSENGER SEAT IDENTIFICATION	GROUND (DRIVER)
I	SP5-2	POWER GROUND	GROUND
I	SP5-5	BATTERY POWER SUPPLY	B+
S	SP5-9	SCP NETWORK	2 - 1600 Hz
S	SP5-10	SCP NETWORK	2 - 1600 Hz

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

COMPONENTS

Component	Connector / Type / Color	Location / Access
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
HEAD RESTRAINT CONTROL MODULE - PASSENGER	SP22 / 16-WAY FORD IDC / BLACK	BEHIND SEAT BACK FINISHER
HEAD RESTRAINT MOTOR - PASSENGER	SP23 / 6-WAY MULTILOCK 070 / YELLOW	BEHIND SEAT BACK FINISHER
SEAT BACK LATCH SWITCH	SP25 / 2-WAY CONNECTOR / BLACK	BEHIND SEAT BACK FINISHER
SEAT BACK TILT SWITCH	SP24 / 2-WAY CONNECTOR / BLACK	BEHIND SEAT BACK FINISHER
SEAT BELT COMFORT SOLENOID - PASSENGER	RHD: RH35 / 3-WAY CONNECTOR / BLACK LHD: RH36 / 3-WAY CONNECTOR / BLACK	BEHIND REAR QUARTER TRIM PANEL
SEAT BELT SWITCH - PASSENGER	SP20 / 2-WAY MULTILOCK 040 / BLACK	BELOW SEAT CUSHION
SEAT CONTROL MODULE - PASSENGER	SP3 / 16-WAY FORD 2.8 TIMER / BLACK SP4 / 26-WAY FORD IDC / BLACK	BELOW SEAT CUSHION
SEAT CUSHION (HEATER) - PASSENGER	SP19 / 3-WAY MULTILOCK 070 / YELLOW	SEAT CUSHION
SEAT HEATER SWITCH (CENTER CONSOLE SWITCH PACK)	FC55 / 20-WAY FORD IDC / BLACK	CENTER CONSOLE SWITCH PACK
SEAT LUMBAR PUMP - PASSENGER	SP14 / 3-WAY MULTILOCK 070 / YELLOW	SEAT BACK
SEAT MOTORS - PASSENGER	SP7 / 6-WAY MULTILOCK 070 / WHITE SP8 / 6-WAY MULTILOCK 070 / WHITE	BELOW SEAT CUSHION
SQUAB (HEATER) - PASSENGER	SP10 / 6-WAY MULTILOCK 070 / YELLOW	SEAT SQUAB
SWITCH PACK - PASSENGER SEAT	SP17 / 3-WAY MULTILOCK 070 / GREY SP11 / 16-WAY MULTILOCK 040 / BLACK	PASSENGER SEAT

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
RH9	20-WAY MULTILOCK 070 / YELLOW	BELOW CENTER CONSOLE
SP1	14-WAY MULTILOCK 070 / YELLOW	BELOW PASSENGER SEAT

GROUNDS

Ground	Location / Type
FC1S	EYELET (SINGLE) / TRANSMISSION TUNNEL, RIGHT HAND SIDE
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST
FC5S	EYELET (SINGLE) / RIGHT HAND SEAT
FC6S	EYELET (SINGLE) / LEFT HAND SEAT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

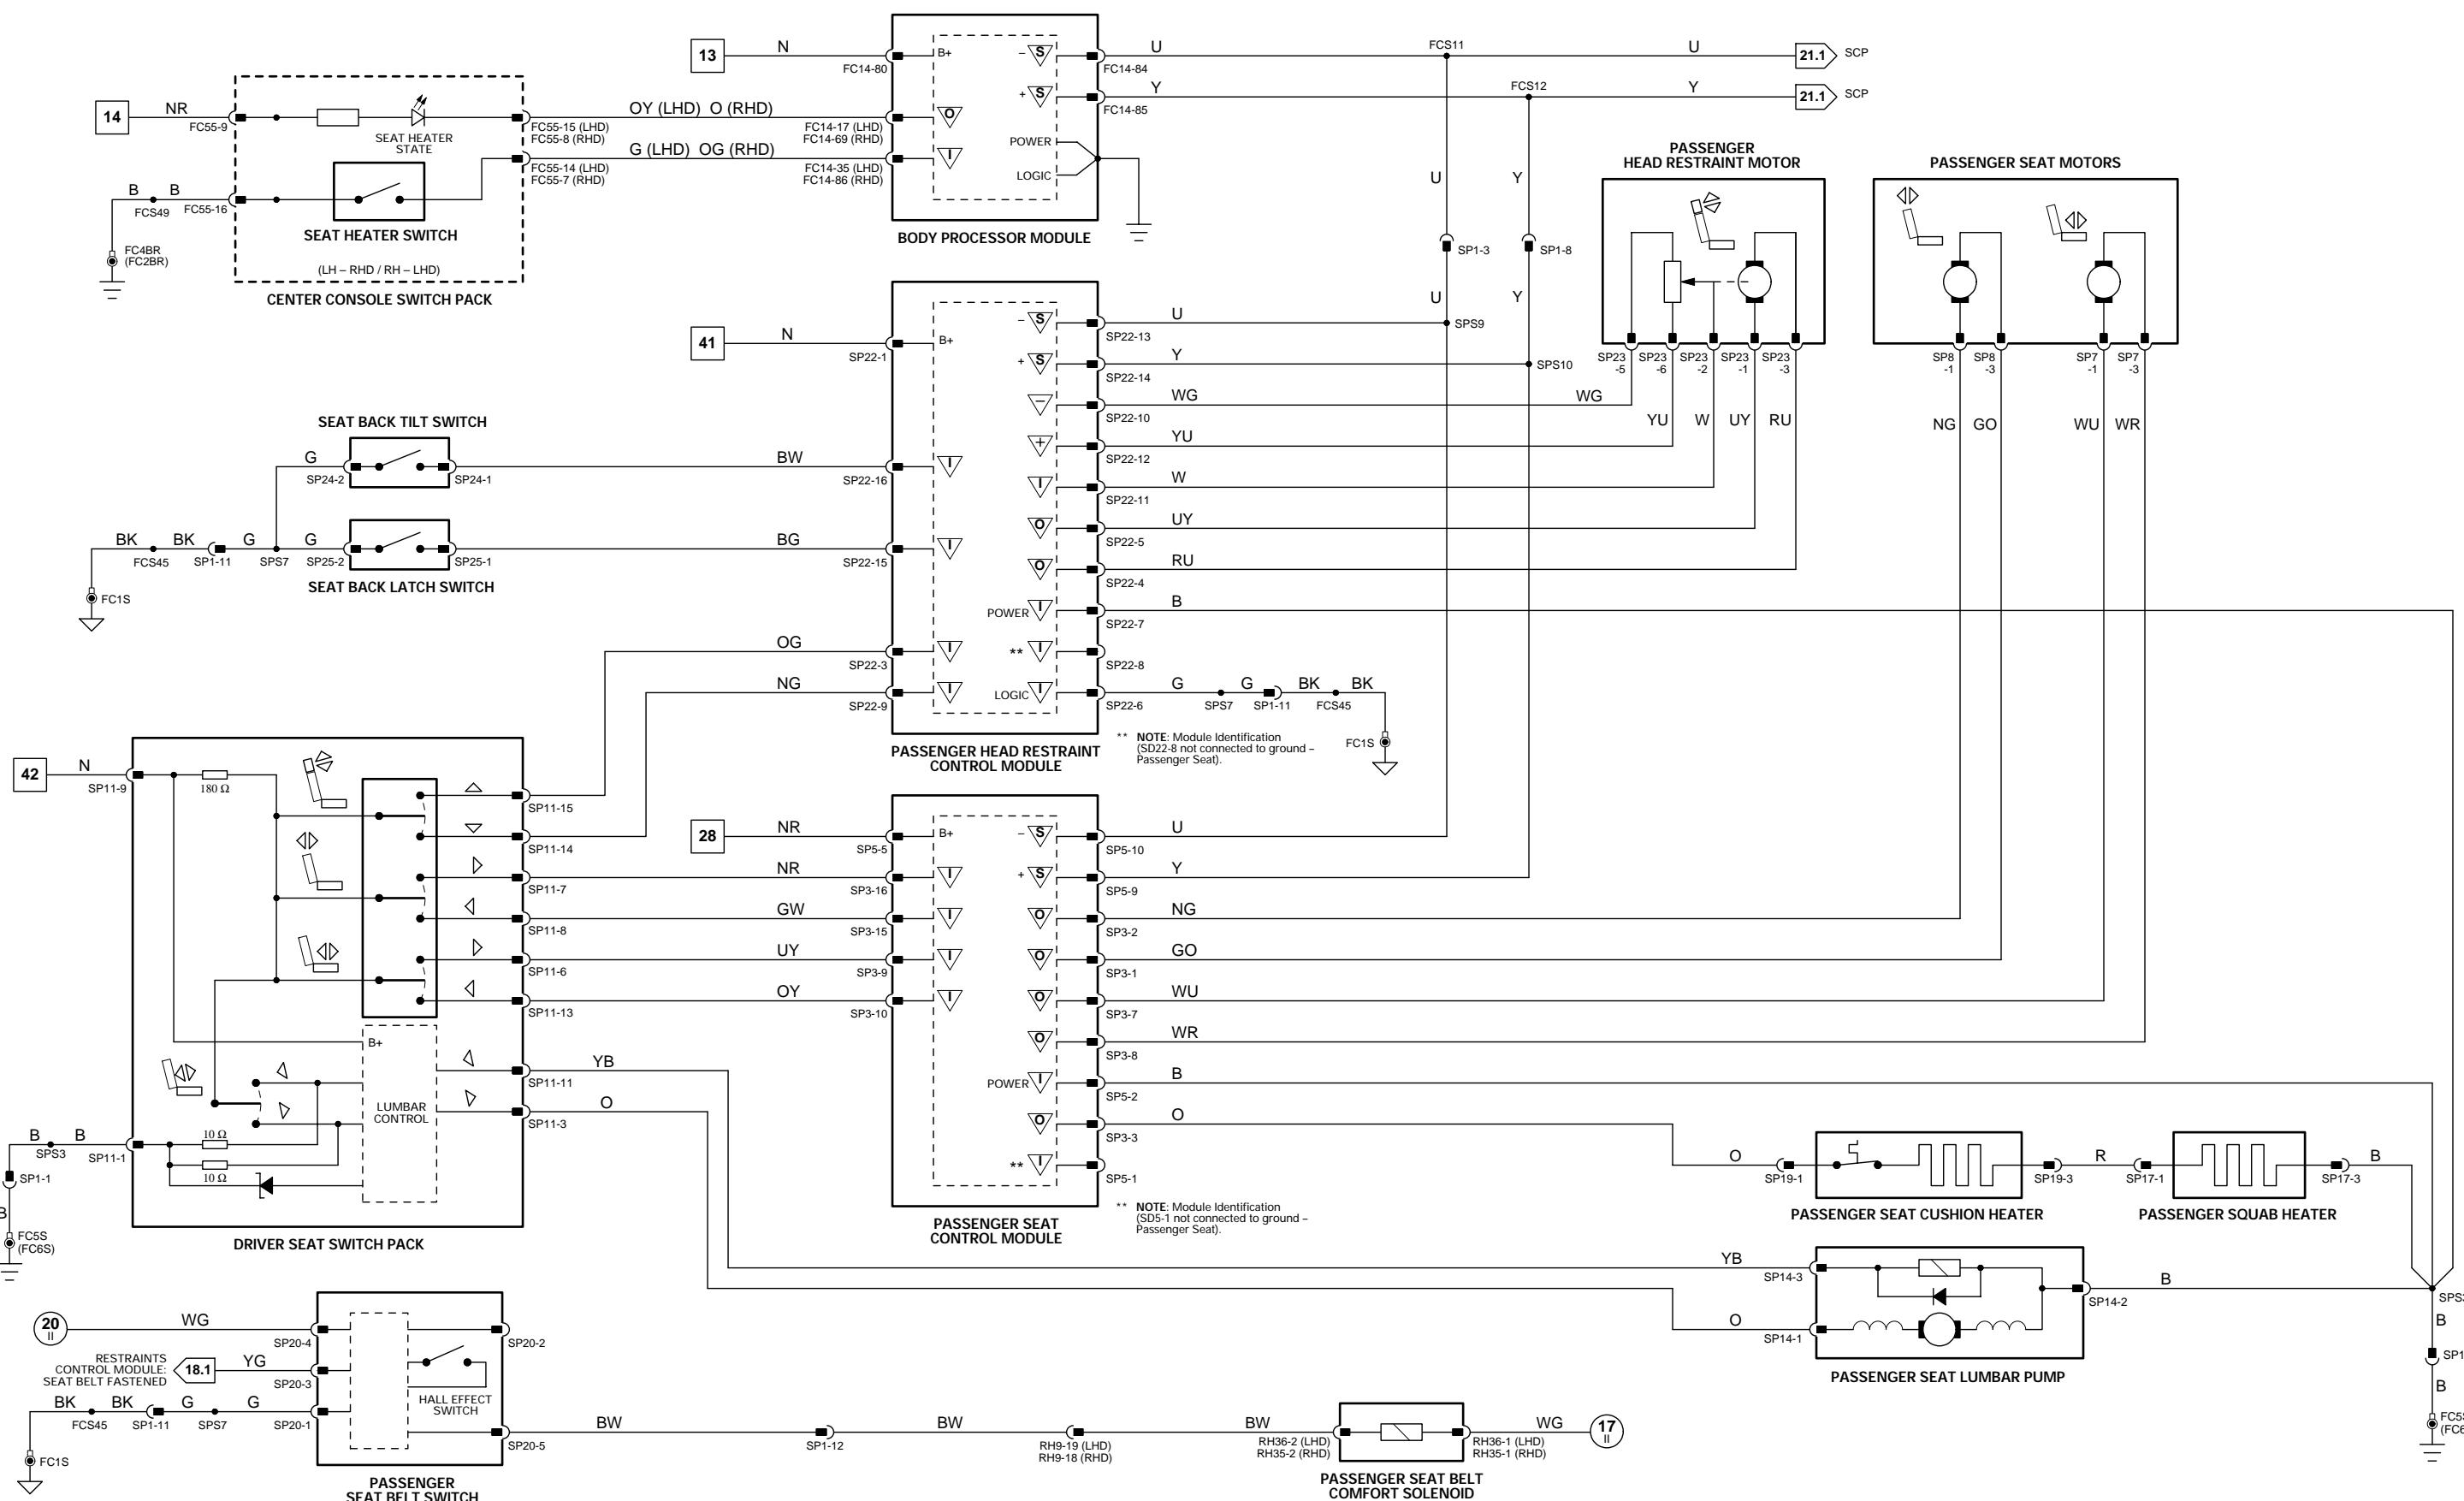


Fig. 13.1

BODY PROCESSOR MODULE

	Pin	Description	Active	Inactive
I	FC14-5	TRUNK LATCH RELEASE REQUEST	GROUND (MOMENTARY)	B+
I	FC14-15	IGNITION SWITCHED GROUND SUPPLY	GROUND	B+
I	FC14-31	FUEL FLAP RELEASE REQUEST	GROUND (MOMENTARY)	GROUND
I	FC14-33	IGNITION SWITCHED GROUND SUPPLY	GROUND	B+
I	FC14-41	IGNITION GROUND SUPPLY	GROUND	GROUND
I	FC14-55	VALET SWITCH	GROUND (MOMENTARY)	B+
I	FC14-56	NOT-IN-PARK	GROUND (R,N,D,4,3,2)	B+ (PARK)
I	FC14-67	KEY IN IGNITION	GROUND (KEY IN)	B+
O	FC14-71	DOOR LOCK RELAY ACTIVATE	GROUND (PULSE)	B+
I	FC14-80	BATTERY POWER SUPPLY (LOGIC)	2 - 1600 Hz	B+
S	FC14-84	SCP NETWORK	2 - 1600 Hz	B+
S	FC14-85	SCP NETWORK	2 - 1600 Hz	B+

DRIVER DOOR CONTROL MODULE

	Pin	Description	Active	Inactive
I	DD10-1	BATTERY POWER SUPPLY	B+	B+
O	DD10-5	DOOR LOCK ACTUATOR MOTOR UNLOCK	B+	GROUND
O	DD10-6	DOOR LOCK ACTUATOR MOTOR LOCK	B+	GROUND
I	DD10-8	LOGIC GROUND	GROUND	GROUND
S	DD10-9	SCP NETWORK	2 - 1600 Hz	2 - 1600 Hz
S	DD10-16	SCP NETWORK	2 - 1600 Hz	GROUND
I	DD10-17	POWER GROUND	GROUND	B+
I	DD11-4	DRIVER DOOR LOCK BARREL UNLOCK REQUEST	B+ (MOMENTARY)	GROUND
I	DD11-5	EXTERIOR DOOR HANDLE WINDOW DROP REQUEST	B+	GROUND
I	DD11-12	DRIVER DOOR LOCK BARREL LOCK REQUEST	B+ (MOMENTARY)	GROUND (DOOR OPEN)
I	DD11-20	DRIVER DOOR SWITCH	GROUND (DOOR OPEN)	B+

PASSENGER DOOR CONTROL MODULE

	Pin	Description	Active	Inactive
I	DP10-1	BATTERY POWER SUPPLY	B+	B+
O	DP10-5	PASSENGER DOOR LOCK ACTUATOR MOTOR UNLOCK	B+	GROUND
O	DP10-6	PASSENGER DOOR LOCK ACTUATOR MOTOR LOCK	B+	GROUND
I	DP10-8	LOGIC GROUND	GROUND	GROUND
S	DP10-9	SCP NETWORK	2 - 1600 Hz	2 - 1600 Hz
S	DP10-16	SCP NETWORK	2 - 1600 Hz	GROUND
I	DP10-17	POWER GROUND	GROUND	B+
I	DP11-5	EXTERIOR DOOR HANDLE WINDOW DROP REQUEST	B+	GROUND
I	DP11-20	PASSENGER DOOR SWITCH	GROUND (DOOR OPEN)	B+

SECURITY AND LOCKING CONTROL MODULE

	Pin	Description	Active	Inactive
O	BT40-1	TRUNK RELEASE SOLENOID	B+	GROUND
O	BT40-2	FUEL FILLER FLAP SOLENOID	B+	GROUND
S	BT40-8	SCP NETWORK	2 - 1600 Hz	2 - 1600 Hz
I	BT40-13	GROUND	GROUND	GROUND
I	BT40-14	GROUND	GROUND	B+
I	BT40-15	BATTERY POWER SUPPLY	2 - 1600 Hz	GROUND
S	BT40-16	SCP NETWORK	2 - 1600 Hz	B+
I	BT41-5	TRUNK SWITCH	GROUND	B+
I	BT41-6	EXTERNAL TRUNK RELEASE	GROUND (MOMENTARY)	B+
I	BT41-7	PASSENGER DOOR LOCK ACTUATOR LOCK STATUS	GROUND (LOCKED)	B+
I	BT41-19	DRIVER DOOR LOCK ACTUATOR LOCK STATUS	GROUND (LOCKED)	B+
RH20-1	KEY FOB ANTENNA			
RH20-2	KEY FOB ANTENNA SHIELD		GROUND	GROUND

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

COMPONENTS

Component	Connector / Type / Color	Location / Access
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
DOOR CONTROL MODULE - DRIVER	DD10 / 22-WAY FORD 2.8 TIMER / BLUE	DRIVER DOOR / DOOR CASING
DOOR CONTROL MODULE - PASSENGER	DD11 / 22-WAY FORD 2.8 TIMER / BLACK	PASSENGER DOOR / DOOR CASING
DOOR LOCK ACTUATOR - DRIVER	DP10 / 22-WAY FORD 2.8 TIMER / BLUE	PASSENGER DOOR / DOOR CASING
DOOR LOCK ACTUATOR - PASSENGER	DP11 / 22-WAY FORD 2.8 TIMER / BLACK	DRIVER DOOR / DOOR CASING
DOOR LOCK SWITCH - PASSENGER	DD3 / 13-WAY ECONOSEAL III LC / BLACK	PASSENGER DOOR / DOOR CASING
DOOR LOCK SWITCHES - DRIVER	DD3 / 13-WAY ECONOSEAL III LC / BLACK	DRIVER DOOR / DOOR CASING
DOOR SWITCH - DRIVER	DD3 / 13-WAY ECONOSEAL III LC / BLACK	DRIVER DOOR / DOOR CASING
DOOR SWITCH - PASSENGER	DP3 / 13-WAY ECONOSEAL III LC / BLACK	PASSENGER DOOR / DOOR CASING
EXTERNAL TRUNK RELEASE SWITCH	BL2 / 2-WAY MULTILOCK 070 / WHITE	TRUNK / FUEL FILL
FUEL FILL FLAP SOLENOID	IC24 / 2-WAY LABINAL / NATURAL	STEERING COLUMN
IGNITION SWITCH (KEY-IN SWITCH)	FC4 / 8-WAY MULTILOCK 070 / WHITE	HARD WIRED
KEY FOB ANTENNA (CONVERTIBLE)	RH7 / COAXIAL CONNECTOR	TOP OF BACKLIGHT
KEY FOB ANTENNA (COUPE)	FC87 / 3-WAY MULTILOCK 070 / WHITE	TOP OF BACKLIGHT
NOT-IN-PARK MICROSWITCH	BT40 / 16-WAY FORD 2.8 TIMER / BLACK	GEAR SELECTOR ASSEMBLY
SECURITY AND LOCKING CONTROL MODULE	BT41 / 26-WAY FORD IDC / BLACK	TRUNK / ELECTRICAL CARRIER
TRUNK AND FUEL FILL RELEASE SWITCH	BT42 / 10-WAY FORD 2.8 TIMER / BLACK	FASCIA / DRIVER SIDE
TRUNK RELEASE SOLENOID	RH20 / COAXIAL CONNECTOR	TRUNK / LEFT HAND SIDE
TRUNK SWITCH	FC41 / 10-WAY AMP MQL / NATURAL	TRUNK
VALET SWITCH	BT43 / 2-WAY LABINAL / BROWN	DRIVER KNEE BOLSTER

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
DOOR LOCKING RELAY	BLACK	FC24 / BLACK	RH FASCIA RELAYS

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC13	20-WAY MULTILOCK 070 / YELLOW	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
AC14	14-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
AC15	20-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BB1	4-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BL1	4-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
DD1	23-WAY AMP - FORD / BLACK	DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM
DP1	23-WAY AMP - FORD / BLACK	PASSENGER SIDE 'A' POST / 'A' POST TRIM
IC4	4-WAY MULTILOCK 070 / WHITE	TRUNK / LEFT OF ANTENNA ASSEMBLY
RH2	20-WAY MULTILOCK 070 / WHITE	REAR OF CENTER CONSOLE ASSEMBLY

GROUNDS

Ground	Location / Type
BT1AL	EYELET (PAIR) - LEFT HAND LEG / ADJACENT TO BATTERY
BT1AR	EYELET (PAIR) - RIGHT HAND LEG / ADJACENT TO BATTERY
FC2AR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC2BL	EYELET (PAIR) - LEFT HAND LEG / RIGHT HAND 'A' POST
FC2BR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC4AR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST
FC4BL	EYELET (PAIR) - LEFT HAND LEG / LEFT HAND 'A' POST
FC4BR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST
RH3S	EYELET (SINGLE) / ROOF, ADJACENT TO BACKLIGHT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

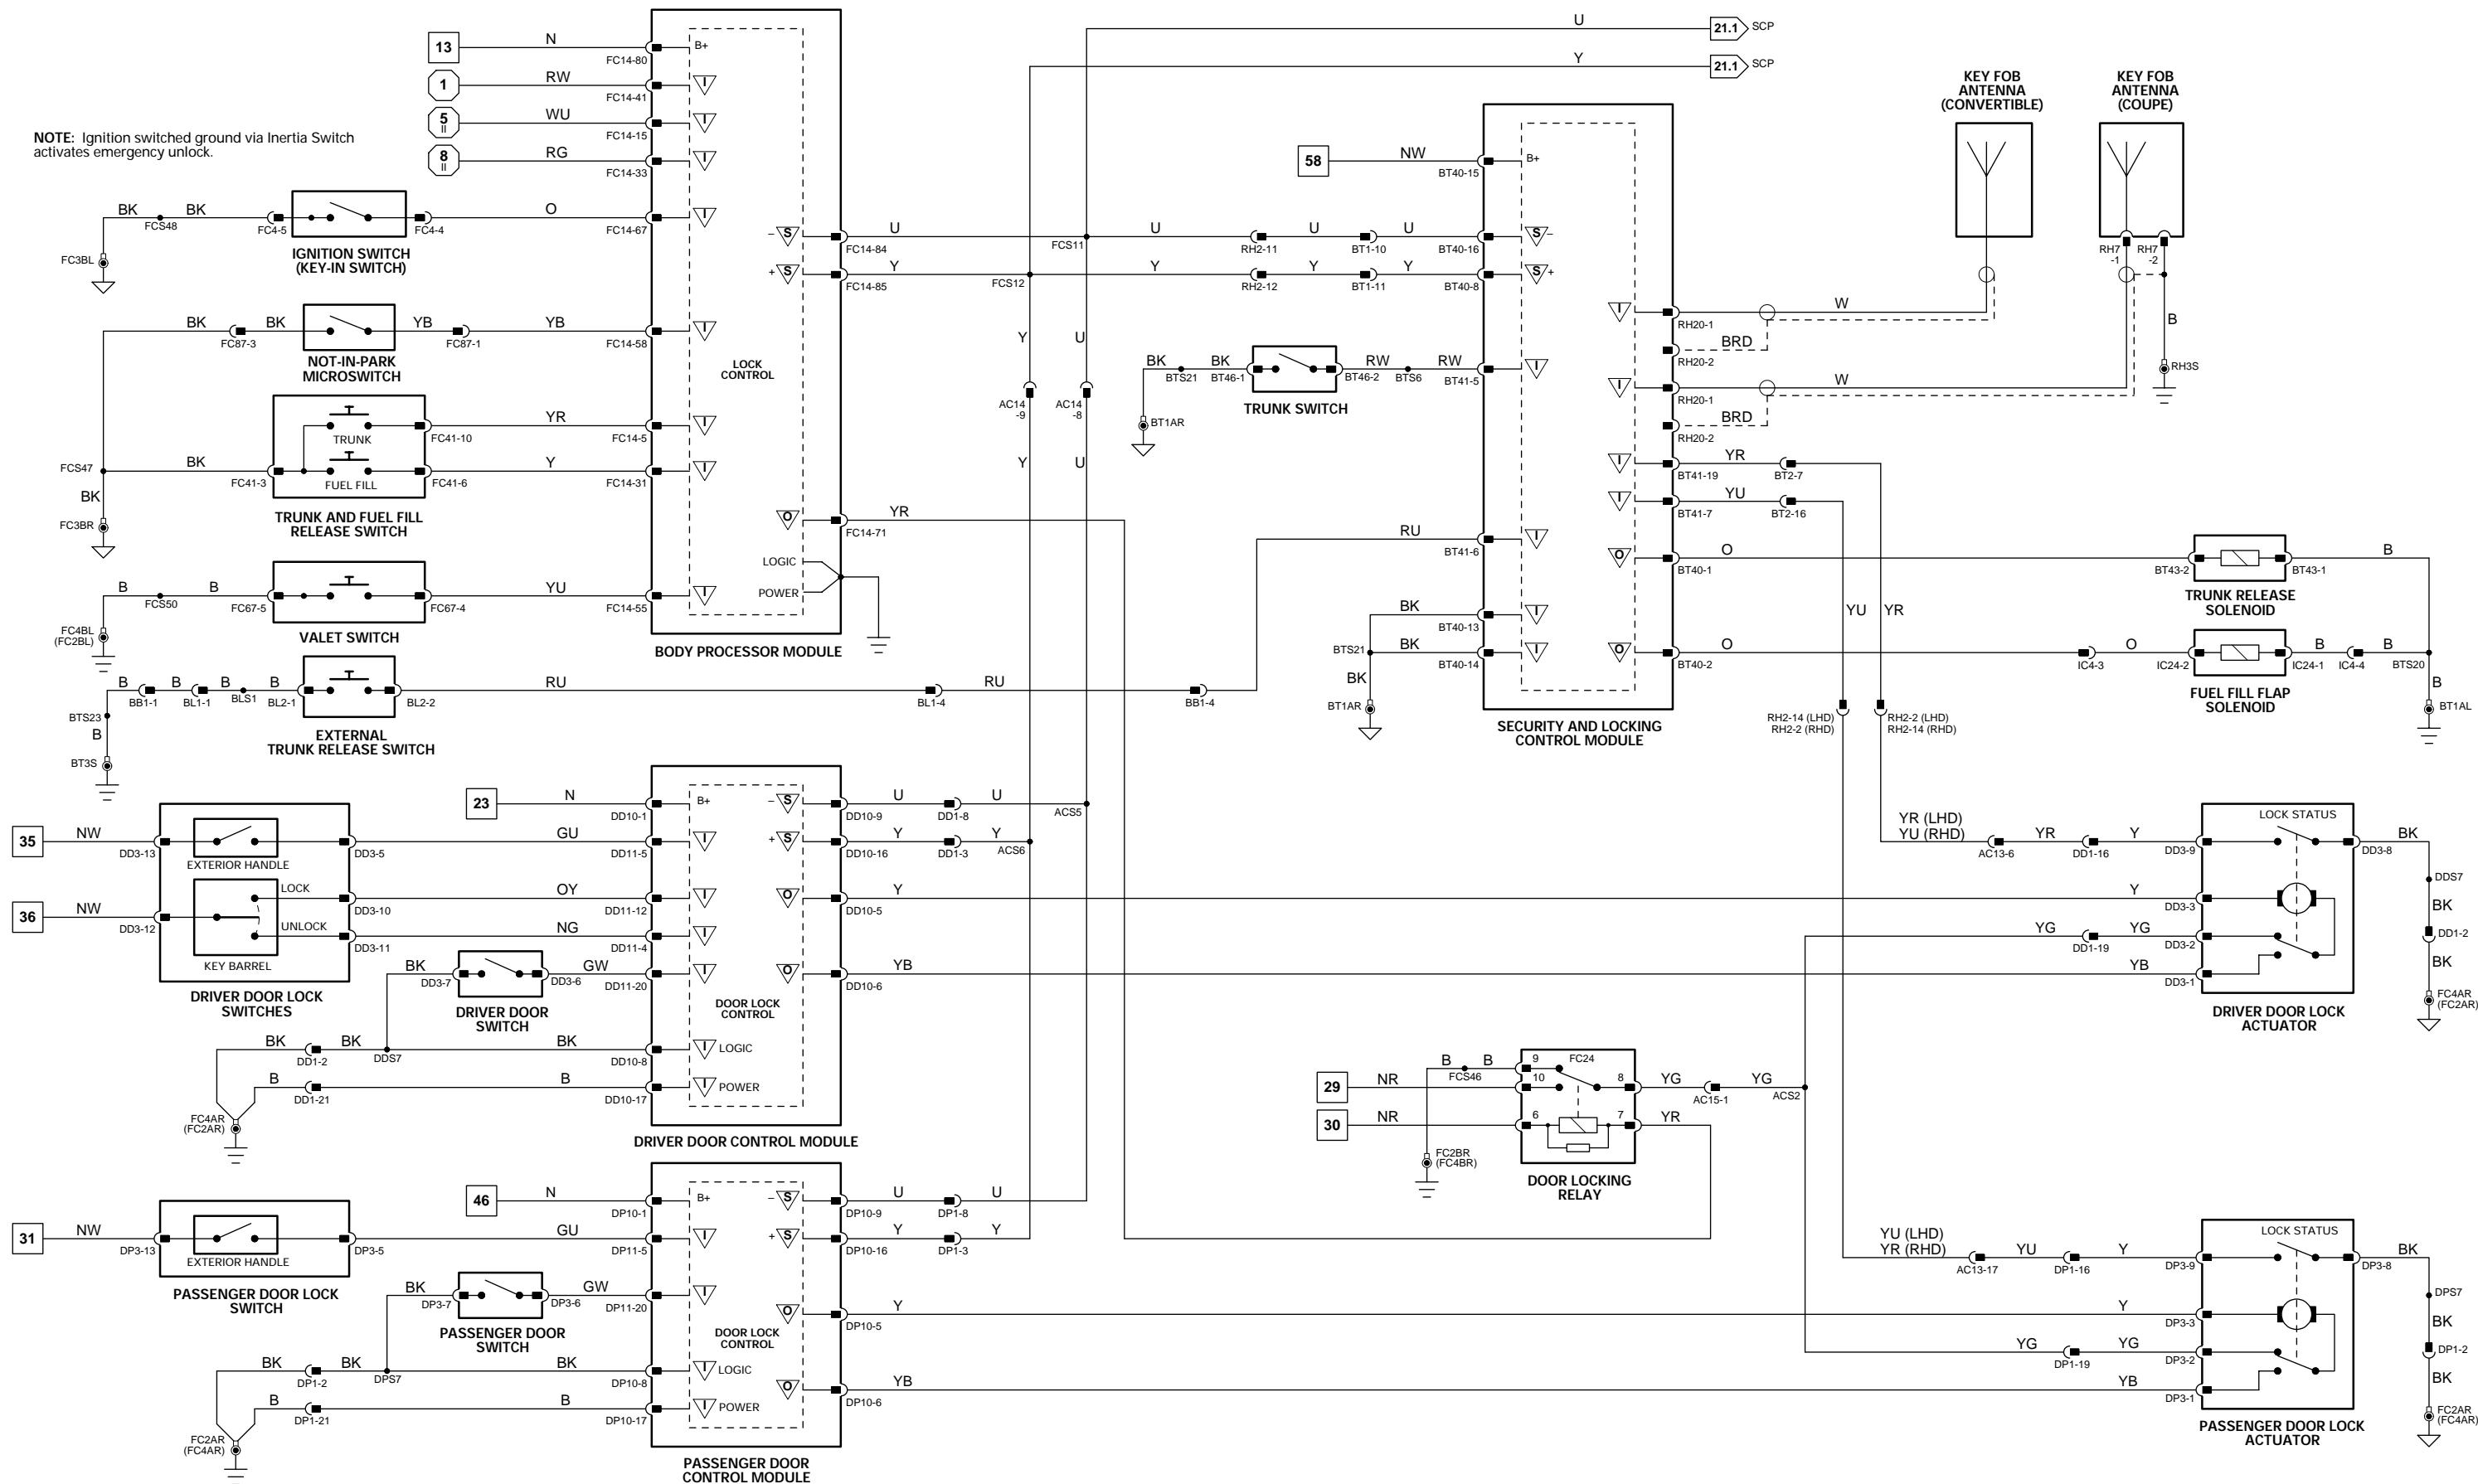


Fig. 14.1

BODY PROCESSOR MODULE

	Pin	Description
I	FC14-6	WASHER FLUID LEVEL LOW
I	FC14-9	INTERMITTENT WIPER REQUEST
I	FC14-15	IGNITION SWITCHED GROUND SUPPLY
I	FC14-16	SIDE LAMP REQUEST
O	FC14-18	POWERWASH RELAY ACTIVATE
O	FC14-19	WIPER FAST / SLOW RELAY ACTIVATE
O	FC14-26	WINDSHIELD WASH PUMP AND FLUID LEVEL SENSOR SUPPLY
I	FC14-34	FAST WIPE REQUEST
I	FC14-37	WASH REQUEST
O	FC14-43	WIPER RUN / STOP RELAY ACTIVATE
I	FC14-60	WIPER MOTOR PARK SWITCH
I	FC14-80	BATTERY POWER SUPPLY (LOGIC)
I	FC14-94	SLOW WIPE REQUEST
I	FC14-104	LIGHTING / MOTORS BATTERY POWER SUPPLY

	Active	Inactive
	0V	GROUND (MOMENTARY)
	GROUND	GROUND
	GROUND	GROUND
	GROUND	GROUND
	B+	GROUND
	GROUND	B+
	0 V (MOMENTARY)	B+
	GROUND	B+
	GROUND (PARKED)	B+ (NOT PARKED)
	B+	B+
	GROUND (WIPERS ON)	B+
	B+	B+

COMPONENTS	Connector / Type / Color	Location / Access
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
FUSE BOX - ENGINE COMPARTMENT	LF5 / 10-WAY U.T.A. FUSEBOX / NATURAL LF6 / 10-WAY U.T.A. FUSEBOX / BLACK LF7 / 10-WAY U.T.A. FUSEBOX / GREEN LF8 / 10-WAY U.T.A. FUSEBOX / BLUE LF70 / EYELET	ENGINE COMPARTMENT / LEFT FRONT
INTERIOR REAR VIEW MIRROR	RF2 / 6-WAY MULTILOCK 070 / YELLOW	WINDSHIELD / FORWARD OF ROOF CONSOLE
LIGHTING STALK (COLUMN SWITCHGEAR)	SC2 / 10-WAY MULTILOCK 070 / YELLOW	STEERING COLUMN
POWERWASH PUMP	LF25 / 2-WAY ECONOSEAL III HC / BLACK	LEFT FRONT FENDER / WHEEL ARCH LINER
RAIN SENSING MODULE	RS1 / 12-WAY AMP ML42 / BLACK	ABOVE PASSENGER FOOTWELL
RAIN SENSOR	RF15 / 3-WAY MICRO QUAD LOCK / BLACK	BEHIND REAR VIEW MIRROR
WASH / WIPE STALK (COLUMN SWITCHGEAR)	SC1 / 12-WAY MULTILOCK 070 / WHITE	STEERING COLUMN
WINDSHIELD WASH PUMP AND FLUID LEVEL SENSOR	LF27 / 3-WAY AUGAT 1.6 / BLACK	LEFT FRONT FENDER / WHEEL ARCH LINER
WIPER MOTOR	EM61 / 5-WAY FORD FAO / BLACK	BASE OF WINDSHIELD / AIR INTAKE PLENUM

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
WIPER RUN / STOP RELAY	BLACK	LF48 / BLACK	LH ENCLOSURE RELAYS
WIPER FAST / SLOW RELAY	BLACK	LF49 / BLACK	LH ENCLOSURE RELAYS
POWERWASH RELAY (#4)	BROWN	BUS	ENGINE COMPARTMENT FUSE BOX

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
EM2	18-WAY MULTILOCK 070 / YELLOW	ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
FC49	12-WAY MULTILOCK 040 / BLACK	FASCIA
LF3	13-WAY ECONOSEAL III LC / WHITE	LHD: ENGINE COMPARTMENT / ADJACENT TO BRAKE SERVO RHD: ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
LF1	20-WAY MULTILOCK 070 / GREY	LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
LF60	20-WAY MULTILOCK 070 / WHITE	LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
RF1	24-WAY CONNECTOR / BLACK	RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM

GROUNDS

Ground	Location / Type
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
LF1AR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND HEADLAMP
LF3BS	EYELET (SINGLE) / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD CATCH

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

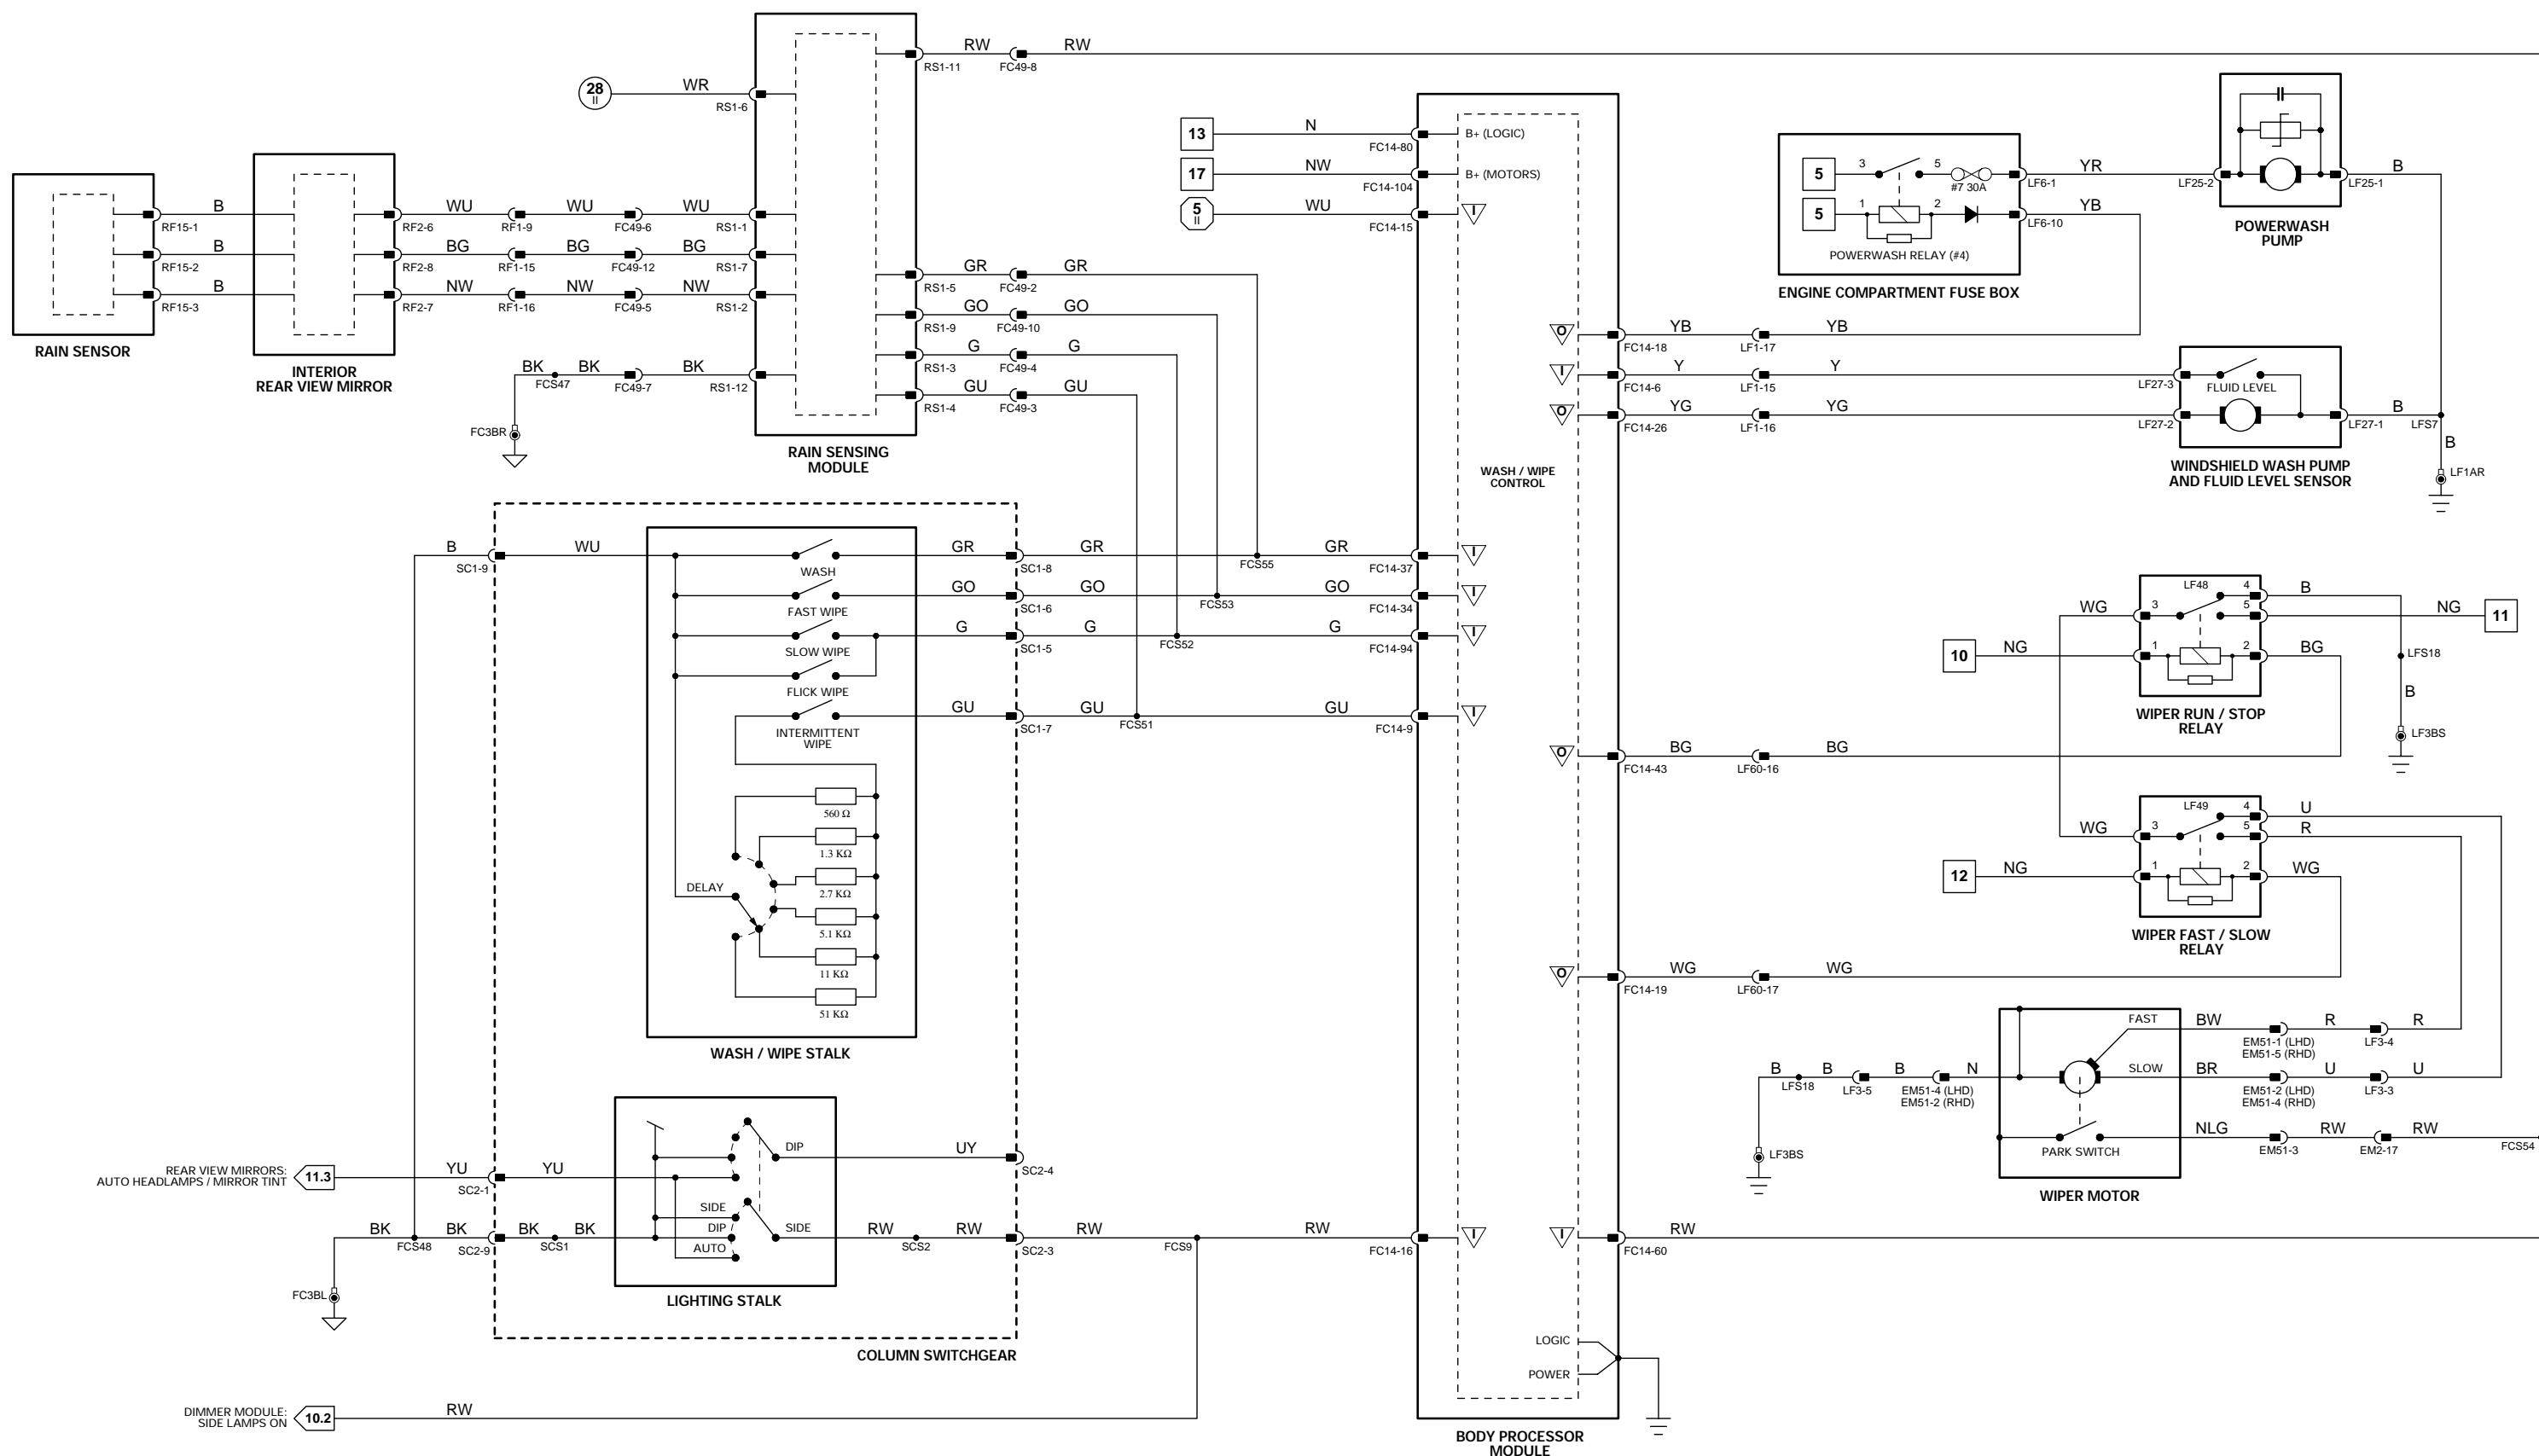

CONTROL MODULE PIN OUT INFORMATION

BODY PROCESSOR MODULE

Pin	Description	Active	Inactive
S	FC14-84	SCP NETWORK	2 - 1600 Hz
S	FC14-85	SCP NETWORK	2 - 1600 Hz

DRIVER DOOR CONTROL MODULE

Pin	Description	Active	Inactive
I	DD10-1	BATTERY POWER SUPPLY	B+
O	DD10-7	WINDOW LIFT MOTOR DOWN SUPPLY	GROUND
I	DD10-8	LOGIC GROUND	GROUND
S	DD10-9	SCP NETWORK	2 - 1600 Hz
I	DD10-10	DRIVER SWITCH PACK LH WINDOW DOWN REQUEST	GROUND (MOMENTARY)
I	DD10-11	DRIVER WINDOW LIFT SENSOR FEEDBACK	2 V = UP; 12 V = DOWN
I	DD10-12	DRIVER WINDOW LIFT SENSOR FEEDBACK	2 V = UP; 12 V = DOWN
O	DD10-13	DRIVER WINDOW LIFT SENSOR REFERENCE VOLTAGE	B+
O	DD10-15	DRIVER WINDOW LIFT MOTOR UP SUPPLY	B+
S	DD10-16	SCP NETWORK	2 - 1600 Hz
I	DD10-17	POWER GROUND	GROUND
I	DD10-18	DRIVER SWITCH PACK LH WINDOW UP REQUEST	GROUND (MOMENTARY)
I	DD10-19	DRIVER SWITCH PACK RH WINDOW UP REQUEST	GROUND (MOMENTARY)
I	DD11-4	DRIVER DOOR LOCK BARREL UNLOCK REQUEST	B+ (MOMENTARY)
I	DD11-7	DRIVER SWITCH PACK RH WINDOW DOWN REQUEST	B+ (MOMENTARY)
I	DD11-12	DRIVER DOOR LOCK BARREL LOCK REQUEST	B+ (MOMENTARY)

MAJOR INSTRUMENT PACK

Pin	Description	Active	Inactive
S	FC25-13	SCP NETWORK	2 - 1600 Hz
S	FC25-14	SCP NETWORK	2 - 1600 Hz

PASSENGER DOOR CONTROL MODULE

Pin	Description	Active	Inactive
I	DP10-1	BATTERY POWER SUPPLY	B+
O	DP10-7	PASSENGER WINDOW LIFT MOTOR DOWN SUPPLY	GROUND
I	DP10-8	LOGIC GROUND	GROUND
S	DP10-9	SCP NETWORK	2 - 1600 Hz
I	DP10-10	PASSENGER SWITCH PACK RH WINDOW DOWN REQUEST	B+ (MOMENTARY)
I	DP10-11	PASSENGER WINDOW LIFT MOVEMENT SENSOR FEEDBACK	2 V = UP; 12 V = DOWN
I	DP10-12	PASSENGER WINDOW LIFT MOVEMENT SENSOR FEEDBACK	2 V = UP; 12 V = DOWN
O	DP10-13	PASSENGER WINDOW LIFT MOVEMENT SENSOR REFERENCE VOLTAGE	B+
O	DP10-15	PASSENGER WINDOW LIFT MOTOR UP SUPPLY	B+
S	DP10-16	SCP NETWORK	2 - 1600 Hz
I	DP10-17	POWER GROUND	GROUND
I	DP10-18	PASSENGER SWITCH PACK RH WINDOW UP REQUEST	B+ (MOMENTARY)

SECURITY AND LOCKING CONTROL MODULE

Pin	Description	Active	Inactive
S	BT40-8	SCP NETWORK	2 - 1600 Hz
S	BT40-16	SCP NETWORK	2 - 1600 Hz

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 15.1

COMPONENTS		Connector / Type / Color	Location / Access
Component			
BODY PROCESSOR MODULE	BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
DOOR CONTROL MODULE - DRIVER		DD10 / 22-WAY FORD 2.8 TIMER / BLUE	DRIVER DOOR / DOOR CASING
		DD11 / 22-WAY FORD 2.8 TIMER / BLACK	
DOOR CONTROL MODULE - PASSENGER		DP10 / 22-WAY FORD 2.8 TIMER / BLUE	PASSENGER DOOR / DOOR CASING
DOOR LOCK SWITCHES - DRIVER		DP11 / 22-WAY FORD 2.8 TIMER / BLACK	
MAJOR INSTRUMENT PACK		DD3 / 13-WAY ECONOSEAL III LC / BLACK	DRIVER DOOR / DOOR CASING
		FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK	FASCIA
SECURITY AND LOCKING CONTROL MODULE		FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW	
		BT40 / 16-WAY FORD 2.8 TIMER / BLACK	TRUNK / ELECTRICAL CARRIER
		BT41 / 26-WAY FORD IDC / BLACK	
		BT42 / 10-WAY FORD 2.8 TIMER / BLACK	
		RH20 / COAXIAL CONNECTOR	
WINDOW LIFT SWITCHES - DRIVER DOOR		DD17 / 20-WAY MULTILOCK 040 / BLACK	DRIVER DOOR SWITCH PACK
WINDOW LIFT SWITCHES - PASSENGER DOOR		DP17 / 20-WAY MULTILOCK 040 / BLACK	PASSENGER DOOR SWITCH PACK
(PASSENGER DOOR SWITCH PACK)			
WINDOW LIFT - DRIVER		DD16 / 6-WAY ECONOSEAL III LC / BLACK	DRIVER DOOR
WINDOW LIFT - PASSENGER		DP16 / 6-WAY ECONOSEAL III LC / BLACK	DRIVER DOOR
HARNESS-TO-HARNESS CONNECTORS		Location / Access	
Connector	Type / Color		
AC14	14-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE	
AC15	20-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE	
AC16	6-WAY MULTILOCK 070 / YELLOW	LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM	
BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH	
BT2	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH	
DD1	23-WAY AMP - FORD / BLACK	DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM	
DP1	23-WAY AMP - FORD / BLACK	PASSENGER SIDE 'A' POST / 'A' POST TRIM	
FC62	10-WAY AMP MOL / BLACK	CONVERTIBLE TOP SWITCH	
RF1	24-WAY CONNECTOR / BLACK	RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM	
RH12	18-WAY MULTILOCK 070 / YELLOW	REAR OF CENTER CONSOLE ASSEMBLY	
RH2	20-WAY MULTILOCK 070 / WHITE	REAR OF CENTER CONSOLE ASSEMBLY	
GROUNDS		Location / Type	
Ground			
FC2AR	EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST		
FC4AR	EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST		

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

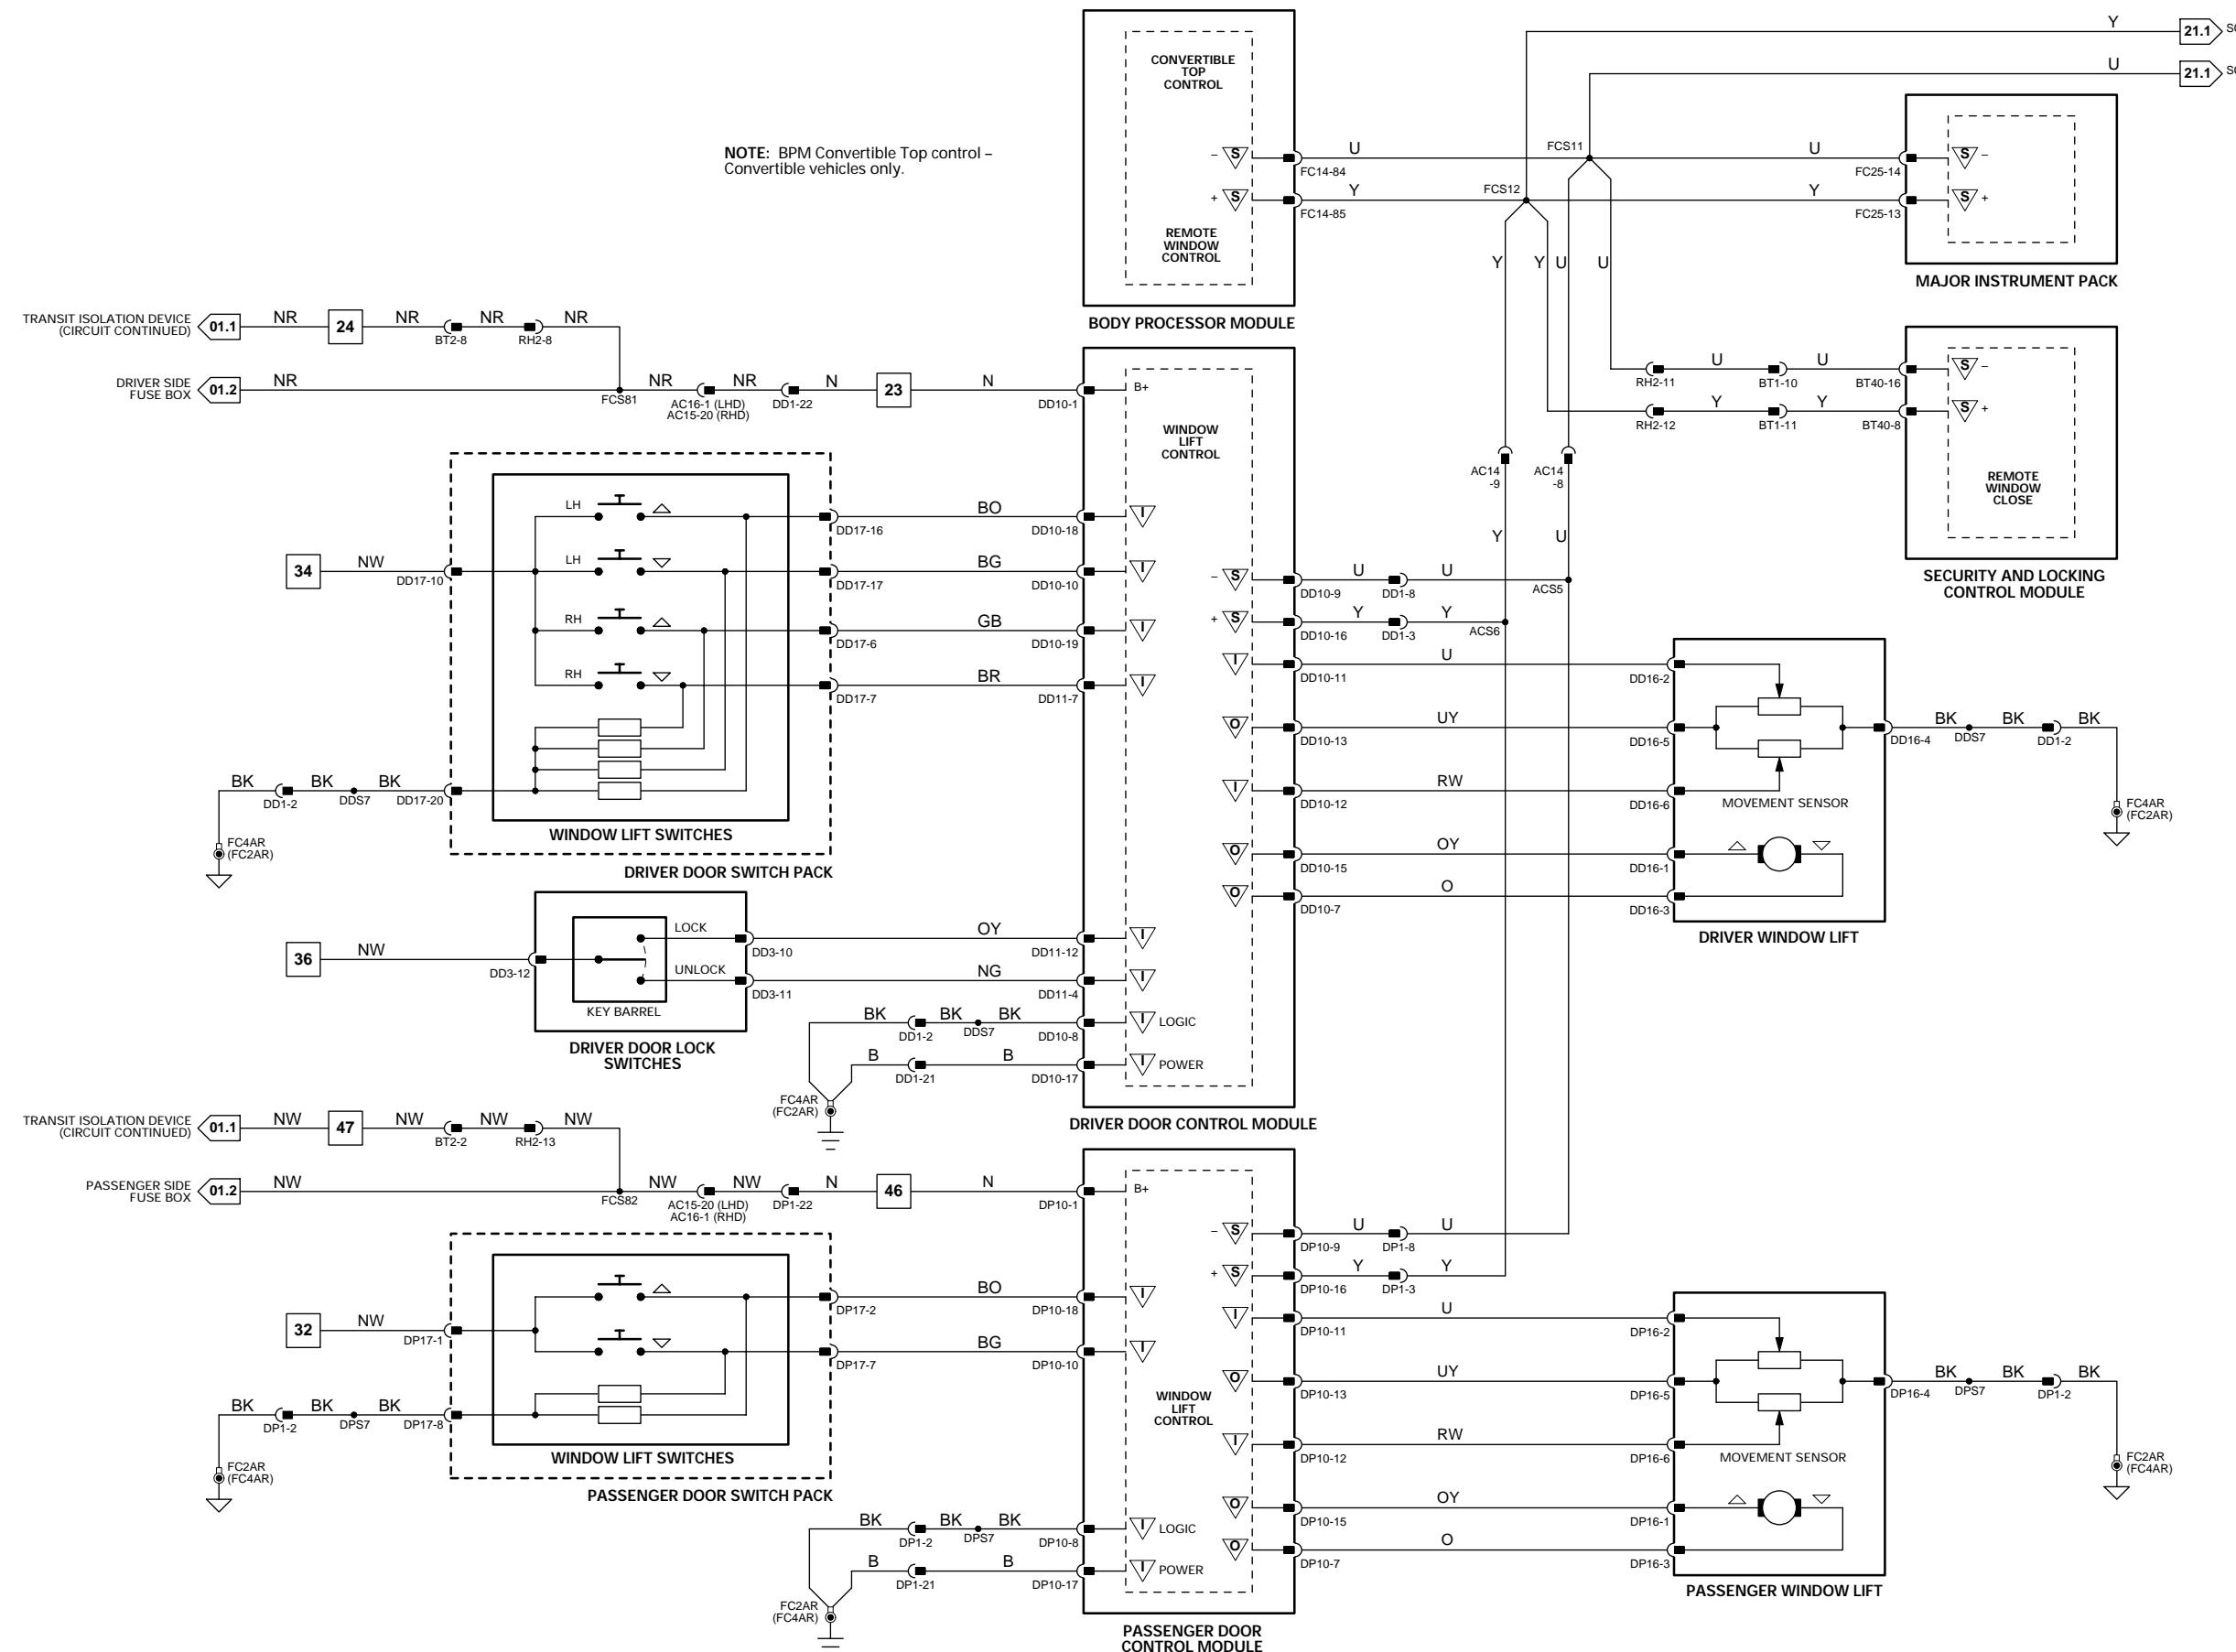


Fig. 15.2

BODY PROCESSOR MODULE

Pin	Description
I	FC14-10 CONVERTIBLE TOP RAISE REQUEST
I	FC14-15 IGNITION SWITCHED GROUND SUPPLY
I	FC14-32 IGNITION SWITCHED GROUND SUPPLY
I	FC14-33 IGNITION SWITCHED GROUND SUPPLY
I	FC14-36 CONVERTIBLE TOP READY TO LATCH
I	FC14-62 CONVERTIBLE TOP LATCH CLOSED
I	FC14-63 CONVERTIBLE TOP LOWER REQUEST
O	FC14-77 REAR QUARTER GLASS DOWN RELAYS ACTIVATE
I	FC14-80 BATTERY POWER SUPPLY (LOGIC)
S	FC14-84 SCP NETWORK
S	FC14-85 SCP NETWORK
I	FC14-89 CONVERTIBLE TOP CLOSED
O	FC14-98 REAR QUARTER GLASS UP RELAYS ACTIVATE

DRIVER DOOR CONTROL MODULE

Pin	Description
S	DD10-9 SCP NETWORK
S	DD10-16 SCP NETWORK

MAJOR INSTRUMENT PACK

Pin	Description
S	FC25-13 SCP NETWORK
S	FC25-14 SCP NETWORK

PASSENGER DOOR CONTROL MODULE

Pin	Description
S	DP10-9 SCP NETWORK
S	DP10-16 SCP NETWORK
C	FC25-24 CAN NETWORK
C	FC25-47 CAN NETWORK

SECURITY AND LOCKING CONTROL MODULE

Pin	Description
O	BT40-3 TOP UP RELAY ACTIVATE
O	BT40-4 LATCH CONTROL VALVE
I	BT40-6 BATTERY POWER SUPPLY
S	BT40-8 SCP NETWORK
O	BT40-9 MAIN CONTROL VALVE
O	BT40-10 TOP DOWN RELAY ACTIVATE
I	BT40-13 GROUND
I	BT40-14 GROUND
S	BT40-16 SCP NETWORK
I	BT41-3 CONVERTIBLE TOP DOWN SWITCH

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector / Type / Color	Location / Access
BODY PROCESSOR MODULE	FC14 / 104-WAY AMP EEEC / GREY	PASSENGER SIDE FASCIA / AIRBAG BRACKET
CONVERTIBLE TOP CLOSED SWITCH	RF4 / 6-WAY MULTILOCK 070 / WHITE	TOP OF WINDSHIELD
CONVERTIBLE TOP DOWN SWITCH	RH29 / 3-WAY MULTILOCK 070 / WHITE	RIGHT HAND OPERATING CYLINDER
CONVERTIBLE TOP LATCH CLOSED SWITCH	RF4 / 6-WAY MULTILOCK 070 / WHITE	TOP OF WINDSHIELD
CONVERTIBLE TOP PUMP	BT15 / 2-WAY AMP / NATURAL	TRUNK / RIGHT HAND SIDE
CONVERTIBLE TOP RAISED SWITCH	RH29 / 3-WAY MULTILOCK 070 / WHITE	RIGHT HAND OPERATING CYLINDER
CONVERTIBLE TOP READY-TO-LATCH SWITCH	RF4 / 6-WAY MULTILOCK 070 / WHITE	TOP OF WINDSHIELD
CONVERTIBLE TOP SWITCH	FC62 / 10-WAY AMP MQL / BLACK	FORWARD OF GEAR SELECTOR
DOOR CONTROL MODULE - DRIVER	DD10 / 22-WAY FORD 2.8 TIMER / BLUE	DRIVER DOOR / DOOR CASING
DOOR CONTROL MODULE - PASSENGER	DD11 / 22-WAY FORD 2.8 TIMER / BLACK	PASSENGER DOOR / DOOR CASING
LATCH CONTROL VALVE	DP10 / 22-WAY FORD 2.8 TIMER / BLUE	PH2 / CONVERTIBLE TOP PUMP
MAIN CONTROL VALVE	DP11 / 22-WAY FORD 2.8 TIMER / BLACK	PH3 / CONVERTIBLE TOP PUMP
MAJOR INSTRUMENT PACK	PH2 / 2-WAY DAUT & RIETZ / BLUE	FASCIA
QUARTER LIGHT LIFT - LH	PH3 / 2-WAY DAUT & RIETZ / ORANGE	REAR QUARTER PANEL
QUARTER LIGHT LIFT - RH	FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK	REAR QUARTER PANEL
SECURITY AND LOCKING CONTROL MODULE	FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW	TRUNK / ELECTRICAL CARRIER

RELAYS

Relay	Color / Stripe	Connector / Color	Location / Access
QUARTER DOWN RELAY - LH	BLACK	BT74 / BLACK	TRUNK RELAYS
QUARTER DOWN RELAY - RH	BLACK	BT76 / BLACK	TRUNK RELAYS
QUARTER UP RELAY - LH	BLACK	BT74 / BLACK	TRUNK RELAYS
QUARTER UP RELAY - RH	BLACK	BT76 / BLACK	TRUNK RELAYS
TOP UP RELAY	BLACK	BT16 / BLACK	TRUNK RELAYS
TOP DOWN RELAY	BLACK	BT17 / BLACK	TRUNK RELAYS

HARNESS-TO-HARNESS CONNECTORS


Connector	Type / Color	Location / Access
AC14	14-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
BT3	18-WAY MULTILOCK 070 / YELLOW	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
DD1	23-WAY AMP - FORD / BLACK	DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM
DP1	23-WAY AMP - FORD / BLACK	PASSENGER SIDE 'A' POST / 'A' POST TRIM
PH1	3-WAY MULTILOCK 070 / YELLOW	TRUNK
RF1	24-WAY CONNECTOR / BLACK	RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
RF5	8-WAY MULTILOCK 070 / WHITE	LOWER RH 'A' POST / 'A' POST TRIM
RH2	20-WAY MULTILOCK 070 / WHITE	REAR OF CENTER CONSOLE ASSEMBLY
RH5	3-WAY MULTILOCK 070 / WHITE	BEHIND LEFT HAND QUARTER TRIM PANEL
RH6	3-WAY MULTILOCK 070 / WHITE	BEHIND RIGHT HAND QUARTER TRIM PANEL
RH12	18-WAY MULTILOCK 070 / YELLOW	REAR OF CENTER CONSOLE ASSEMBLY

GROUNDS

Ground	Location / Type
BT1AL	EYELET (PAIR) - LEFT HAND LEG / ADJACENT TO BATTERY
BT1AR	EYELET (PAIR) - RIGHT HAND LEG / ADJACENT TO BATTERY
BT1BL	EYELET (PAIR) - LEFT HAND LEG / ADJACENT TO BATTERY
BT1BR	EYELET (PAIR) - RIGHT HAND LEG / ADJACENT TO BATTERY
BT2BL	EYELET (PAIR) - LEFT HAND LEG / TRUNK, RIGHT REAR
FC3BR	EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
RH1S	EYELET (SINGLE) / RIGHT HAND REAR QUARTER

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

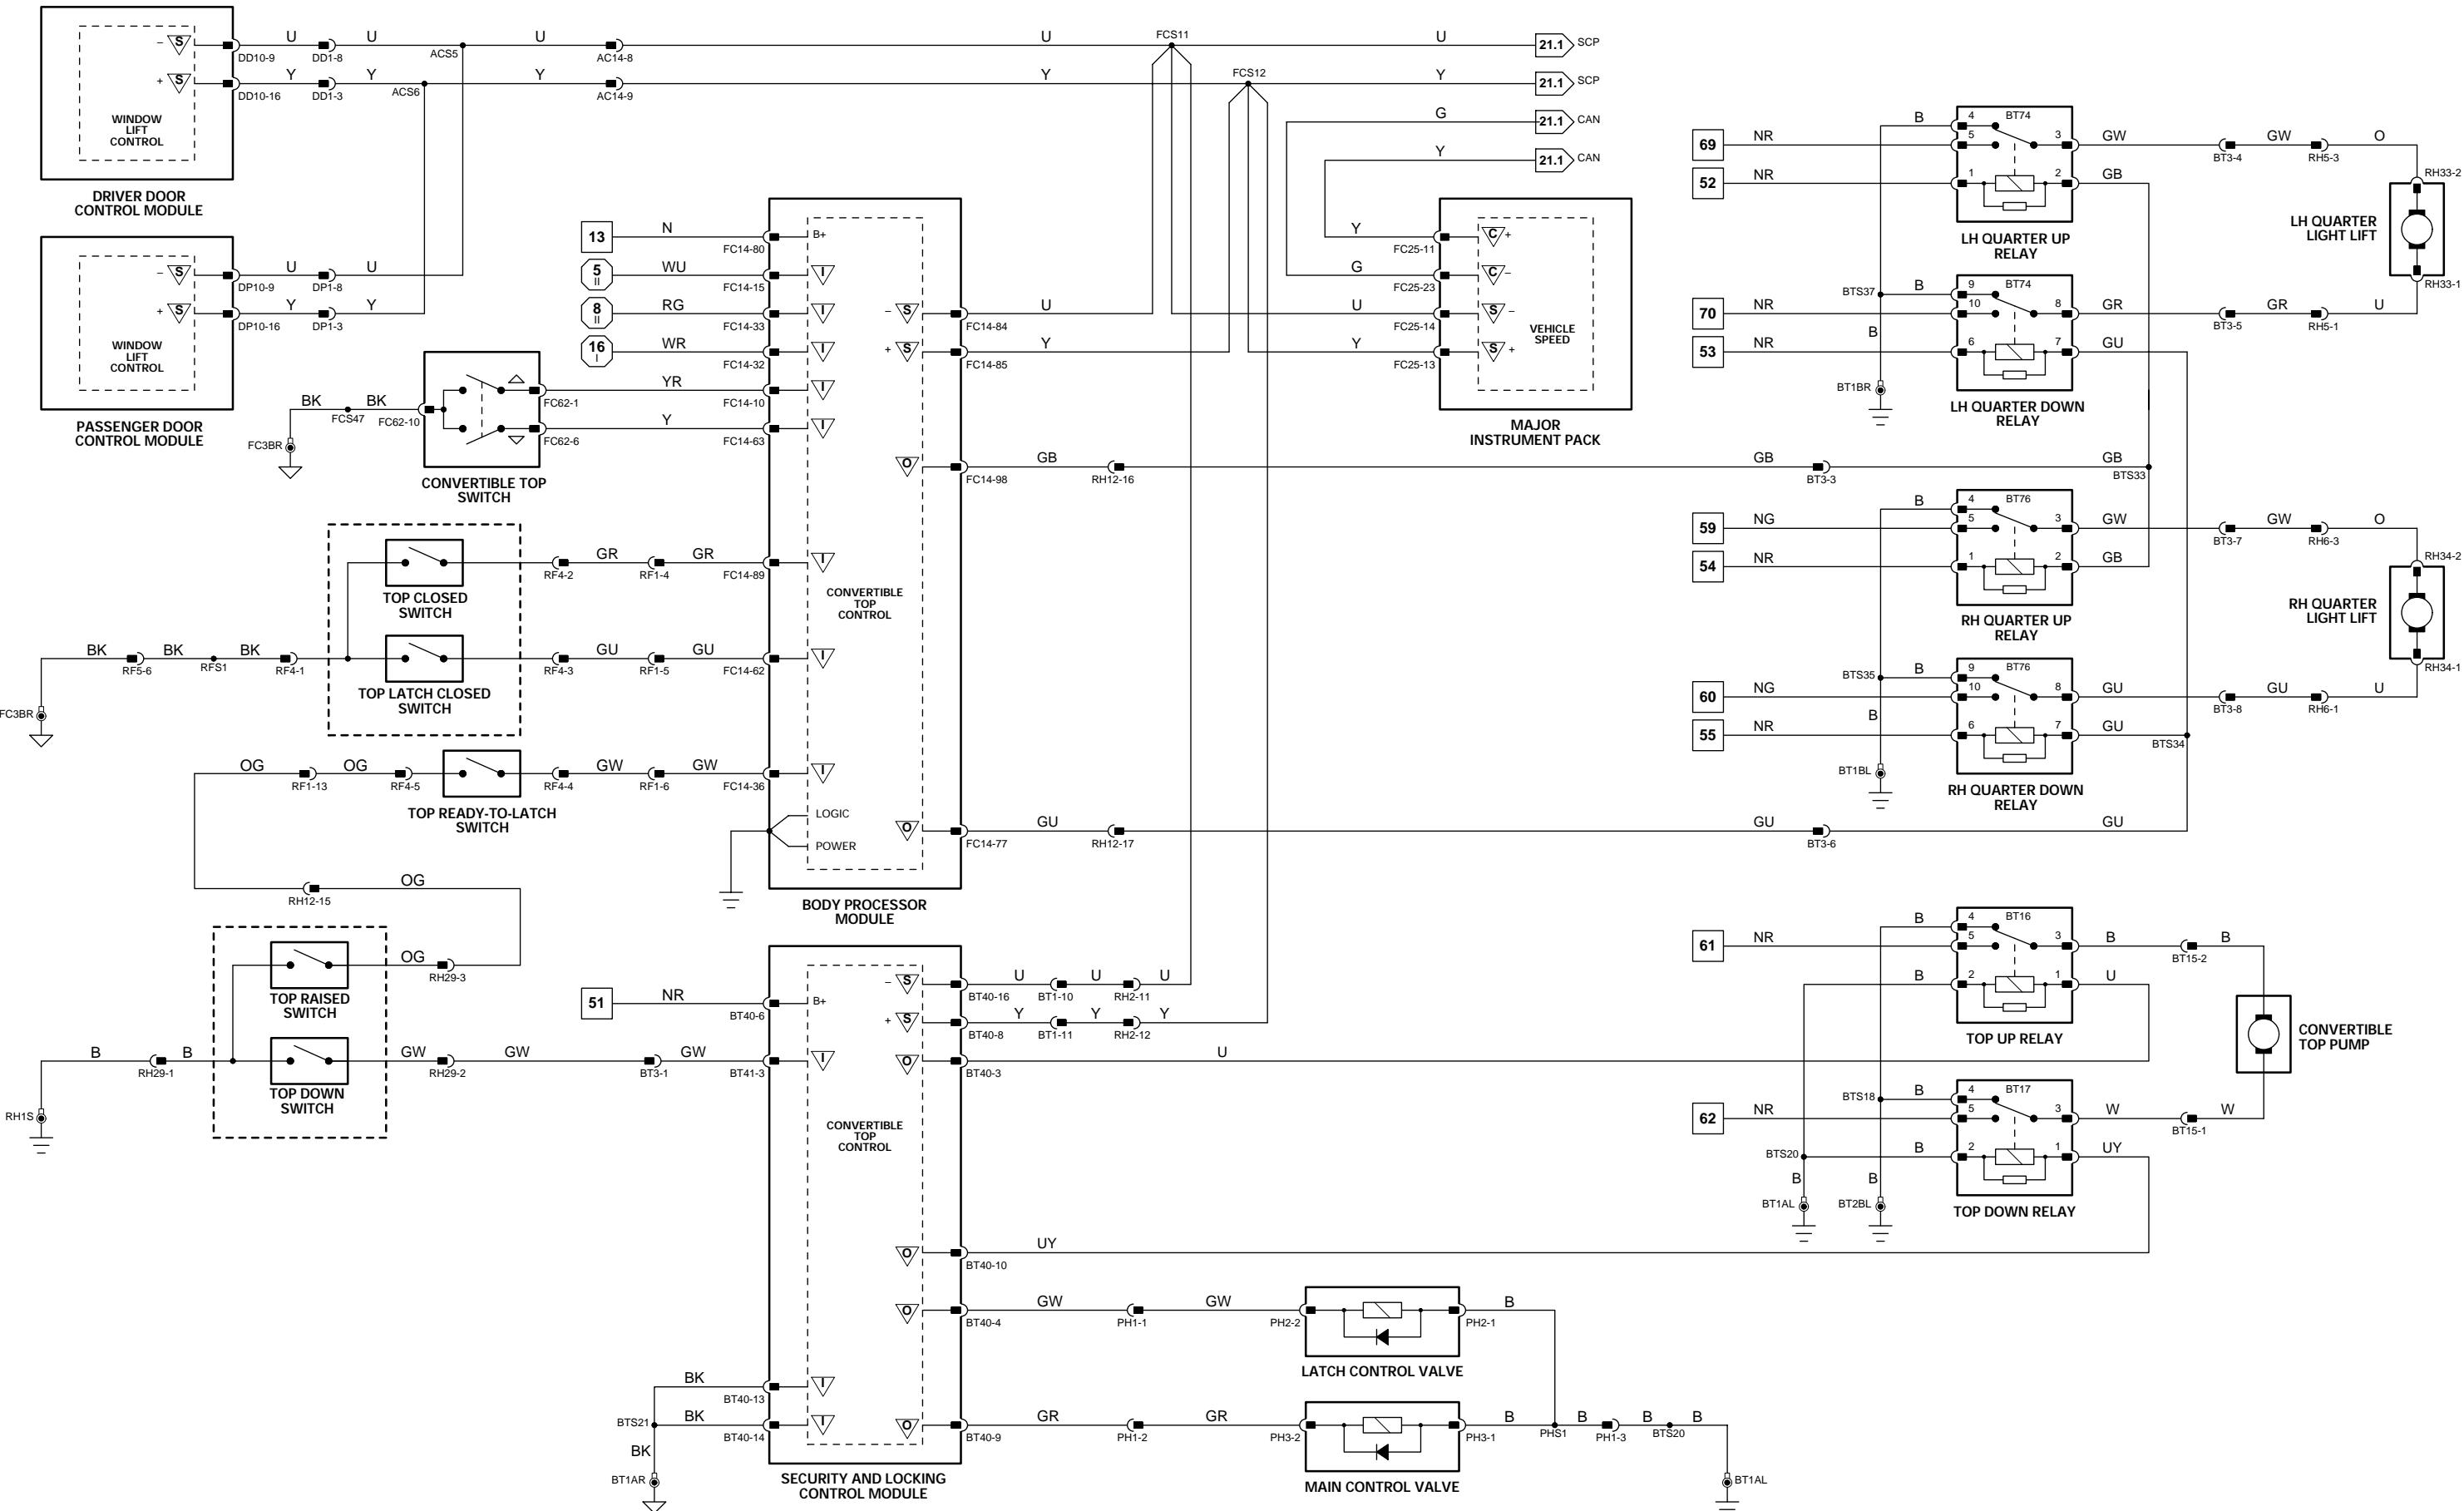

MAJOR INSTRUMENT PACK

Pin	Description	Active	Inactive
C	FC25-11	CAN NETWORK	
C	FC25-23	CAN NETWORK	
O	FC26-20	VEHICLE SPEED	22 Hz @ 10 MPH (16 KM/H); 44 Hz @ 20 MPH (32 KM/H) @ B+

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

Fig. 16.1

COMPONENTS

Component	Connector / Type / Color	Location / Access
ANTENNA MOTOR	BT19 / 6-WAY YAZAKI C.S.U. / WHITE	TRUNK / RIGHT HAND SIDE
CD AUTO-CHANGER	IC7 / 8-WAY ALPINE	TRUNK / RIGHT HAND SIDE
MAJOR INSTRUMENT PACK	FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW	FASCIA
RADIO / CASSETTE HEAD UNIT	IC8 / 8-WAY ALPINE / BLACK IC19 / 12-WAY MULTILOCK 070 / WHITE IC20 / 26-WAY MQS / YELLOW	CENTER CONSOLE
RADIO ANTENNA	IC12 / COAXIAL CONNECTOR	TRUNK / RIGHT HAND SIDE
RADIO CONTROL SWITCHES (STEERING WHEEL)	SW4 / 3-WAY EPC / BLACK	STEERING WHEEL
SPEAKER - DRIVER DOOR (MID-BASS)	DD19 / 2-WAY GROTE AND HARTMAN MDK / BLACK	DRIVER DOOR CASING
SPEAKER - PASSENGER DOOR (MID-BASS)	DP19 / 2-WAY GROTE AND HARTMAN MDK / BLACK	PASSENGER DOOR CASING
SPEAKER - LH SIDE FASCIA	FC38 / 2-WAY MULTILOCK 070 / GREY	FASCIA / LH SIDE
SPEAKER - RH SIDE FASCIA	FC39 / 2-WAY MULTILOCK 070 / GREY	FASCIA / RH SIDE
SPEAKER - LH SIDE REAR (CONVERTIBLE)	RH26 / 2-WAY GROTE AND HARTMAN MDK / BLACK	INTERIOR REAR QUARTER PANEL
SPEAKER - RH SIDE REAR (CONVERTIBLE)	RH27 / 2-WAY GROTE AND HARTMAN MDK / BLACK	INTERIOR REAR QUARTER PANEL
SPEAKER - LH SIDE REAR QUARTER (COUPE)	RH30 / 2-WAY GROTE AND HARTMAN MDK / BLACK	INTERIOR REAR QUARTER PANEL
SPEAKER - RH SIDE REAR QUARTER (COUPE)	RH31 / 2-WAY GROTE AND HARTMAN MDK / BLACK	INTERIOR REAR QUARTER PANEL

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC14	14-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
DD1	23-WAY AMP - FORD / BLACK	DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM
DP1	23-WAY AMP - FORD / BLACK	PASSENGER SIDE 'A' POST / 'A' POST TRIM
IC1	20-WAY MULTILOCK 070 / YELLOW	BELOW CENTER CONSOLE GLOVE BOX
IC2	14-WAY MULTILOCK 070 / WHITE	BELOW CENTER CONSOLE GLOVE BOX
RH1	20-WAY MULTILOCK 070 / GREY	BEHIND GLOVE BOX
SC2	10-WAY MULTILOCK 070 / YELLOW	ADJACENT TO STEERING COLUMN MOTOR
SC3	12-WAY MULTILOCK 070 / GREY	RIGHT HAND SIDE OF STEERING COLUMN
SW1	12-WAY MULTILOCK 040 / BLACK	INSIDE STEERING COLUMN COVL
SW2	6-WAY JST / WHITE	CENTER OF STEERING WHEEL

GROUNDS

Ground	Location / Type
BT1AL	EYELET (PAIR) - LEFT HAND LEG / ADJACENT TO BATTERY
CE2	EYELET (SINGLE) / ABOVE RIGHT HAND SIDE OF TRANSMISSION TUNNEL
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

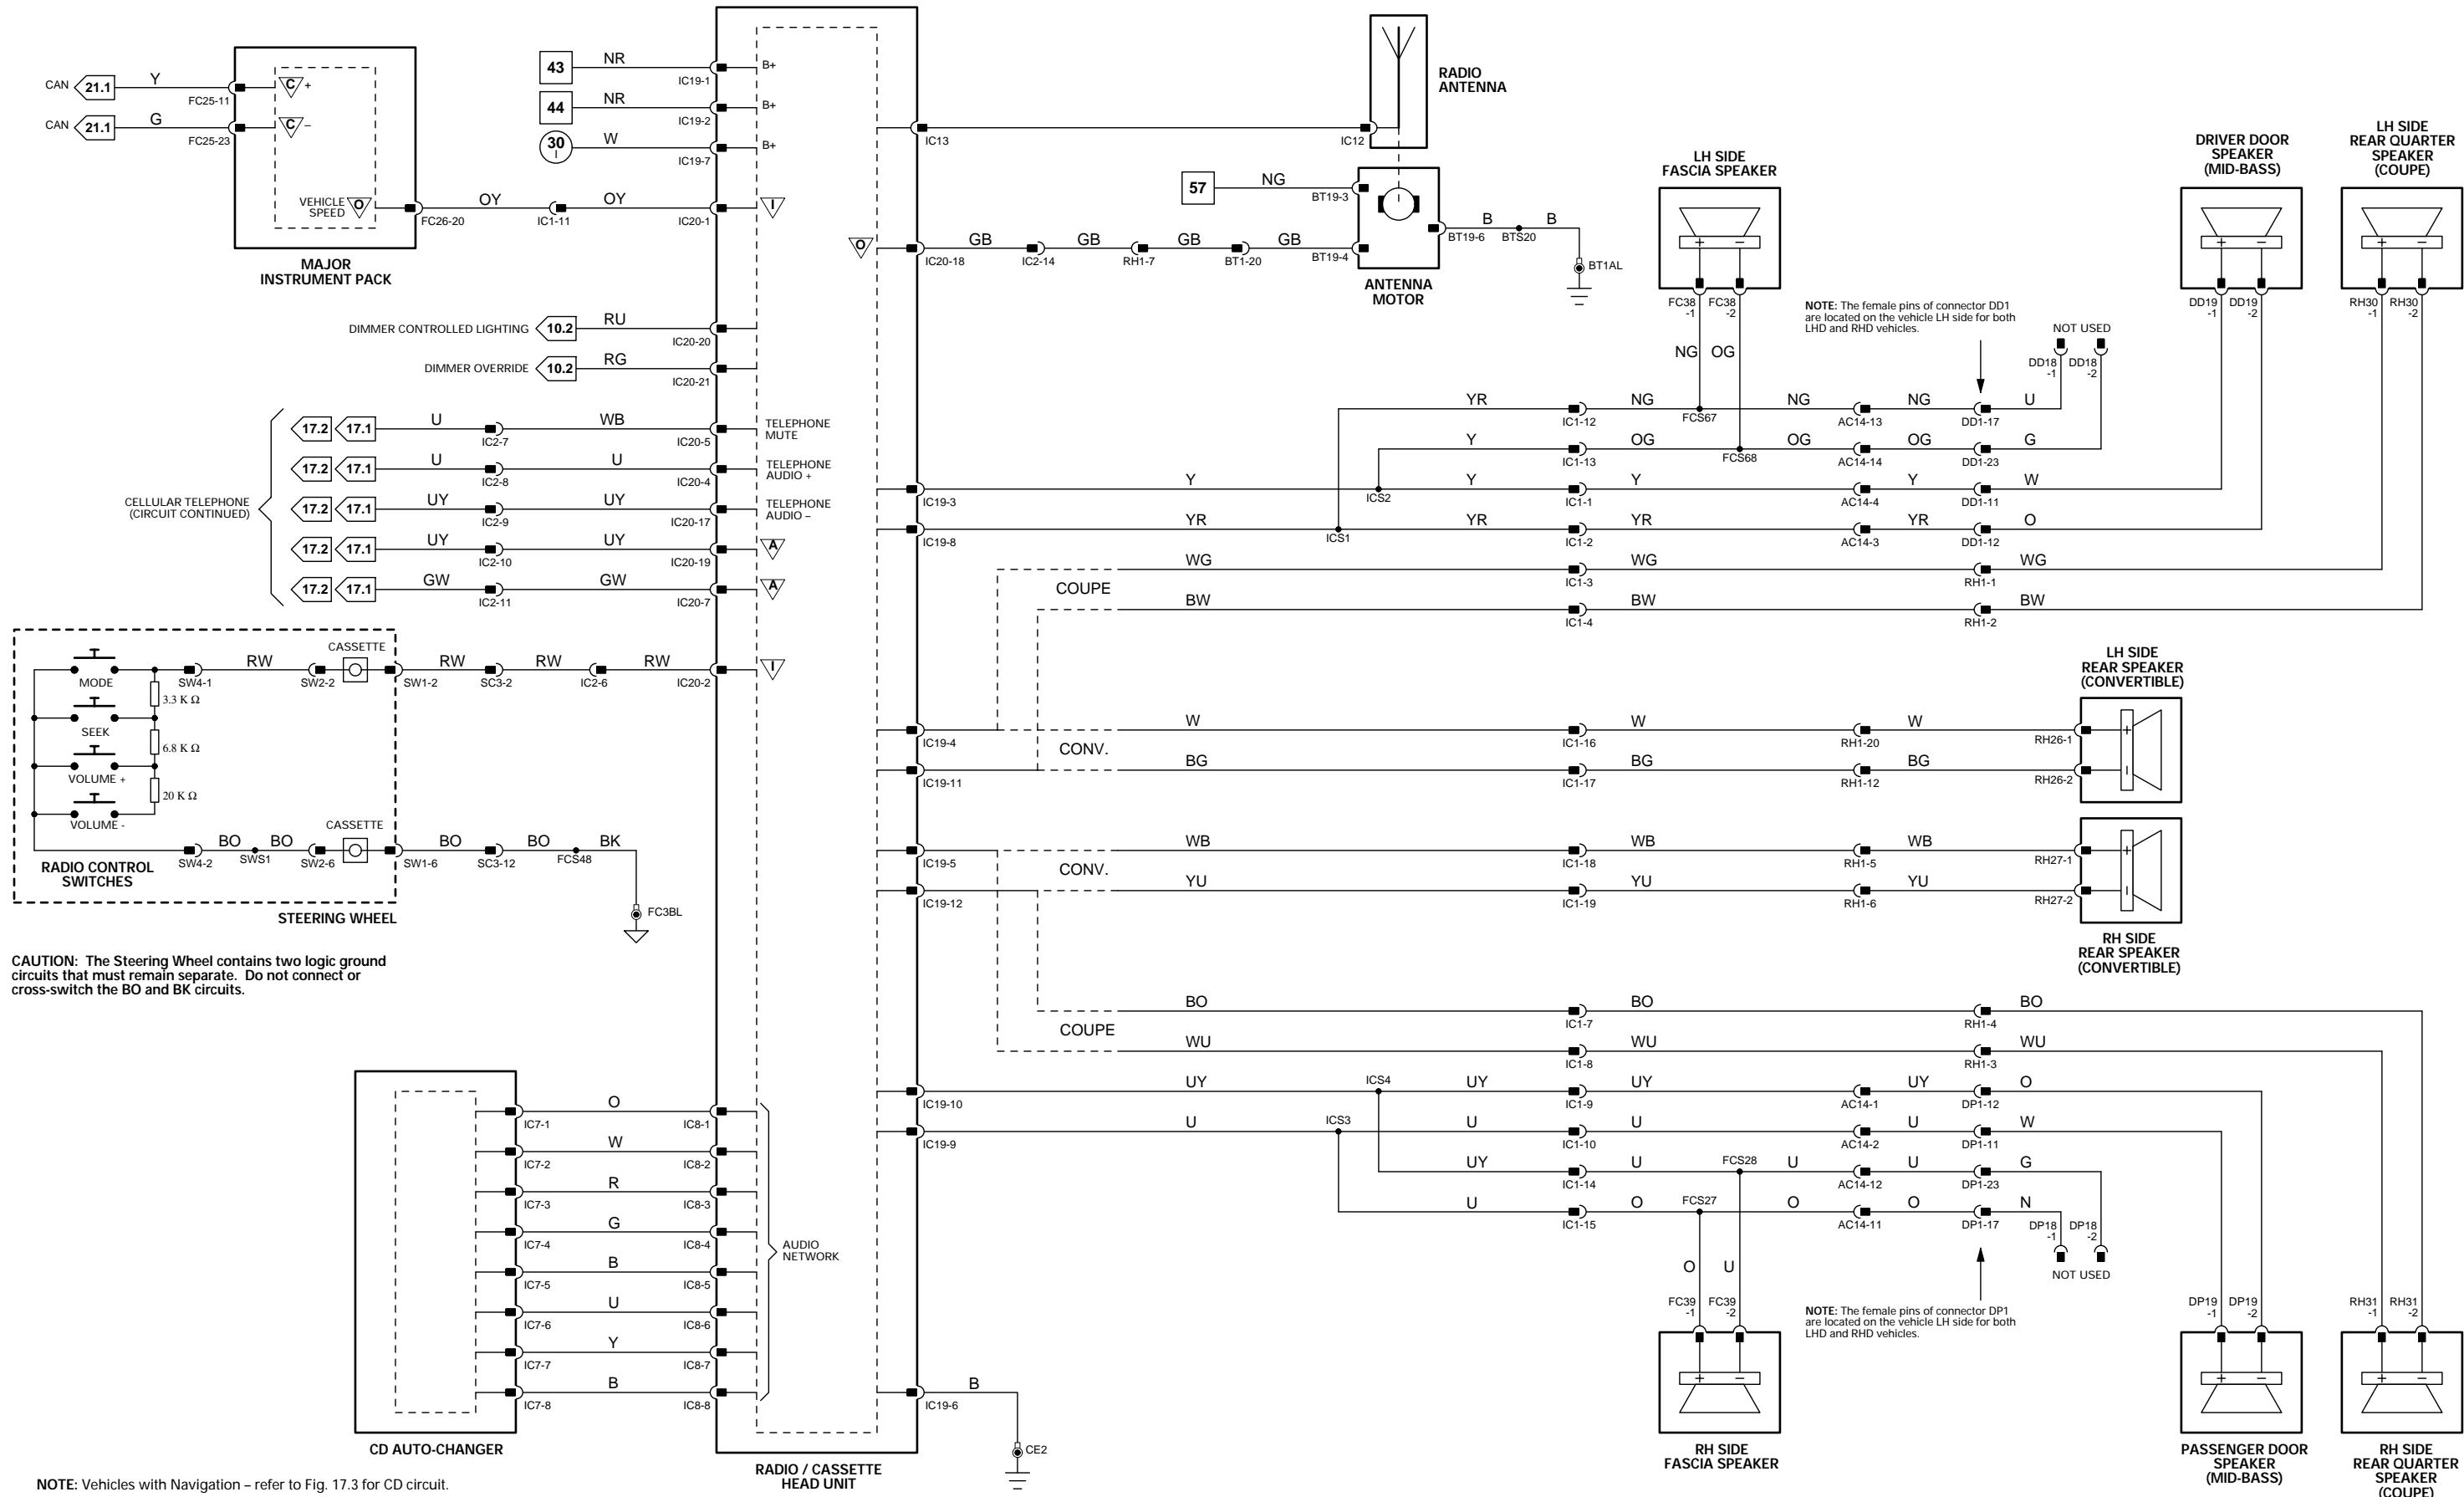


Fig. 16.2

MAJOR INSTRUMENT PACK

Pin	Description	Active	Inactive
C	FC25-11	CAN NETWORK	
C	FC25-11	CAN NETWORK	
O	FC25-11	VEHICLE SPEED	22 Hz @ 10 MPH (16 KM/H); 44 Hz @ 20 MPH (32 KM/H) @ B+

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.

COMPONENTS

Component	Connector / Type / Color	Location / Access
ANTENNA MOTOR	BT19 / 6-WAY YAZAKI C.S.U. / WHITE	TRUNK / RIGHT HAND SIDE
CD AUTO-CHANGER	IC7 / 8-WAY ALPINE	TRUNK / RIGHT HAND SIDE
MAJOR INSTRUMENT PACK	FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW	FASCIA
POWER AMPLIFIER	IC7 / 8-WAY ALPINE / BLACK IC15 / 18-WAY / MULTILOCK 070 / WHITE IC16 / 12-WAY MULTILOCK 070 / WHITE	TRUNK / RIGHT HAND SIDE
RADIO / CASSETTE HEAD UNIT	IC8 / 8-WAY ALPINE / BLACK IC19 / 12-WAY MULTILOCK 070 / WHITE IC20 / 26-WAY MQS / YELLOW	CENTER CONSOLE
RADIO ANTENNA	IC12 / COAXIAL CONNECTOR	TRUNK / RIGHT HAND SIDE
RADIO CONTROL SWITCHES (STEERING WHEEL)	SW4 / 3-WAY EPC / BLACK	STEERING WHEEL
SPEAKER - DRIVER DOOR (MID-BASS)	DD19 / 2-WAY GROTE AND HARTMAN MDK / BLACK	DRIVER DOOR CASING
SPEAKER - PASSENGER DOOR (MID-BASS)	DP19 / 2-WAY GROTE AND HARTMAN MDK / BLACK	PASSENGER DOOR CASING
SPEAKER - DRIVER DOOR (TWEETER)	DD18 / 2-WAY MULTILOCK 040 / BLACK	DRIVER DOOR
SPEAKER - PASSENGER DOOR (TWEETER)	DP18 / 2-WAY MULTILOCK 040 / BLACK	PASSENGER DOOR
SPEAKER - LH SIDE FASCIA	FC38 / 2-WAY MULTILOCK 070 / GREY	FASCIA / LH SIDE
SPEAKER - RH SIDE FASCIA	FC39 / 2-WAY MULTILOCK 070 / GREY	FASCIA / RH SIDE
SPEAKER - LH SIDE REAR (CONVERTIBLE)	RH26 / 2-WAY GROTE AND HARTMAN MDK / BLACK	INTERIOR REAR QUARTER PANEL
SPEAKER - RH SIDE REAR (CONVERTIBLE)	RH27 / 2-WAY GROTE AND HARTMAN MDK / BLACK	INTERIOR REAR QUARTER PANEL
SPEAKER - LH SIDE REAR QUARTER (COUPE)	RH30 / 2-WAY GROTE AND HARTMAN MDK / BLACK	INTERIOR REAR QUARTER PANEL
SPEAKER - RH SIDE REAR QUARTER (COUPE)	RH31 / 2-WAY GROTE AND HARTMAN MDK / BLACK	INTERIOR REAR QUARTER PANEL
SPEAKER - REAR (COUPE)	RH26 / 2-WAY GROTE AND HARTMAN MDK / BLACK RH27 / 2-WAY GROTE AND HARTMAN MDK / BLACK	PARCEL SHELF

HARNESS-TO-HARNESS CONNECTORS

Connector	Type / Color	Location / Access
AC14	14-WAY MULTILOCK 070 / GREY	FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
BT1	20-WAY MULTILOCK 070 / WHITE	TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
DD1	23-WAY AMP - FORD / BLACK	DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM
DP1	23-WAY AMP - FORD / BLACK	PASSENGER SIDE 'A' POST / 'A' POST TRIM
IC1	20-WAY MULTILOCK 070 / YELLOW	BELOW CENTER CONSOLE GLOVE BOX
IC2	14-WAY MULTILOCK 070 / WHITE	BELOW CENTER CONSOLE GLOVE BOX
IC4	4-WAY MULTILOCK 070 / WHITE	TRUNK / LEFT OF ANTENNA ASSEMBLY
RH1	20-WAY MULTILOCK 070 / GREY	BEHIND GLOVE BOX
SC3	12-WAY MULTILOCK 070 / GREY	RIGHT HAND SIDE OF STEERING COLUMN
SW1	12-WAY MULTILOCK 040 / BLACK	INSIDE STEERING COLUMN COWL
SW2	6-WAY JST / WHITE	CENTER OF STEERING WHEEL

GROUNDS

Ground	Location / Type
BT1AL	EYELET (PAIR) - LEFT HAND LEG / ADJACENT TO BATTERY
BT1AR	EYELET (PAIR) - RIGHT HAND LEG / ADJACENT TO BATTERY
BT1CS	EYELET (SINGLE) / ADJACENT TO BATTERY
CE2	EYELET (SINGLE) / ABOVE RIGHT HAND SIDE OF TRANSMISSION TUNNEL
FC3BL	EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	KHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

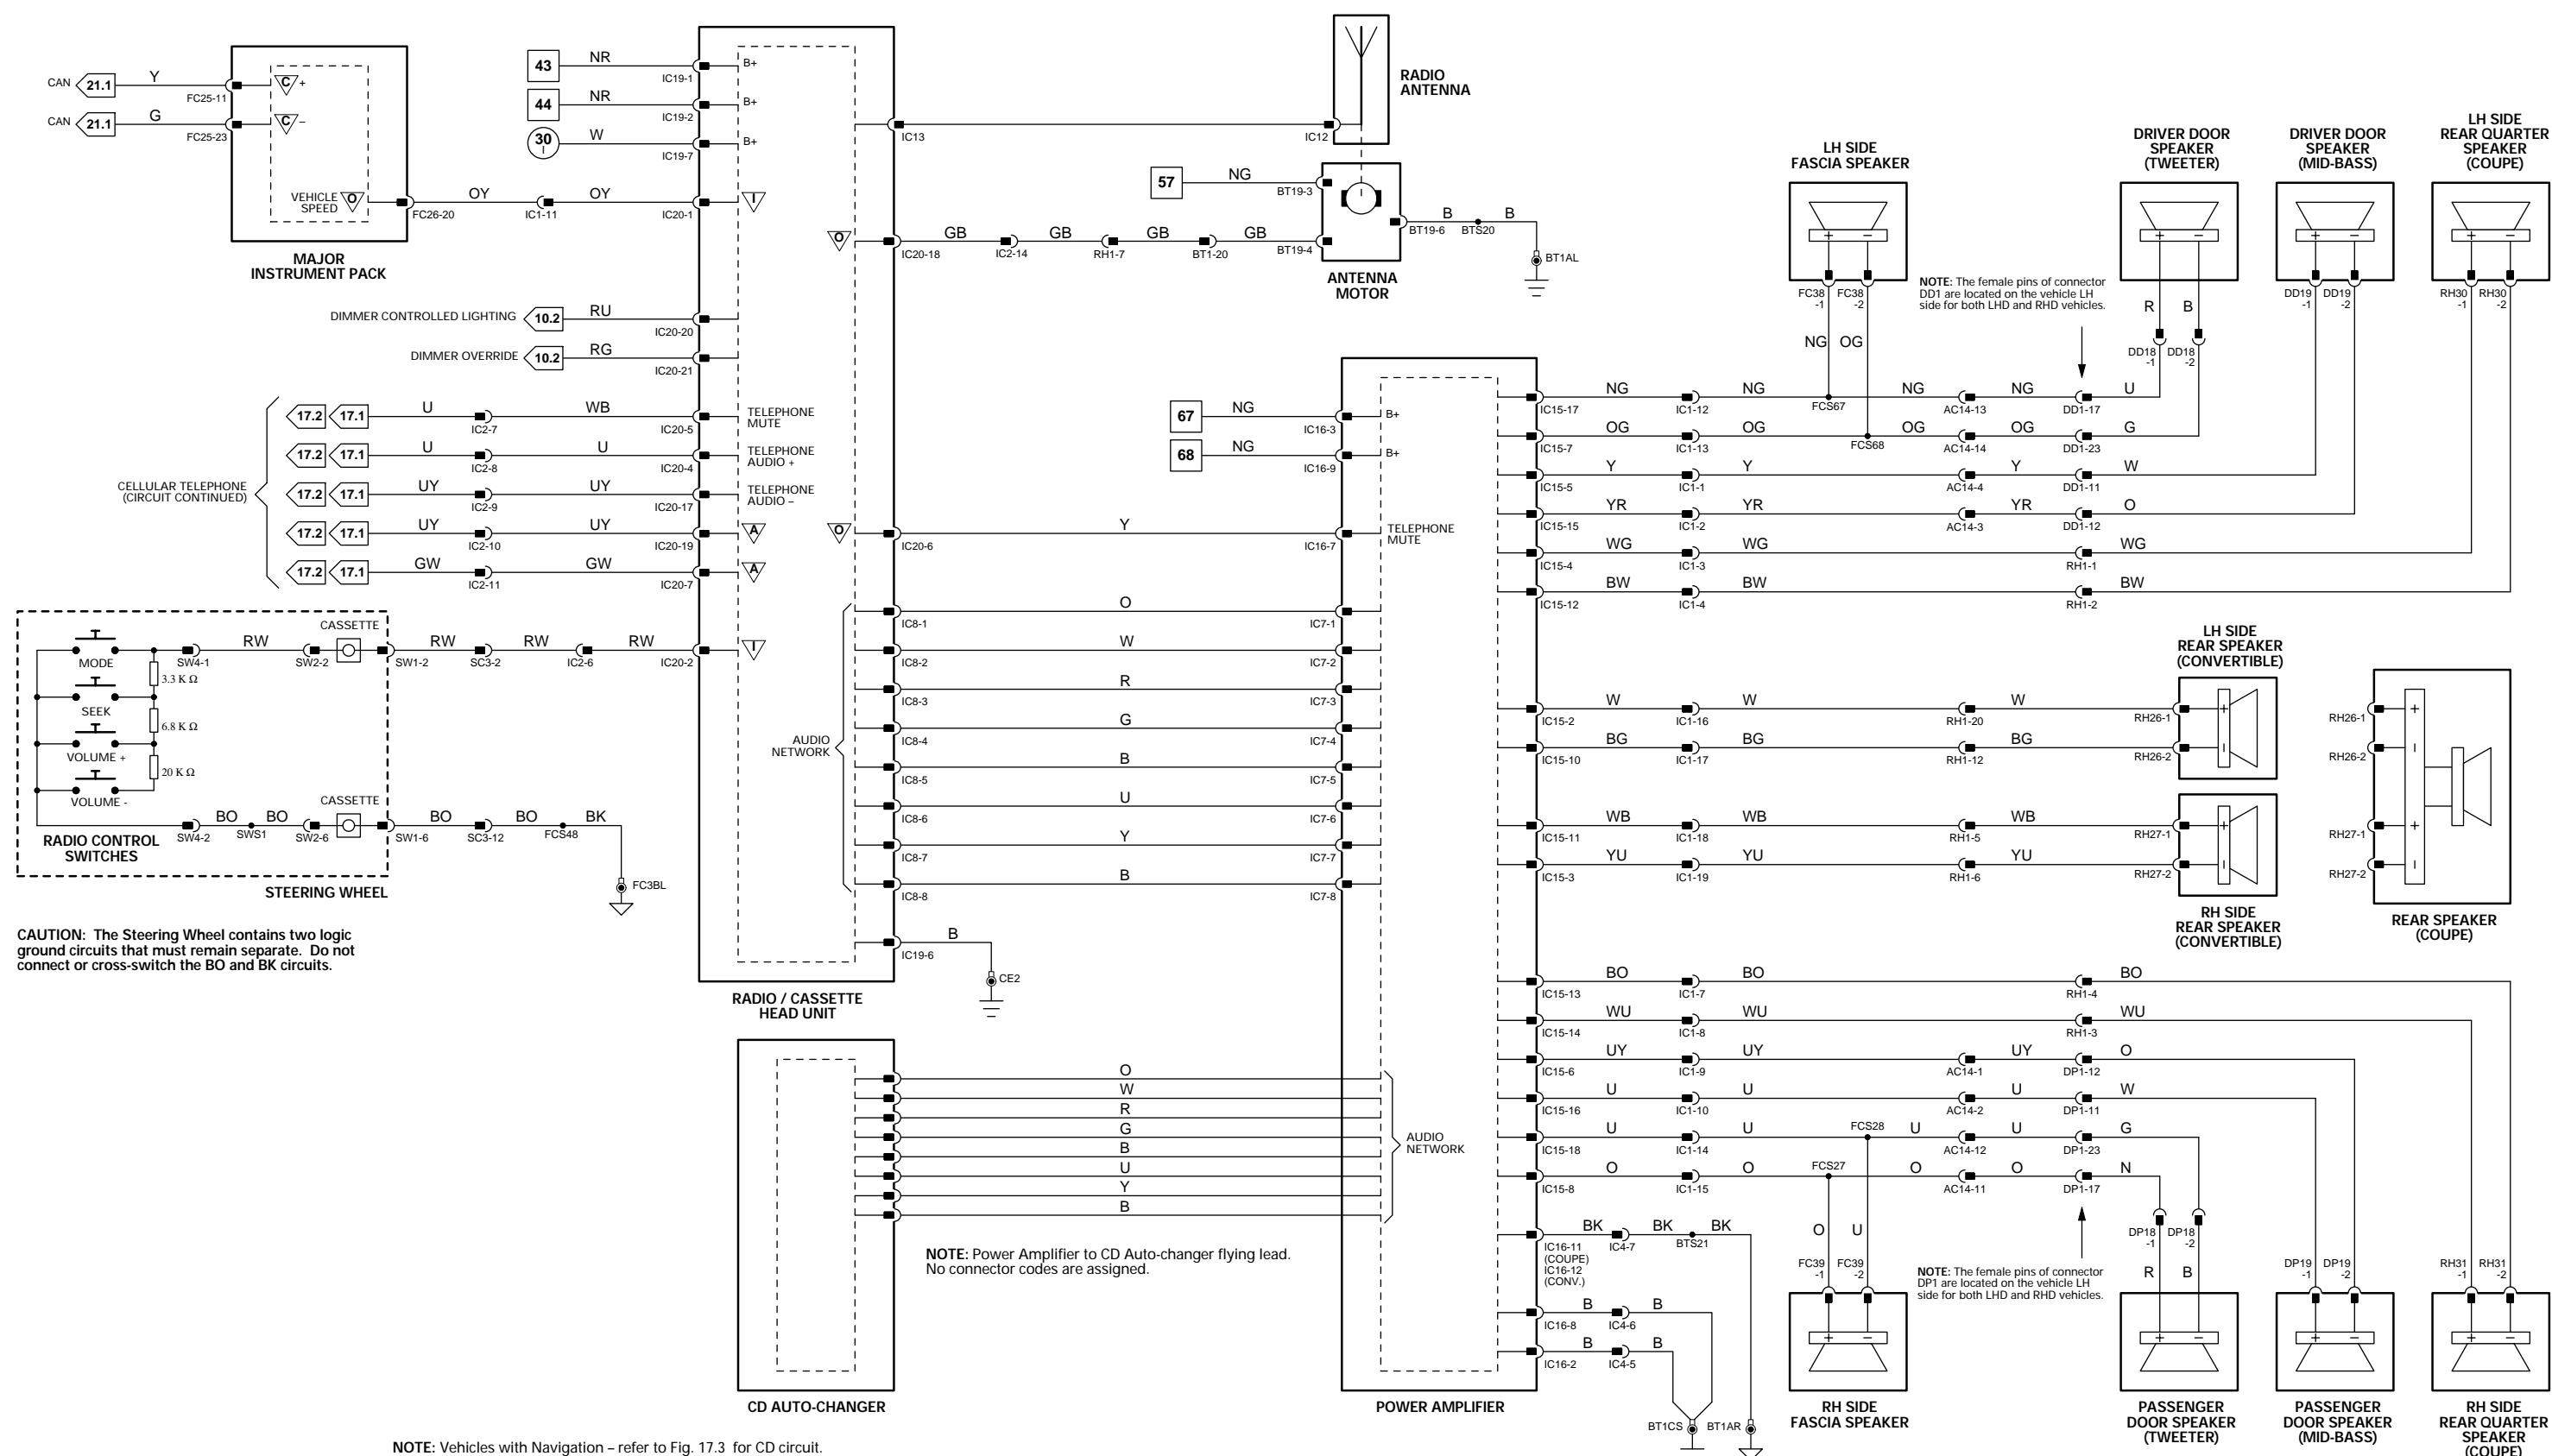


Fig. 17.1

COMPONENTS

Component

CELLULAR PHONE CONTROL MODULE (PORTABLE PHONE)
HANDSET
MICROPHONE
TELEPHONE ANTENNA

Connector / Type / Color

RT2 / 12-WAY MULTILOCK 42 / BLACK
RT5 / 16-WAY MULTILOCK 42 / BLACK
RT4 / TELEPHONE / PROPRIETARY
RF9 / 2-WAY MULTILOCK 040 / BLUE
RT7 / 2-WAY HIROSE COAX GT SERIES

Location / Access

BEHIND REAR SEAT
CENTER CONSOLE
ROOF CONSOLE
TRUNK / ABOVE LH WHEEL ARCH

HARNESS-TO-HARNESS CONNECTORS

Connector

IC2
RF1
RT1
RT3
RT6
RT8
RT11

Type / Color

14-WAY MULTILOCK 070 / WHITE
24-WAY CONNECTOR / BLACK
14-WAY MULTILOCK 070 / YELLOW
10-WAY CONNECTOR / GREY
2-WAY HIROSE COAX GT SERIES / GREY
2-WAY HIROSE COAX GT SERIES / GREY
10-WAY CONNECTOR / BLACK

Location / Access

BELOW CENTER CONSOLE GLOVE BOX
RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
BELOW CENTER CONSOLE
BELOW CENTER CONSOLE
BELOW CENTER CONSOLE
BEHIND REAR SEAT
CENTER CONSOLE GLOVE BOX

GROUNDS

Ground

FC2CS
FC4CS

Location / Type

EYELET (SINGLE) / RIGHT HAND 'A' POST
EYELET (SINGLE) / LEFT HAND 'A' POST

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

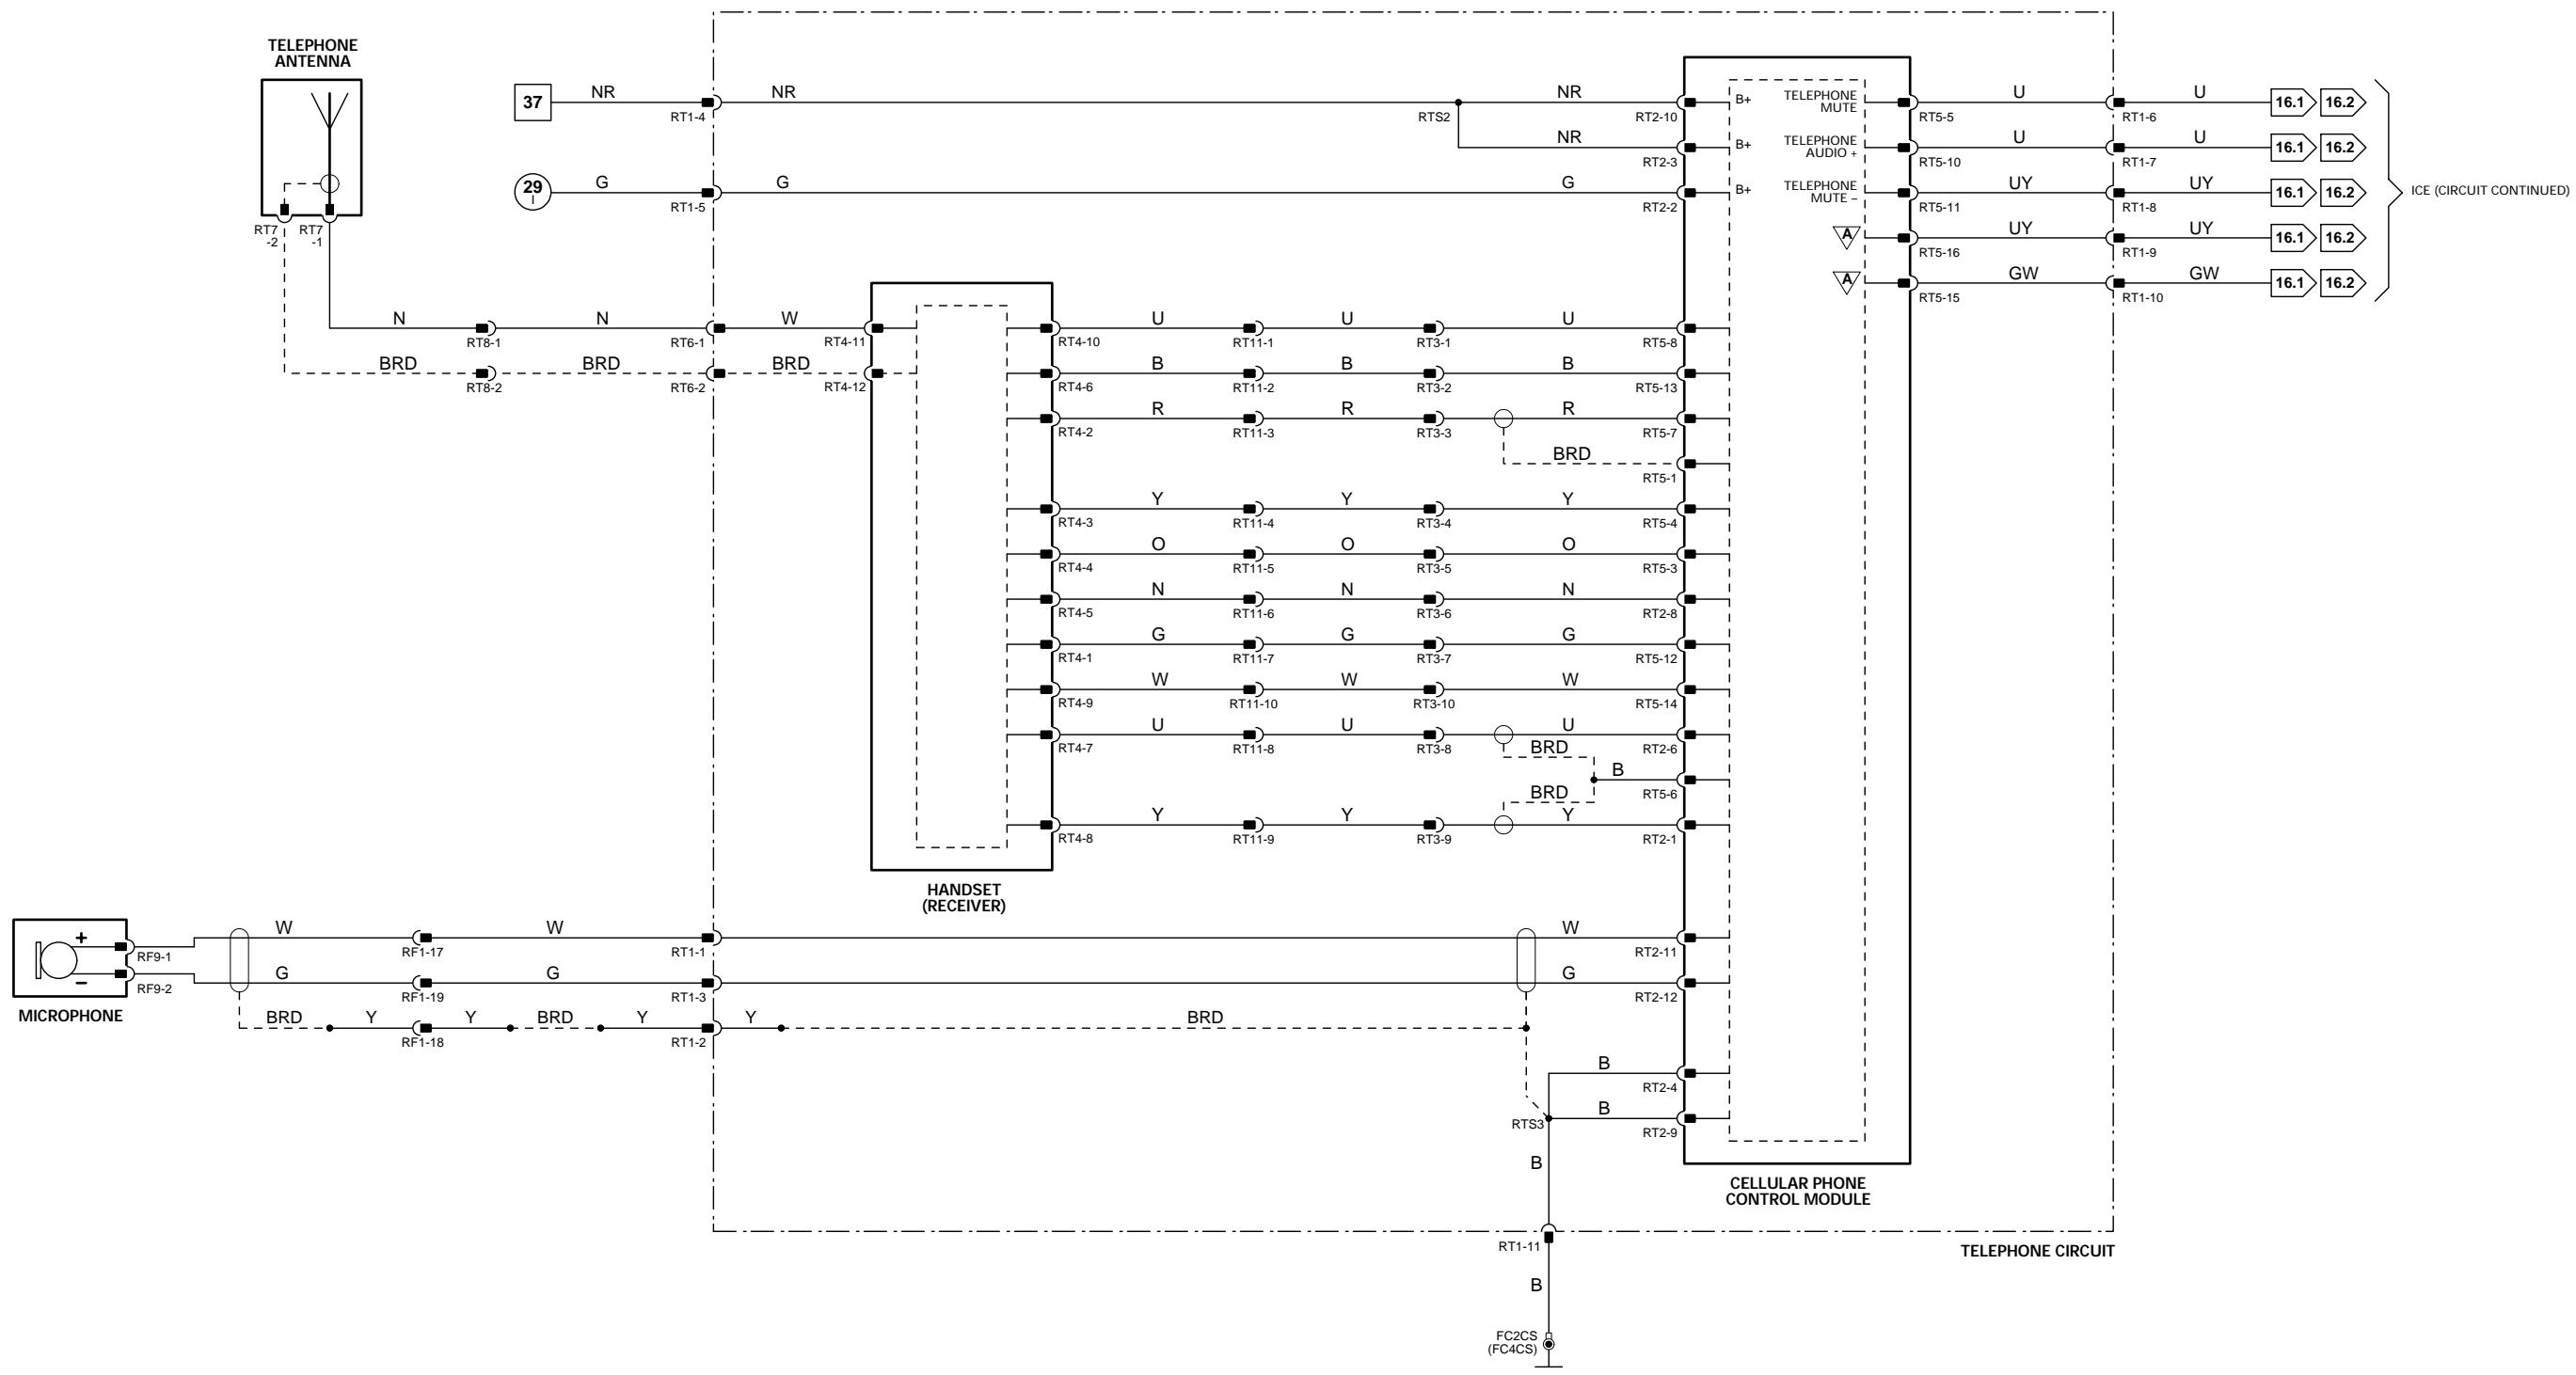


Fig. 17.2

COMPONENTS

Component

CELLULAR PHONE CONTROL MODULE (FIXED PHONE)
HANDSET
MICROPHONE
TELEPHONE ANTENNA

Connector / Type / Color

RT9 / 32-WAY CONNECTOR / BLUE
RT11 / 10-WAY CONNECTOR / BLACK
RF9 / 2-WAY MULTILOCK 040 / BLUE
RT7 / COAXIAL

Location / Access

BEHIND REAR SEAT
CENTER CONSOLE GLOVE BOX
ROOF CONSOLE
TRUNK / RIGHT HAND SIDE

HARNESS-TO-HARNESS CONNECTORS

Connector

IC2
RF1
RT1
RT3
RT6
RT8

Type / Color

14-WAY MULTILOCK 070 / WHITE
24-WAY CONNECTOR / BLACK
14-WAY MULTILOCK 070 / YELLOW
10-WAY CONNECTOR / GREY
2-WAY HIROSE COAX GT SERIES / GREY
2-WAY HIROSE COAX GT SERIES / GREY

Location / Access

BELOW CENTER CONSOLE GLOVE BOX
RIGHT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
BELOW CENTER CONSOLE
BELOW CENTER CONSOLE
BELOW CENTER CONSOLE
BEHIND REAR SEAT

GROUNDS

Ground

FC2CS
FC4CS

Location / Type

EYELET (SINGLE) / RIGHT HAND 'A' POST
EYELET (SINGLE) / LEFT HAND 'A' POST

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

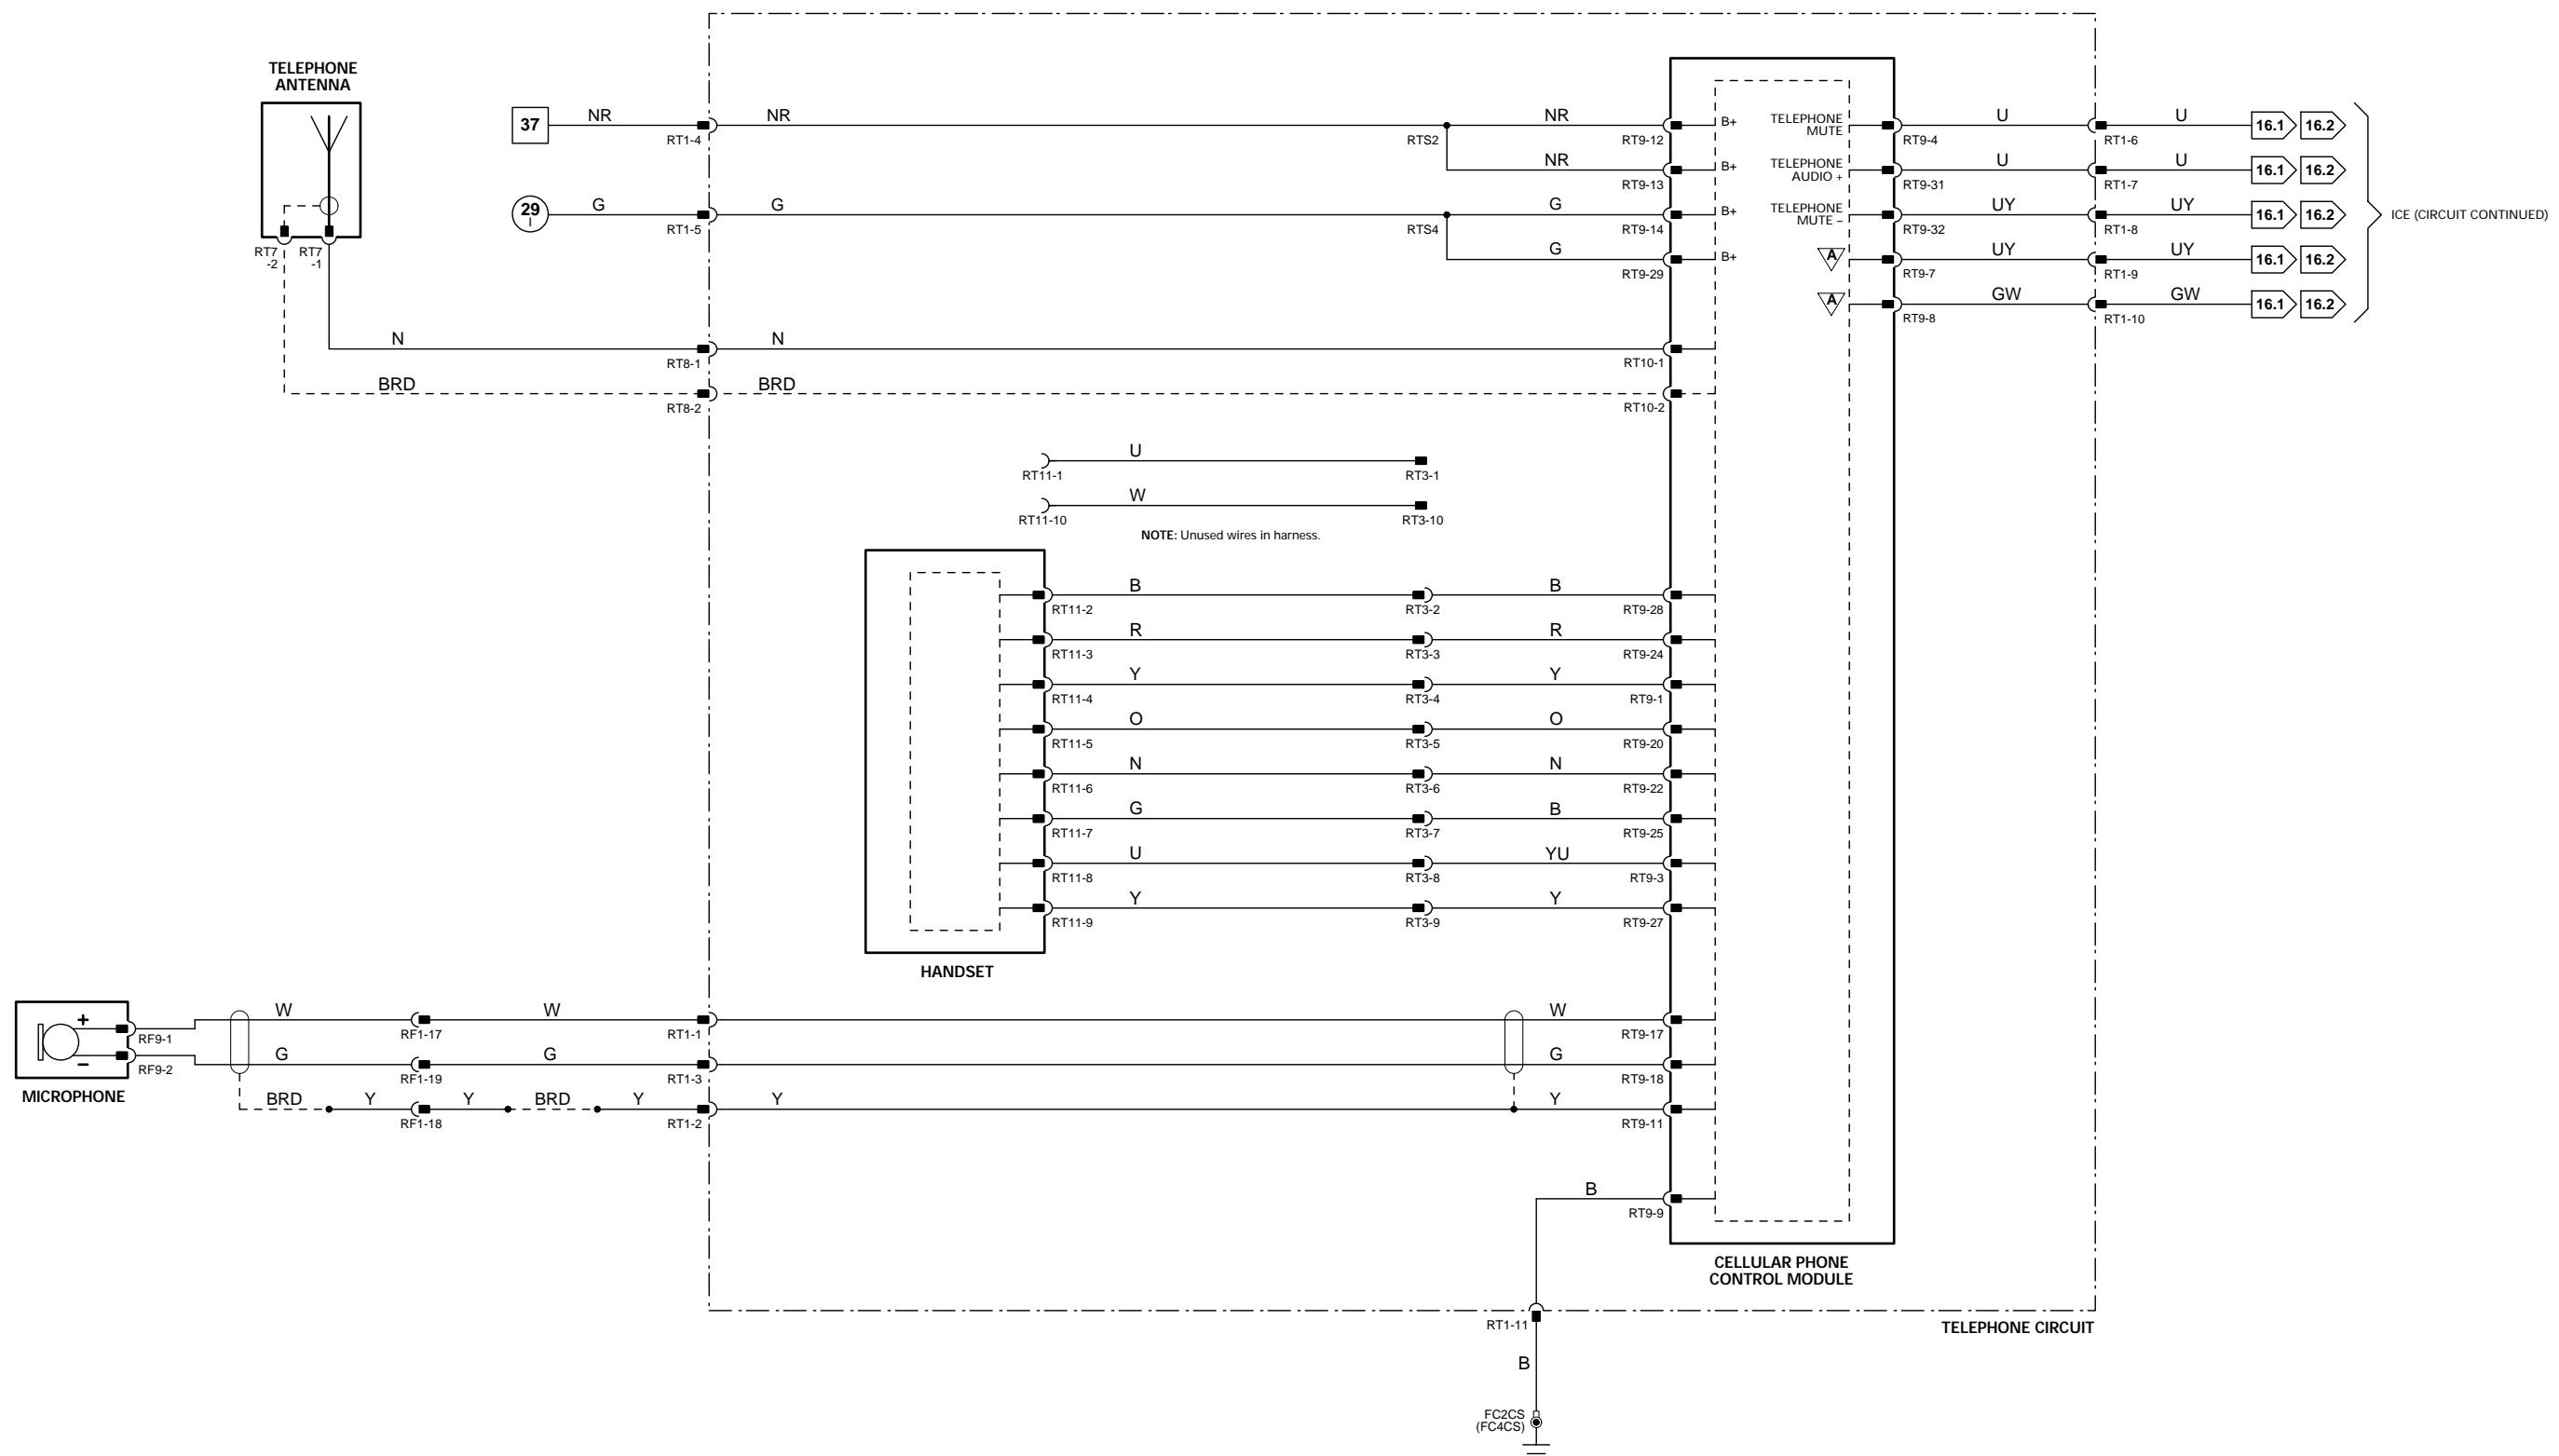


Fig. 17.3

COMPONENTS

Component

CD AUTO-CHANGER
NAVIGATION CONTROL MODULE

NAVIGATION DISPLAY

NAVIGATION GPS ANTENNA
POWER AMPLIFIER

RADIO / CASSETTE HEAD UNIT

Connector / Type / Color

IC7 / 8-WAY ALPINE
IC7 / 8-WAY ALPINE / BLACK
IC22 / 16-WAY AMP ML42 / BLACK
IC23 / 24-WAY AMP ML42 / BLACK
FC97 / 12-WAY AMP ML42 / BLACK
FC98 / 16-WAY AMP ML42 / BLACK
IC5 / 2-WAY HIROSE COAX GT5 SERIES / GREY
IC7 / 8-WAY ALPINE / BLACK
IC15 / 18-WAY / MULTILOCK 070 / WHITE
IC16 / 12-WAY MULTILOCK 070 / WHITE
IC8 / 8-WAY ALPINE / BLACK
IC19 / 12-WAY MULTILOCK 070 / WHITE
IC20 / 26-WAY MQS / YELLOW

Location / Access

TRUNK / RIGHT HAND SIDE
TRUNK / RIGHT HAND SIDE
BEHIND NAVIGATION DISPLAY
BELOW PARCEL SHELF
TRUNK / RIGHT HAND SIDE
CENTER CONSOLE

HARNESS-TO-HARNESS CONNECTORS

Connector

IC1
IC2
IC3
IC4

Type / Color

20-WAY MULTILOCK 070 / YELLOW
14-WAY MULTILOCK 070 / WHITE
14-WAY MULTILOCK 070 / GREY
4-WAY MULTILOCK 070 / WHITE

Location / Access

BELOW CENTER CONSOLE GLOVE BOX
BELOW CENTER CONSOLE GLOVE BOX
BELOW CENTER CONSOLE GLOVE BOX
TRUNK / LEFT OF ANTENNA ASSEMBLY

GROUNDS

Ground

BT2AR
EM1AL
EM2AL
FC3BL

Location / Type

EYELET (PAIR) - RIGHT HAND LEG / TRUNK, RIGHT REAR
EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE
EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE
EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

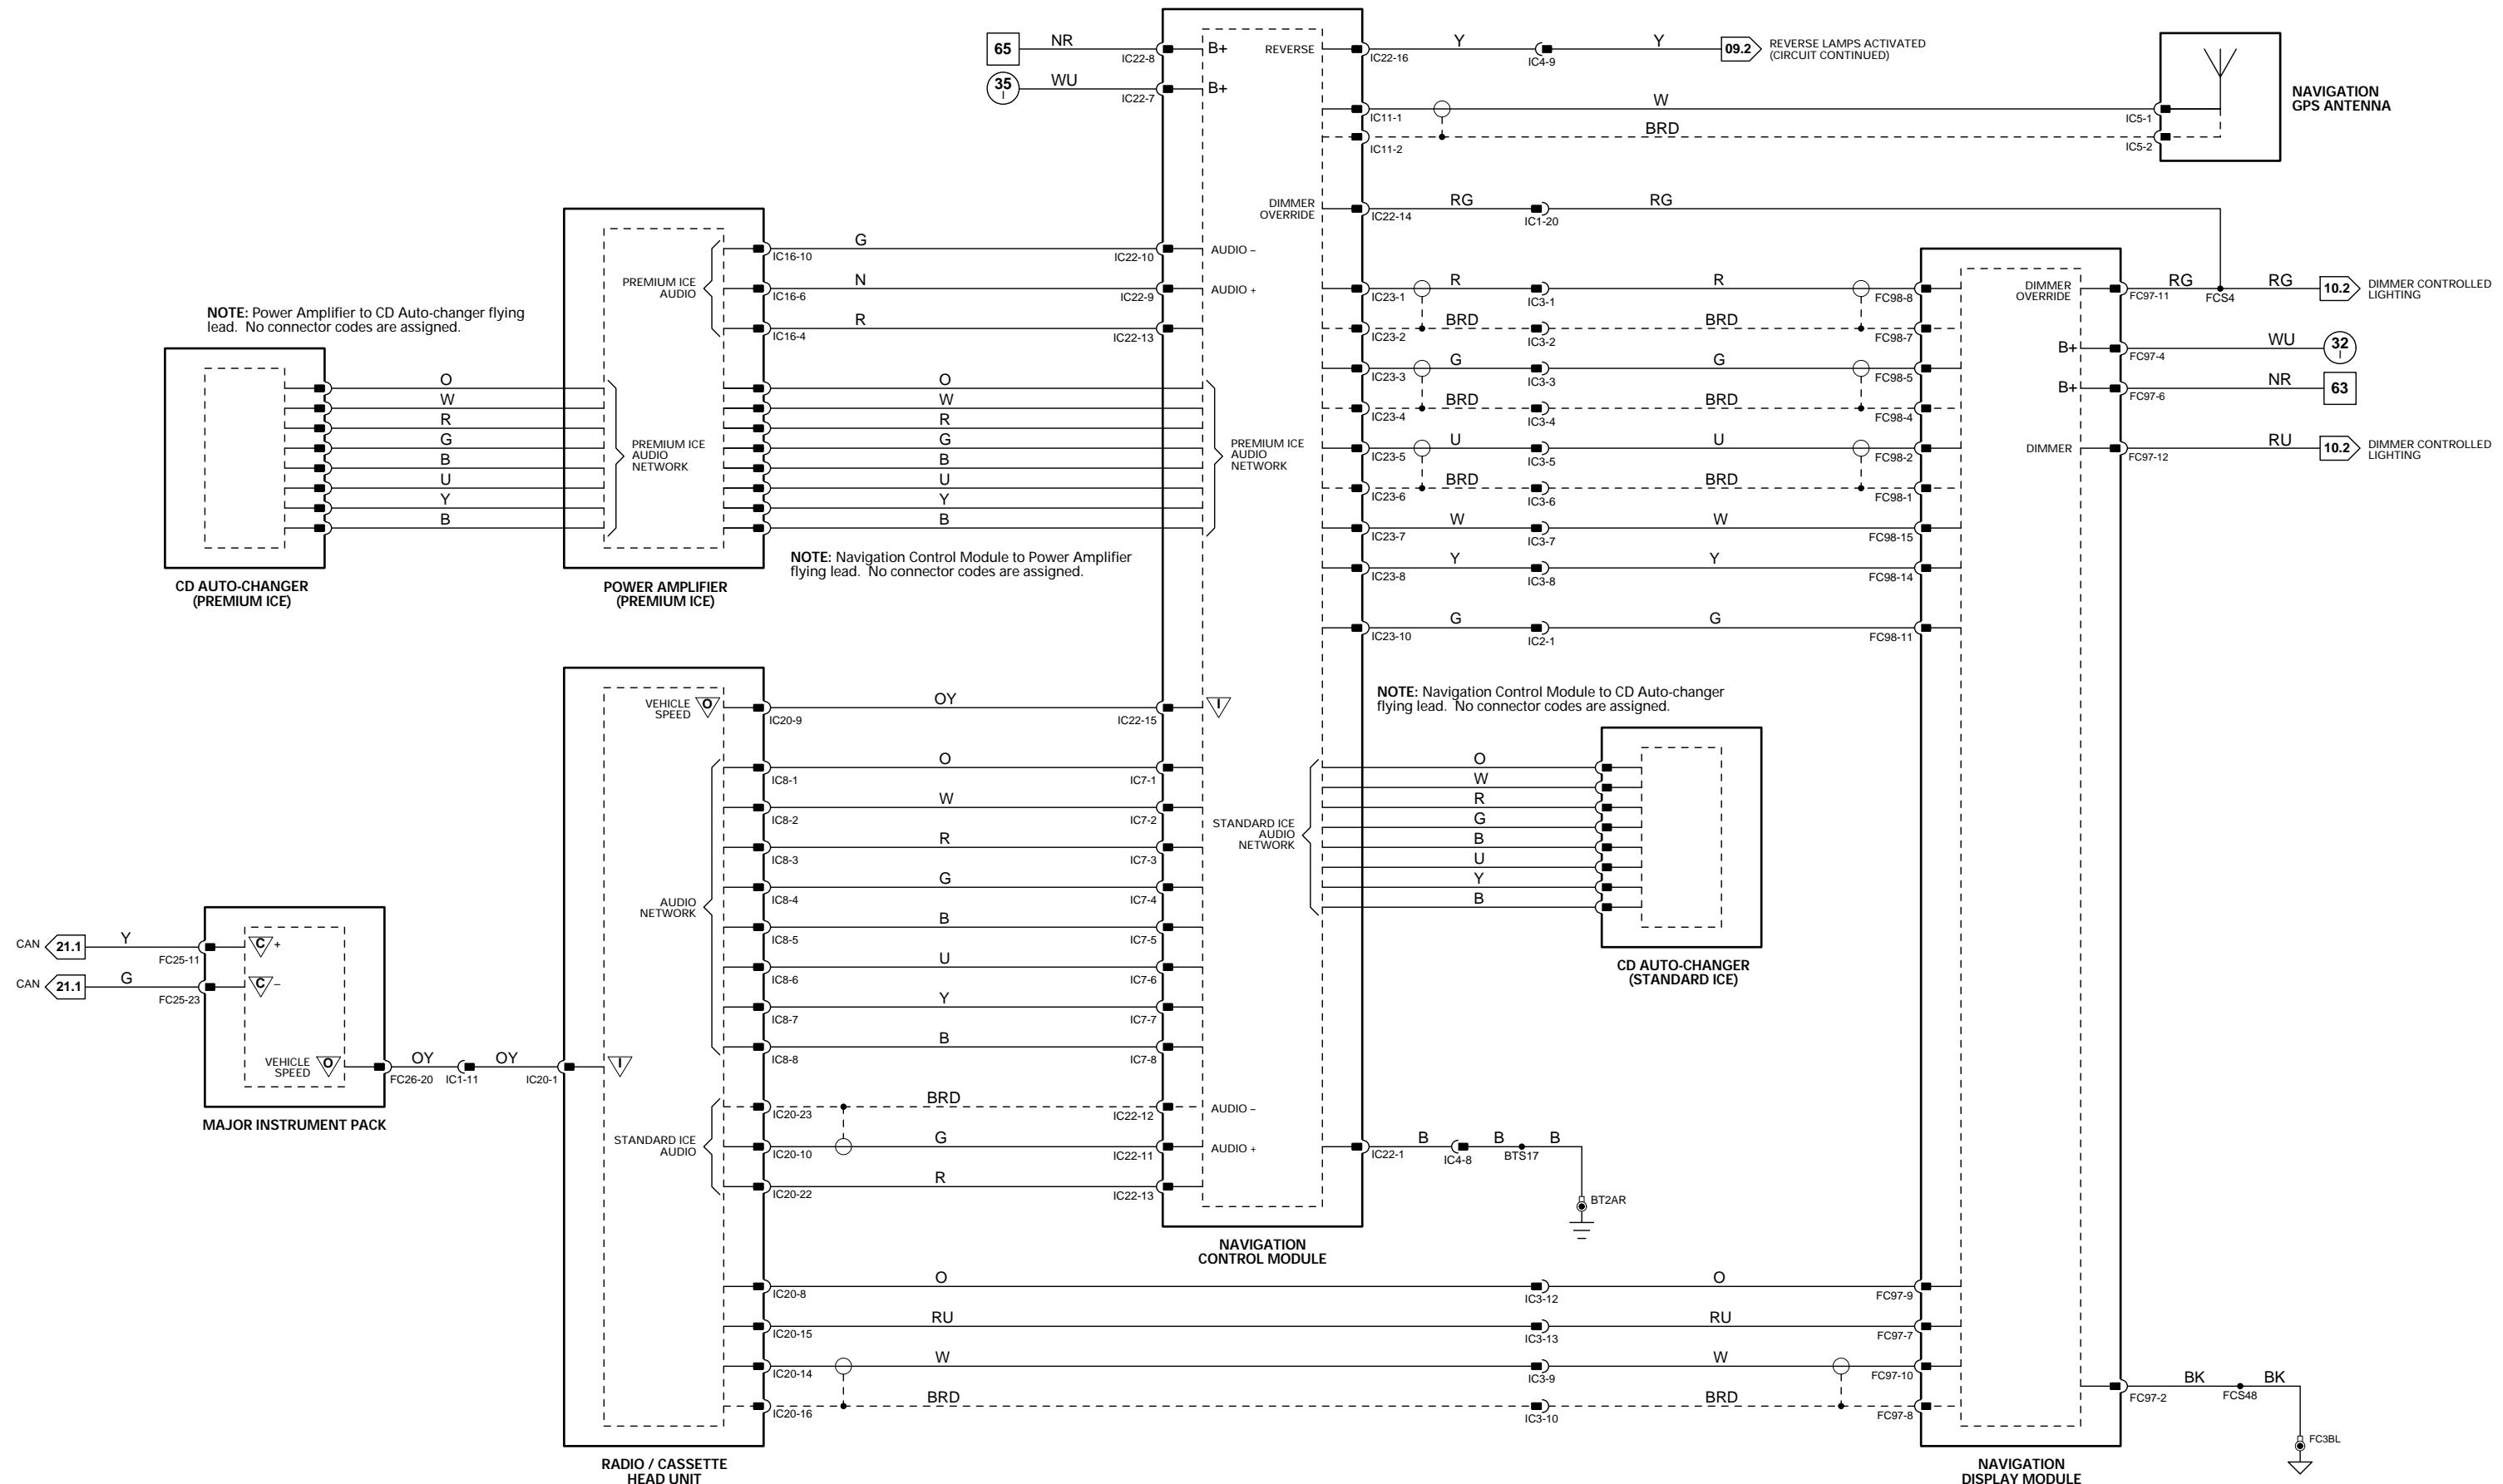


Fig. 17.4

COMPONENTS

Component

NAVIGATION CONTROL MODULE

Connector / Type / Color

IC7 / 8-WAY ALPINE / BLACK

Location / Access

TRUNK / RIGHT HAND SIDE

NAVIGATION DISPLAY

IC22 / 16-WAY AMP ML42 / BLACK

BEHIND NAVIGATION DISPLAY

NAVIGATION GPS ANTENNA

IC23 / 24-WAY AMP ML42 / BLACK

PARKING BRAKE SWITCH

FC97 / 12-WAY AMP ML42 / BLACK

POWER AMPLIFIER

FC98 / 16-WAY AMP ML42 / BLACK

RADIO / CASSETTE HEAD UNIT

IC5 / 2-WAY HIROSE COAX GT5 SERIES / GREY

BELOW PARCEL SHELF

TELEVISION ANTENNA

FC19 / 1-WAY LUCAR POSILOCK / BLACK

TELEVISION ANTENNA

IC7 / 8-WAY ALPINE / BLACK

BELOW PARKING BRAKE LEVER

TELEVISION ANTENNA

IC15 / 18-WAY / MULTILOCK 070 / WHITE

TRUNK / RIGHT HAND SIDE

TELEVISION ANTENNA

IC16 / 12-WAY MULTILOCK 070 / WHITE

TELEVISION ANTENNA

IC8 / 8-WAY ALPINE / BLACK

CENTER CONSOLE

TELEVISION ANTENNA

IC19 / 12-WAY MULTILOCK 070 / WHITE

TELEVISION ANTENNA

IC20 / 26-WAY MQS / YELLOW

TELEVISION ANTENNA

TV4 / 1-WAY ANTENNA / BLACK

REAR WINDOW

TELEVISION ANTENNA

TV34 / 1-WAY ANTENNA / METALLIC

REAR WINDOW

TELEVISION ANTENNA

TV3 / 1-WAY ANTENNA / BLACK

REAR WINDOW

TELEVISION ANTENNA

TV35 / 1-WAY ANTENNA / METALLIC

REAR WINDOW

TELEVISION ANTENNA

TV15 / 3-WAY ANTENNAE INPUT / GREY

ABOVE LH REAR INNER WHEEL ARCH

TELEVISION ANTENNA

TV18 / 3-WAY ANTENNAE INPUT / GREY

ABOVE LH REAR INNER WHEEL ARCH

TELEVISION ANTENNA

TV5 / 2-WAY 3.5 MM JACK PLUG / BLACK

ON TRUNK FUSE BOX HOUSING

TELEVISION ANTENNA

TV6 / 2-WAY 3.5 MM JACK PLUG / BLACK

SPARE WHEEL WELL

TELEVISION ANTENNA

TV7 / 2-WAY 3.5 MM JACK PLUG / BLACK

SPARE WHEEL WELL

TELEVISION ANTENNA

TV8 / 8-WAY AMP ML42 MULTILOCK / BLACK

SPARE WHEEL WELL

TELEVISION ANTENNA

TV10 / 8-WAY DIN / BLACK

SPARE WHEEL WELL

TELEVISION ANTENNA

IR1 / 2-WAY HIROSE COAX GT5 SERIES / GREY

BELOW CENTER CONSOLE GLOVE BOX

TELEVISION ANTENNA

TV12 / 4-WAY DIN / BLACK

SPARE WHEEL WELL

TELEVISION ANTENNA

TV14 / 8-WAY DIN / BLACK

SPARE WHEEL WELL

HARNESS-TO-HARNESS CONNECTORS

Connector

Type / Color

Location / Access

IC1 20-WAY MULTILOCK 070 / YELLOW

BELOW CENTER CONSOLE GLOVE BOX

IC2 14-WAY MULTILOCK 070 / WHITE

BELOW CENTER CONSOLE GLOVE BOX

IC3 14-WAY MULTILOCK 070 / GREY

BELOW CENTER CONSOLE GLOVE BOX

IC4 4-WAY MULTILOCK 070 / WHITE

TRUNK / LEFT OF ANTENNA ASSEMBLY

GROUNDS

Ground

Location / Type

BT2AR

EYELET (PAIR) - RIGHT HAND LEG / TRUNK, RIGHT REAR

EM1AL

EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, RIGHT HAND ENCLOSURE

EM2AL

EYELET (PAIR) - LEFT HAND LEG / ENGINE COMPARTMENT, LEFT HAND ENCLOSURE

FC3BL

EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

TV36

EYELET (SINGLE) / BELOW PARCEL SHELF


TV38

EYELET (SINGLE) / ADJACENT TO BATTERY

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.



Fig. 17.4

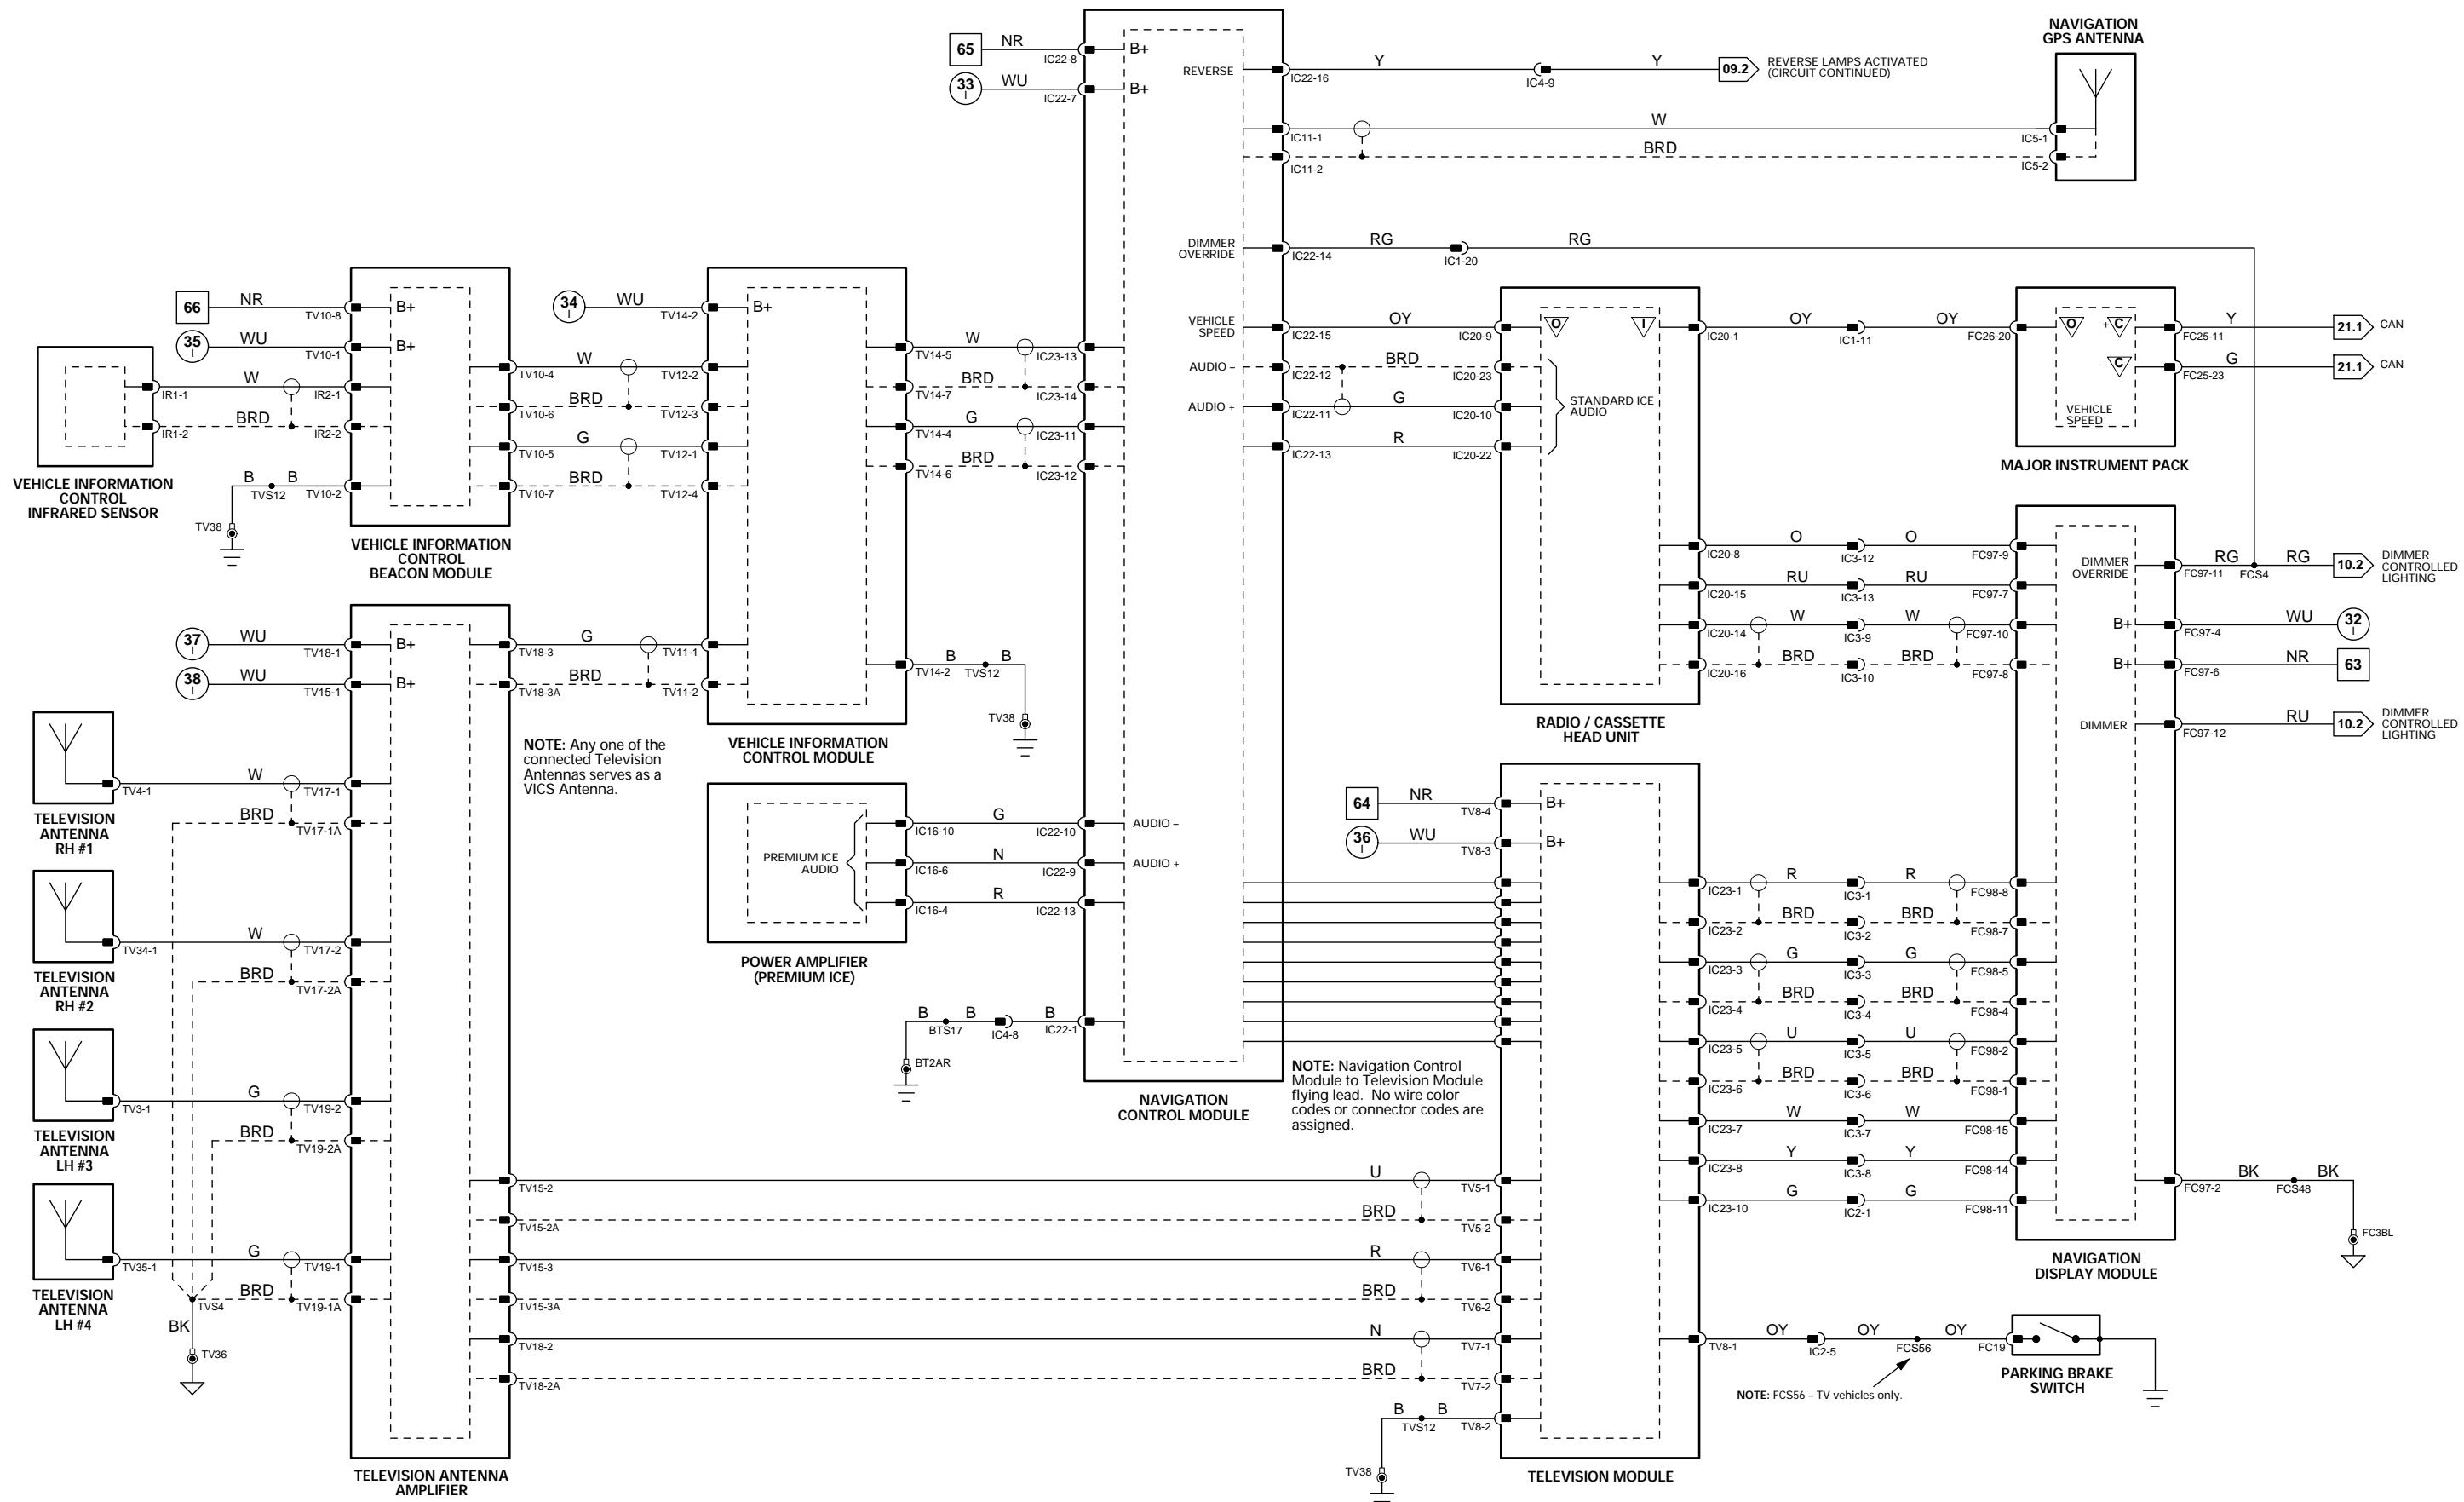

NOTE: Refer to Fig. 17.3 for Navigation vehicles CD Auto-changer circuits.

Fig. 18.1

COMPONENTS

Component

CRASH SENSOR – FRONT
CRASH SENSOR – SIDE, LH
CRASH SENSOR – SIDE, RH
DRIVER SEAT BELT SWITCH
DRIVER SEAT TRACK SWITCH
IGNITOR – LH SEAT BELT PRETENSIONER
IGNITOR – PASSENGER AIRBAG / 1
IGNITOR – PASSENGER AIRBAG / 2
IGNITOR – RH SEAT BELT PRETENSIONER
IGNITOR – SIDE AIRBAG, DRIVER
IGNITOR – SIDE AIRBAG, PASSENGER
IGNITORS – DRIVER AIRBAG

OCCUPANCY SENSING MODULE
OCCUPANCY SENSOR – CONSOLE
OCCUPANCY SENSOR – LH 'A' POST (RHD)
OCCUPANCY SENSOR – LH 'B' POST (RHD)
OCCUPANCY SENSOR – RH 'A' POST (LHD)
OCCUPANCY SENSOR – RH 'B' POST (LHD)
PASSENGER AIRBAG DEACTIVATED INDICATOR LAMP
PASSENGER SEAT BELT SWITCH
PASSENGER SEAT WEIGHT PRESSURE SENSOR
PASSENGER SEAT WEIGHT SENSING MODULE
RESTRAINTS CONTROL MODULE

LF50 / 2-WAY CONNECTOR / BLACK
RH15 / 2-WAY CONNECTOR / BLACK
RH16 / 2-WAY CONNECTOR / BLACK
SD20 / 6-WAY MULTILOCK 040 / WHITE
SD21 / 2-WAY CONNECTOR / BLACK
PT2 / 2-WAY FORD AIRBAG / YELLOW
FC75 / 2-WAY CONNECTOR / BLACK
FC76 / 2-WAY CONNECTOR / BLACK
PT3 / 2-WAY FORD AIRBAG / YELLOW
SD15 / 2-WAY CONNECTOR / BROWN
SP15 / 2-WAY CONNECTOR / BROWN
SW12 / 2-WAY CONNECTOR / GREY
SW13 / 2-WAY CONNECTOR / BLACK
FC10 / 26-WAY AMP MQL / YELLOW
RZ2 / 4-WAY MULTILOCK 070 / WHITE
RZ3 / 4-WAY CONNECTOR / BLACK
RH10 / 4-WAY MULTILOCK 070 / WHITE
RF3 / 4-WAY CONNECTOR / BLACK
RH11 / 4-WAY MULTILOCK 070 / WHITE
FC15 / 3-WAY CONNECTOR / BLACK
SP20 / 6-WAY MULTILOCK 040 / WHITE
SP18 / 3-WAY CONNECTOR / BLACK
SP21 / 2-WAY METRI-PACK 150 / BLACK
FC8 / 24-WAY CONNECTOR / BLACK
FC9 / 40-WAY CONNECTOR / BLACK

Location / Access

FORWARD OF RADIATOR
BEHIND SAFETY BELT RETRACTOR / REAR QUARTER TRIM PANEL
BEHIND SAFETY BELT RETRACTOR / REAR QUARTER TRIM PANEL
BELOW SEAT CUSHION
BELOW SEAT CUSHION
BEHIND LH REAR QUARTER TRIM PANEL
SIDE OF AIRBAG ASSEMBLY
SIDE OF AIRBAG ASSEMBLY
BEHIND LH REAR QUARTER TRIM PANEL
SEAT BACK
SEAT BACK
CENTER OF STEERING WHEEL
CENTER OF STEERING WHEEL
'A' POST / RH SIDE OF FASCIA
BEHIND ROOF CONSOLE
UPPER LH 'A' POST / 'A' POST TRIM
'B' POST (COUPE); REAR QUARTER (CONV.) / TRIM
UPPER RH 'A' POST / 'A' POST TRIM
'B' POST (COUPE); REAR QUARTER (CONV.) / TRIM
PASSENGER SIDE FASCIA
BELOW SEAT CUSHION
BELOW SEAT CUSHION
BELOW SEAT CUSHION
CENTER CONSOLE

HARNESS-TO-HARNESS CONNECTORS

Connector

LF2
PT1
RF5
RH9
RZ1
SD1
SD13
SP1
SP13
SW10

Type / Color

8-WAY FORD AIRBAG / NATURAL
4-WAY MULTILOCK 070 / WHITE
8-WAY MULTILOCK 070 / WHITE
20-WAY MULTILOCK 070 / YELLOW
8-WAY MULTILOCK 070 / YELLOW
14-WAY MULTILOCK 070 / YELLOW
3-WAY EPC / BLACK
14-WAY MULTILOCK 070 / YELLOW
3-WAY EPC / BLACK
4-WAY CONNECTOR / GREY

Location / Access

LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
BELOW CENTER CONSOLE ASSEMBLY
LOWER RH 'A' POST / 'A' POST TRIM
BELOW CENTER CONSOLE
LOWER LH 'A' POST / 'A' POST TRIM
BELOW DRIVER SEAT
BELOW SEAT CUSHION
BELOW PASSENGER SEAT
BELOW SEAT CUSHION
INSIDE STEERING COLUMN COWL

GROUNDS

Ground

FC1S

Location / Type

EYELET (SINGLE) / TRANSMISSION TUNNEL, RIGHT HAND SIDE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.



NOTE: The CAN Network connecting the three SRS Control Modules is a local CAN Network. It is not part of the Powertrain CAN.

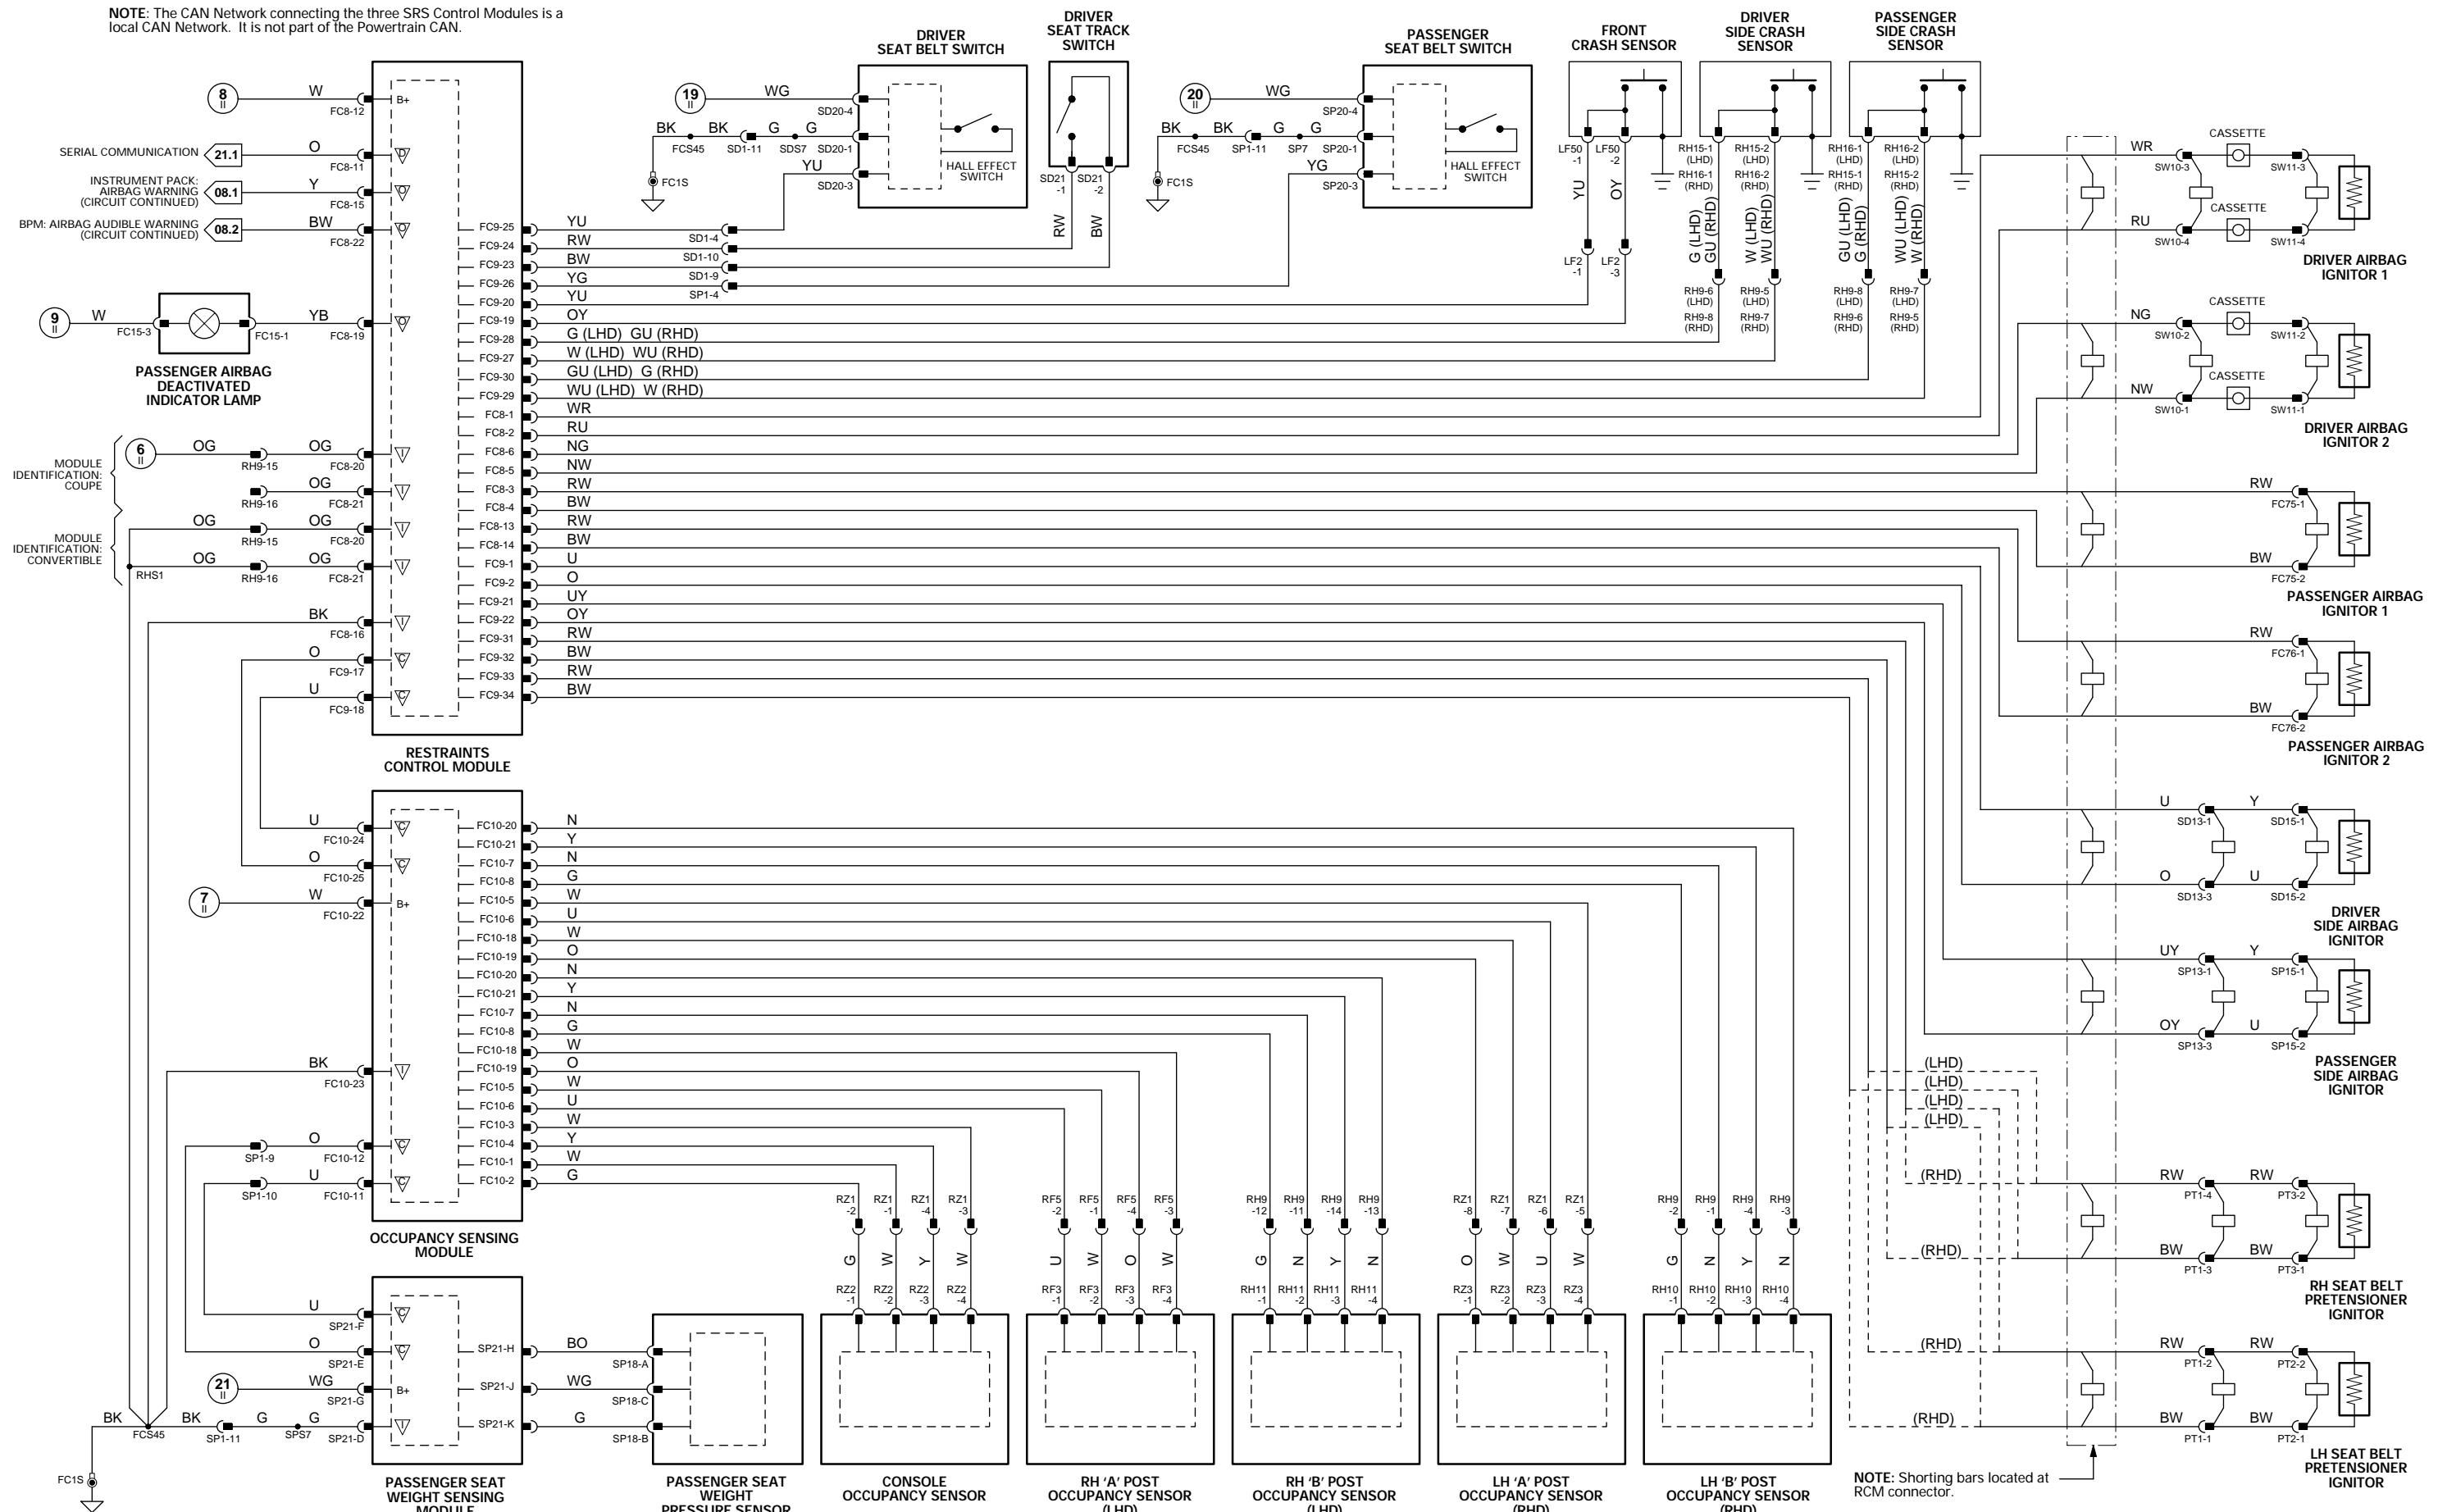


Fig. 19.1

COMPONENTS

Component

PARKING AID SENSOR – CENTER LH
PARKING AID SENSOR – CENTER RH
PARKING AID SENSOR – LH
PARKING AID SENSOR – RH
PARKING AID SOUNDER
REVERSE PARKING AID CONTROL MODULE

Connector / Type / Color

RB3 / 3-WAY AMP MOL / BLACK
RB4 / 3-WAY AMP MOL / BLACK
RB2 / 3-WAY AMP MOL / BLACK
RB5 / 3-WAY AMP MOL / BLACK
RH4 / 2-WAY MULTILOCK 070 / WHITE
BT4 / 16-WAY CONNECTOR / WHITE
RB1 / 12-WAY CONNECTOR / WHITE

Location / Access

BEHIND REAR BUMPER
BEHIND REAR BUMPER
BEHIND REAR BUMPER
BEHIND REAR BUMPER
BELOW CENTER CONSOLE GLOVE BOX
TRUNK / SPARE WHEEL WELL
TRUNK / SPARE WHEEL WELL

HARNESS-TO-HARNESS CONNECTORS

Connector

BT1

Type / Color

20-WAY MULTILOCK 070 / WHITE

Location / Access

TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH

GROUNDS


Ground

BT3S

Location / Type

EYELET (SINGLE) / TRUNK, LEFT REAR

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

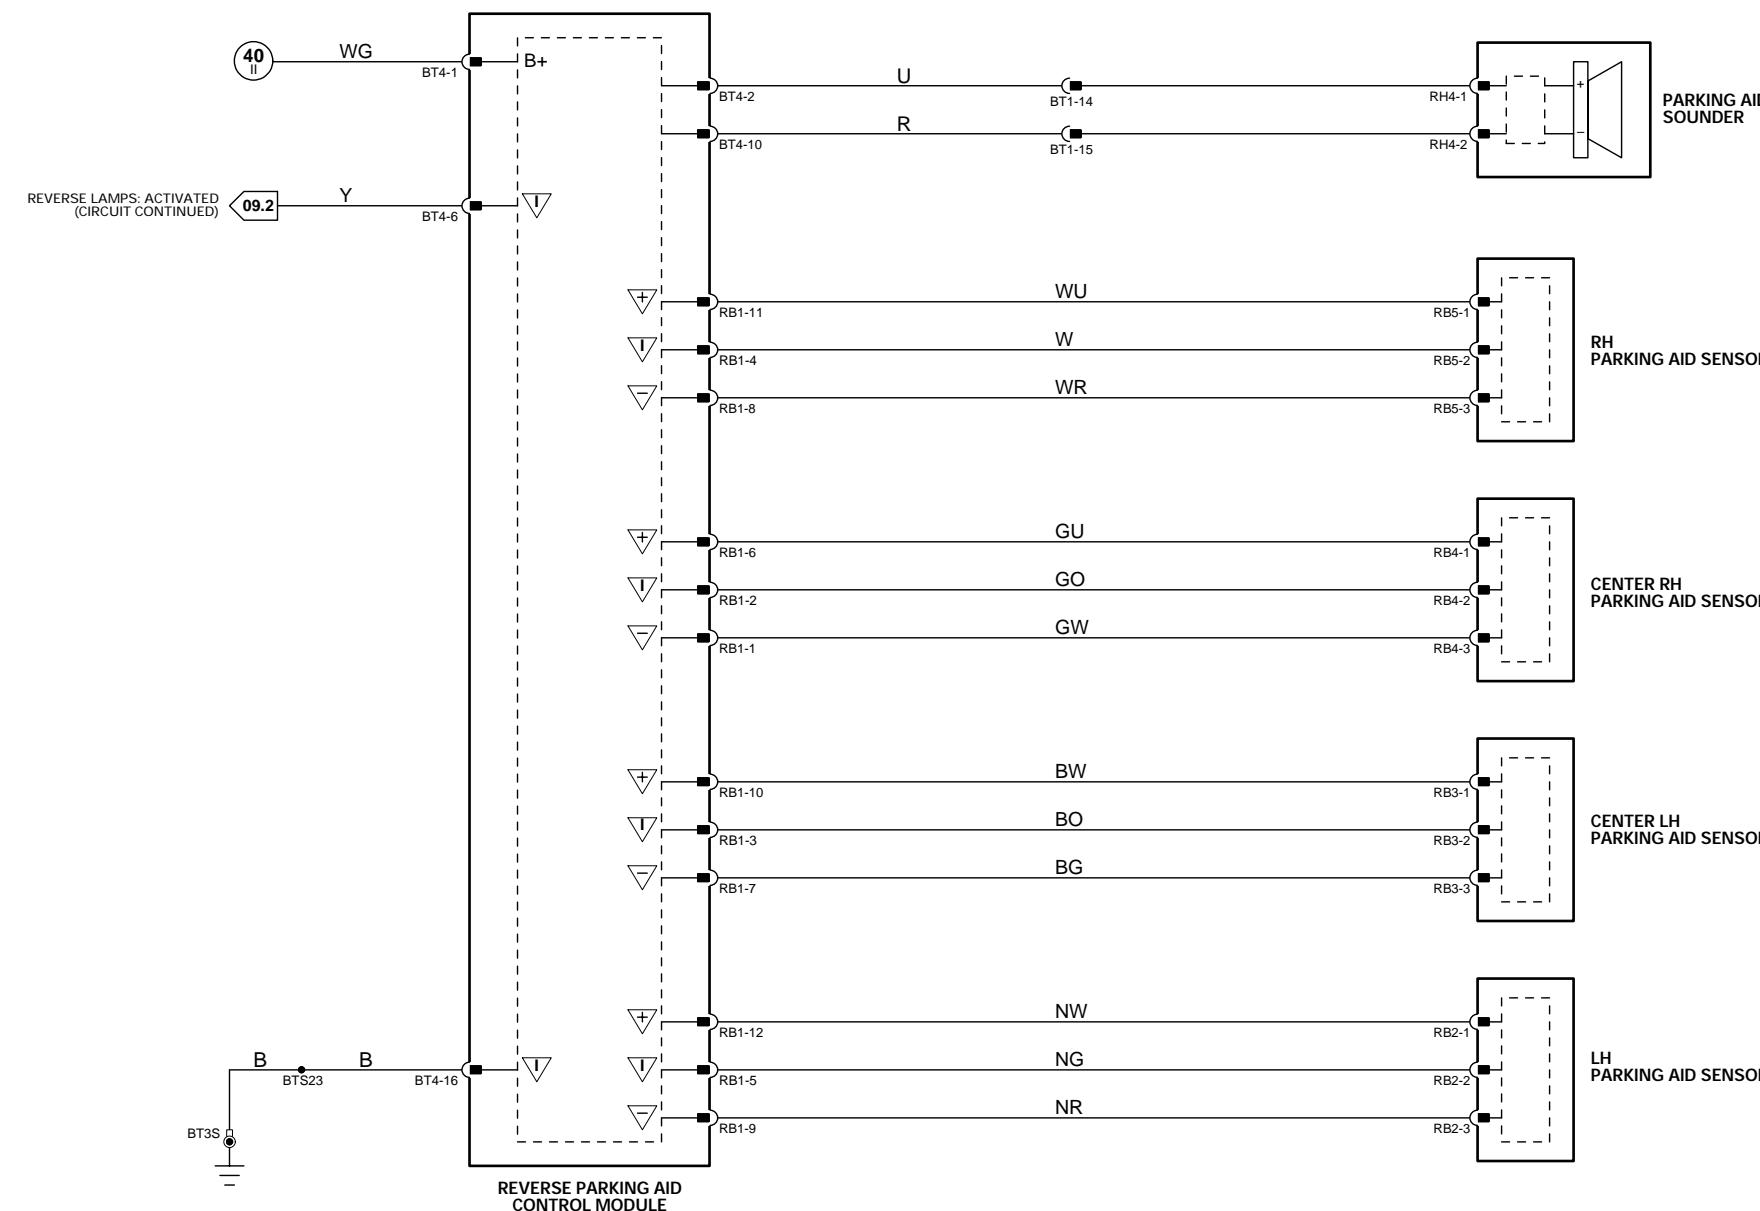

BODY PROCESSOR MODULE

Pin	Description
I FC14-4	BATTERY POWER SUPPLY
O FC14-70	HORN RELAY ACTIVATE
I FC14-80	BATTERY POWER SUPPLY (LOGIC)

Active	Inactive
B+	B+
GROUND (HORN SOUNDING)	B+
B+	B+

Fig. 20.1

COMPONENTS

Component

BODY PROCESSOR MODULE

CIGAR LIGHTER

FASCIA ACCESSORY CONNECTOR
FUSE BOX - ENGINE COMPARTMENT

FUSE BOX - TRUNK

GARAGE DOOR OPENER (ROOF CONSOLE)

HORN SWITCHES (STEERING WHEEL)

HORN - LH

HORN - RH

TRUNK ACCESSORY CONNECTOR

Connector / Type / Color

FC14 / 104-WAY AMP EEEC / GREY
FC42 / 2-WAY AMP / METALLIC
FC59 / LUCAR POSILOCK / BLACKFC51 / 3-WAY AMP SERIES 250 / BLACK
LF5 / 10-WAY U.T.A. FUSEBOX / NATURAL
LF6 / 10-WAY U.T.A. FUSEBOX / BLACK
LF7 / 10-WAY U.T.A. FUSEBOX / GREEN
LF8 / 10-WAY U.T.A. FUSEBOX / BLUE
LF70 / EYELETBT10 / 10-WAY U.T.A. FUSEBOX / NATURAL
BT11 / 10-WAY U.T.A. FUSEBOX / BLACK
BT12 / 10-WAY U.T.A. FUSEBOX / GREEN
BT13 / 10-WAY U.T.A. FUSEBOX / BLUE
BT64 / EYELETRF11 / HYBRID / WHITE
RF10 / 6-WAY MULTILOCK 070 / GREYHP1 / 1-WAY BLADE / METALLIC
HP2 / 1-WAY BLADE / METALLIC
HP3 / EYELETLF16 / LUCAR POSILOCK / BLACK
LF17 / LUCAR POSILOCK / BLACKLF14 / LUCAR POSILOCK / BLACK
LF15 / LUCAR POSILOCK / BLACK

BT25 / 3-WAY AMP SERIES 250 PIN / BLACK

Location / Access

PASSENGER SIDE FASCIA / AIRBAG BRACKET
FORWARD OF GEAR SELECTORFASCIA / ADJACENT TO RIGHT HAND SIDE OF GLOVE BOX
ENGINE COMPARTMENT / LEFT FRONT

TRUNK / ELECTRICAL CARRIER

ROOF CONSOLE

CENTER OF STEERING WHEEL

FRONT BUMPER / REAR

FRONT BUMPER / REAR

TRUNK / ADJACENT TO BATTERY

RELAYS

Relay

HORN RELAY (#6)
ACCESSORY CONNECTOR RELAY (#6)

Color / Stripe

BROWN
BROWN

Connector / Color

BUS
BUS

Location / Access

ENGINE COMPARTMENT FUSE BOX
TRUNK FUSE BOX

HARNESS-TO-HARNESS CONNECTORS

Connector

BT58 4-WAY ECONOSEAL III HC / BLACK
LF60 20-WAY MULTILOCK 070 / WHITE
RF5 8-WAY MULTILOCK 070 / WHITE
RH14 2-WAY ECONOSEAL III HC / BLACK
SC2 10-WAY MULTILOCK 070 / YELLOW
SC3 12-WAY MULTILOCK 070 / GREY
SW1 12-WAY MULTILOCK 040 / BLACK
SW2 6-WAY JST / WHITE

Type / Color

Location / Access

TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
LOWER RH 'A' POST / 'A' POST TRIM
REAR OF CENTER CONSOLE ASSEMBLY
ADJACENT TO STEERING COLUMN MOTOR
RIGHT HAND SIDE OF STEERING COLUMN
INSIDE STEERING COLUMN COWL
CENTER OF STEERING WHEEL

GROUNDS

Ground

BT2BR EYELET (PAIR) - RIGHT HAND LEG / TRUNK, RIGHT REAR
BT2BS EYELET (SINGLE) - TRUNK, RIGHT REAR
FC2BL EYELET (PAIR) - LEFT HAND LEG / RIGHT HAND 'A' POST
FC2BR EYELET (PAIR) - RIGHT HAND LEG / RIGHT HAND 'A' POST
FC3BL EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC3BR EYELET (PAIR) - RIGHT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE
FC4BL EYELET (PAIR) - LEFT HAND LEG / LEFT HAND 'A' POST
FC4BR EYELET (PAIR) - RIGHT HAND LEG / LEFT HAND 'A' POST
LF1AL EYELET (PAIR) - LEFT HAND LEG / RIGHT HAND HEADLAMP
LF2BR EYELET (PAIR) - RIGHT HAND LEG / ENGINE COMPARTMENT, FORWARD OF LEFT HAND HOOD LATCH

Location / Type

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SG Sensor Ground	S SCP Network	V Voltage (DC)
O Output	A ACP Network	D Serial and Encoded Data	Hz Frequency
SS Sensor Supply V	C CAN (Network)	B+ Battery Voltage	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

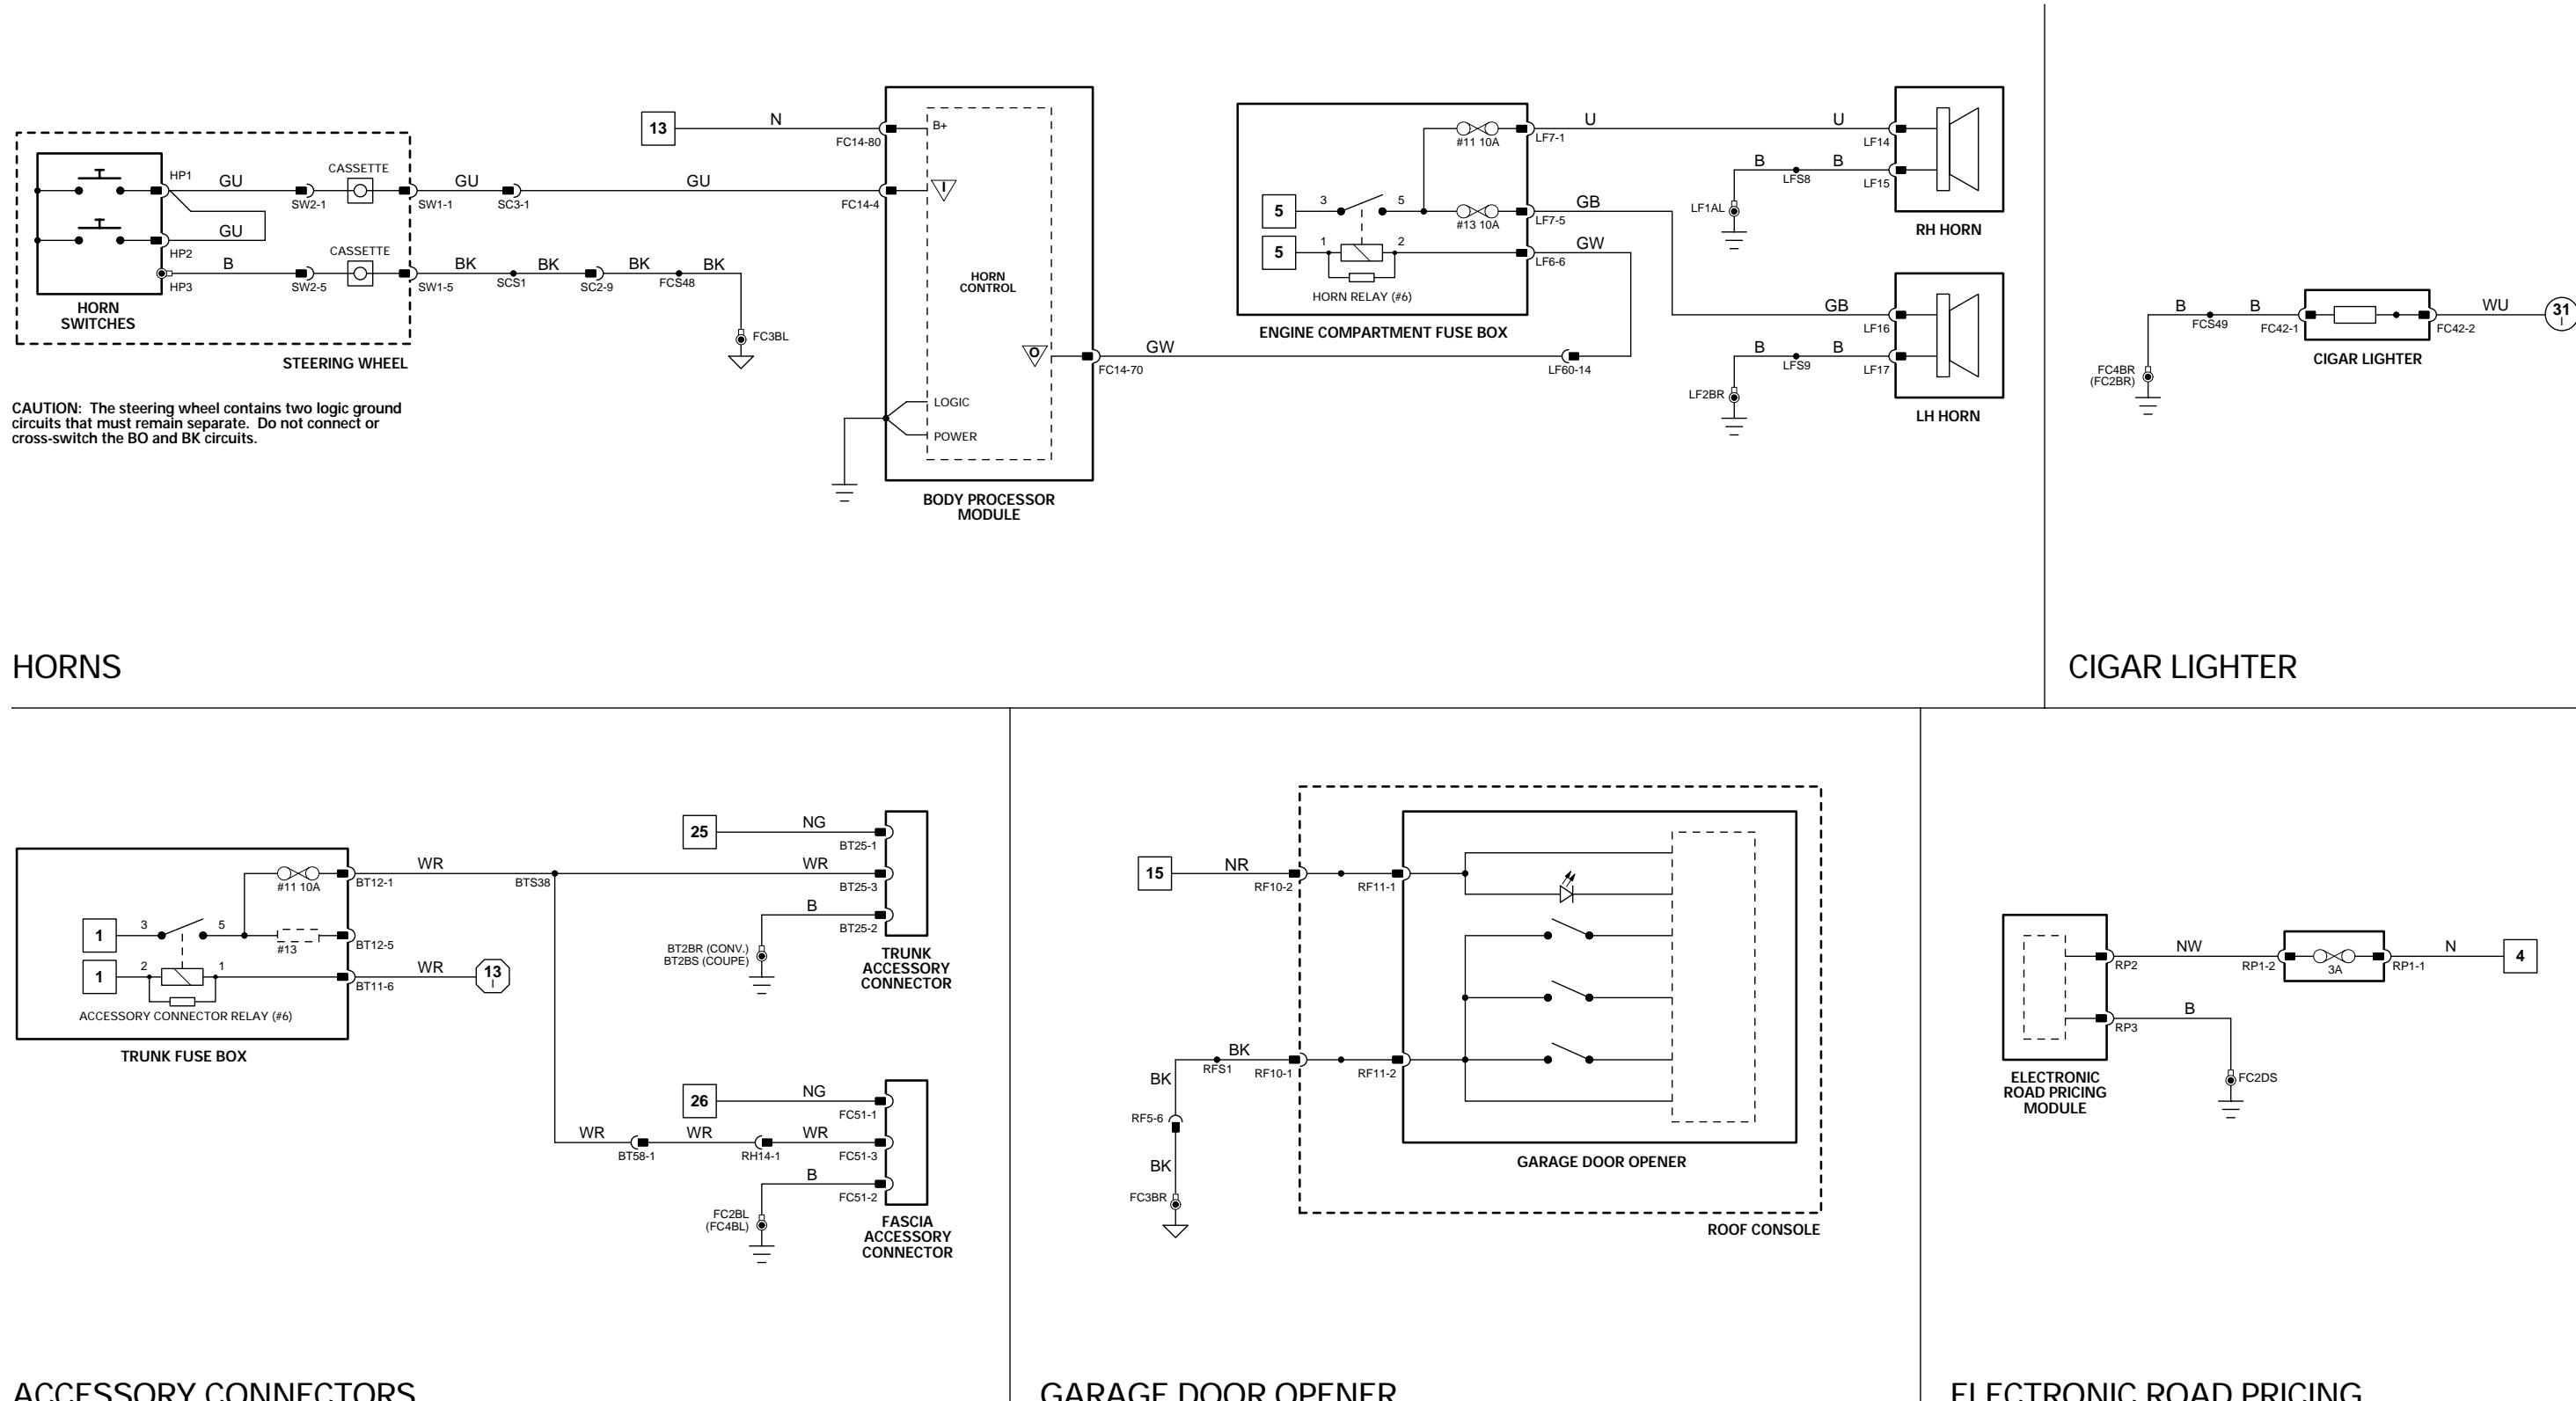


Fig. 21.1

COMPONENTS

Component

ABS / TRACTION CONTROL CONTROL MODULE
ACTIVE SECURITY SOUNDER
ADAPTIVE DAMPING CONTROL MODULE
ADAPTIVE SPEED CONTROL CONTROL MODULE
AIR CONDITIONING CONTROL MODULE

BODY PROCESSOR MODULE
DATA LINK CONNECTOR
DOOR CONTROL MODULE - DRIVER
DOOR CONTROL MODULE - PASSENGER
ENGINE CONTROL MODULE

GEAR SELECTOR ILLUMINATION MODULE
HEAD RESTRAINT CONTROL MODULE - DRIVER
HEAD RESTRAINT CONTROL MODULE - PASSENGER
KEY TRANSPONDER MODULE
MAJOR INSTRUMENT PACK
RESTRAINTS CONTROL MODULE
SEAT CONTROL MODULE - DRIVER
SEAT CONTROL MODULE - PASSENGER
SECURITY AND LOCKING CONTROL MODULE
TRANSMISSION CONTROL MODULE: AJ27 N/A
TRANSMISSION CONTROL MODULE: AJ27 SC

Connector / Type / Color
LF37 / 25-WAY AMP HYBRID / BLACK
LF18 / 6-WAY ECONOSEAL III LC / BLACK
BT69 / 35-WAY AMP / BLACK
LF61 / 12-WAY ECONOSEAL III LC / BLACK
AC1 / 26-WAY MULTILOCK 47 / GREY
AC2 / 16-WAY MULTILOCK 47 / GREY
AC3 / 12-WAY MULTILOCK 47 / GREY
AC4 / 22-WAY MULTILOCK 47 / GREY
FC14 / 104-WAY AMP EEEC / GREY
FC53 / 16-WAY AMP OBD2 / BLACK
DD10 / 22-WAY FORD 2.8 TIMER / BLUE
DD11 / 22-WAY FORD 2.8 TIMER / BLACK
DP10 / 22-WAY FORD 2.8 TIMER / BLUE
DP11 / 22-WAY FORD 2.8 TIMER / BLACK
EM80 / 31-WAY AMP 403 / NATURAL
EM81 / 24-WAY AMP 403 / NATURAL
EM82 / 17-WAY AMP 403 / NATURAL
EM83 / 28-WAY AMP 403 / NATURAL
EM84 / 22-WAY AMP 403 / NATURAL
EM85 / 12-WAY MULTILOCK 070 / WHITE
FC88 / 10-WAY MULTILOCK 070 / WHITE
SD22 / 16-WAY FORD IDC / BLACK
SP22 / 16-WAY FORD IDC / BLACK
FC22 / 20-WAY MULTILOCK 040 / GREEN
FC25 / 26-WAY AMP MICRO QUAD LOCK / BLACK
FC26 / 26-WAY AMP MICRO QUAD LOCK / YELLOW
FC8 / 24-WAY CONNECTOR / BLACK
FC9 / 40-WAY CONNECTOR / BLACK
SD3 / 16-WAY FORD 2.8 TIMER / BLACK
SD4 / 26-WAY FORD IDC / BLACK
SD5 / 10-WAY FORD 2.8 TIMER / BLACK
SP3 / 16-WAY FORD 2.8 TIMER / BLACK
SP5 / 10-WAY FORD 2.8 TIMER / BLACK
BT40 / 16-WAY FORD 2.8 TIMER / BLACK
BT41 / 26-WAY FORD IDC / BLACK
BT42 / 10-WAY FORD 2.8 TIMER / BLACK
RH20 / COAXIAL CONNECTOR
EM7 / 88-WAY BOSCH / BLACK
EM72 / 14-WAY AMP JUNIOR POWER TIMER / BLACK
EM73 / 18-WAY AMP JUNIOR POWER TIMER / BLACK

Location / Access
ENGINE COMPARTMENT / FRONT LEFT
REARWARD OF RIGHT FRONT HEADLAMP
TRUNK / ADJACENT TO ELECTRICAL CARRIER
ENGINE COMPARTMENT / FORWARD OF RADIATOR
A/C UNIT / RIGHT HAND SIDE

PASSENGER SIDE FASCIA / AIRBAG BRACKET
BELOW DRIVER SIDE FUSE BOX
DRIVER DOOR / DOOR CASING
PASSENGER DOOR / DOOR CASING
ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

FRONT OF GEAR SELECTOR ASSEMBLY
BEHIND SEAT BACK FINISHER
BEHIND SEAT BACK FINISHER
ADJACENT TO DRIVER SIDE FUSE BOX
FASCIA

CENTER CONSOLE
BELOW SEAT CUSHION
BELOW SEAT CUSHION
TRUNK / ELECTRICAL CARRIER

ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE
ENGINE COMPARTMENT / CONTROL MODULE ENCLOSURE

HARNESS-TO-HARNESS CONNECTORS

Connector Type / Color
AC14 14-WAY MULTILOCK 070 / GREY
BT1 20-WAY MULTILOCK 070 / WHITE
BT2 20-WAY MULTILOCK 070 / WHITE
DD1 23-WAY AMP - FORD / BLACK
DP1 23-WAY AMP - FORD / BLACK
EM1 20-WAY MULTILOCK 070 / WHITE
LF1 20-WAY MULTILOCK 070 / GREY
LF40 13-WAY ECONOSEAL III LC / BLACK
RH2 20-WAY MULTILOCK 070 / WHITE
RH12 18-WAY MULTILOCK 070 / YELLOW
SD1 14-WAY MULTILOCK 070 / YELLOW
SP1 14-WAY MULTILOCK 070 / YELLOW

Location / Access
FASCIA BOTTOM CONNECTOR MOUNTING BRACKET / RIGHT HAND SIDE
TRUNK / ABOVE RIGHT HAND REAR WHEEL ARCH
TRUNK / ABOVE RIGHT HAND REAR WHEEL
DRIVER SIDE 'A' POST MOUNTING BRACKET / 'A' POST TRIM
PASSENGER SIDE 'A' POST / 'A' POST TRIM
ENGINE COMPARTMENT / ADJACENT TO RIGHT HAND ENCLOSURE
LEFT HAND 'A' POST CONNECTOR MOUNTING BRACKET / 'A' POST TRIM
LHD: ENGINE COMPARTMENT / FORWARD OF BRAKE FLUID RESERVOIR
RHD: ENGINE COMPARTMENT / BELOW CONTROL MODULE ENCLOSURE
REAR OF CENTER CONSOLE ASSEMBLY
REAR OF CENTER CONSOLE ASSEMBLY
BELOW DRIVER SEAT
BELOW PASSENGER SEAT

GROUNDS

Ground Location / Type
FC3BL EYELET (PAIR) - LEFT HAND LEG / TRANSMISSION TUNNEL, LEFT HAND SIDE

NOTE: Refer to the Appendix at the rear of this book for CAN and SCP Network Messages.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SG	Sensor Ground	S	SCP Network	V	Voltage (DC)
O	Output	A	ACP Network	D	Serial and Encoded Data	Hz	Frequency
SS	Sensor Supply V	C	CAN (Network)	B+	Battery Voltage	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, grounds, control modules and control module pins.

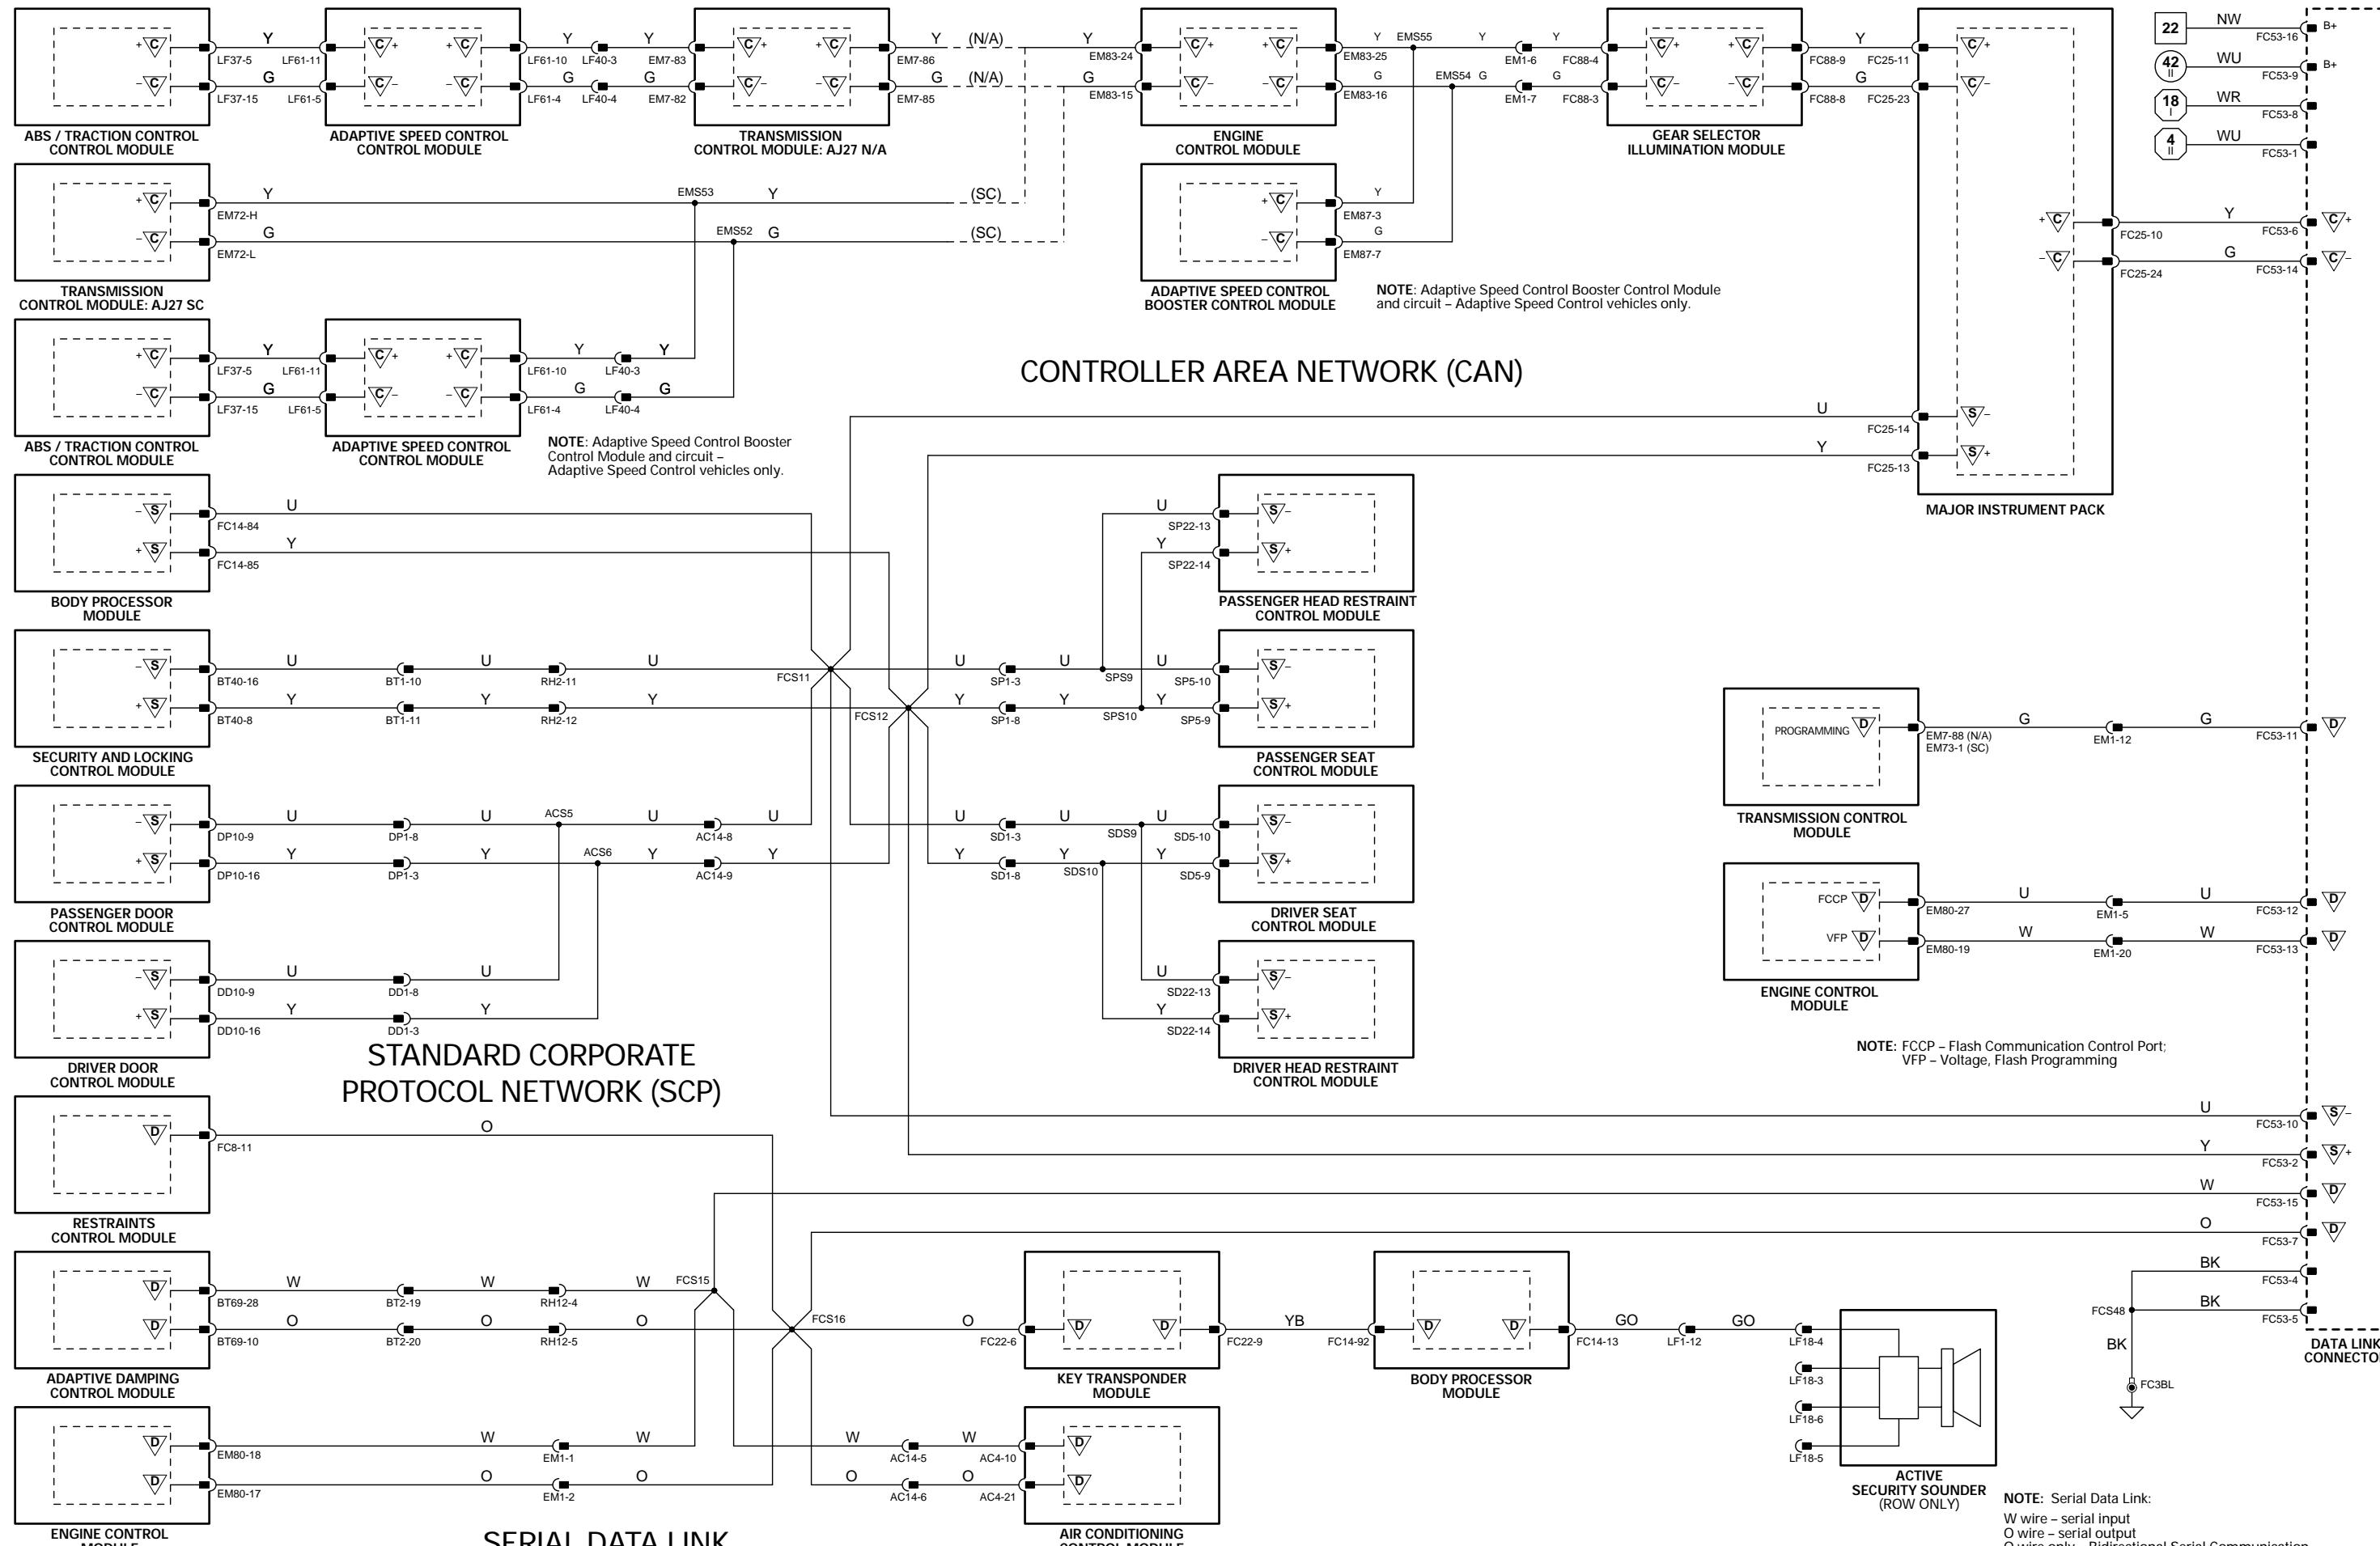



This Appendix contains a listing of CAN and SCP Network messages.

Abbreviations

The following abbreviations are used throughout this Appendix:

ABS/TCCM	Anti-Lock Braking / Traction Control Control Module
BPM	Body Processor Module
DIAG	Diagnostics
DDCM	Driver Door Control Module
DSCM	Driver Seat Control Module
ECM	Engine Control Module
INST	Instrument Pack
J-GATE	Gear Selector Illumination Module
PDCM	Passenger Door Control Module
PSCM	Passenger Seat Control Module
R	Receive
T	Transmit
TCM	Transmission Control Module
SCCM	Adaptive Speed Control Control Module
SCBCM	Adaptive Speed Control Booster Control Module
SLCM	Security and Locking Control Module



CAN Message Matrix

Message / Function	Source	Receivers							
		ECM	TCM	ABS/TCCM	INST	J-GATE	SCCM	SCBCM	DIAG
CAN traction acknowledge	ECM		X						
CAN traction control estimated engine torque	ECM		X						
CAN set speed	ECM						X		
CAN target speed	ECM						X		
CAN shift energy management estimated engine torque	ECM		X	X					
CAN throttle position	ECM		X	X					
CAN pedal position	ECM		X	X			X		
CAN torque reduction acknowledge	ECM		X						
CAN engine speed	ECM		X	X	X				
CAN brake pedal pressed	ECM			X	X		X	X	
CAN ECM adaptive speed control fail	ECM						X		
CAN speed control status	ECM		X				X		
CAN parking brake status	ECM					X			
CAN OBD II clear fault codes	ECM		X	X					
CAN headway increment	ECM							X	
CAN cancel request	ECM							X	
CAN engine coolant temperature	ECM		X		X				
CAN engine OBD II MIL	ECM			X	X				
CAN throttle malfunction red	ECM			X	X				
CAN throttle malfunction amber	ECM			X	X				
CAN ECM fault code MIL status	ECM			X					
CAN ECM PECUS flag	ECM					X			
CAN engine fault codes	ECM			X					
CAN fuel used	ECM					X			
CAN barometric pressure	ECM		X						
CAN torque reduction request	TCM	X							
CAN transmission overload	TCM	X							
CAN transmission input speed	TCM	X		X					
CAN transmission output speed	TCM	X		X					
CAN torque converter slip	TCM	X		X					
CAN kickdown	TCM	X		X					



Message / Function	Source	Receivers							
		ECM	TCM	ABS/TCCM	INST	J-GATE	SCCM	SCBCM	DIAG
CAN gear position actual	TCM	X		X					
CAN torque converter status	TCM	X		X					
CAN gear position selected	TCM	X			X	X			
CAN gear selection fault	TCM	X			X	X			
CAN transmission shift map	TCM	X		X				X	
CAN transmission oil temperature	TCM	X				X			
CAN transmission malfunction	TCM	X		X	X				
CAN TCM PECUS flag	TCM					X			
CAN gear position target (not used)	TCM					X			
CAN torque transfer in progress (not used)	TCM					X			
CAN TCM fault code MIL status	TCM	X							
CAN OBD II TCM clear acknowledge	TCM	X							
CAN transmission fault codes	TCM	X			X				
CAN torque reduction throttle	ABS/TCCM	X							
CAN fast torque reduction ignition	ABS/TCCM	X							
CAN fast torque reduction cylinder	ABS/TCCM	X							
CAN traction status	ABS/TCCM	X				X			
CAN traction shift map	ABS/TCCM		X						
CAN ABS PECUS flag	ABS/TCCM					X			
CAN vehicle reference speed	ABS/TCCM	X				X			
CAN reference distance traveled	ABS/TCCM					X			
CAN ABS fault codes	ABS/TCCM	X							
CAN OBD II ABS clear acknowledge	ABS/TCCM	X							
CAN ABS fault code MIL status	ABS/TCCM	X							
CAN ABS malfunction	ABS/TCCM	X			X			X	
CAN ABS status	ABS/TCCM							X	
CAN front left wheel speed	ABS/TCCM	X	X					X	X
CAN front right wheel speed	ABS/TCCM	X	X					X	X
CAN rear left wheel speed	ABS/TCCM	X	X					X	
CAN rear right wheel speed	ABS/TCCM	X	X		X			X	
CAN sidelight status	INST	X							



CAN Message Matrix

Message / Function	Source	Receivers						
		ECM	TCM	ABS/TCCM	INST	J-GATE	SCCM	SCBCM
CAN dipped beam status	INST	X						
CAN main beam status	INST	X						
CAN oil pressure low	INST	X						
CAN indicator right	INST					X		
CAN indicator left	INST					X		
CAN trip units	INST	X				X		
CAN fuel level damped	INST	X						
CAN fuel level raw	INST	X						
CAN display commands	SCCM				X			
CAN headway setting	SCCM				X			
CAN follow warning light	SCCM				X			
CAN extra bong	SCCM				X			
CAN display set speed	SCCM				X			
CAN follow speed	SCCM	X						
CAN brake demand pressure	SCCM						X	
CAN adaptive speed control status	SCCM				X			
CAN adaptive speed control PECUS flag	SCCM				X			
CAN brake booster enable	SCCM						X	
CAN brake actual pressure	SCBCM					X		
CAN brake demand pressure acknowledge	SCBCM					X		
CAN SBU status	SCBCM					X		
CAN diagnostic data in acknowledge	DIAG					X		
CAN diagnostic data out acknowledge	SCCM							X
CAN diagnostic data in SCBCM	DIAG						X	
CAN diagnostic data out SCBCM	SCBCM							X
CAN NWM token ECM	ECM		X	X	X		X	
CAN NWM token TCM	TCM	X		X	X		X	
CAN NWM token INST	INST	X	X	X			X	
CAN NWM token ABS	ABS/TCCM	X	X		X		X	
CAN NWM token SCCM	SCCM				X			
CAN diagnostic data in ECM	DIAG	X						



Message / Function	Source	Receivers						
		ECM	TCM	ABS/TCCM	INST	J-GATE	SCCM	SCBCM
CAN diagnostic data in TCM	DIAG	X						
CAN diagnostic data in INST	DIAG			X				
CAN diagnostic data in ABS	DIAG			X				
CAN diagnostic data out ECM	ECM							X
CAN diagnostic data out TCM	TCM							X
CAN diagnostic data out INST	INST							X
CAN diagnostic data out ABS	ABS/TCCM							X



SCP Message Matrix

#	Message Name	INST	BPM	DDCM	PDCM	DSCM	PSCM	SLCM
1	Vehicle speed	T	R	R				R
2	Brake pedal pressed	T	R					
3	SLCM not programmed	R						T
4	BPM not programmed	R	T					
5	DDCM not programmed	R		T				
6	DSCM not programmed	R			T			
7	PDCM not programmed	R				T		
8	PSCM not programmed	R					T	
9	Left hand drive vehicle		T	R	R			R
10	Valet mode OFF			T				R
11	Non-convertible vehicle				T			R
12	Right hand drive vehicle					T	R	R
13	Valet mode ON							R
14	Convertible vehicle							R
15	Request vehicle drive side							
16	Request valet mode status							T
17	Request convertible status							T
18	Reverse gear selected	T	R					
19	Not-in-park switch - inactive		T	R	R	R	R	
20	Not-in-park switch - active			T	R	R	R	
21	Request not-in-park switch status				R			
22	Request not-in-park switch status					R		
23-58	Diagnostic messages							
59	Charging OK	T					R	R
60	Inertia switch inactive		T	R	R			R
61	Inertia switch active			T	R			R
62	Request inertia switch status				R	T		
63	Request inertia switch status					R	T	
64	Ignition status	R	T	R				
65	Key not-in-ignition		T	R	R			R
66	Key in-ignition			T	R			R
67	Request ignition status				R			T
68	Request ignition status	T	R					
69	Request ignition status			R	T			
70	Request ignition status				R			
71	Request ignition status					R	T	
72	Request ignition status						R	T
73	Request key-in status							R
74	Request key-in status							T
75	Request key-in status						R	T
76	Request key-in status							T
77	Seat belt telltale OFF							R
78	Low washer fluid warning OFF							T
79	Convertible top latch warning OFF							
80	Seat belt telltale ON							T
81	Low washer fluid warning ON							
82	Convertible top latch warning ON							T
83	Request washer fluid status							
84	Request convertible top latch status							
85	Security audible indication							
86	Remote panic							
87	Security disarm							
88	Glass break fault							
89	Security armed							
90	Key valid							
91	Glass break detected							
92	Request security arm status							
93	Request security arm status							



#	Message Name	INST	BPM	DDCM	PDCM	DSCM	PSCM	SLCM
94	Request security arm status				T			R
95	Seat belt chime OFF		R			T		
96	Seat belt chime ON		R			T		
97	Request seat belt chime status		T			R		
98-165	Diagnostic messages							
166	Recall memory 1		R	T	R	R		
167	Recall memory 2		R	T	R	R		
168	Save memory 1		R	T	R	R		
169	Save memory 2		R	T	R	R		
170	DDCM memory 1 recalled		R	T				
171	DSCM memory 1 recalled		R			T		
172	PDCM memory 1 recalled		R		T			
173	DDCM memory 2 recalled		R	T				
174	DSCM memory 2 recalled		R			T		
175	PDCM memory 2 recalled		R		T			
176	Park fold-back mirrors		T		R	R		
177	Unfold fold-back mirrors		T		R	R		
178	Stop driver mirror		T	R				
179	Stop passenger mirror		T	R				
180	Driver mirror up		T	R				
181	Passenger mirror up		T	R				
182	Driver mirror down		T	R				
183	Passenger mirror down		T	R				
184	Passenger mirror right		T	R				
185	Passenger mirror left		T	R				
186	Unlock driver door		R	T				
187	Unlock passenger door		T	R				
188	Remote unlock		R	R	R			T
189	Remote trunk release		R					T
190	Lock front doors		R	T				
191	Lock front doors		R			T		
192	Remote superlock		R	R				T
193	Superlock driver door					T		
194	Superlock passenger door			T				
195	Remote lock		R					T
196	Vehicle unlocked		R	T				R
197	Driver door unlocked		R	R	R			T
198	Passenger door unlocked		R		R			T
199	Driver lock switch status		R	T				R
200	Passenger lock switch status		R		T			R
201	Driver door unsuperlocked		R	T				
202	Passenger door unsuperlocked		R			T		
203	Vehicle locked		R	T				R
204	Driver door locked		R	R	R			T
205	Passenger door locked		R	R	R			T
206	Driver door superlocked		R	T				
207	Passenger door superlocked		R		T			
208	Request vehicle lock status		R					T
209	Request driver door lock status			T				R
210	Request passenger door status			T				R
211	Request driver key barrel status			R				T
212	Request driver key barrel status			R	T			
213	Request passenger key barrel status (deleted)				R			T
214	Request passenger key barrel status (deleted)			T	R			
215	Request superlock status		T	R	R			
216	Open trunk		T					R

continued...



SCP Message Matrix

#	Message Name	INST	BPM	DDCM	PDCM	DSCM	PSCM	SLCM
217	Hood closed	R	T					R
218	Driver door closed	R	R	T				R
219	Passenger door closed	R	R		T	R		R
220	Trunk closed	R	R					T
221	Stop fuel filler flap open			T				R
222	Convertible top latch status			T				
223	Hood ajar	R	T					R
224	Driver door ajar	R	R	T	R			R
225	Passenger door ajar	R	R		T	R		R
226	Trunk ajar	R	R					T
227	Open fuel filler flap			T				R
228	Request hood ajar status			R				T
229	Request driver door ajar status				R			T
230	Request driver door status				T	R		
231	Request driver door ajar status					R	T	
232	Request passenger door ajar status						R	T
233	Request trunk ajar status							R
234	Request convertible top latch switches status							T
235	Driver seat heater telltale OFF							R
236	Passenger seat heater telltale OFF							T
237	Driver seat heater telltale ON							R
238	Passenger seat heater telltale ON							T
239	Request driver heater telltale status							
240	Request passenger heater telltale status							R
241	Stop global window open							T
242	Stop global window close							T
243	Position driver window							T
244	Position passenger window							T
245	Position rear quarters							T
246	Driver window position							R
247	Passenger window position							T
248	Stop passenger window open							R
249	Stop convertible top open							T
250	Stop passenger window close							R
251	Stop convertible top close							T
252	Open passenger window							R
253	Open convertible top							T
254	Close passenger window							R
255	Close convertible top							T
256	Request driver window position							R
257	Request passenger window position							T
258	Request driver and passenger window switch status							R
259	Driver seat heater switch active							T
260	Passenger seat heater switch active							R
261	Front bulb failure	R	T					
262	Rear bulb failure	R						T
263	Front bulbs OK	R	T					
264	Rear bulbs OK	R						T
265	Request front bulb fail status	T	R					
266	Request rear bulb fail status	T						R
267	Rear fog lamps OFF			T				R
268	Remote headlamp convenience OFF			R				T
269	Rear fog lamps ON			T				R
270	Remote headlamp convenience ON			R				T
271	Dip beam OFF	R	T					
272	Side lamps OFF	R	T					
273	Hazard warning OFF	R	T					
274	Left DI lamp OFF	R	T					



#	Message Name	INST	BPM	DDCM	PDCM	DSCM	PSCM	SLCM
275	Right DI lamp OFF	R	T					
276	Main beam OFF	R	T					
277	Rear fog lamps OFF		R					T
278	Main beam flash OFF		T					R
279	Request rear fog switch status		R					T
280	Request remote headlamp convenience status		T					R
281	Dip beam ON	R	T					
282	Side lamps ON	R	T					
283	Hazards ON	R	T					
284	Left DI lamp ON	R	T					
285	Right DI lamp ON	R	T					
286	Main beam ON	R	T					
287	Rear fog lamps ON		R					T
288	Main beam flash ON		T	R				R
289	Request dip beam status	T	R					
290	Request side lamps status	T	R					
291	Request left DI status	T	R					
292	Request right DI status	T	R					
293	Request main beam status	T	R					
294	Request hazard warning status	T	R					
295	Request rear fog lamps status		T					R
296	Interior lamps OFF	R	T					
297	Interior lamps ON	R	T					
298	Request interior lighting status	T	R					
299	Valet mode message OFF	R	T					
300	Recoding keying message OFF	R						T
301	Valet mode message	R	T					
302	Recoding keying message	R						T
303-356	Diagnostic messages							
357	Wake up (SLCM)							T
358	Wake up (BPM)							
359	Wake up (INST)	T						
360	Wake up (DDCM)							
361	Wake up (DSCM)							T
362	Wake up (PDCM)							
363	Wake up (PSCM)							T
364	Network awake (SLCM)	R	T					
365	Network awake (BPM)	R	T	R				
366	Network awake (INST)	T	R					
367	Network awake (DDCM)	R	R	T	R	R	R	R
368	Network awake (DSCM)	R	R	R	R	T	R	R
369	Network awake (PDCM)	R	R	R	T	R	R	R
370	Network awake (PSCM)	R	T	R				
371	SLCM entering sleep mode	R	T					
372	BPM entering sleep mode	R	T	R				
373	INST entering sleep mode	T	R					
374	DDCM entering sleep mode	R	R	T	R	R	R	R
375	DSCM entering sleep mode	R	R	R	R	T	R	R
376	PDCM entering sleep mode	R	R	R	T	R	R	R
377	PSCM entering sleep mode	R	T	R				

